

**SECTION 10-G  
LIGHTING SYSTEM**

**CONTENTS OF SECTION 10-G**

Paragraph	Subject	Page	Paragraph	Subject	Page
10-47	Lighting Switch and Circuit Breaker.....	10-66	10-50	Parking, Tail, Stop, and License Lights.....	10-70
10-48	Headlights and Controls.....	10-67	10-51	Interior Lights and Cigar Lighters.....	10-71
10-49	Headlamp Sealed Beam Unit Replacement and Adjustment..	10-69			

NOTE: For Series 40 6-volt systems refer to Section 10-G in the 1952 Buick Shop Manual.

**SERVICE BULLETIN REFERENCE**

Bulletin No.	Page No.	SUBJECT

**10-47 LIGHTING SWITCH AND CIRCUIT BREAKER**

**a. Description of Lighting Switch**

The lighting switch is a "push-pull" type which also incorporates a manually operated rheostat for controlling the map and instrument panel lights. Three "push-pull" positions of the switch knob provide control of the exterior lights as follows:

(1) "Off" position (knob all the way in) cuts off all lights controlled by the switch.

(2) "Parking" position (knob pulled out to first notch) turns on the parking lights, tail lights, and license light. The map and instrument panel lights also will be turned on if the rheostat is set for these lights.

(3) "Driving" position (knob pulled out to last notch) turns parking lights off and turns headlights on, while the other lights remain as in the "Parking" position. The headlights will be on the "upper" or "lower" beams depending on the position of the separate dimmer switch.

In the "Parking" and "Driving" positions the lighting switch knob must be rotated to control the map and instrument panel lights. With knob turned all the way counterclockwise these lights are off. Turning the knob clockwise the first step turns on the map lights only, the

second step turns on the instrument lights and leaves map lights on, the third step turns map lights off and leaves the instrument lights on; further turning of knob clockwise reduces the brilliance of instrument panel lights.

**b. Description of Thermo Circuit Breaker**

A thermo circuit breaker is incorporated in the lighting switch assembly, to protect wiring from damage due to short circuits in any lighting circuit controlled by the switch.

The thermo circuit breaker consists of a bi-metal blade and set of contact points connected in series with the lighting circuits. An abnormal flow of current through the circuit breaker, such as would be caused by a short circuit in a lighting circuit, heats the bi-metal blade sufficiently to separate the points and cause them to vibrate. The vibrating blade alternately opens and closes the circuit, thus reducing the flow of current and protecting the wiring against overheating and burning. The flickering light produced by the vibrating circuit breaker serves as a warning to the operator of vehicle that a short circuit exists.

**c. Test of Lighting Switch**

If the lighting switch is suspected of being faulty, the contacts can be tested by connecting

a short jumper wire between No. 1 terminal and the other terminals while observing any change in the brilliance of lights affected.

With switch in "Parking" position (first notch out) connect jumper wire between No. 1 and No. 2 terminals and note change in parking lights. Bridge between No. 1 and No. 3 terminals and note change in tail lights. With switch in "Driving" position (last notch out) bridge between No. 1 and No. 4 terminals and note change in headlights.

If no change in brilliance of lights is noted the switch contacts are satisfactory and the cause is in the wiring circuit connections or lamp bulb. If switch is faulty it must be replaced since internal repairs cannot be made.

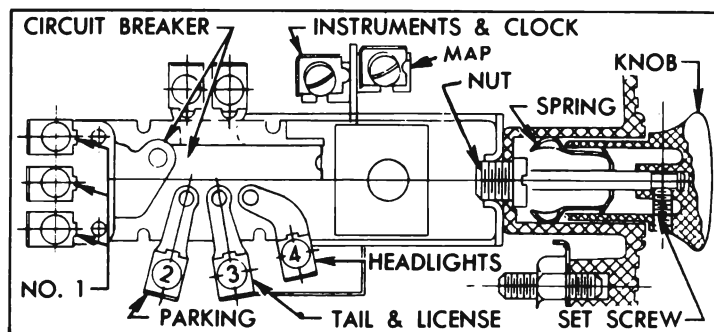


Figure 10-67—Lighting Switch

#### d. Replacement of Lighting Switch

1. Disconnect battery cable from junction block and disconnect wires from lighting switch.

2. Loosen knob retaining set screw with a  $\frac{3}{32}$ " Allen wrench and remove knob from rod. Remove switch mounting nut with Wrench J 1589 and remove switch from panel. See figure 10-67.

3. Pull control rod out as far as possible, insert stiff wire into small hole in switch case to depress the catch and pull rod out. NOTE: Knob and rod may be removed as a unit in this manner before removal of switch.

4. When installing lighting switch, connect wires according to color codes as shown on chassis wiring circuit diagrams in Section 10-J. When connecting battery ground cable use care to properly wind the clock (par. 10-56).

#### e. Test of Thermo Circuit Breaker

To test the thermo circuit breaker, remove lighting switch from instrument panel to avoid possible damage to adjacent instruments.

Since the current required to open the circuit breaker contacts depends somewhat on outside temperature, the circuit breaker should be tested at normal temperature (70° to 80°F.).

1. Connect an ammeter and a carbon-pile rheostat in series with the No. 1 terminal of lighting switch and positive terminal of a 12-volt battery, and set rheostat to provide maximum resistance. Rheostat must have capacity for 30 amperes and be adjustable down to .3 ohms.

2. Connect the protected (not numbered) terminal of lighting switch to negative post of battery.

3. Adjust rheostat to give 30 amperes. The circuit breaker should start vibrating in four minutes or less.

4. Adjust rheostat to give 22 amperes on ammeter. The circuit breaker should remain closed indefinitely at 22 amperes.

5. If circuit breaker does not operate as specified the lighting switch assembly should be replaced. The circuit breaker is not adjustable and no attempt should be made to alter the calibration by bending the bi-metal blade. The contact points must not be filed or sanded.

## 10-48 HEADLIGHTS AND CONTROLS

### a. Headlamp Assembly

The headlamp assembly on each front fender consists of a body, wiring, connector, mounting ring, sealed beam unit, retainer ring, door and gasket. See figure 10-68.

The headlamp body is attached to the fender with a gasket between body and fender to provide a water-tight seal. The wiring to which the connector is attached extends through rear of lamp body and connects to a terminal block on the radiator baffle. The mounting ring, which supports the sealed beam unit, forms a ball and socket joint with the body, to which it is attached by one coil spring and two beam adjusting screws. The sealed beam unit is attached to the wiring connector and is held in the mounting ring by retainer ring which is attached to mounting ring by three screws. See figure 10-68. The headlamp door covers the retainer ring and is attached to the fender by one screw at the top and two barrel nuts below the sealed beam unit.

### b. Sealed Beam Unit and Headlight Beams

The sealed beam unit consists of a lens, reflector, terminal plug, and two lamp filaments assembled into one securely sealed unit. The lamp filaments are located with respect to the reflector so that two separate and distinct head-

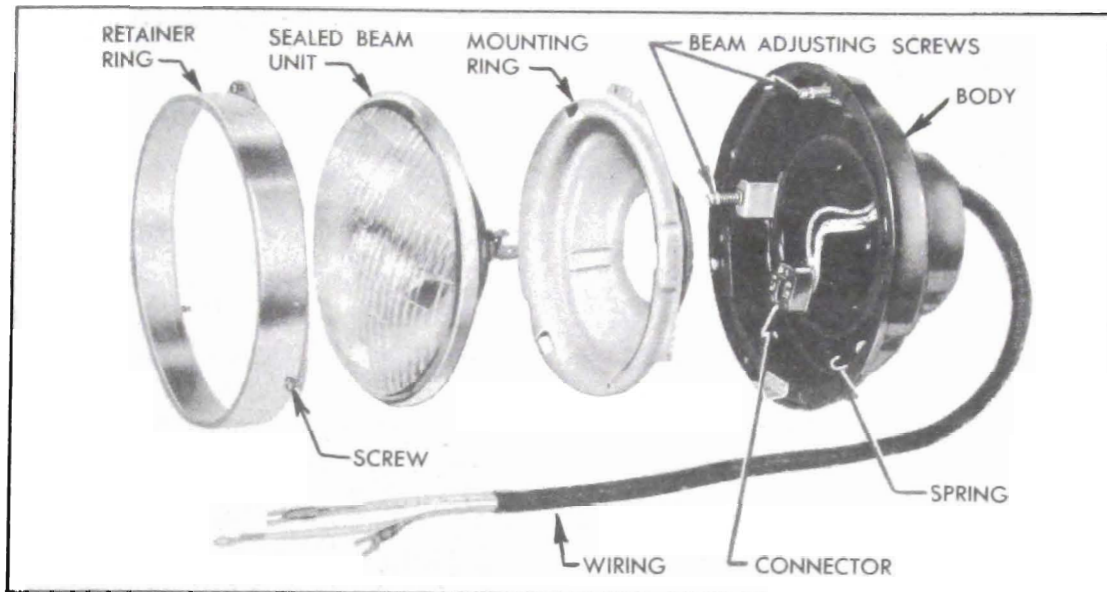


Figure 10-68—Headlamp Disassembled

light beams may be obtained, depending upon which filament is burning.

When the lower lamp filament is burning, an upper or straight forward light beam is obtained. The upper beam is designed to illuminate the road evenly, and is for use on the highway when no other vehicles are approaching. See figure 10-69, view A.

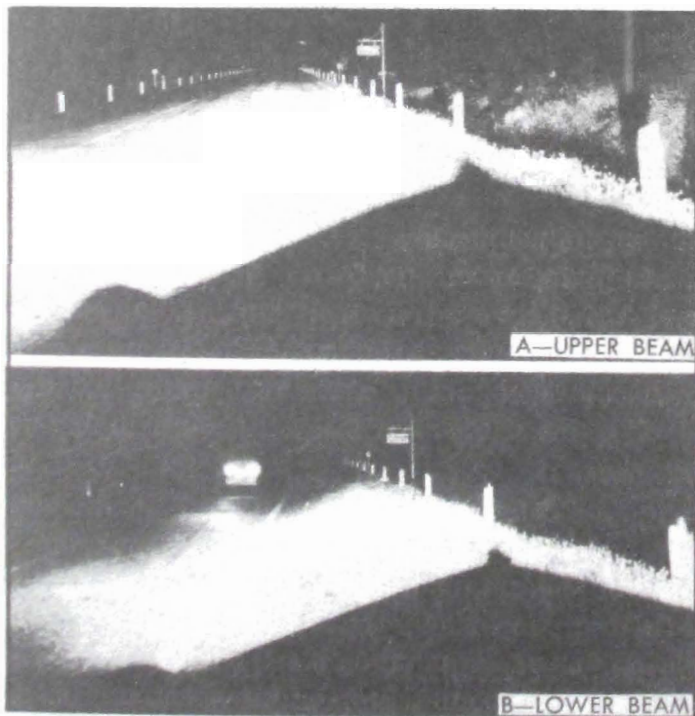


Figure 10-69—Light Distribution With Headlight Beams

When the upper lamp filament is burning, a lower or depressed light beam is obtained. The lower beam is designed so that it does not throw a dazzling light into the eyes of an approaching

driver. At the same time, the distribution of light is such that the right side of road is illuminated as far ahead as is practicable without causing glare on curves. See figure 10-69, view B. The lower beam is intended for use in traffic and on the highway when meeting other vehicles.

#### c. Dimmer Switch

The driver may select the upper or lower headlight beam as traffic and road conditions demand by operating the dimmer switch mounted on the toe panel in a convenient position for the left foot.

The dimmer switch opens and closes the circuits to the upper and lower lamp filaments in both sealed beam units, thereby alternately raising and lowering the headlight beams with each successive operation of the switch. Depression of switch button turns the rotary contacts one position within the switch. The spring-loaded button automatically returns to the reset position when released. The switch contacts overlap so that the new circuit is closed before the previous one is opened, in order to prevent both beams being off at the same time during operation of the switch.

#### d. Headlight Beam Indicator

Whenever the upper headlight beams are lighted, a beam indicator bulb on the instrument panel also lights, producing a small spot of red light in front of the driver. *For safety reasons, he should never pass an approaching car with the beam indicator showing red.*

## 10-49 HEADLAMP SEALED BEAM UNIT REPLACEMENT AND ADJUSTMENT

### a. Replacement of Sealed Beam Unit

When a sealed beam unit is burned out or broken it must be replaced as a unit assembly. Two types of sealed beam units are available. In one type, the glass lens and a glass reflector are fused together. In the other type, the glass lens and a metal reflector are assembled together with a gasket to provide a tight seal. Both types are interchangeable.

1. Unscrew two barrel nuts in face of headlamp door, remove screw at top and remove door from fender.

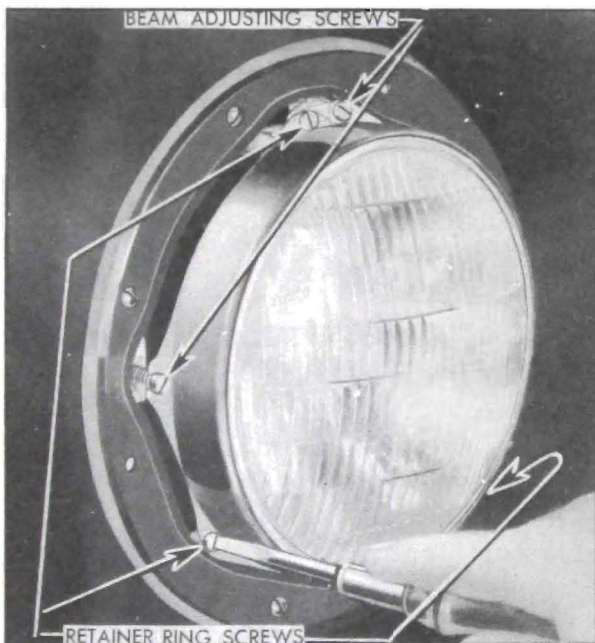


Figure 10-70—Removal of Sealed Beam Unit Retainer Ring

2. Remove the three retainer ring screws but do not disturb the two beam adjusting screws, then remove retainer ring. See figure 10-70.

3. Remove sealed beam unit from mounting ring and separate it from the wiring connector.

4. Install new sealed beam unit by reversing removal procedure. The lens is marked "TOP" and the reflector has three lugs which fit into notches in the headlamp mounting ring. See figure 10-71. **CAUTION:** Make sure that sealed beam unit installed on Series 50-70 has "12V" molded in center of lens to indicate 12-volt unit.

5. Before installation of headlamp door, adjust headlamp for proper aim as described below.

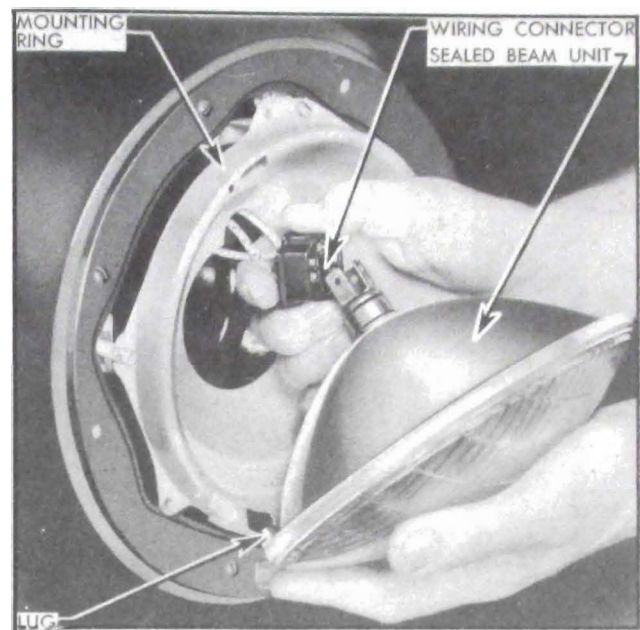


Figure 10-71—Installation of Headlamp Sealed Beam Unit

### b. Headlamp Aiming Adjustment

The headlamps must be properly aimed in order to obtain the maximum road illumination and safety that has been built into the headlighting equipment. The headlamps must be checked for proper aim whenever a sealed beam unit is replaced and after any adjustment or repairs of the front end sheet metal assembly.

Headlamp aiming machines are in general use. When using one of these machines make certain that it is in proper condition, and carefully follow the instructions of the manufacturer. Headlamp aiming charts are also available and will give good results if used properly; see subparagraph c below.

Regardless of method used for checking headlamp aim, car must be at curb weight, that is, with gas, oil, water, and spare tire, but no passengers. Tires must be uniformly inflated to specified pressure (par. 1-1). If car will regularly carry an unusual load in rear compartment, or a trailer, these loads should be on car when headlamps are checked. Some states have special requirements for headlamp aiming adjustment and these requirements should be known and observed.

Horizontal and vertical aiming of the headlamp beam is provided by the two beam adjusting screws which move the mounting ring in the body against the tension of the coil spring. There is no adjustment for focus since the sealed beam unit is set for proper focus during manufacturing assembly. If headlamps require adjustment for proper aim, proceed as follows:

1. Unscrew two barrel nuts in face of head-

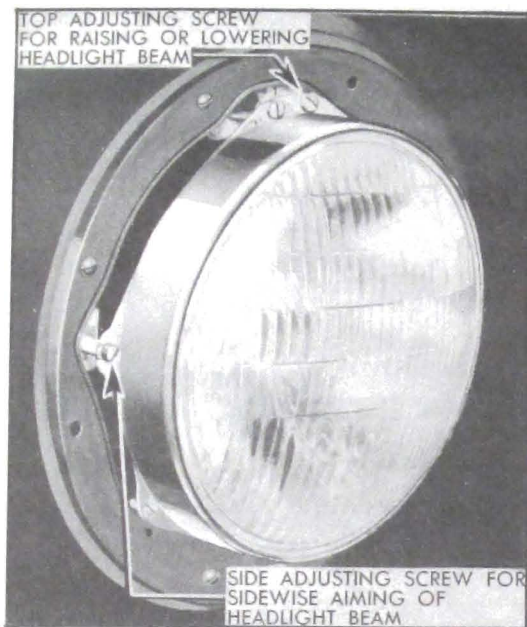


Figure 10-72—Headlamp Aiming Adjustments

lamp door, remove screw at top and remove door from fender.

2. Adjust light beam up or down as required by turning the top beam adjusting screw. See figure 10-72.

3. Adjust light beam to right or left as required by turning the side beam adjusting screw.

4. Check final setting of headlamps after installing headlamp doors.

zontal line (A-A) is 3" below the headlamp center line. Where State laws require a loading allowance be governed by these requirements for the lower line. Vertical lines B-B and C-C are located at the center of head lamps and equally distant from the center vertical line which corresponds to axis of car.

When using the headlamp aiming chart, place car on a level stretch with chart placed 25 feet ahead of both headlamp lenses, and parallel to them. Place a narrow piece of masking tape on the exact vertical centerline of the back window glass. Shift chart sideways as required to bring the center vertical line into exact alignment with the center of radiator ornament and center of the back window glass.

Set lighting switch in "driving" position and operate dimmer switch to give upper beam. Cover right headlamp and note light pattern made on chart by the left headlamp. The center of zone of highest light intensity should fall on the intersection of horizontal line A-A and the vertical line B-B as shown in figure 10-73. Cover left headlamp and check right headlamp in the same manner.

## 10-50 PARKING, TAIL, STOP, AND LICENSE LIGHTS

### a. Front Parking and Signal Lights

Each front parking and signal lamp contains one 32-4 CP lamp bulb which provides a 4 CP parking light and a separate 32 CP direction signal light. The pins on lamp bulb and slots in socket are offset to prevent improper installation of bulb in socket. The parking light is controlled by the lighting switch and the circuit is protected by the switch thermo circuit breaker. The direction signal light is separately controlled by the signal switch and the circuit is protected by the "Direction Signal" fuse on the fuse block under the cowl.

### b. Tail and Stop Lights

The combination tail and stop lamp (upper) on each rear fender contains one 32-4 CP lamp bulb which provides a 4 CP tail light and a separate 32 CP stop light. The tail lights are controlled by the lighting switch and the circuit is protected by the switch thermo circuit breaker.

The stop lights are controlled by a hydraulic switch mounted on the brake pipe distributor fitting near the master cylinder. The switch is closed by hydraulic pressure when the brakes

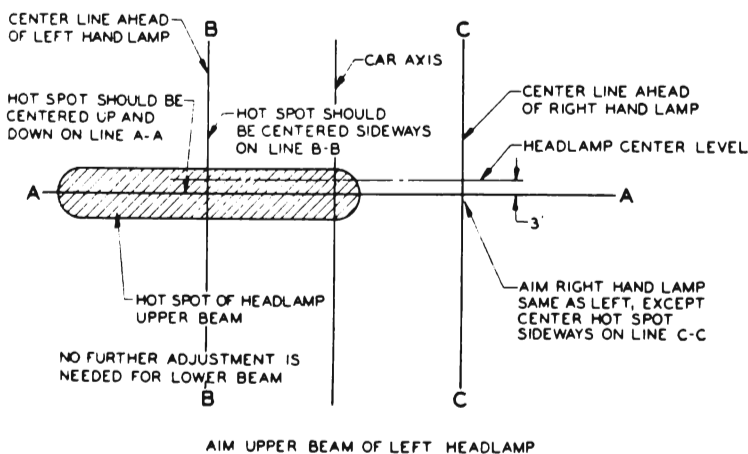


Figure 10-73—Headlamp Aiming Chart

### c. Use of Headlamp Aiming Chart

If a headlamp aiming machine is not available a chart may be prepared as shown in figure 10-73. It is desirable to make the chart on a large panel of plywood or other suitable material, painted flat white, so that it can be shifted into proper alignment with car, as explained later. Note that the chart consists of two horizontal and three vertical lines. The upper horizontal line is located at the same distance from floor as the center of headlamps and the lower hori-

are applied. The stop light circuit is protected by the 9 ampere "Direction Signal" fuse mounted on the fuse block under the cowl.

A lamp bulb may be replaced by removing the lamp door on outside of fender. When installing lamp door be sure that gasket is properly positioned to seal door. Pins on 32-4 CP bulb and slots in socket are offset to prevent improper installation of bulb in socket.

### c. Replacement of Stop Light Switch

When replacing stop light switch have new switch ready to install as soon as old switch is removed from distributor fitting. Before installing new switch make sure that port in distributor fitting is filled with brake fluid. Have a helper *gently* depress brake pedal to fill the fitting from master cylinder, if necessary, then immediately install new switch.

If brake pedal has springy, spongy action after installation of stop light switch, air has entered brake pipes and it will be necessary to bleed the hydraulic system.

### c. Rear License Light

The rear license lamp is mounted in a protected position in the rear bumper guard upper rail, above the license plate. It contains one 3 CP lamp bulb which operates in conjunction with the tail lights and the circuit is protected by the circuit breaker on lighting switch. To replace lamp bulb, remove two coin slotted sleeve nuts which attach the lamp socket and wire assembly.

## 10-51 INTERIOR LIGHTS AND CIGAR LIGHTERS

### a. Instrument Panel Lights and Switches

The speedometer and gauges are illuminated by four 1.5 CP lamp bulbs, and the clock is illuminated by one 1.5 CP lamp bulb. These bulbs are mounted on forward side of instrument panel to provide indirect lighting. The instrument panel lights are controlled by the lighting switch as described in paragraph 10-47 and the circuits are protected by the switch thermo circuit breaker.

### b. Map Lights and Switch

Two map lights are located in the radio speaker grille adjacent to the ash trays. Each map light consists of a 1.5 CP lamp bulb mounted on forward side of the grille in position to project light downward through an

opening in grille. Both lights are controlled by the lighting switch as described in paragraph 10-47.

To replace the bulb in a map light remove the adjacent ash tray to obtain access to the bulb holder. Place a screwdriver behind the raised boss on bulb holder to pry holder out toward ash tray opening.

### c. Instrument Panel Compartment Light

The instrument panel compartment (glove box) is lighted by a 1.5 CP lamp bulb mounted in a light switch attached to top edge of the compartment. The springloaded switch makes contact when the compartment door is opened. As the door is closed it depresses the switch button to break contact and turn the light off. This circuit is protected by the 20 ampere "Dome" fuse on the fuse block under cowl.

### d. Parking Brake Release Warning Signal

The parking brake release warning signal, when installed, will show a red warning signal light on the instrument panel whenever the car is operated while the parking brake is applied. The signal lamp contains a 6 CP bulb and is controlled by a switch mounted in position to be operated by the parking brake lever. The circuit is protected by a 9 ampere fuse on the fuse block under cowl.


When brake lever is in fully released position, the signal switch plunger must be depressed  $1\frac{3}{16}$ ". Adjustment is made by loosening the mounting screws and shifting the switch as permitted by the slotted screw holes.

### e. Cigar Lighters

Either a Casco or a Rochester Products cigar lighter may be used. These optional lighters differ in design so that parts are not interchangeable. See figure 10-74. Either lighter is heated by pressing the knob in until it latches; the knob will automatically unlatch and return to "off" position when heated to proper temperature.

In the Casco lighter, a replaceable thermal fuse located in the lighter base protects the lighter element against overheating if knob is manually held in for too long a period. In the Rochester Products lighter, a circuit breaker located in the case provides protection against overload and overheating. See figure 10-74.

The Rochester lighter circuit breaker can be easily reset after it has opened the circuit due

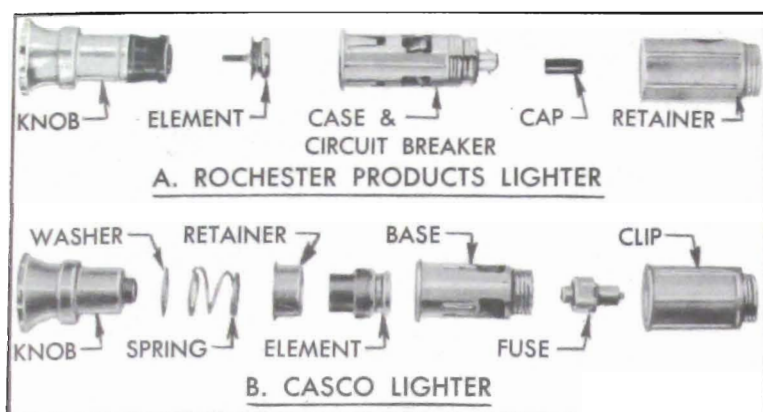

**Figure 10-74—Optional Types of Cigar Lighter**

to an overload. Disconnect the bayonet type wire connector, remove insulating cap from end of circuit breaker and push the circuit breaker plunger in until it is engaged. Reinstall insulating cap firmly on lighter case and connect the wire.

## SECTION 10-H

### SIGNAL SYSTEMS

Paragraph	Subject	Page	Paragraph	Subject	Page
10-52	Horns and Control Circuit . . . . .	10-73	10-54	Directional Signal Lamps and Switch . . . . .	10-75
10-53	Adjustment of Horn Relay . . . . .	10-74			

NOTE: For Series 40 6-volt systems refer to Section 10-H in the 1952 Buick Shop Manual.

#### SERVICE BULLETIN REFERENCE

Bulletin No.	Page No.	SUBJECT

### 10-52 HORNS AND CONTROL CIRCUIT

#### a. Horns and Relay

Two Delco-Remy electrically operated vibrator type horns are mounted in front of the radiator. Both horns are operated simultaneously by an adjacent horn relay which is controlled by the horn button on steering wheel. The left hand horn is high pitched (380-400 cycles) and the right hand horn is low pitched (302-323 cycles), so that together they produce a pleasing blended tone.

The horn relay is an electrical switch which closes the circuit between the battery and the horns when the horn button is pressed, and opens the circuit when the button is released. The relay permits control of the horns with a small amount of current passing through the horn button contacts. The high current required by the horns would cause arcing and burning of these contacts.

When the horn button contacts are closed, a small amount of current flows through the relay winding to ground at the horn button. This magnetizes the relay core, which attracts the flat steel relay armature. The armature has a contact point which makes contact with a stationary point to close the horn circuit. When horn button is released, current stops flowing through relay winding so that the core loses its magnetism; the armature spring then causes contact points to be separated.

#### b. Horn Buttons

The horn button used with the flexible spoke steering wheel includes an operating ring and a contact plate mounted in the steering wheel cap base. When the operating ring is pressed it touches the contact plate to close the circuit to ground, thus completing the relay circuit and causing the horns to operate.

The monogram and bezel assembly is held in the steering wheel cap base by three springs. The assembly may be removed by inserting a small screw driver in a notch provided in the cap base and prying against the bezel. When the monogram and bezel assembly are removed, the operating ring and wheel base assembly may be removed by removing the three screws which attach the wheel base to the steering wheel hub.

The horn button used with the solid spoke steering wheel has a cap with a rubber retainer in its rim which snaps over the rim of a contact cup mounted in the wheel hub. The cap may be pried out with a thin bladed tool and the contact cup and other parts may then be removed by removing the three attaching screws and insulating spacer bushings.

#### c. Adjustment of Horns

When horns fail to blow first check wiring circuit (par. 10-12, c) before attempting to adjust horns. If horns are at fault, or tone is poor,