

	Page		Page
Overhaul	10-60	Horns, Relay & Button	10-73
Periodic Inspection	10-55	Trouble Diagnosis	10-9
Specifications	10-3	Hydraulic Valve Lifters	2-9
Timing	10-56	Hydraulic Valve Lifter Service	2-23
Dynaflow Transmission	4-3	Hydro-Lectric Power Systems	13-5
Lubricare	1-6	Hydrometer Test of Battery	10-13
E		I	
Engine	2-1	Ignition Coil	10-51
Cooling System	2-13	Inspection	10-56
Correction for Unbalance	2-44	Specifications	10-3
Cranking System	10-35	Tests	10-59
Dimensions, Fits, Adjustments	2-3	Ignition Distributor	See Distributor
Fuel & Exhaust System	3-1	Ignition System	10-51
Hard Starting	3-7	Periodic Inspection	10-55
Ignition System	10-51	Trouble Diagnosis	10-8
Lubrication System	2-11	Ignition Switch	10-51
Mountings	2-7	Switch Replace, Lock Repairs	10-64
Mounting Adjustment	2-42	Ignition Timing	10-55
Oil Recommendations	1-8	Indicator, Charge	10-79
Specifications	2-1	Indicator, Headlight Beam	10-68
Tune Up, Trouble Diagnosis	2-15	Indicators, Direction Signal	10-75
Ventilation System	2-12	Inflation Pressures, Tire	1-4
Exhaust Manifold	3-5	Intake Manifold	3-4
Valve Service	3-10	Intake Silencer	3-3
Exhaust Pipes	3-5	L	
F		Lamp Bulb Specifications	10-4
Fan Belt, Adjust or Replace	2-39	Lamps,	
Fender & Hood Alignment	12-2	Direction Signal	10-75
Filler, Gas Tank, Replace	3-14	Headlamps	10-67
Filters, Gasoline	3-10	License, Rear	10-71
Flywheel & Ring Replacement	2-43	Park, Signal, Tail, Stop	10-70
Folding Top, Convertible Body	See Top	Lighting System	10-66
Frame	9-1	Trouble Diagnosis	10-9
Fuel Consumption, Excessive	3-8	Lighters, Cigar	10-71
Fuel Pump	3-15	Lights	
Inspection, Test, Repairs	3-17	Headlights	10-67
Fuel System	3-4	Direction Signal	10-75
Trouble Diagnosis	3-7	Instrument Panel	10-71
Fuse Block	10-83	Instrument Panel Compt. (Glove Box)	10-71
Fuse Specifications	10-3	Map (Inst. Panel)	10-71
G		Lubricare (Lubrication)	1-1
Gasoline Filters & Strainers	3-10	Body	1-4
Gasoline Gauge	10-81	Chassis	1-1
Gasoline Tank	3-3	Dynaflow Transmission	1-6
Replacement	3-14	Speedometer Cable	10-82
Gauge		Hydro-Lectric Power System	1-7
Gasoline	10-81	Lubrication System, Engine	2-12
Oil Pressure	10-80	M	
Temperature	10-79	Manifold Heat Control	3-4
Generator	10-19	Valve Service	3-10
Inspection, Test on Car	10-23	Manifold, Int. & Exh.	3-4
Lubrication	1-3	Models, Car	0-3
Repairs, on Bench	10-24	Mountings, Engine	2-7
Specifications	10-1	Adjustment	2-42
Test, on Bench	10-24	Muffler	3-6
Generator Regulator	10-20	N	
Repairs on Bench	10-33	Neutral Safety Switch	10-42
Specifications	10-2	Numbers, Body Style	3-1
Test & Adjust, on Car	10-26	O	
Generating System	10-19	Oil Consumption, Excessive	2-16
Trouble Diagnosis	10-6	Oil Recommendation, Engine	1-8
Glove Box Light	10-71	Oil Filter	2-11
H		Changing Element	1-5
Headlamps	10-67	Oil Pressure Gauge	10-80
Aiming Adjustment	10-69	Oil Pump	2-11
Aiming Chart, Use of	10-70	Dimensions of Parts	2-3
Sealed Beam Unit, Replace	10-69	Repairs	2-41
Heater & Defroster	11-1	Oil Pump, Steering	7-10
Hood	12-1	Oil Seal C/S R. Bearing	2-29
Emergency Unlocking	12-5		
Hinge & Fender Adjustments	12-4		

P	Page
Parking Brake Warning Signal	10-71
Parking Lamps	10-70
Pistons, Pins, Rings	2-8
Dimensions	2-5
Replacement	2-33
Power Brakes	8-1
Power Steering	7-2
Power Systems, Hydro-Lectric	13-4
Pump, Fuel & Vacuum	See Fuel Pump
Pump, Oil	2-11
Repairs	2-41
Pump, Hydraulic Steering	7-10
Pump, Water	2-13
Repairs	2-40

R	Page
Radiator	2-13
Thermostat Test	2-39
Radio	11-5
Adjustments on Car	11-9
Alignment Procedure	11-15
Antenna Install, Closed Body	11-10
Antenna Install, Convertible & Riviera	11-12
Receiver Installation	11-9
Service Parts Lists	11-9
Trouble Diagnosis	11-7
Rear Axle Assembly	5-1
Draining & Flushing	1-9
Rear Wheel Bearing Lubrication	1-8
Reboring Cylinders	2-35
Regulator, Generator	10-20
Relay, Cut-Out	10-20
Relay, Horn	10-73
Relay, Solenoid Switch, Test & Adjust	10-46
Rocker Arms, Replacement	2-22

S	Page
Sealed Beam Unit, Headlamp	10-67
Seat Adjuster, Front	13-2
Serial Numbers, Car & Engine	0-3
Sheet Metal, Chassis	12-1
Signal Lamps	10-75
Signal, Park, Brake Release	10-71
Silencer, Intake	3-3
Shock Absorber Calibrations	6-2
Solenoid Switch & Relay, Test, Adjust	10-46
Specifications	10-2
Spark Plugs	10-52
Clean & Adjust	10-57
Spark Timing Control	10-53
Specific Gravity, Battery	10-13
Specifications	
Battery	10-1
Car, General	0-3
Cranking System	10-2
Engine	2-1
Front Wheel Alignment	6-3
Fuel & Exhaust Systems	3-1
Generating System	10-1
Ignition System	10-3
Lighting System	10-3
Radio Alignment	11-15
Signal Systems	10-4
Speedometer	10-81
Gears	4-3
Trouble Diagnosis	10-10
Starter	See Cranking Motor
Steering Gear, Hydraulic	7-2
Steering Gear, Manual	7-1
Steering Gear Lubricate	1-4

	Page
Steering Geometry (Turning Angles)	6-3
Stop Lights & Switch	10-70
Stromberg 2-Barrel Carburetor	3-44
Stromberg 4-Barrel Carburetor	3-57
Style Numbers, Body	13-1
Switch	
Dimmer	10-68
Direction Signal	10-75
Ignition	10-51
Lighting	10-66
Map Light	10-71
Neutral Safety	10-35
Stop Light	10-71

T	Page
Tail Lamps	10-70
Tank, Gasoline	3-3
Replacement	3-14
Temperature Gauge	10-79
Thermo Circuit Breaker	10-66
Thermostat	
Choke, Adjustment	3-12
Exh. Manifold Valve	3-11
Radiator, Test	2-39
Throttle Linkage	3-4
Adjustment	3-13
Tie Rods & Ends	7-1
Timing	
Carter Accel. Vac. Switch	10-38
Ignition	10-55
Stromberg Accel. Vac. Switch	10-41
Timing Chain Replacement	2-28
Tires, Inflation	1-4
Transmission, Dynaflo	4-1
Approved Oils	1-7
Drain & Refill	1-6
Installation of Assembly	4-9
Manual Control Linkage Adjust	4-7
Removal of Assembly	4-8
Transmission, Synchromesh	4-1
Trim Dimensions, Chassis Springs	6-1
Trouble Diagnosis	See Diagnosis
Tune Up, Engine	2-15

V	Page
Vacuum Pump	3-15
Inspect, Test, Repairs	3-17
Vacuum Switch, Carter	10-37
Checking Switch Timing	10-38
Cleaning & Timing	10-38
Vacuum Switch, Stromberg	10-39
Cleaning, Setting Timing	10-41
Valve Mechanism, Engine	2-9
Guide Replacement	2-21
Hydraulic Lifters	2-9
Hydraulic Lifter Service	2-23
Noise	2-17
Reconditioning Valves	2-21
Ventilation, Crankcase	2-12
Vickers Oil Pump, Steering	7-10
Voltage Regulator	See Generator Regulator
Voltage Test, Cranking Motor	10-45

W	Page
Warning Signal, Park, Brake	10-71
Water Pump	2-13
Repairs	2-40
Wheel Bearing Lubrication, Rear	1-8
Wiring Circuit Diagrams	10-83