

C	Page
Camber, Check & Adjust	7-21
Camshaft & Bearings	2-27
Carbon Monoxide Warning	11-13
Carburetor	
Adjustment	3-10
Calibrations	3-1
Carter	See Carter
Changing Calibrations	3-9
Heat Control Valve	3-10
Rochester	See Rochester
Starter Switch	10-35
Stromberg	See Stromberg
Throttle Linkage	3-4
Throttle Linkage Adjustment	3-12
Car Models	0-3
Car Roughness or Vibration	7-10
Carter 2-Barrel Carburetor	3-19
Carter 4-Barrel Carburetor	3-31
Carter Climatic Control (Choke)	3-22
Disassembly, Cleaning, Assembly	3-25
Fast Idle Cam & Unloader Adjustment	3-24
Thermostat Adjustment	3-11
Caster, Check and Adjust	7-21
Charge Indicator	10-72
Chains, Tire	7-13
Chart, Headlamp Aiming	10-62
Chassis Lubrication	1-1
Chassis Sheet Metal	12-2
Chassis Springs	7-2
Overload, Rear	7-17
Replacement, Front	7-17
Replacement, Rear	7-17
Trim Dimensions	7-16
Chassis Wiring Diagram	
Synchromesh	10-82
Dynaflow	10-83
Choke, Automatic	See Carter or Stromberg
Chassis Suspension Specification	7-1
Choke Thermostat Adjustment	3-11
Cigar Lighters	10-65
Circuit Diagrams, Wiring	10-78
Climatic Control	See Carter
Clock Electric	10-73
Trouble Diagnosis	10-10
Clutch, Dynaflow	5-12
Clutch, Synchromesh	4-1
Inspect	4-7
Lubricate Internal Parts	4-5
Pedal Adjustment	4-5
Release Mechanism	4-2
Remove and Install	4-6
Specifications	4-1
Trouble Diagnosis	4-4
Coil, Ignition	10-46
Coil, Ignition Test	10-53
Connecting Rods	2-7
Bearing Dimensions	2-2
Bearing Replacement	2-28
Rod Replacement	2-31
Condenser Replacement, Distributor	10-50
Condenser Tests, Distributor	10-54
Contact Points, Distributor	
Adjustment, Replacement	10-49
Converter Housing, Alignment	5-46
Cooling System, Engine	2-12
Filling, Flushing	2-37
Prepare for Anti-Freeze	2-37
Trouble Diagnosis	2-18
Crankcase Ventilation	2-12
Cranking Motor	10-38
Bench Test	10-42
Periodic Inspection	10-40
Repairs on Bench	10-43

	Page		Page
Specifications	10-2	F	
Voltage Test	10-40	Fan Belt, Adjust or Replace	2-38
Cranking System	10-38	Fender & Hood Alignment	12-8
Trouble Diagnosis	10-6	Filler, Gas Tank, Replace	3-14
Crankshaft & Bearings	2-7	Filters, Gasoline	3-10
Bearing Replacement	2-30	Flywheel & Ring Replacement	
Dimensions	2-2	Dynaflow	2-41
Oil Seal Replacement	2-31	Synchromesh	2-42
Current Regulator	See Generator Regulator	Flywheel Housing Alignment	4-17
Cut-out Relay	See Generator Regulator	Frame	12-1
Cylinder Crankcase	2-6	Front Shock Absorbers	See Shock Absorbers
Cylinder Heads	2-7	Front Springs	See Chassis Springs
Removal	2-20	Front Wheel Suspension	7-1
Installation	2-22	Front Wheels	
Cylinder Reboring	2-33	Alignment	7-20
D		Bearing Adjustment	7-14
Dash Pot & Throttle Linkage Adjustment	3-12	Bearing Replacement, Lubrication	7-14
Defroster, Windshield	11-12	Fuel Consumption, Excessive	3-8
Diagnosis, Trouble		Fuel Pump	3-15
Battery	10-5	Inspection & Test	3-16
Brakes	9-7	Repairs	3-16
Clutch	4-4	Fuel System	3-1
Clock & Instruments	10-10	Trouble Diagnosis	3-7
Cranking System	10-6	Fuse Block	10-79
Engine	2-14	Fuse Specifications	10-3
Fuel System	3-7	G	
Generating System	10-6	Gasoline Filters & Strainers	3-10
Ignition System	10-8	Gasoline Gauge	10-81
Lighting System	10-9	Trouble Diagnosis	10-10
Radio	11-3	Gasoline Tank Replacement	3-14
Rear Axle	6-4	Gauge	
Safety Minder	10-75	Gasoline	10-74
Shock Absorbers	7-9	Pinion Setting	6-19
Signal Systems	10-9	Oil Pressure	10-73
Steering Action	7-9	Temperature	10-72
Steering Gear, Power	8-18	Gears, Planetary, Dynaflow	5-12
Steering Gear, Manual	8-3	Gear Shift Control Mechanism	4-12
Tires	7-6	Generator	10-19
Transmission—Dynaflow	5-27	Inspection, Test, on Car	10-23
Transmission—Synchromesh	4-12	Lubrication	1-3
Differential	See Rear Axle	Repairs, on Bench	10-25
Dimmer Switch	10-61	Specifications	10-1
Directional Signal Lamps & Switch	10-67	Test, on Bench	10-25
Lamp Circuits	10-70	Generator Regulator	10-19
Switch Adjustment	10-69	Repairs on Bench	10-30
Trouble Diagnosis	10-9	Specifications	10-2
Distributor, Ignition	10-46	Test & Adjust, on Car	10-23
Advance Mechanism	10-48	Generating System	10-19
Condenser Tests	10-54	Trouble Diagnosis	10-6
Contact Points—Condenser, Replace	10-49	Glove Box Light	10-65
Dwell Angle Adjustment	10-50	Guide T-3 Aimer	10-62
Overhaul	10-55	H	
Specifications	10-2	Hard Starting	3-7
Timing	10-50	Headlamps	10-60
Dynaflow Transmission	5-1	Aiming Adjustment	10-61
Lubricate	1-3	Aiming Chart, Use of	10-62
E		Sealed Beam Unit, Replace	10-61
Engine	2-1	Heater & Defroster	11-14
Cooling System	2-12	Hood	12-5
Correction for Unbalance	2-43	Horns, Relay & Button	10-66
Cranking System	10-38	Adjustments	10-66
Dimensions, Fits, Adjustments	2-2	Trouble Diagnosis	10-9
Exhaust Manifold Valve Service	3-10	Hydraulic Control System, Dynaflow	5-16
Fuel & Exhaust System	3-1	Hydraulic Valve Mechanism	2-8
Hard Starting	3-7	Hydraulic Valve Lifter Service	2-22
Ignition System	10-46	Hydrometer Test of Battery	10-14
Lubrication System	2-10	I	
Mountings	2-5	Identifications No., Vehicle	0-3
Mounting Adjustment	2-41	Ignition Coil	10-46
Oil Recommendations	1-8	Specifications	10-2
Specifications	2-1	Tests	10-53
Tune Care, Trouble Diagnosis	2-14	Ignition Distributor	See Distributor
Ventilation System	2-12	Ignition System	10-46
Exhaust Pipes	3-5	Trouble Diagnosis	10-8
Exhaust Manifold	3-5		

	Page		Page
Ignition Switch	10-46	P	
Switch Replace, Lock Repairs	10-58	Parking Brake Controls	9-3
Ignition Timing	10-50	Adjustment, Lubrication	9-15
Indicator, Charge	10-72	Release Warning Signal	10-65
Indicator, Headlight Beam	10-61	Parking Lamps	10-64
Indicators, Direction Signal	10-67	Power Brakes	
Inflation Pressures, Tire	1-4	Bendix	9-33
Instrument Panel Compt. (Glove Box)		Moraine	9-25
Light & Switch	10-65	Pedal Adjustment, Brake	9-14
Intake Manifold	3-4	Pedal Adjustment, Clutch	4-5
Intake Silencer	3-4	Pinion Adjustment, Rear Axle	6-20
K		Pinion Setting Gauges	6-19
King Pin Inclination, Theoretical	7-23	Pistons, Pins, Rings	2-7
Knuckle, Steering, Replace	7-15	Dimensions	2-3
L		Replacement	2-31
Lamp Bulb Specifications	10-3	Ring Fitting	2-32
Lamps		Propeller Shafts	
Back-Up	10-64	Assembly & Straightening, Front	6-13
Direction Signal	10-67	Installation & Adjustment	6-12
Headlamps	10-59	Removal & Disassembly	6-9
License, Rear	10-64	Pump, Fuel	3-15
Park, Signal, Tail, Stop	10-64	Pump, Oil & Vacuum	2-10
Lighting System	10-59	Repairs	2-40
Trouble Diagnosis	10-9	Pump, Hydraulic Steering	8-13
Lighters, Cigar	10-65	Pump, Water	2-12
Lights		Repairs	2-39
Headlights	10-60	Push Button Setting, Radio	11-5
Direction Signal	10-67	R	
Instrument Panel Control	10-59	Radiator	2-12
Lower Control Arm, Rebush, Replace	7-18	Thermostat Test	2-38
Lubricare (Lubrication)	1-1	Radio	11-1
Body	1-5	Adjustments on Car	11-5
Chassis	1-1	Alignment Procedure	11-9
Clutch Internal Parts	4-5	Antenna Installation	11-8, 11-9
Dynaflow Transmission	1-3	Receiver Installation	11-6
Parking Brake Cables	9-15	Trouble Diagnosis	11-3
Speedometer Cable	10-75	Rear Axle Assembly	6-1
Lubrication System, Engine	2-10	Disassembly	6-14
Specifications	2-2	Lubrication	1-9
M		Removal	6-6
Manifold Heat Control	3-4	Specifications	6-1
Valve Service	3-10	Trouble Diagnosis	6-4
Manifold Intake	3-4	Rear Wheel Bearing	
Exhaust	3-5	Lubrication	1-7
Marks on Ring Gear & Pinion	6-16	Replacement	6-7
Master Cylinder, Brake	9-12	Rear Wheel Suspension	7-3
Filling	9-12	Reboring Cylinders	2-33
Overhaul	9-21	Receiver Installation, Radio	11-6
Models, Car	0-3	Recharging Battery	10-17
Mountings, Body	13-2	Regulator, Generator	10-19
Mountings, Engine	2-5	Relay, Cut-Out	10-19
Adjustment	2-41	Relay, Horn	10-66
Muffler	3-5	Relay, Solenoid Switch, Test & Adjust	10-40
N		Release Mechanism, Clutch	4-2
Neutral Safety Switch	10-37	Resonator	3-6
Numbers, Body Style	13-2	Ring Gear & Pinion Marks	6-18
O		Ring Gear Replacement	6-22
Oil Consumption, Excessive	2-15	Rings, Piston	See Piston Rings
Oil Recommendation, Engine	1-8	Rochester 4-Barrel Carburetor	3-50
Oil Filter	2-10	Rocker Arms, Replacement	2-21
Changing Element	1-5	S	
Oil Pressure Gauge	10-73	Safety-Minder	10-75
Oil Pump	2-10	Saginaw Oil Pump, Steering	8-13
Dimensions of Parts	2-3	Sealed Beam Unit, Headlamp	10-60
Repairs	2-40	Serial Numbers, Car & Engine	See Identification No., Vehicle
Oil Pump, Steering	8-13	Sheef Metal, Chassis	12-2
Oil Seal C/S R. Bearing	2-31	Shift Control, S-M Transmission	4-12
Oil Seals, R. Wheel Bearings	6-7	Signal Lamps	10-66
		Signal, Park, Brake Release	10-65
		Silencer, Intake	3-4
		Shock Absorbers, Front & Rear	7-4
		Replacement	7-18
		Trouble Diagnosis	7-9

14-4 INDEX**1957 BUICK CHASSIS MAINTENANCE MANUAL**

	Page
Solenoid Switch, Test, Adjust	10-40
Specifications	10-2
Sonomatic Radio	11-1
Spark Plugs	10-52
Clean & Adjust	10-52
Spark Timing Control	10-50
Specific Gravity, Battery	10-14
Specifications	
Battery	10-1
Brakes	9-1
Car, General	0-3
Chassis Suspension	7-1
Clutch	4-1
Cranking System	10-2
Engine	2-1
Front Wheel Alignment	7-22
Fuel & Exhaust Systems	3-1
Generating Systems	10-1
Ignition System	10-2
Lighting System	10-3
Radio Alignment	11-9
Rear Axle	6-1
Signal System (Horn, Lights, etc)	10-4
Steering Gear, Power	8-10
Steering Gear Manual	8-1
Steering Gear Lubricare	1-4
Transmission, Dynaflow	5-1
Transmission, Synchromesh	4-9
Speedometer	10-75
Gears	4-10
Trouble Diagnosis	10-75
Springs, Chassis	7-2
Stabilizer Link Adjustment	7-14
Starter	10-33
Steering Gear, Power	8-10
Steering Gear, Manual	8-1
Steering Gear Lubricare	1-4
Steering Geometry (Turning Angles), Checking	7-24
Steering Knuckle, Replace	7-15
Steering Linkage	8-2
Steering Wheel, Replace	8-6
Stop Lights & Switch	10-64
Stromberg 2-Barrel Carburetor	3-41
Strut Rods, Replace	6-7
Suspension, Chassis	7-1
Switch	
Back Up Light	10-37
Carburetor Starter Switch	10-35
Dimmer	10-61
Direction Signal	10-67
Ignition	10-58
Lighting	10-59
Neutral Safety	10-37
Stop Light	10-64

T

Tail Lamps	10-64
Tank, Gasoline, Replacement	3-14
Temperature Gauge	10-72
Thermo Circuit Breaker	10-59
Thermostat	
Choke, Adjustment	3-11
Exh. Manifold Valve	3-10
Radiator, Test	2-38
Throttle Linkage	3-4
Adjustment	3-12
Tie Rods & Ends	8-5
Adjustment	7-23
Tightening Specifications	
Brakes	9-1
Chassis Suspension	7-1
Clutch	4-1
Engine	2-1
Fuel & Exhaust Systems	3-1
Rear Axle	6-1
Steering Gear, Power	8-10
Steering Gear, Manual	8-1

Transmission, Dynaflow	5-2
Transmission, Synchromesh	4-9
Timing	
Camshaft	2-27
Carburetor Starter Switch	10-36
Ignition	10-50
Timing Chain Replacement	2-27
Tires	7-4
Abnormal Wear	7-6
Chains, Use of	7-13
Inflation	1-4
Inspection, Interchanging	7-13
Tire & Wheel Balance	7-19
Toe-In, Front Wheels, Check & Adjust	7-23
Torque Ball	4-11
Torque Converter	5-7
Transmission, Dynaflow	5-1
Approved Oils	1-7
Drain & Refill	1-7
Installation of Assembly	5-36
Manual Control	5-4
Manual Control Linkage Adjust	5-34
Pushing Car to Start Engine	5-5
Removal of Assembly	5-36
Specification	5-1
Towing Disabled Car	5-5
Trouble Diagnosis	3-27
Transmission, Synchromesh	4-9
Disassembly, Assembly	4-18
Lubricare	1-1
Removal & Installation	4-16
Shift Control Mechanism	4-12
Specifications	4-9
Trouble Diagnosis	4-12
Trim Dimensions, Chassis Spring, F. & R.	7-17
Trouble Diagnosis	See Diagnosis

U

Universal Joint	
Front	4-11
Rear	6-10

V

Vacuum Pump, Windshield Wiper	2-40
Inspect, Test, Repairs	2-40
Vacuum Switch	See Carburetor Starter Switch
Valve Mechanism, Engine	2-8
Checking Timing	2-26
Guide Replacement	2-20
Hydraulic Lifters	2-8
Hydraulic Lifter Service	2-22
Noise	2-16
Reconditioning Valves	2-20
Specifications	2-3
Ventilation, Crankcase	2-12
Ventilator, Outside Air	11-12
Voltage Regulator	10-19
Voltage Test, Cranking Motor	10-40

W

Warning Signal, Park Brake	10-65
Warranty	0-2
Water Pump	2-12
Repairs	2-39
Wheel Alignment	7-20
Wheel Bearing, Front, Adjust	7-16
Wheel Bearing Lubrication, Rear	1-7
Wheel Bearing Replacement, Front	7-14
Wheel Bearing Replacement, Rear	6-7
Wheel Cylinder, Brake, Overhaul	9-20
Wheel & Tire Balance	7-19
Wheel, Steering, Replace	8-6
Wheel Suspension	7-2
Windshield Defroster	11-12
Wiring Circuit Diagrams	10-78
Wonderbar Radio	11-1