

GROUP 3

ENGINE FUEL AND EXHAUST SYSTEMS

SECTIONS IN GROUP 3

Section	Subject	Page	Section	Subject	Page
3-A	Specifications and General Description	3-1	3-E	Carter 2-Barrel Carburetor	3-19
3-B	Fuel System Trouble Diagnosis	3-7	3-F	Carter 4-Barrel Carburetor	3-31
3-C	Adjustments and Replacements—Except in Pump and Carburetor Assemblies	3-10	3-G	Stromberg 2-Barrel Carburetor	3-41
3-D	Fuel Pump	3-15		imported models only	
			3-H	Rochester 4-Barrel Carburetor	3-50
				imported models only	

SECTION 3-A

SPECIFICATIONS AND GENERAL DESCRIPTION

CONTENTS OF SECTION 3-A

Paragraph	Subject	Page	Paragraph	Subject	Page
3-1	Specifications, Fuel and Exhaust Systems	3-1	3-2	Description of Fuel System	3-3
			3-3	Description of Intake and Exhaust Systems	3-4

3-1 SPECIFICATIONS, FUEL AND EXHAUST SYSTEMS

a. General Specifications

Items	All Series
Gasoline, Grade Required (with Syn.)	Regular
Gasoline, Grade Required (with Dyn.)	Premium
Gasoline Tank Capacity (gal.)	16¾ Minimum
Gasoline Gauge, make and Type	AC Electric
Fuel Pump—Make and Type	AC, FU
Drive	Eccentric on Camshaft Sprocket
Fuel Pump Pressure— At Pump Outlet, pounds	5¾ to 7
At Carburetor Inlet, pounds	5¼ to 6½
Fuel Filter, Type and Location	Monel Mesh Screen, in Gas Tank at Outlet
Carburetor, Make	Carter, Stromberg, or Rochester
Type	Downdraft
Barrels	2 4
NOTE: Canadian Built 40-60 series are equipped with Carter, two or four barrel carburetors only.	
Air Cleaner, Make and Type	AC, Oil Bath
Sump Capacity, Oil Used	1 Pint, SAE 50
Intake Manifold Heat Control	Valve and Thermostat Exhaust Gas
Heat Source	
Thermostat Wind-Up @ 70 Deg. F., Valve Closed	¾ Turn

b. Stromberg Carburetor Calibrations

IMPORTANT: *Calibrations are governed by the CODE number stamped on air horn directly above the fuel inlet.*

Items	Series 40 Dynaflo
Model Designation	WW-2
Number of Barrels	2
Size	1¼"
Primary Venturi Diameter	1½/32"
Code Number for Following Calibrations	7-106
Idle Tube Feed Hole	No. 62
Idle Air Bleeder	No. 36
Location	Main Body
Sec. Air Bleeder	No. 42
Location	Air Horn
Idle Discharge Holes	
1st (with Tube)	No. 51
2nd	No. 54
3rd	No. 70
Main Metering Jets	
Production053"
High Altitude051"
NOTE: Use High Altitude Jets Above 3500 Feet.	
Main Discharge Jet	No. 28-28
High Speed Bleeder	No. 70
Power By-Pass Jet	2—.049"
Pump Discharge Jet	No. 66
Vacuum Spark Control Port	No. 46
Thermostat Cover Ident. No.	36
Float Level	½/32"
Pump Stroke	Medium (Middle Hole)
Pump Plunger	⅜"
Start Aid	No. 53 (.060")
Choke Unloader	No. 27 (.144")
Fast Idle Speed (6 Turns In)	No. 55 (.052")
Choke Spring Pick-Up Lever	7 Turns In
Fast Idle Lever	Just Clear
Choke Positioning Lever	No. 4 (.209")
Choke	At Index Mark
Initial Idle Speed	1½ Turns In
Initial Idle Mixture	1 Turn Out

c. Carter Carburetor Calibrations

IMPORTANT: *Calibrations are governed by the CODE number on the attached code tag.*

ITEMS	Series 40	Series 40	Series 50-60-70	
	Synchromesh	Dynaflow	Primary	Secondary
Model Designation	WGD	WGD	AFB	
Number of Barrels	2	2	4	
Code Number, for Following Calibrations	2529S	2682-S	2625-S	
Large Venturi Diameter	1 3/16"	1 3/16"	1 1/4"	1 3/16"
Float Setting, Cover to Float	1/4"	1/4"		
Gasket to Float			7/32"	7/32"
Float Needle Seat, Drill Size	#38	#38	#34	#34
Low Speed Jet, Drill Size	#69	#72	#69	
Idle Air Bleed, Drill Size	#50	#50	#55	
Idle Discharge Port	.150" x .030"	.150" x .030"	.200" x .030"	
Lower Idle Port, Drill Size	#52	#52	#52	
Idle Mixture Screw, Average	3/4 turn	3/4 turn	1 1/2 turns	
Metering Jet	120-203	120-203	120-166	120-229
Metering Rod				
Production	75-1371	75-1348	16-36	
Lean	75-1348	75-1368	16-26	
High Altitude	75-1367	75-1369	16-27	

NOTE: Use High Altitude Rods Above 3500 Feet.

Anti-Percolator or Main Bleed Hole	#70	#70	#70	#70
Pump Setting at Closed Throttle	Arm Level	Arm Level	1/2"	
Pump Discharge Jet, Drill Size	#68	#69	#70	
Vacuum Spark Control Port	.130" x .040"	.130" x .040"	.130" x .040"	
Choke Coil Housing Number	170AD374S	170AA374S	170AC478S	
Choke Thermostat Setting	1 Notch Lean	Index	Index	
Choke Suction Hole, Drill Size	#42	#48	#48	
F.I. Cam to Boss Clear., Choke Closed	.020"	.020"	.020"	
F.I. Setting, Valve to Barrel Wall	#70 (.028")	#70 (.028")	#70 (.028")	
Unloader Opening at Choke Valve Edge	1/8"	3/16"	3/16"	
Fast Idle Speed (Hot, on Car)	1500 RPM	1500 RPM	1500 RPM	
Initial Idle Speed	1 Turn In	1 Turn In	1/2 Turn In	

d. Rochester Carburetor Calibrations

IMPORTANT: *Calibrations are governed by the CODE number stamped on air horn.*

Items	Series 50-60-70	
	Primary	Secondary
Model Designation	4GC	
Number of Barrels	4	
Code Number for, Following Calibrations	7010070	
Small Venturi	1/4"	1/4"
Large Venturi	1 5/16"	1 15/32"
Main Metering Jets		
Production	.062"-60°	.089"-60°
High Altitude	.061"-60°	

NOTE: Use High Altitude Rods Above 3500 Feet.

Idle Needle Holes	No. 60
2nd Idle Holes	2—No. 69

Items	Series 50-60-70
3rd Idle Holes	No. 70
4th Idle Holes	No. 71
Spark Drillings	No. 46
Pump Discharge Holes	No. 73
Power Restriction	No. 56
Choke Restriction	No. 52
Choke Setting	Index
Idle Tube	No. 69 No. 69
Lower Idle Bleed	No. 64 No. 46
Float Level	1 3/8"
Float Drop	1 13/16"
Pump Rod	1 1/64"
Choke Rod	No. 26 (.147")
Unloader	No. 30 (.129")
Fast Idle	No. 72 (.025")
Secondary Contour	.030"
Secondary Lockout	.015"
Fast Idle (Hot, on Car)	1500 RPM
Initial Idle Speed	1 Turn In
Initial Idle Mixture	1 1/2 Turns Out

3-2 DESCRIPTION OF FUEL SYSTEM

a. Gasoline Tank, Feed Pipe, and Filter

The gasoline tank is attached by two strap type supports to the body under the trunk compartment, where it is seated against strips of anti-squeak material. Two internal baffles spot-welded to the upper half at centerline of tank at the support seats act as struts to maintain the shape of tank and prevent flexing due to weight of gasoline and pull of the supporting straps.

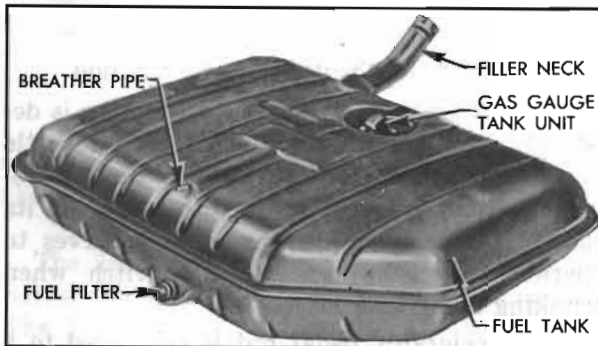


Figure 3-1—Fuel Tank

The gas tank filler is soldered into an opening at the rear upper center of the tank, and is accessible by lifting a door in the center of the rear bumper. The tank is vented at a special pipe rather than at the filler cap. This breather pipe is located at the forward top center of the tank and has a rubber hose extending from it up into the area just under the rear spring crossmember. See figure 3-1.

The tank outlet is located at the forward bottom center of the tank and consists of a

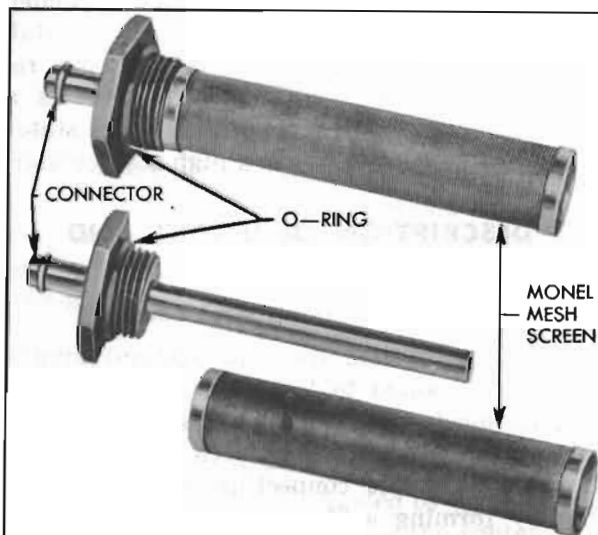


Figure 3-2—Fuel Strainer

combination feed pipe, drain plug, and strainer. See figure 3-2. This strainer or filter consists of a monel mesh screen and may be easily replaced after removing the gas hose from the feed pipe and draining the gas tank. **CAUTION:** *When installing the strainer assembly in the tank, torque to 7-10 ft. lbs. Overtightening may break the flange loose in the tank and cause a leak.*

All fuel lines are made of synthetic rubber hose. This hose is supported along the outside of the right frame rail by clips. All connections are made to non-corrosive fittings using wire hose clamps. See figure 3-3.

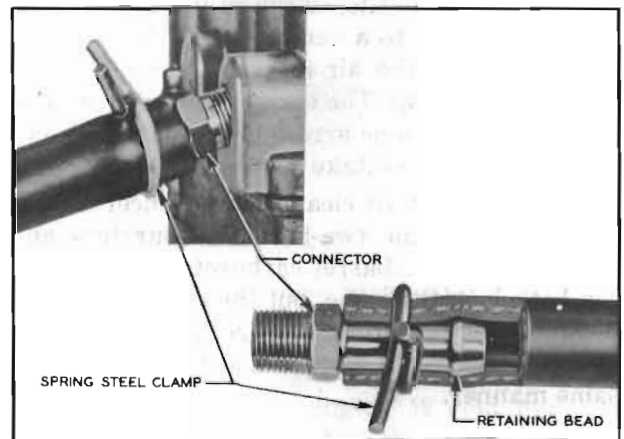


Figure 3-3—Fuel Lines and Clamps

b. Fuel Pump, Carburetor, and Automatic Choke

The fuel pump is mounted on the lower right side of the timing chain cover. It is actuated by a hardened, chrome-plated, stamped steel eccentric mounted on the front side of the camshaft sprocket. The pump is inverted, thereby placing it in a lower, cooler location. It has a built in air dome with a diaphragm to damper out pulsations in the fuel stream. The construction and operation of the pump are described in Section 3-D.

US built engines of all series are equipped in production with either a Carter, Stromberg, or Rochester downdraft type carburetor. *Each make is considered standard and it is not intended that these units be interchanged to provide "optional" equipment.*

NOTE: *Canadian built engines 40-60 series are equipped with Carter two and four Barrel Carburetors only.*

Series 40 engines use a 2-barrel carburetor and Series 50-60-70 engines use a 4-barrel carburetor. All carburetor assemblies include

automatic choke mechanism and a carburetor starter switch.

The Carter carburetors are described in Section 3-E (2-barrel) and Section 3-F (4-barrel). The Stromberg carburetor is described in Section 3-G. The Rochester carburetor is described in Section 3-H. The carburetor starter switches are described in Section 10-E.

c. Air Cleaner and Intake Silencer

All series engines are equipped with heavy duty oil bath air cleaners combined with intake silencers. The air cleaner removes abrasive dust and dirt from the air before it enters the engine through the carburetor. The intake silencer reduces to a very low level the roaring noise made by the air as it is drawn through the intake system. The cleaner and silencer also functions as a flame arrester in event of "back-fire" through the intake system.

There are two air cleaner and silencer assemblies; one for the two-barrel carburetors and one for the four-barrel carburetors. From the top both look the same, but the carburetor connection tube is a different size. Both air cleaners are fastened to a bracket at the front in the same manner.

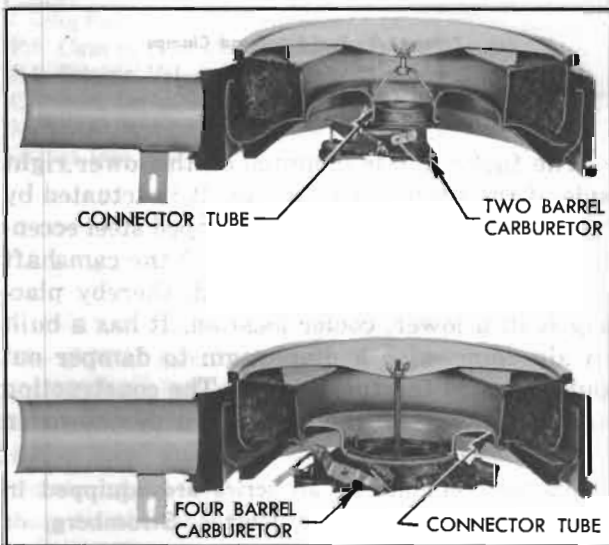


Figure 3-4—Air Cleaner and Silencer Assemblies

The air cleaner consists of an oil reservoir and a cleaner element containing a filtering mesh which nests down into the reservoir above the oil level. The reservoir is filled with S.A.E. 50 engine oil to the "OIL LEVEL" line which requires 1 pint of oil.

Incoming air passes downward through the

passage between the oil reservoir and cleaner element, impinges on the surface of the oil and turns upward into the cleaner element. The air carries oil into the element to coat the finely divided filtering mesh. The air thus exposed to a large oil wetted surface to which the dirt and impurities adhere. The cleaned air then passes through the silencer and into the carburetor. See figure 3-4.

When the throttle is closed, any excess oil on the filtering mesh drips back into the reservoir carrying the collected dirt with it. This dirt then settles to the bottom of the reservoir.

d. Carburetor Throttle Control Linkage

The carburetor throttle control linkage is designed to provide positive control of the throttle valves through their entire range without being affected by movement of the engine on its rubber mountings. The linkage also serves to operate the carburetor starter switch when cranking the engine.

The accelerator pedal rod is connected to a lever on the lower end of an equalizer shaft which is mounted between the body cowl and the rear end of engine. Movement of the pedal rotates the equalizer shaft, which actuates the carburetor throttle shaft through an upper lever and connecting rod. The throttle return spring is connected to the equalizer shaft upper lever and to an anchor bracket on engine. See figure 3-11.

On cars equipped with *Dynaflow Drive*, a dash pot is mounted in position to be contacted by an arm of the carburetor throttle lever as the throttle is closed. The dash pot cushions the closing of throttle valves to prevent sudden shut off which might cause the engine to stall when the accelerator pedal is suddenly released. The throttle linkage also actuates a separate lever and rod connected to the stator control valve in the *Dynaflow* high accumulator.

3-3 DESCRIPTION OF INTAKE AND EXHAUST SYSTEMS

a. Intake Manifold and Heat Control

A low-restriction, dual (2 section) intake manifold is bolted to the inner edges of both cylinder heads, where it connects with all inlet ports. The end branches of each section run at 90 degrees to the connecting middle branch, thereby forming a T-junction at the dividing point which assures a uniform division and dis-

tribution of fuel to all cylinder inlets. Each manifold section feeds four cylinders—two in each bank. See figure 3-5.

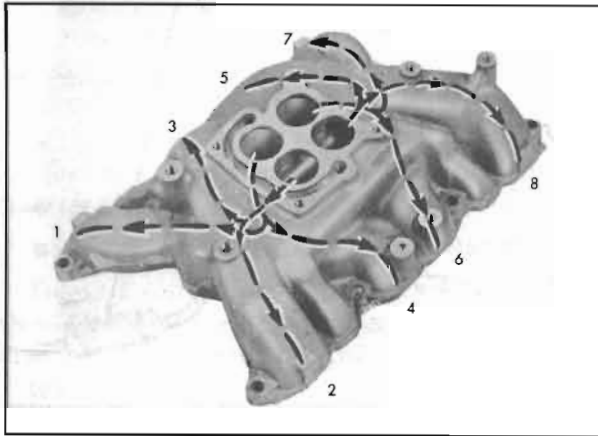


Figure 3-5—Intake Manifold Distribution

The *Series 40* 2-barrel carburetor feeds one barrel into each section of its 2-port manifold. The *Series 50-60-70* 4-barrel carburetor feeds one primary and one secondary barrel into each section of its 4-port manifold.

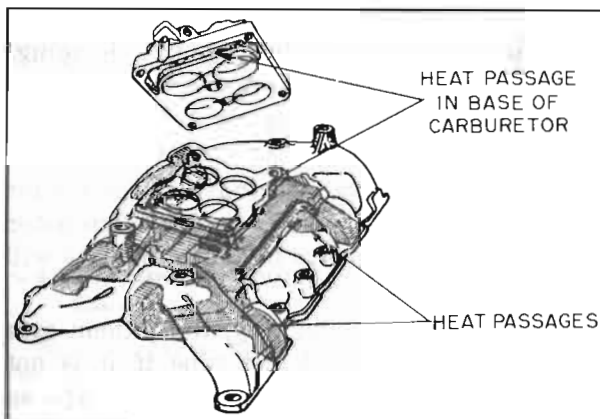


Figure 3-6—Intake Manifold Heat Chambers

The intake manifold is heated and hot spots are provided at the T-junction dividing points by crossover chambers cast along the outer walls of each end branch. These chambers connect to the two middle exhaust passages in each cylinder head. See figure 3-6. Hot spots located at the dividing junctions aid in vaporizing the heavier particles of fuel which are swept against the outer walls due to their greater momentum. The heated intake manifold also aids in obtaining a uniform fuel distribution.

The intake manifold is heated by exhaust gas cross-over passages cast under the center section of the manifold. These passages connect to

the two middle exhaust passages in each cylinder head. See figure 3-6. Exhaust heat is supplied directly to the carburetor mounting surface by two holes drilled from the mounting surface into the cross-over passages. The carburetors are designed to conduct this heat around the throttle valve area to reduce engine stalling due to carburetor icing.

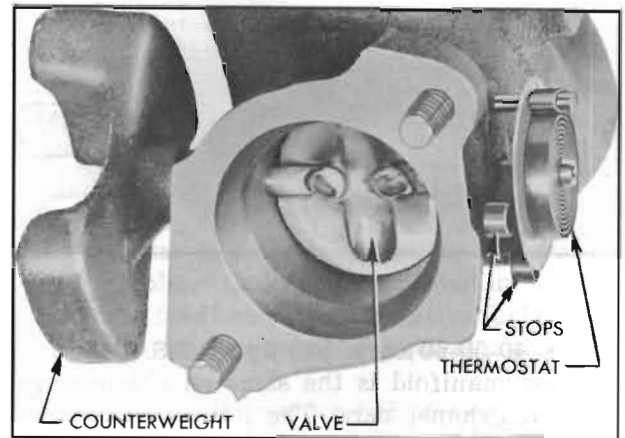


Figure 3-7—Exhaust Manifold Valve

A heat control valve with a bi-metal thermostat is located in the right exhaust manifold. See figure 3-7. When the engine is cold and the thermostat closes the valve, the resulting back pressure in the manifold forces exhaust gas through the crossover passages in the intake manifold to the left exhaust manifold. As the engine warms up and the thermostat releases the valve, the flow of hot gas through the crossover chamber is reduced. Restricted openings in the metal intake manifold gaskets further reduce the flow of gases through the manifold when the engine is warm and the heat valve is open.

b. Exhaust Manifolds, Pipes, and Mufflers

Each cylinder exhausts through an individual port into a separate branch of the exhaust manifold. This manifold, referred to as the double "Y" type, is designed to provide a separation of 270 degrees crankshaft rotation between any two exhaust impulses in one branch of the manifold. This elimination of overlap within any given branch of the manifold permits valve timing that improves engine efficiency, minimizes exhaust valve burning, and effects more complete scavenging of exhaust gas from the cylinder.

A dual exhaust system is standard equipment on Series 70 cars and is optional on all

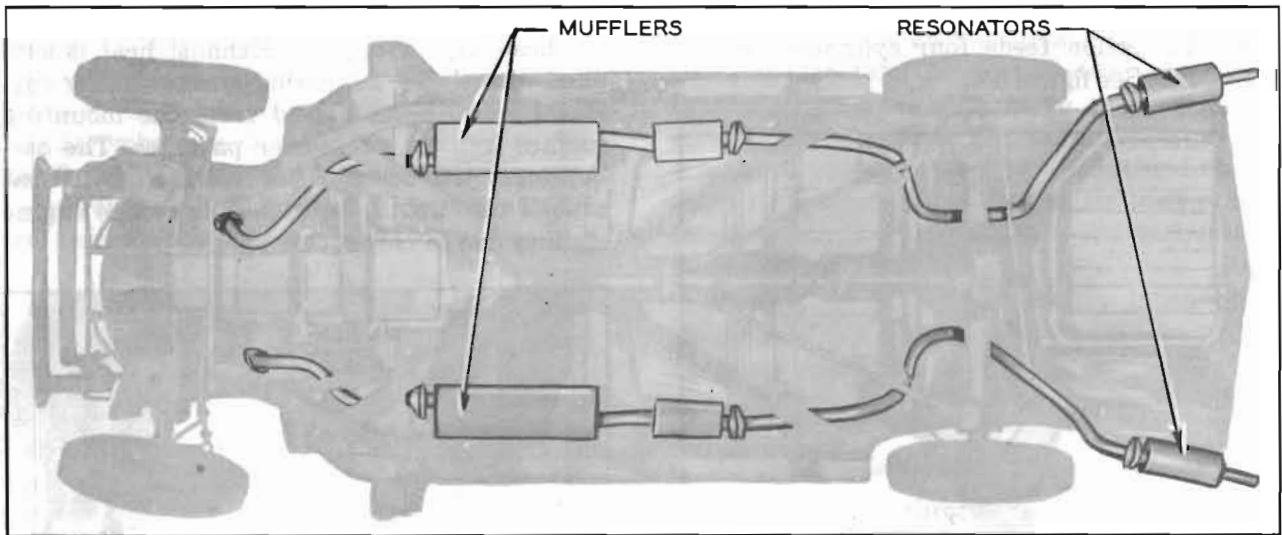


Figure 3-8—Dual Exhaust System

Series 40-50-60 cars. See figure 3-8. The right exhaust manifold is the same on either single or dual exhaust cars. The left exhaust manifold, the exhaust pipes, the mufflers, and the tail pipes are not interchangeable between single and dual exhaust cars.

The right manifold contains the valve which controls the supply of exhaust heat to the intake manifold, as described above (subpar. a). It also contains the carburetor choke heat stove which consists of an alloy steel heating tube mounted in a drilled hole in the manifold and a heating chamber located on the outside of the manifold. Heated air is drawn from the heat stove through an insulated pipe into the automatic choke housing.

All joints between exhaust manifolds, exhaust pipes, two-section mufflers, and tail pipes are of the ball joint connector type. These joints make for easy connection, disconnection, and alignment of exhaust system parts. No gaskets

are used in the entire exhaust system.

The muffler is an oval-shaped, dynamic flow type having very low back pressure. It is double wrapped of heavy gauge sheet steel with a layer of asbestos placed between wrappings to aid in reduction of noise transfer and prevents any "oil-canning" effect. The muffler and exhaust pipes are supported by free hanging, rubber-fabric mountings which permit free movement but eliminate transfer of noise and vibration into the passenger compartment.

Dual exhaust systems have a resonator located under each rear fender. Resonator drain holes must always be down, or they will fill with water.

On dual exhaust jobs only, the pitman arm will strike the left exhaust pipe if it is not properly positioned. Position exhaust pipe so that it clears the pitman arm approximately 1 inch when front wheels are turned full left.