

## SECTION 3-H

## ROCHESTER 4-BARREL CARBURETOR

## CONTENTS OF SECTION 3-H

Paragraph	Subject	Page	Paragraph	Subject	Page
3-27	Description and Operation of Rochester 4-Barrel Carburetor..	3-50	3-30	Disassembly, Cleaning, and Inspection of Rochester 4-Barrel Carburetor.....	3-56
3-28	Description and Operation of Rochester Automatic Choke...	3-53	3-31	Assembly and Adjustment of Rochester 4-Barrel Carburetor	3-58
3-29	Adjustment of Fast Idle Cam, Choke Unloader, and Secondary Throttle Lock-Out.....	3-55			

### 3-27 DESCRIPTION AND OPERATION OF ROCHESTER 4-BARREL CARBURETOR

#### a. General Description

The Rochester Model 4GC used on the *Series 50-60-70* US built engine is a 4-barrel downdraft type which provides the advantages of a compound installation of two 2-barrel carburetors in one

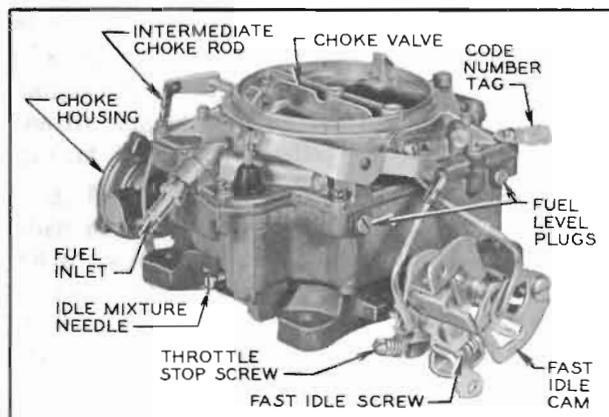


Figure 3-75—Rochester 4-Barrel Carburetor

compact unit. See figure 3-75. To aid description and the proper identification of parts the carburetor is considered to be divided into a *primary section* and a *secondary section*.

The *primary section* covers the 2-barrelled forward half of the carburetor assembly. This section is essentially a complete 2-barrel carburetor containing a float system, idle system with adjustable needle valves, main metering system, power system, and accelerating system. This section also includes a carburetor starter switch for starting the engine, and the automatic choke mechanism.

The *secondary section* covers the 2-barrelled rearward half of the carburetor assembly. This

section is essentially a supplementary 2-barrel carburetor which cuts in to assist the primary section when a pre-determined throttle opening and engine RPM are reached. This section contains a float system, a non-adjustable idle system, and a main metering system. It has a separate set of throttle valves and a set of auxiliary valves, which are located in the barrels above the throttle valves.

The *primary* throttle valves are operated by the accelerator pedal and the connecting throttle linkage. The *secondary* throttle valves are operated by the primary throttle valve shaft through delayed action linkage which permits a pre-determined opening of the primary valves before the secondary valves start to open. Action of the linkage then causes both sets of throttle valves to reach the wide open position at the same time.

The starter switch, which is operated by the *primary* throttle valve shaft, is fully described in paragraph 10-30. The other systems of the carburetor are described in the following subparagraphs.

#### b. Operation of Float Systems

Each section of the carburetor has a separate and independent float system, consisting of a float chamber formed by a partition in the main body, a 2-pontoon float, a needle valve seat and valve. Fuel enters the carburetor through a strainer in the inlet port in the primary side of the air horn. From this point fuel flows to the separate float chambers through a horizontal passage in the air horn. See figure 3-76.

When the fuel reaches the prescribed level in each float chamber the float moves the needle valve against its seat to shut off the flow of fuel. The needle valves are connected to the float levers by clips.

The floats are spring loaded at the rear tangs.

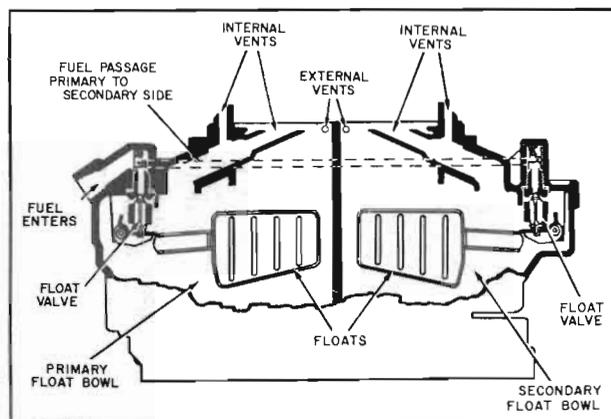


Figure 3-76—Primary and Secondary Float Systems

The spring tension against these tangs determines float drop and also helps determine fuel level.

The joint between the air horn and the main body is sealed by a gasket, and the float chambers are vented by passages which are calibrated to provide proper air pressure above the fuel under all operating conditions. These passages in the air horn lead into the throat of the air horn, and to outside atmosphere. The external vents permit fumes to escape from the float chambers when the engine is stopped after extremely hot operation.

### c. Operation of Idle (Low Speed) Systems

Each barrel of the carburetor has a separate idle system but the general operation is identical in all barrels. The idle system in each barrel supplies fuel to the engine whenever the position of the throttle valve is such that suction is created at the idle discharge holes in the throttle body.

Suction on an idle discharge hole causes fuel in the float chamber to flow through the main

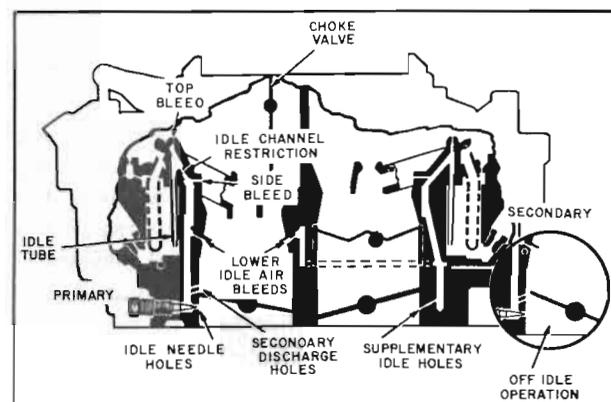


Figure 3-77—Primary and Secondary Idle Systems

metering jet and upward into the idle tube which meters the fuel. Bleed holes permit air to enter at the top and side of the idle passage in the cluster so that a mixture of fuel and air passes down the idle channel to the idle discharge holes. Additional air is drawn into the fuel-air mixture in the idle channel through an auxiliary air bleed which is in the main body. See figure 3-77.

When the throttle valve is closed, the fuel-air mixture is supplied through the lower idle discharge holes only, since the upper holes are above the valve and are not affected by suction. As the throttle valve is opened, suction is also placed on the upper idle discharge holes which then feed additional fuel-air mixture into the engine. With continued opening of the throttle valve the suction on the idle discharge holes tapers off until a point is reached where the idle system no longer supplies fuel-air mixture. Before this point is reached however, the main metering system has begun to supply fuel, as described later.

The auxiliary air bleeds discharge fuel after the idle systems cease to operate, thereby keeping fuel immediately available in the idle channels at a point very near the idle discharge holes and also enriching the mixture being delivered by the main metering system.

In the *primary* section, the quantity of fuel-air mixture supplied through the lower idle discharge holes is controlled by the idle needles, which may be adjusted to provide smooth engine idle operation. In the *secondary* section, the quantity of idle fuel-air mixture is controlled by the fixed size of discharge holes located in the rear of the secondary throttle bores.

### d. Operation of Main Metering Systems

Each barrel of the carburetor has a separate main metering system; however, the operation of all systems is identical. The main metering system in each barrel supplies fuel to the engine whenever the position of the throttle valve is such that the incoming air stream creates suction on the main discharge nozzle.

Air entering the barrel through the air horn passes through the venturi tubes which increase the velocity of the air and create a suction on the main discharge nozzle. This causes fuel to flow from the float chamber through the main metering jet into the main discharge nozzle. Air is drawn in through the high speed bleeder so that a mixture of fuel and air is

discharged from the main discharge nozzle into the air stream passing through the small venturi in the barrel of the carburetor. See figure 3-78.

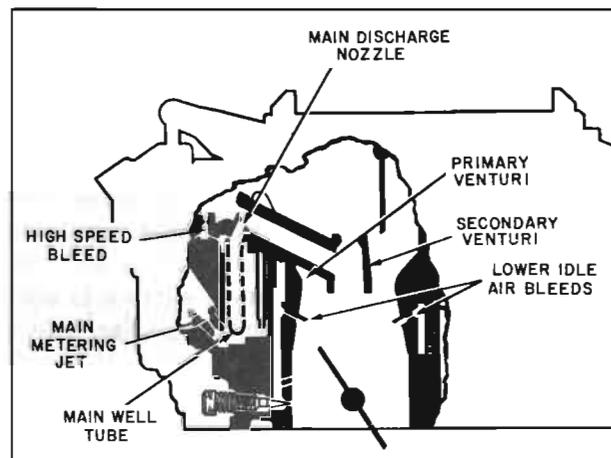


Figure 3-78—Primary Main Metering System

The main metering systems in the *primary* section control the flow of fuel during the intermediate or part throttle range of operation and up to approximately 85 MPH if the car is accelerated gradually. The *secondary* throttle valves remain closed until the primary valves have opened approximately 40-44 degrees, after which they are opened proportionately so that all valves reach the wide open position at the same time. While the secondary throttle valves are closed, the auxiliary valves located above them are held closed by the spring tension on the auxiliary valve shaft; therefore, there is not sufficient air flow through the barrels to operate the main metering systems in the *secondary* section.

When the *secondary* throttle valves are open and engine speed is about 1600 RPM, the resulting air flow through the secondary barrels starts to open the auxiliary valves because their supporting shaft is located off-center in the barrels. The auxiliary valves will be fully open at approximately 2800 RPM. When the auxiliary valves are open the main metering systems in the *secondary* section also supply fuel to the engine. See figure 3-79.

#### e. Operation of the Power System

For maximum power under load or for all speeds above approximately 85 MPH, a richer mixture is required than that necessary for normal throttle opening. This additional fuel is provided by one power system connected to

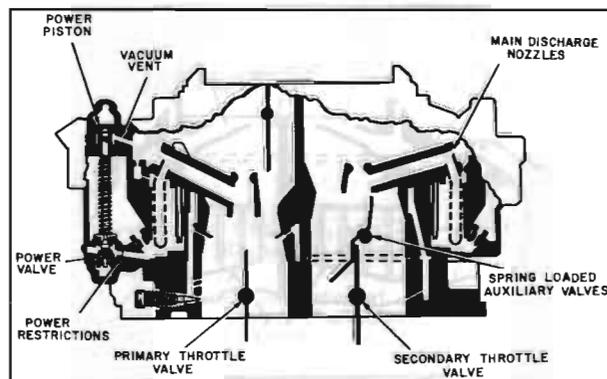


Figure 3-79—Main Metering and Power Systems

the main metering systems in the primary section of the carburetor. See figure 3-79.

The power piston cylinder in the air horn of the carburetor is connected by a channel to the face of the mounting flange so it is subject to intake manifold vacuum. At part throttle position the vacuum is sufficient to hold the power piston in its "up" position against the tension of the piston spring. When the throttle valves are opened to a point where manifold vacuum drops to approximately 9 to 5 inches of mercury and additional fuel is required for satisfactory operation, the piston spring moves the power piston down to open the power valve. This allows additional fuel to enter the main discharge nozzles in the primary section through calibrated restrictions located below the main metering jets. See figure 3-79.

#### f. Operation of the Accelerating System

For smooth and rapid acceleration it is necessary to supply an extra quantity of fuel momentarily when the throttle is opened suddenly. This is accomplished by one accelerating pump piston which is directly connected to the primary throttle shaft lever by means of a rod and pump lever.

When the throttle is closed, the pump piston moves up and draws a supply of fuel from the float chamber through the inlet strainer, past the inlet ball check valve and into the pump cylinder. When the throttle is opened, the piston on its downward stroke exerts pressure on the fuel which closes the inlet check ball and opens the outlet check ball. A metered quantity of fuel is then discharged through the pump discharge nozzles into each barrel in the primary section of the carburetor. This occurs only momentarily during the accelerating period. The pump duration spring which is compressed

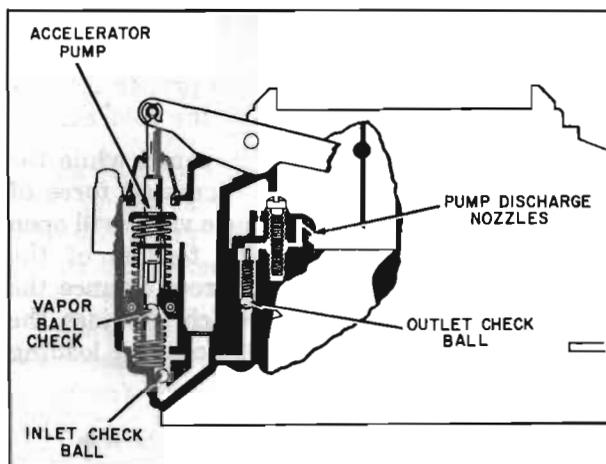


Figure 3-80—Accelerating System

by the downward movement of the pump linkage against the resistance of the fuel provides a follow-up action so that the discharge carries out over a brief period of time. A ball check in the accelerator pump plunger acts as a vapor vent to prevent vapor pressure from forcing fuel from the pump discharge holes during ex-

treme heat periods. Downward movement of the plunger, however, seats the ball and allows normal operation of the accelerating system. See figure 3-80.

When the desired speed is reached and the throttle is held in a fixed position, the pressure on the fuel decreases sufficiently so that the outlet check ball closes and fuel ceases to discharge from pump nozzles. Thus a quantity of fuel is maintained in the channel adjacent to the outlet check ball where it is immediately available for future requirements.

### 3-28 DESCRIPTION AND OPERATION OF ROCHESTER AUTOMATIC CHOKE

#### a. General Description

The automatic choke mechanism is contained in the *primary* section of the carburetor. It consists of a choke valve mounted on a shaft in the carburetor air horn connected through linkage to a thermostat mounted on the carburetor

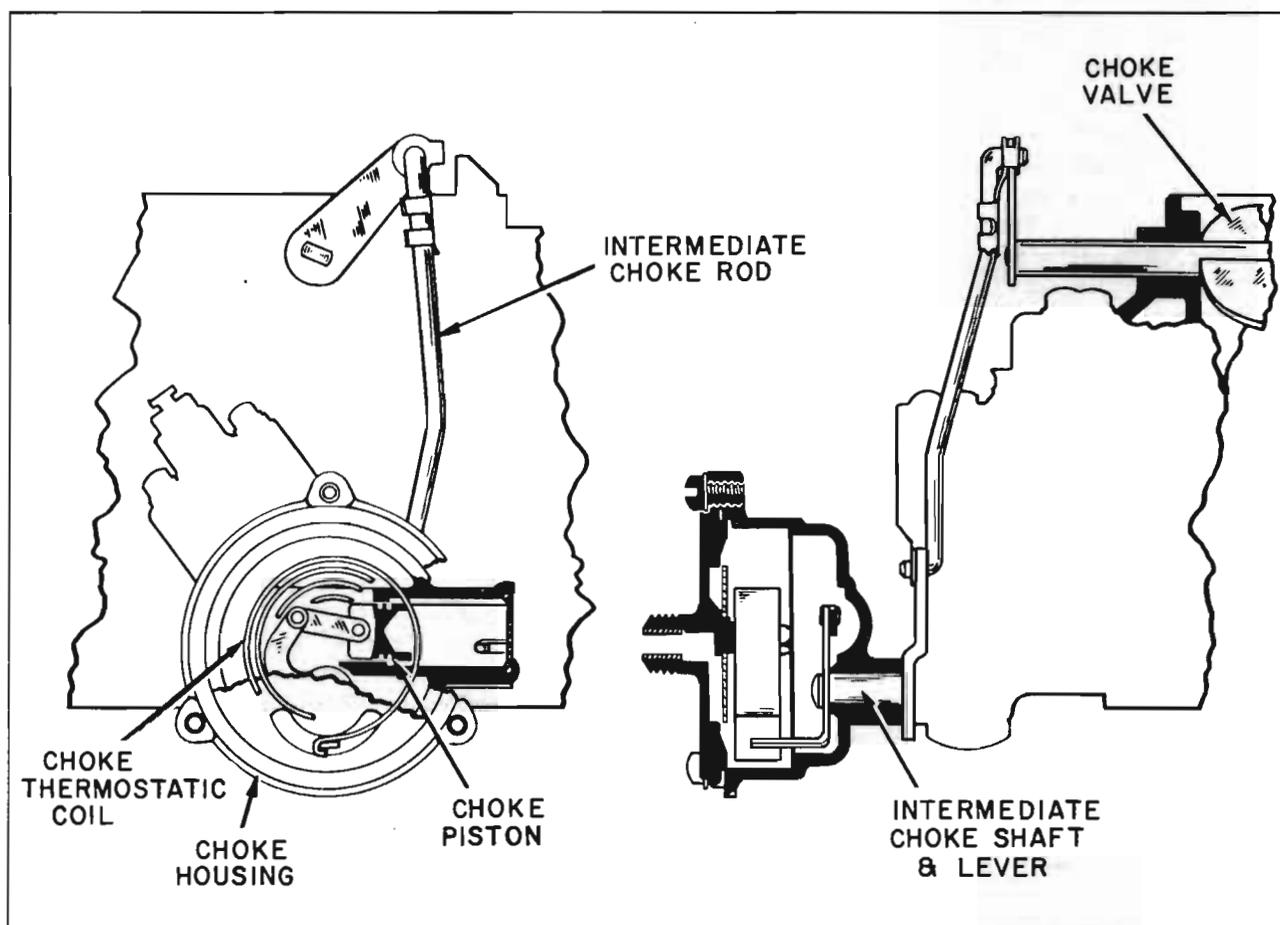


Figure 3-81—Choke System

throttle body. The thermostat contains a bi-metal spring and a vacuum actuated piston. A fast idle rod connects the choke valve to a fast idle cam on the throttle body. A heat pipe connects the choke housing to a heat stove in the right exhaust manifold.

The choke valve is mounted off-center in the choke shaft so that the force of the air stream passing through the air horn tends to move the valve to the open position. A short lever mounted on the intermediate choke shaft in the choke housing is engaged by the free outer end of the thermostat which, when cold, tends to close the choke valve. The piston, which is actuated by intake manifold vacuum, is connected by a link to the short lever on the intermediate choke shaft and tends to open the choke valve when the engine fires. See figure 3-81.

The heat stove in the exhaust manifold heats the air which is drawn through it and the heat pipe into the choke housing. A restriction in the choke housing cover regulates the air into the choke housing to heat the thermostat.

The fast idle cam is connected by the fast idle rod to a lever on the outer end of the choke shaft so that it is rotated as the choke valve moves. In closed throttle position, the fast idle screw bears against one edge of the fast idle cam which has a number of steps of different heights to give different amounts of throttle opening, depending on positions of the cam and choke valve.

#### **b. Choke Operation—Cold Engine**

When the engine becomes cold the choke thermostat also becomes cold and increases its spring tension sufficiently to close the choke valve. It is prevented from closing the valve, however, because the fast idle screw holds the fast idle cam in the slow idle position; consequently, the choke valve is held partially open.

When the accelerator pedal is depressed to start the engine, the throttle stop screw is lifted clear of the fast idle cam and the thermostat then closes the choke valve. When the engine starts, intake manifold vacuum causes the piston to partially open the choke valve against the spring tension of the thermostat, thereby admitting sufficient air to give a satisfactory running mixture.

When the accelerator pedal is released after starting the engine, the fast idle screw comes

to rest against a step of fast idle cam which was rotated to the fast idle position by the closing of choke. This provides proper throttle opening to prevent stalling of the cold engine.

If the throttle is partially opened while the running engine is cold, the increased force of air flow against the off-set choke valve will open the valve against the spring tension of the thermostat. These opposing forces balance the choke valve at a position which provides the required choke action without causing loading or an excessively rich mixture.

#### **c. Choke Operation—Warm-Up Period**

As the engine and exhaust manifold warm up, warm air is drawn through the heat pipe into the choke housing by manifold vacuum. This warms the thermostat, causing it to reduce its spring tension on the choke valve in proportion to the increase in temperature. This, in turn, allows the choke valve to be opened by the combined forces of air velocity on the valve and vacuum on the choke piston.

When the throttle is opened and the fast idle screw is lifted from the fast idle cam, the fast idle rod and cam drop by their own weight to bring a lower step into position for the throttle stop screw. The engine will then run at a lower speed at closed throttle.

#### **d. Choke Operation—Hot Engine**

When the engine reaches normal operating temperature, the choke thermostat is heated to the point where it no longer exerts any spring tension on the choke valve. The choke valve is in the wide open position and the fast idle cam is in the slow idle position so that the fast idle screw misses the cam completely. The throttle stop screw now takes over in determining curb idle speed.

#### **e. Choke Unloader Operation**

If the engine becomes flooded for any reason, the choke valve can be partially opened by depressing the accelerator pedal to the full extent of its travel. This causes an arm on the throttle lever to contact and rotate the fast idle cam, which forces the choke valve open.

#### **f. Secondary Lock-out Operation**

The *secondary* section does not have a choke valve in the air horn. In order to prevent air entering the carburetor through the secondary side during the engine warm-up period it is

necessary to block the movement of the secondary throttle valves by means of the lock-out slot in the fast idle cam.

When the choke valve is in any position except wide open, it holds the fast idle cam up from its lowest position. This causes a lock-out slot in the fast idle cam to engage a tang on the secondary throttle shaft lever which prevents the secondary throttle valves from opening.

When the choke is wide open the fast idle cam and lock-out slot plate drops to its lowest position; the secondary throttle shaft tang is then free to move along a contour in the fast idle cam and the secondary valves can open.

### 3-29 ADJUSTMENT OF FAST IDLE CAM, CHOKE UNLOADER, AND SECONDARY THROTTLE LOCK-OUT

1. On the car, set fast idle to 1500 rpm with the fast idle screw on the highest step of the cam. On the bench set fast idle screw to give .025" between throttle valve on barrel wall opposite screws.

2. Close throttle so that fast idle screw contacts second step of fast idle cam with side of screw against rise to high step of cam, then check clearance between choke valve and air horn dividing wall using a No. 26 drill (.147"). See figure 3-82.

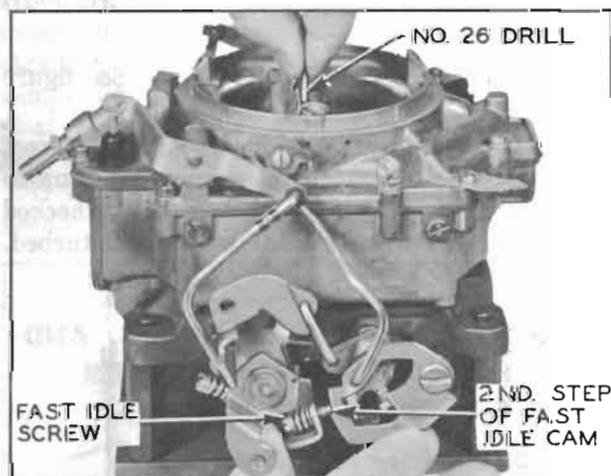


Figure 3-82—Checking Fast Idle Cam Adjustment

3. If choke valve clearance is not correct, bend choke rod as required to obtain this clearance using Tool J-4552. See figure 3-83.

4. Fully open throttle so that throttle arm contacts unloader tang on fast idle cam, then

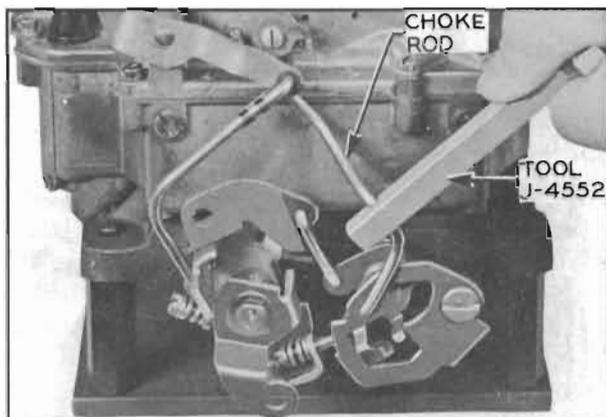


Figure 3-83—Adjusting Fast Idle Cam

check clearance between choke valve and air horn dividing wall using a No. 30 drill (.129"). See figure 3-84.

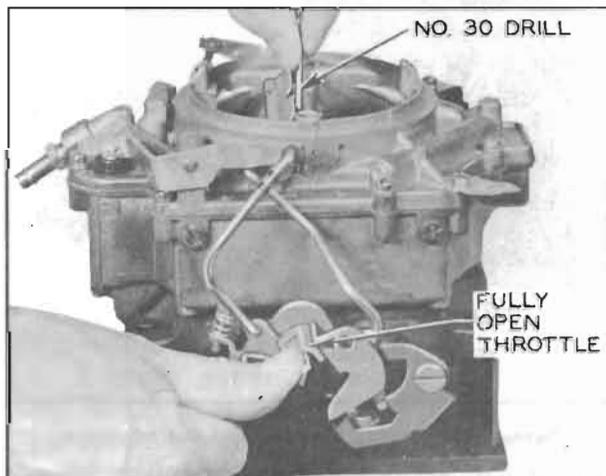


Figure 3-84—Checking Choke Unloader Adjustment

5. If choke valve clearance is not correct, bend unloader tang as required to obtain specified clearance using Tool J-5197. See figure 3-85.

6. Close choke valve so that secondary throttle lock-out tang is on lock-out step of fast idle cam. Check clearance between tang and step using .015" end of Gauge T-109-44. See figure 3-86.

7. If clearance between tang and lock-out step is not correct, bend tang as required to obtain this clearance using Tool J-6058A. See figure 3-87.

8. Fully open choke valve so that fast idle cam falls to its lowest position. Then open throttle so that secondary lock-out tang follows contour portion of fast idle cam. With choke held wide open, check clearance between lock-

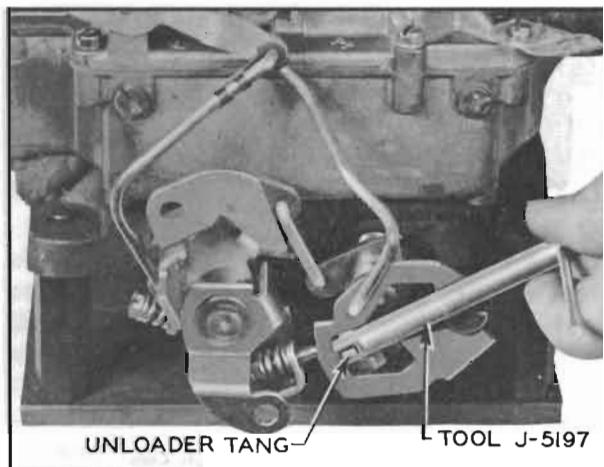


Figure 3-85—Adjusting Choke Unloader

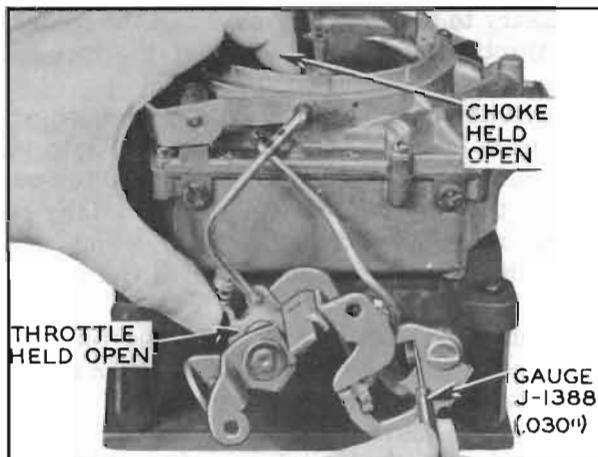


Figure 3-88—Checking Secondary Contour Adjustment

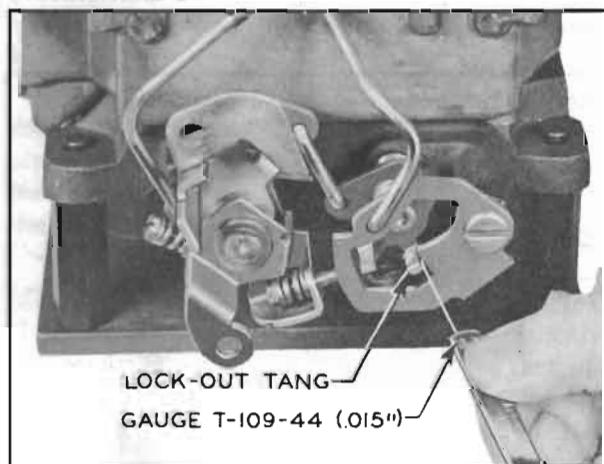


Figure 3-86—Checking Secondary Lock-Out Adjustment

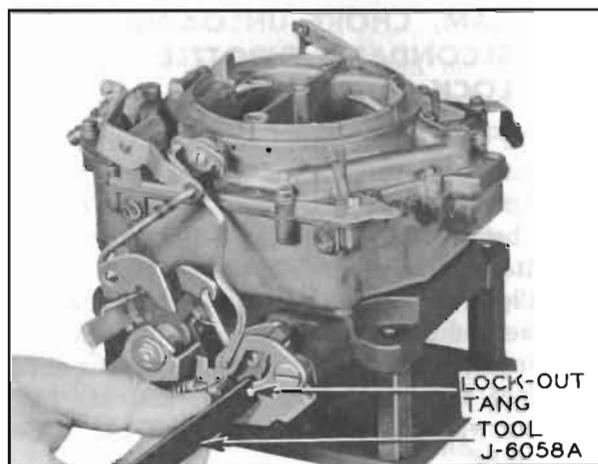


Figure 3-89—Adjusting Secondary Contour

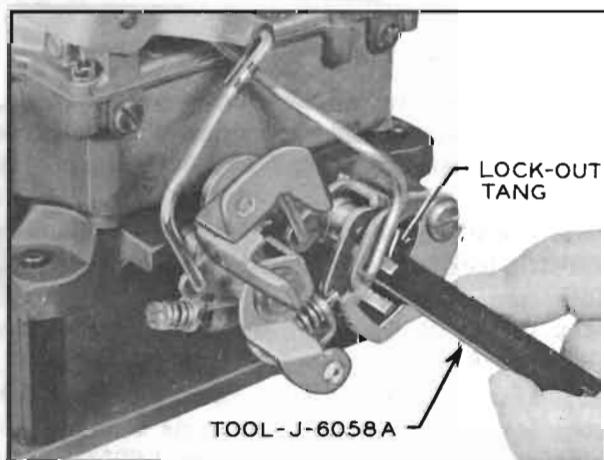


Figure 3-87—Adjusting Secondary Lock-Out

out tang and contour portion of cam using .030" end of Gauge J-1388. See figure 3-88.

9. If clearance between tang and contour is not correct, bend tang as required to obtain

this clearance using Tool J-6058A. See figure 3-89.

10. If adjustment was necessary to correct lock-out tang to *contour clearance*, the tang to *lock-out step clearance* should be rechecked (steps 6 & 7) to be sure it was not disturbed.

### 3-30 DISASSEMBLY, CLEANING, AND INSPECTION OF ROCHESTER 4-BARREL CARBURETOR

#### a. Disassembly of Carburetor

1. Remove spring clip from upper end of intermediate choke rod and disengage rod from choke shaft lever. See figure 3-90.

2. Remove spring clip from upper end of pump rod and disengage rod from pump lever. Remove horseshoe clip from upper end of pump plunger.

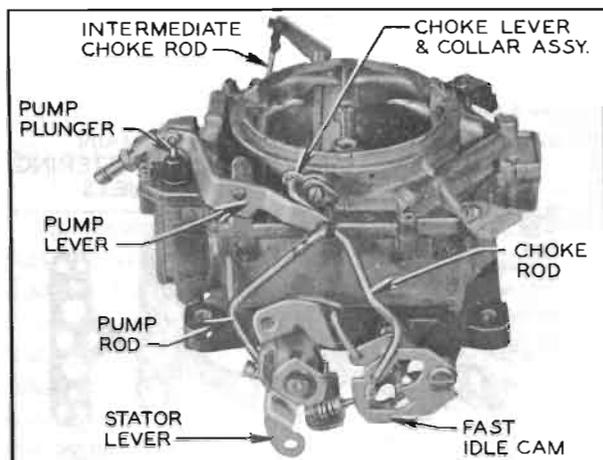


Figure 3-90—Exterior Linkage

3. Remove choke trip lever and attaching screw. Disengage choke lever and collar assembly from choke shaft and disengage lower end of choke rod from fast idle cam. Then remove choke lever and collar, and choke rod as an assembly. See figure 3-90.

4. Remove two choke valve attaching screws. Remove choke valve from slot in shaft. Then remove choke shaft.

5. Remove all air horn screws, then carefully lift air horn straight up from main body to avoid damaging floats, pump plunger, and vacuum power piston which are attached to air horn. See figure 3-91.

6. Remove float hinge pin, float, and needle from inlet side (primary). Then remove inlet needle seat and gasket. Remove fuel inlet strainer. Float balance spring should not be removed unless damaged. *NOTE: Keep primary float system parts separate from secondary float system parts.*

7. Remove float hinge pin, float needle, needle seat, and gasket from side opposite

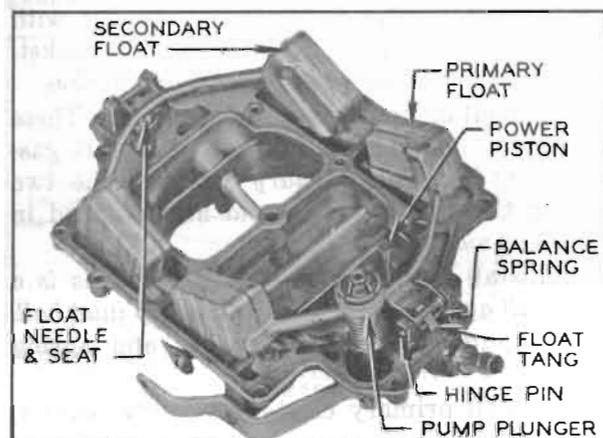


Figure 3-91—Air Horn Parts

pump (secondary). Then remove fuel inlet strainer. See figure 3-91.

8. Remove pump plunger assembly and rubber boot from air horn. Remove air horn gasket.

9. Remove power piston assembly by compressing spring and letting it snap repeatedly until hammering action of power piston drives staked retaining disk from air horn. *NOTE: It may be necessary to remove burrs if heavy staking is encountered.*

10. Remove thermostat cover screws and retainers. Remove thermostat cover assembly and gasket. Remove choke baffle plate. Remove choke piston lever screw and take choke piston, piston pin, connecting link, and lever from thermostat housing as an assembly.

11. Remove screws holding thermostat housing to throttle body. Remove thermostat housing and gasket. Then remove intermediate choke shaft, lever, and rod from choke housing as an assembly.

12. Remove attaching screws from cluster assembly on pump side of carburetor (primary). Then carefully remove cluster assembly and gasket. *NOTE: Keep primary main body parts separate from secondary main body parts as they are all different.*

13. Remove both main metering jets from pump side of main body. See figure 3-92.

14. Remove power valve and gasket from pump side.

15. Remove pump return spring from pump plunger well. Remove outlet check ball spring guide from outlet well using needle-nosed pliers. Then lift outlet check ball spring from outlet hole. Carefully invert carburetor main body and catch aluminum pump inlet check ball and larger steel pump outlet ball in hand.

16. If necessary, remove pump inlet screen and retainer from bottom of float bowl. *NOTE: If screen is not visibly damaged or plugged, it need not be removed.*

17. Remove secondary cluster assembly screws, cluster assembly, and gasket. Remove both secondary main metering jets.

18. Remove starter switch screws and remove terminal cap, return spring, guide block assembly, plunger, and ball from throttle body. *NOTE: If starter switch strainer is not visibly damaged or clogged, it need not be removed.*

19. Invert carburetor. Remove idle mixture adjusting needles and springs. Remove vacuum line fitting.

20. Remove throttle body to main body

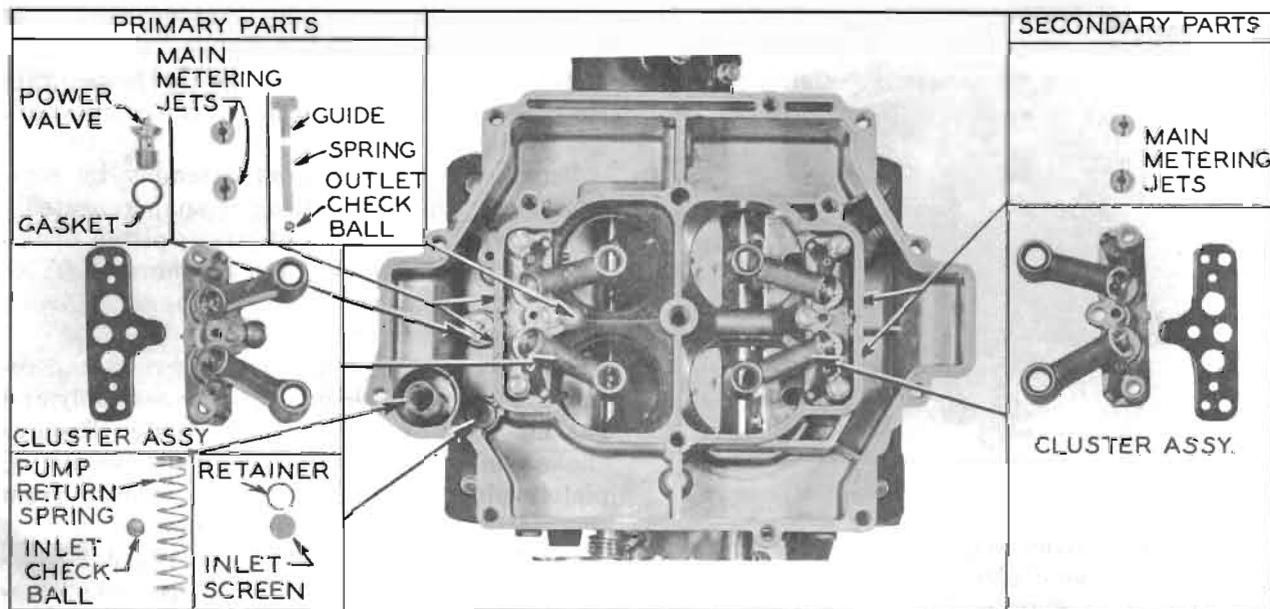


Figure 3-91—Main Body Parts

screws. Asbestos plug and retainer must be removed to gain access to one screw. Remove throttle body and gasket.

21. Remove auxiliary throttle body assembly by lifting straight up from inverted bowl. **CAUTION:** *This auxiliary throttle assembly should not be disassembled because it is calibrated at the factory.*

22. The throttle body assembly consisting of the body, primary and secondary throttle valves, shafts, levers, and springs is serviced only by replacing the assembly. *Therefore the throttle body should not be disassembled further for normal cleaning and inspection.*

### 3-31 ASSEMBLY AND ADJUSTMENT OF ROCHESTER 4-BARREL CARBURETOR

#### a. Assembly of Carburetor

When assembling the carburetor, use all new gaskets and any additional new parts found to be necessary during inspection. *Calibrated parts must be as specified for carburetor CODE number.*

1. With main body inverted on bench, place auxiliary throttle body assembly in its proper position with screw heads toward top of carburetor. Check to make sure it is flush or slightly below main body casting.

2. Place *new* gasket on main body and install throttle body assembly and screws.

3. If removed, install throttle stop screw and

fast idle screw with springs (throttle stop screw is longer of two screws). Install vacuum line fitting. Install both idle mixture needles and their springs. Seat needles lightly and back out  $1\frac{1}{2}$  turn, which will provide an average starting adjustment. *Forcing needles hard against seats will score them and ruin them for service.*

4. Place throttle body and main body assembly in upright position on bench or mounting fixture. Install new starter switch strainer if old strainer was removed. Install starter switch ball, plunger, guide block assembly, spring, terminal cap, and screws in throttle body. See figure 10-26. Lubricate switch as described in paragraph 10-30 and check switch timing if there is any indication that switch is not functioning properly.

5. Install secondary cluster assembly with screws and lockwashers using a new gasket. *This cluster has no pump discharge nozzles.*

6. Install all four main metering jets. These jets have tapered seats and do not require gaskets. **NOTE:** The *primary* jets are the two having the *smaller* holes and are installed in the pump side of the body.

7. Install pump outlet check ball. *This is a steel ball and is larger than the pump inlet ball.* Install pump outlet ball spring and spring guide.

8. Install primary cluster assembly, screws, lock washers, and new gasket in pump side of carburetor.

9. Install new pump inlet screen and retainer if old screen was removed.

10. Install pump inlet check ball (aluminum) and pump return spring. *NOTE: Never substitute a steel ball for the aluminum ball.*

11. Install power valve and gasket.

12. Assemble choke piston and pin to choke piston lever and connecting link, making sure that pin hole in piston is opposite from tang on lever. Then install in thermostat housing. Install intermediate choke shaft, lever, and rod assembly in choke housing with lever hanging down. Connect choke piston lever to intermediate choke shaft with screw. *Do not use lubricant of any kind on piston or in cylinder.*

13. Install thermostat housing on throttle body using a new gasket.

14. Install pump plunger assembly and rubber boot in inverted air horn. Install power piston assembly and stake securely in air horn. *Power piston must be free in any position.*

15. Install new air horn gasket. Install a fuel inlet strainer on inlet side of each needle seat. Install float needle seats and gaskets. Install float needles, floats, and hinge pins making sure that float tangs are placed outside balance springs. *NOTE: All primary and secondary float system parts should go back in their same positions, thereby holding need for float adjustments to a minimum.*

16. Adjust primary and secondary floats as follows:

(a) With air horn inverted and gasket in place, position Float Gauge 6628 ( $1\frac{3}{8}$ "") vertically over highest part of float. See figure 3-93.

(b) Bend float arms near center until highest point of each float pontoon just touches gauge. Center gauge in air horn, then bend

float arm sideways until float is centered between gauge legs.

(c) Move gauge to small end of float. With gauge held vertically, upper edge of float at point where radius ends should be between scribe marks on gauge. See figure 3-94.

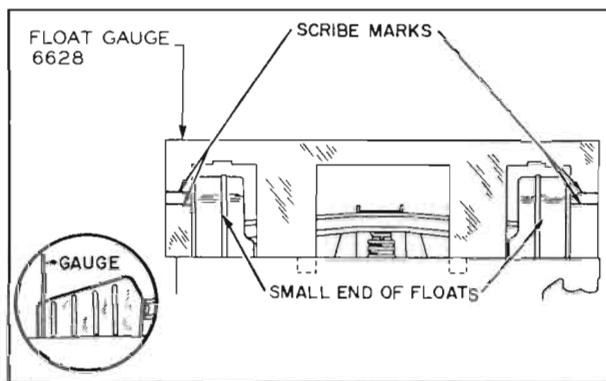


Figure 3-94--Float Tip Adjustment

(d) Align air horn gasket with air horn. Check to see that all float pontoons are aligned with openings in gasket. If necessary, align by bending arm close to pontoon. **CAUTION:** *Always recheck height setting after aligning a float.*

(e) Hold air horn upright with floats hanging free and measure toe vertical distance from gasket to toe of float (farthest end of float from hinge pin) using a scale. When checking float drop, jounce floats lightly with finger to make

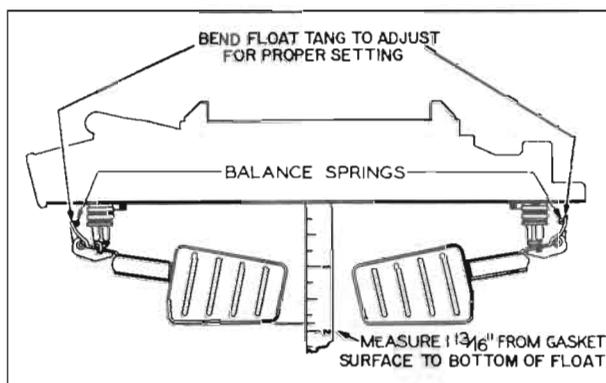


Figure 3-95--Float Drop Adjustment

sure they are in full down position. Bend float arm tang as required to obtain  $1\frac{3}{16}$ " measurement. See figure 3-95.

17. Install air horn assembly on main body, using care to avoid distortion of float assemblies and making certain that pump piston leather does not have any creases or curled edges when it is inserted in cylinder. Install 13 air horn screws and tighten evenly.

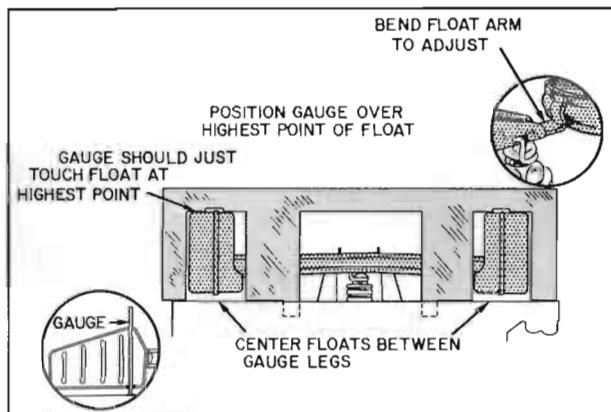


Figure 3-93--Float Level Adjustment

18. Install choke shaft and lever. Install choke valve with "RP" up and install screws loosely. Align choke valve by working choke shaft endwise while maintaining an upward pressure on choke shaft lever. Tighten and stake choke valve screws. Check for uniform clearance and freedom from sticking, as improper fit or binding may cause hard starting.

19. Install choke rod, and choke lever and collar assembly. Install choke trip lever on end of choke shaft with "RP" out and tighten attaching screw.

20. Install horseshoe clip on upper end of pump plunger. Install accelerator pump rod in pump lever. Install spring clip on upper end of pump rod. NOTE: *Horseshoe clips must be closed slightly after installing to prevent possible loss.*

21. Push fast idle cam to full down position and back out throttle stop screw until throttle valves can be fully closed. With throttle held closed, measure vertically from under side of pump plunger offset to air horn casting. Bend pump rod as required to obtain  $1\frac{1}{64}$ " measurement using Tool J-4552. See figure 3-97.

22. Turn throttle stop screw in (from fully closed throttle position) one turn which will provide a starting adjustment. Install intermediate choke rod and spring clip.

23. With choke valve held closed, check to see that choke piston is projecting from cylinder between  $\frac{1}{32}$ " and  $\frac{1}{16}$ ". If adjustment is required, bend intermediate choke rod using Tool J-5197.

24. Install choke baffle plate. Install choke cover and gasket. Rotate counter-clockwise until index marks align and choke valve is just closed, then tighten screws and retainers. See

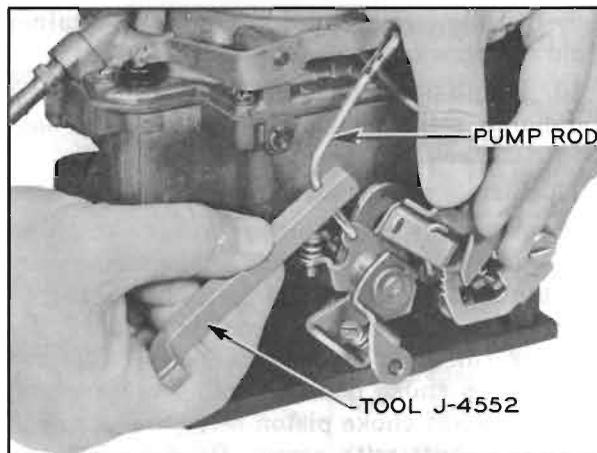


Figure 3-97—Adjusting Pump Plunger

paragraph 3-8.

25. Adjust fast idle cam, choke unloader, and secondary throttle lock-out as described in paragraph 3-29. Install carburetor on car.

26. Check for proper fuel level in both bowls by removing sight plugs with car level and engine idling. Fuel level should be just below or lapping threads at bottom of holes. Rocking car should cause fuel to slop out.

27. Make final idle speed and mixture adjustments on car in normal manner. See paragraph 3-8.

28. Make fast idle adjustment on car with engine at normal operating temperature as follows:

(a) Push fast idle cam to full up position so that fast idle screw contacts high step of cam. See figure 3-98.

(b) Adjust fast idle screw until engine is running 1500 RPM.

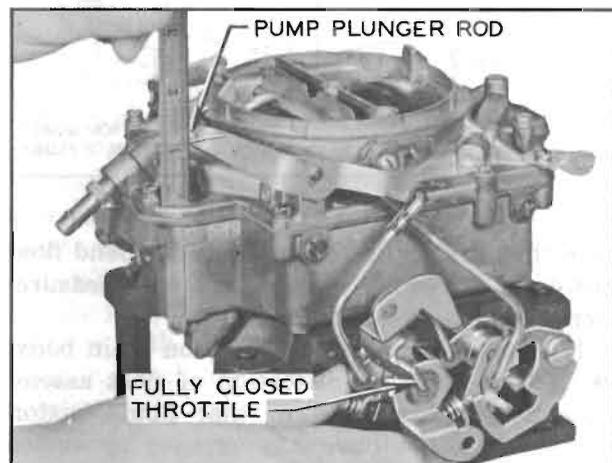


Figure 3-96—Checking Pump Plunger Adjustment

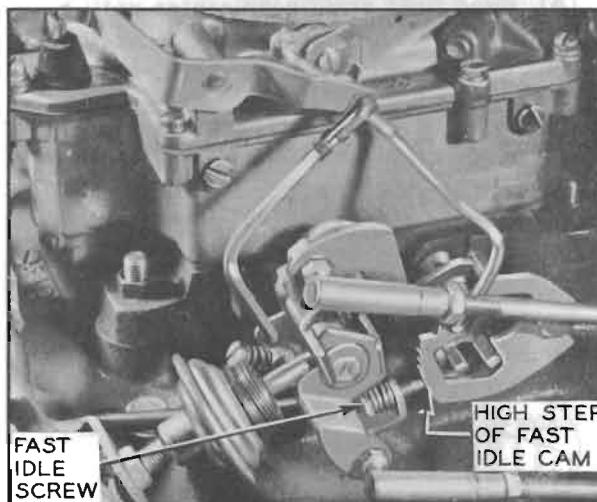


Figure 3-98—Adjusting Fast Idle