

SECTION 10-J

WIRING CIRCUIT DIAGRAMS

DIAGRAMS IN SECTION 10-J

Paragraph	Subject	Page
10-60	Circuit Diagrams and Fuse Block . .	10-95

10-60 CIRCUIT DIAGRAMS AND FUSE BLOCK

This section contains schematic wiring circuit diagrams for the complete car. For more detailed body wiring diagrams showing the routing of the wires and the location of the switches, connectors and retaining clips — see Group 8 of the Buick Body Service Manual. Wiring diagrams of the power window and power seat circuits are also in that section.

A few of the most important wiring terminals are connected with screws. However, most of the terminals have a flat push-pull type connector. With this connector, the terminal on the wire requires a straight hard push to seat it in the socket. A hard steady pull on the terminal is required to detach it from the socket.

A central fuse block is mounted under the

instrument panel on the left side. This fuse block serves as a convenient junction point for a number of circuits, provides a mounting for the direction signal flasher, and contains most of the fuses. The fuse block is held in its bracket by a spring clip and may be easily slipped out to check the fuses on one side or to check the connections on the other side. See Figure 10-90.

To simplify replacement of wiring, the circuits to the rear of the fire wall are grouped in one harness and the circuits forward of the fire wall are grouped in another. The instrument panel wiring harness ends in a multiple connector which is held in the fire wall. The engine compartment wiring harness plugs into this connector at the fire wall. This type of connector aids in tracing down electrical troubles. See Figure 10-89.

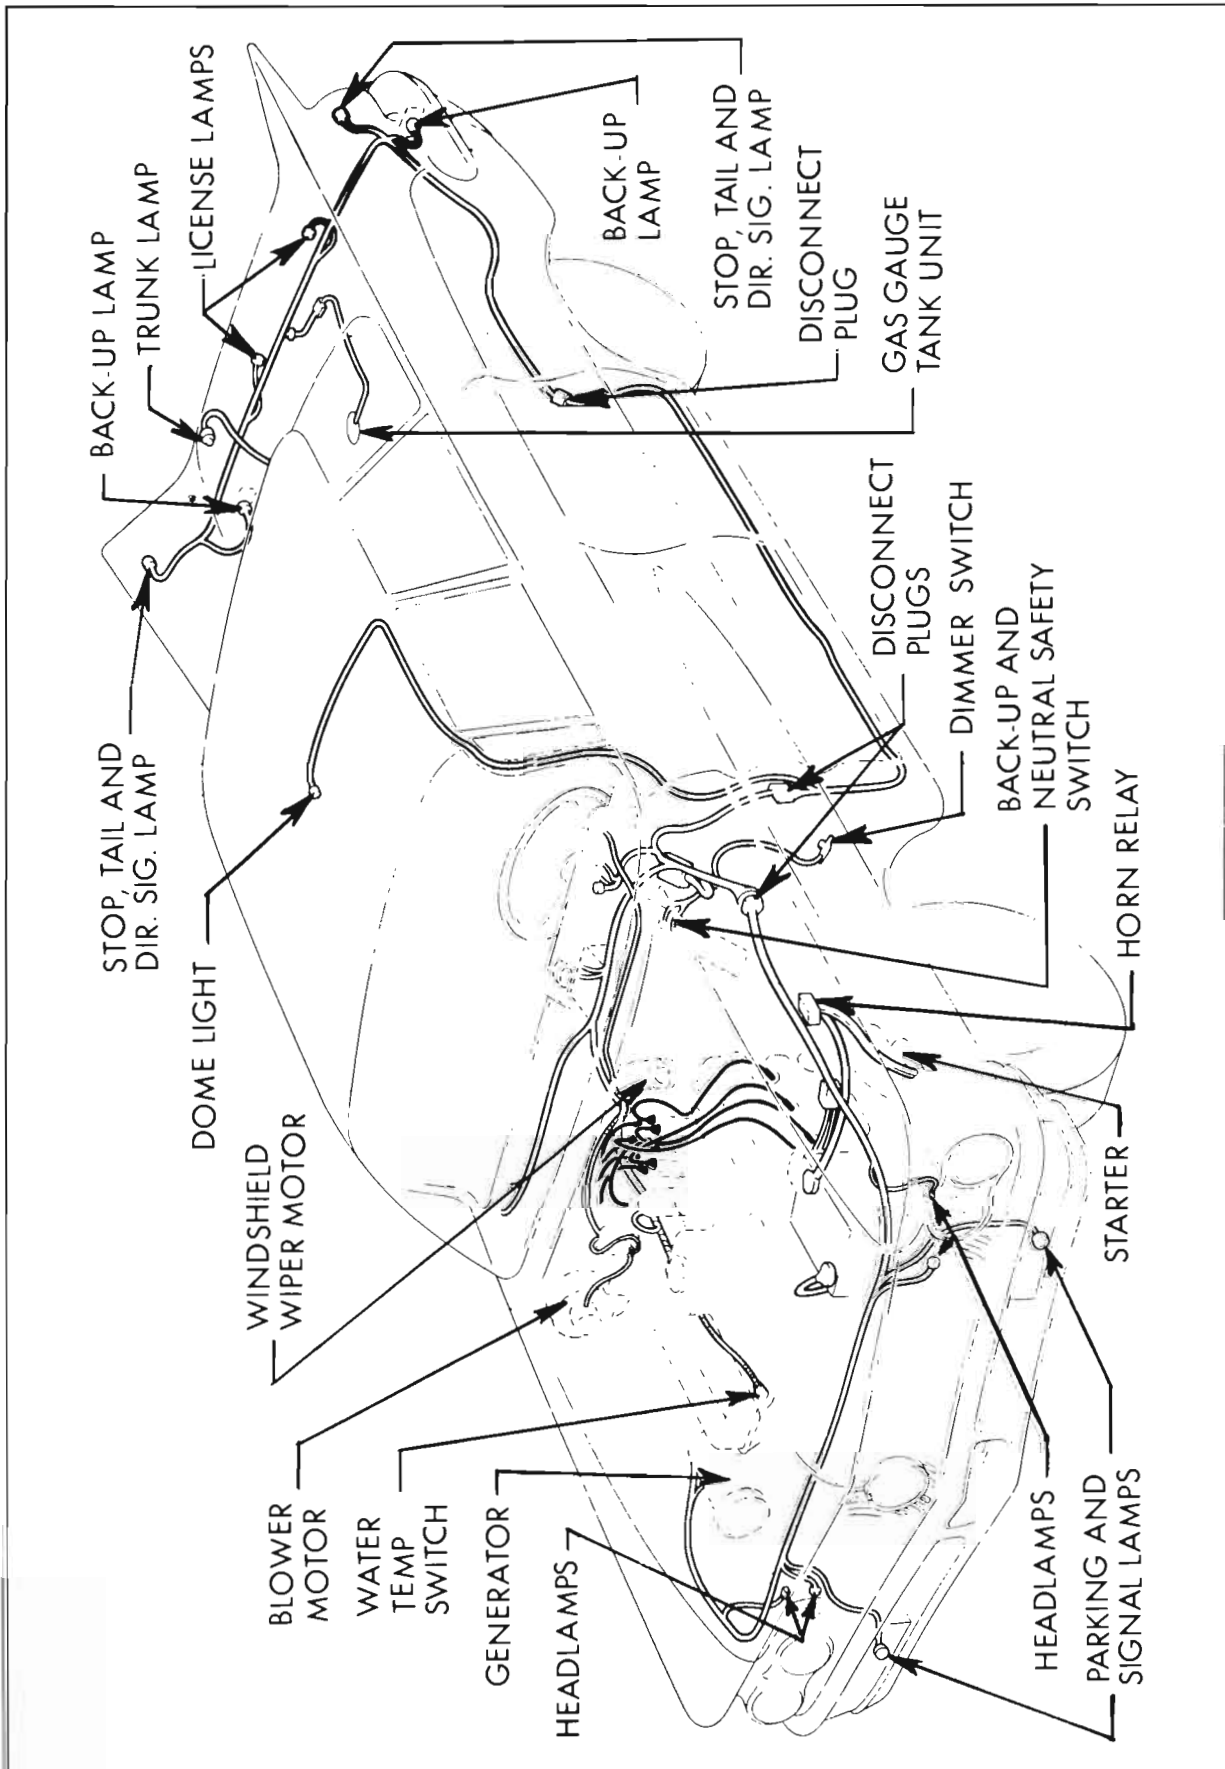


Figure 10-87—Wiring Diagram—Complete

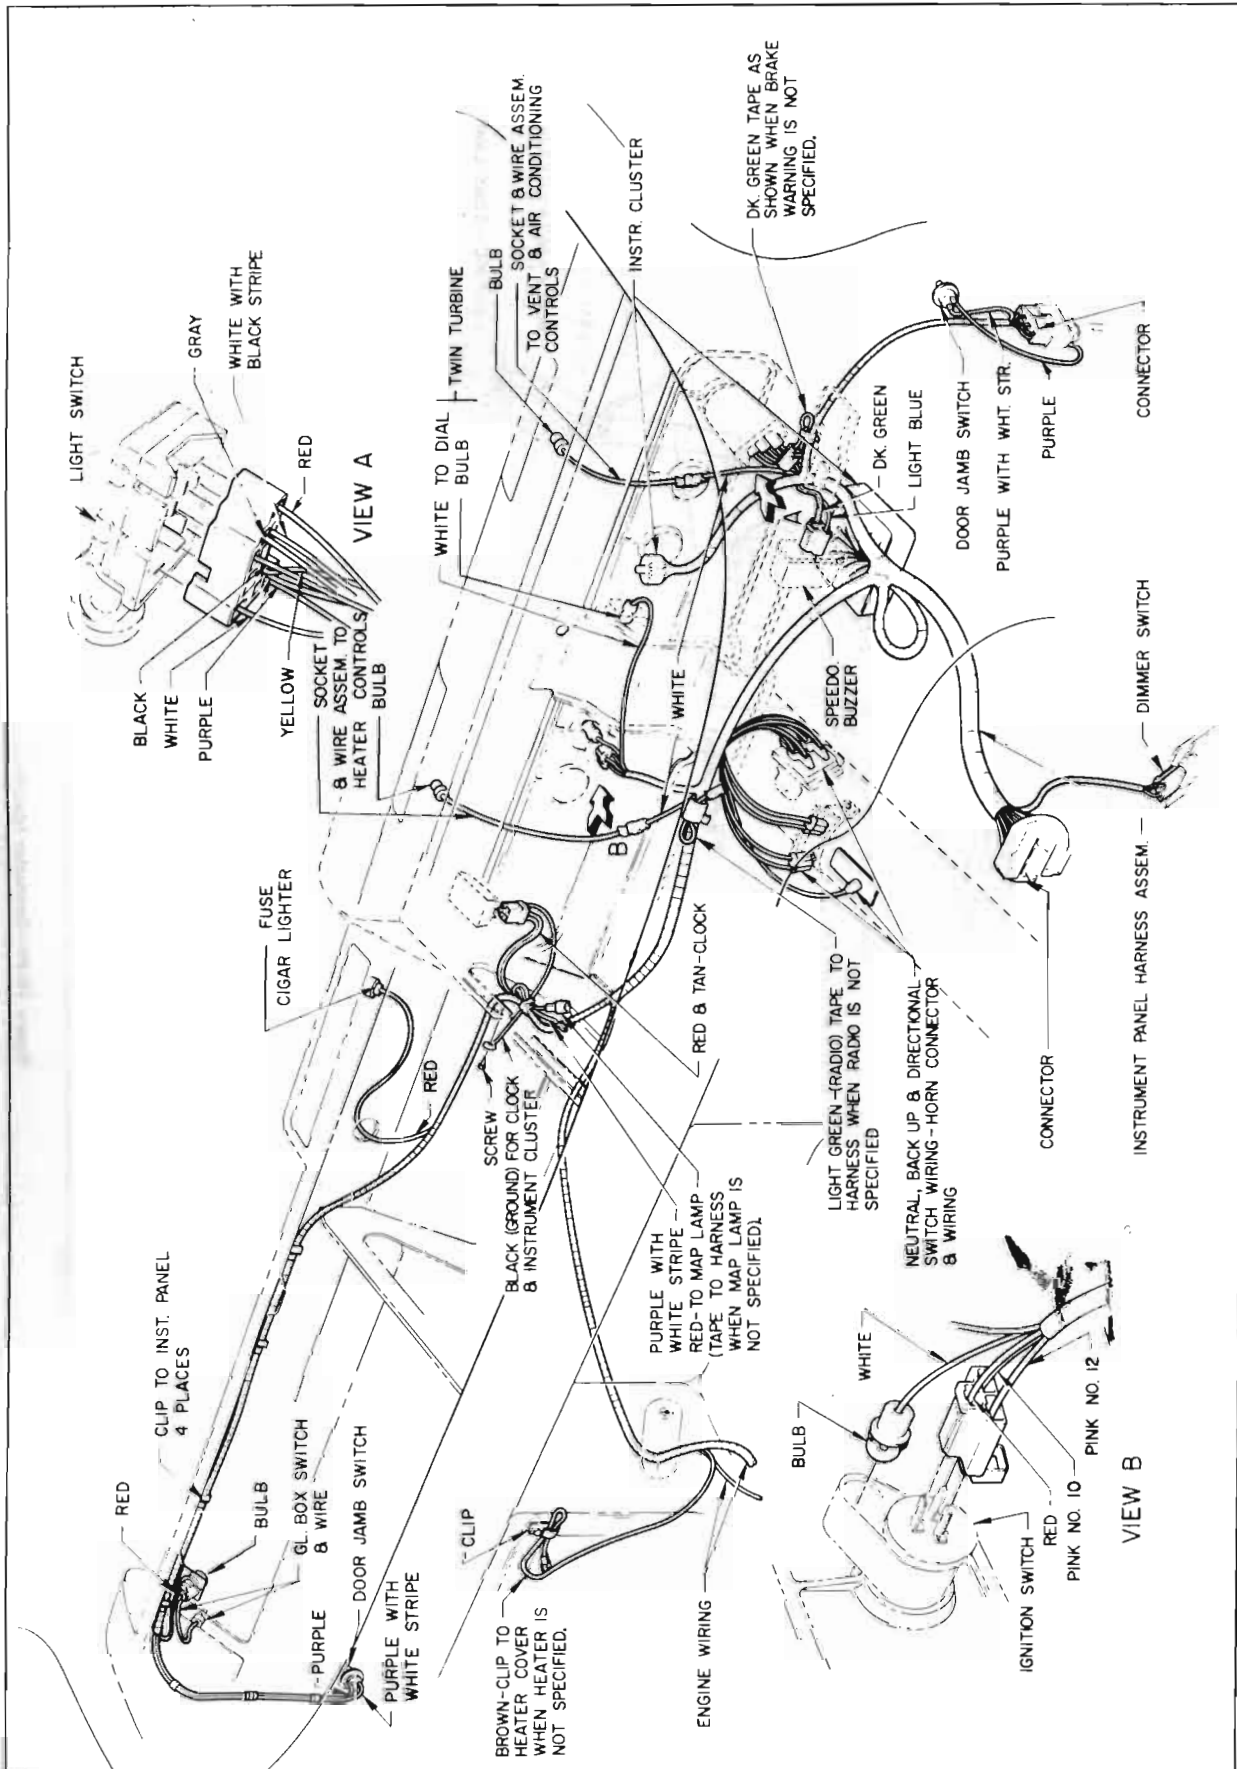


Figure 10-88—Instrument Panel Harness

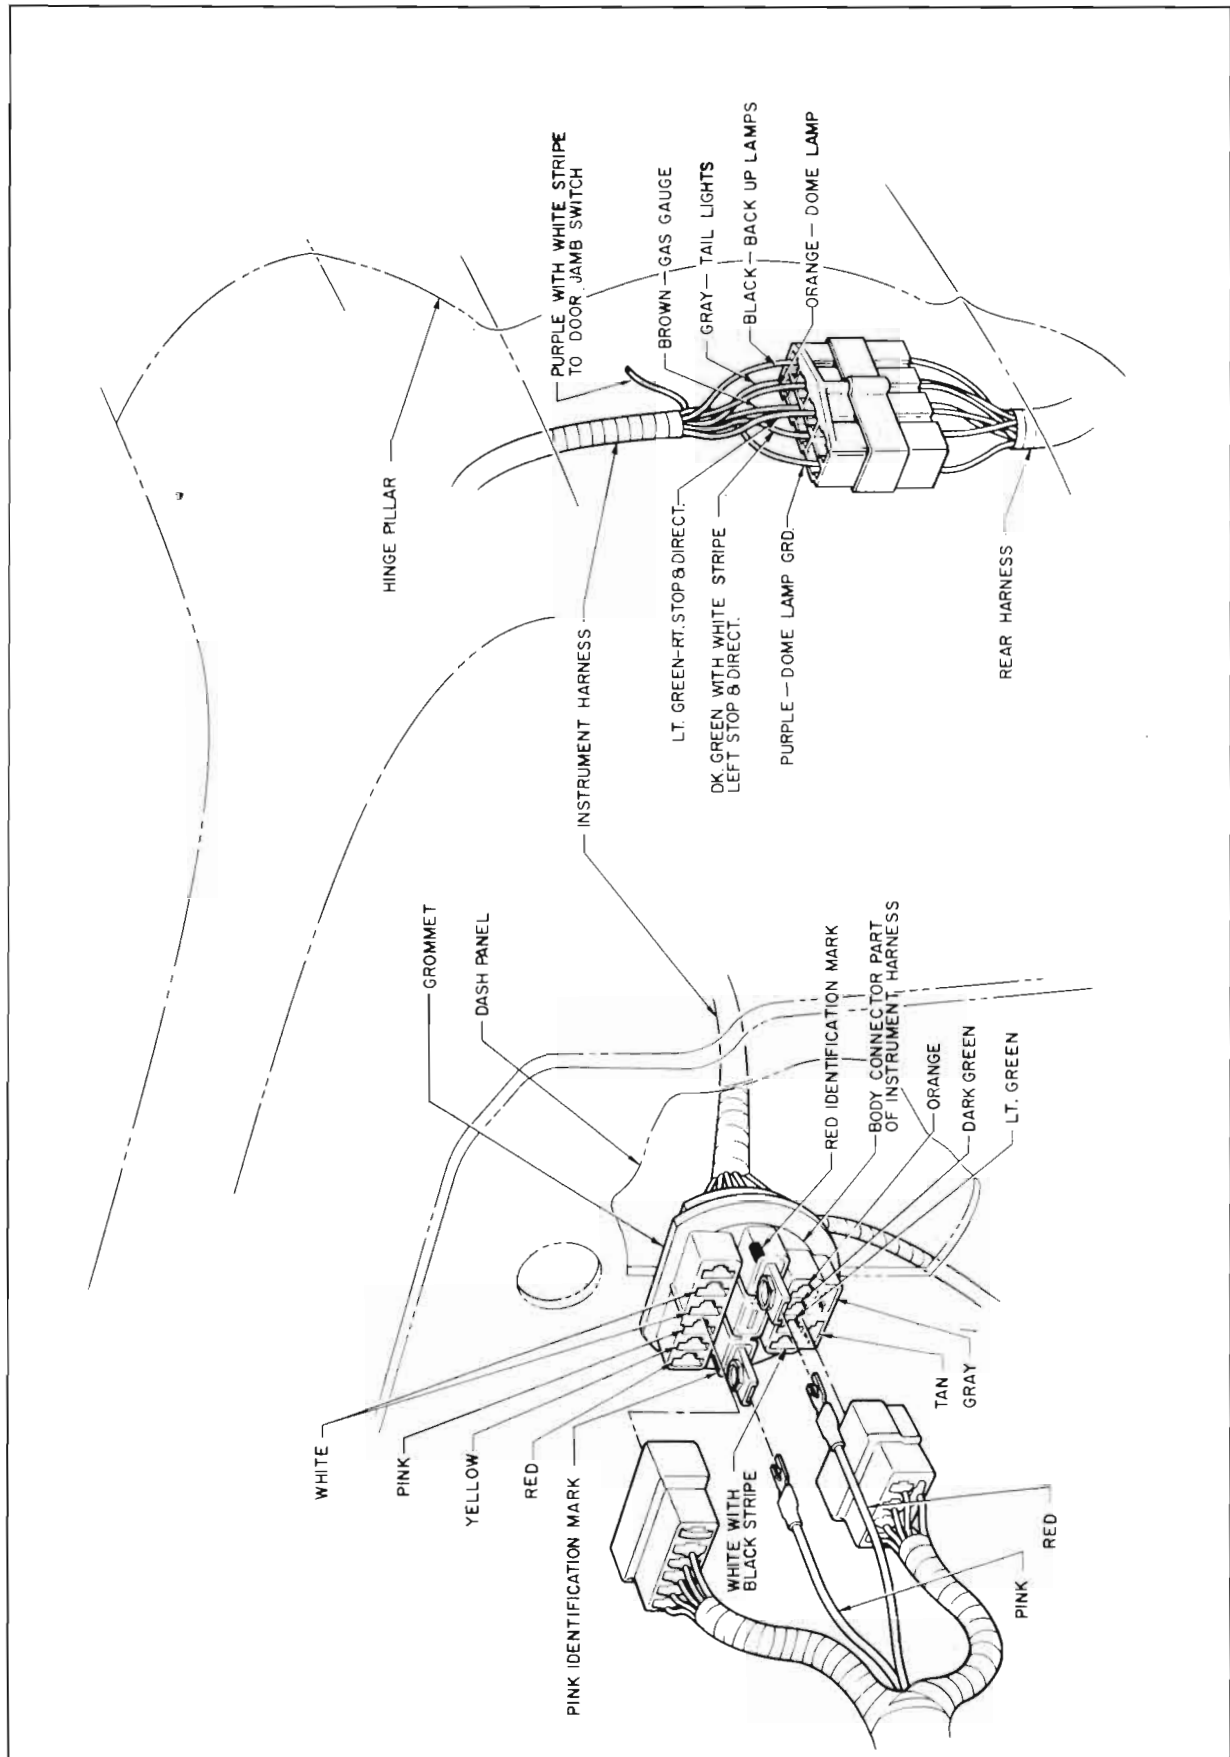


Figure 10-89—Connector Identification

 


Figure 10-90—Instrument Cluster and Fuse Block Identification

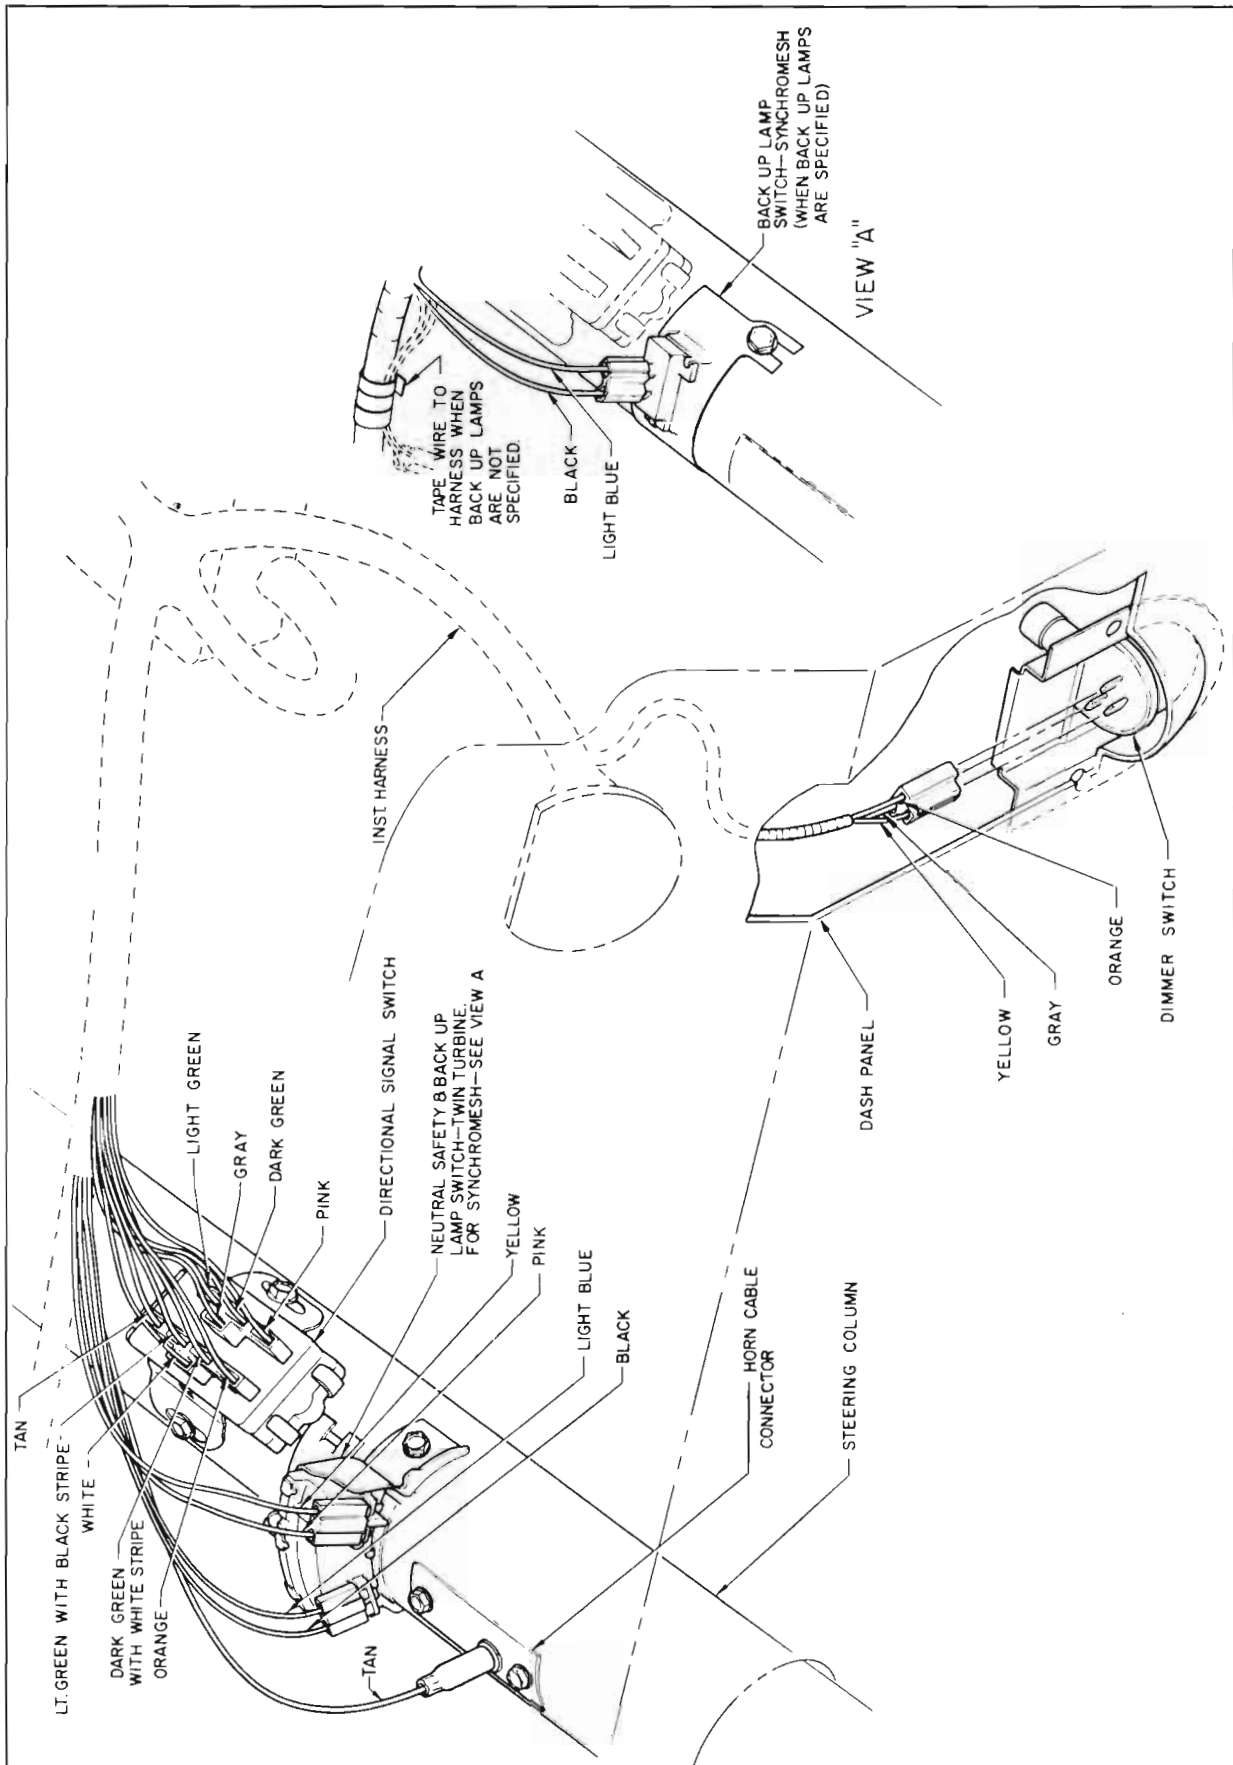


Figure 10-91 —Steering Column Connectors

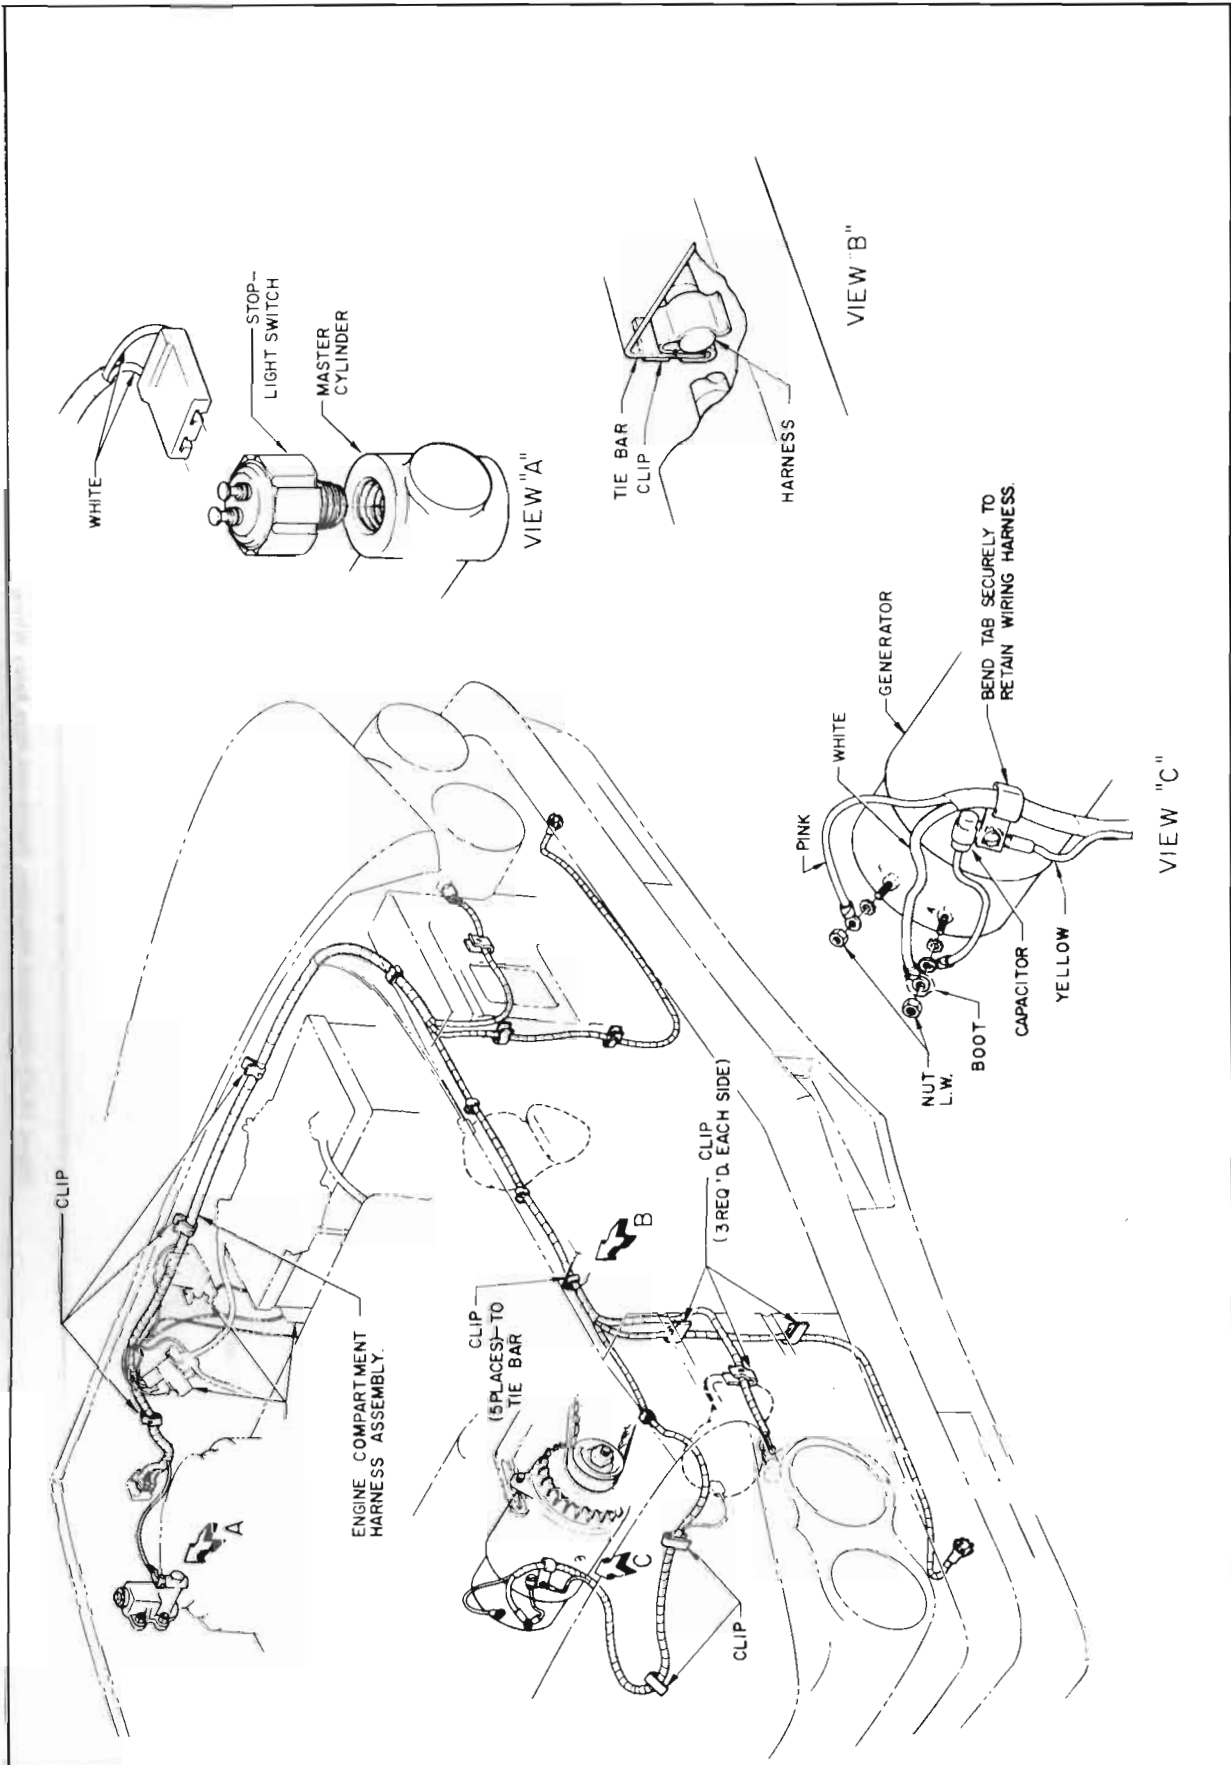


Figure 10-92—Engine Compartment Harness

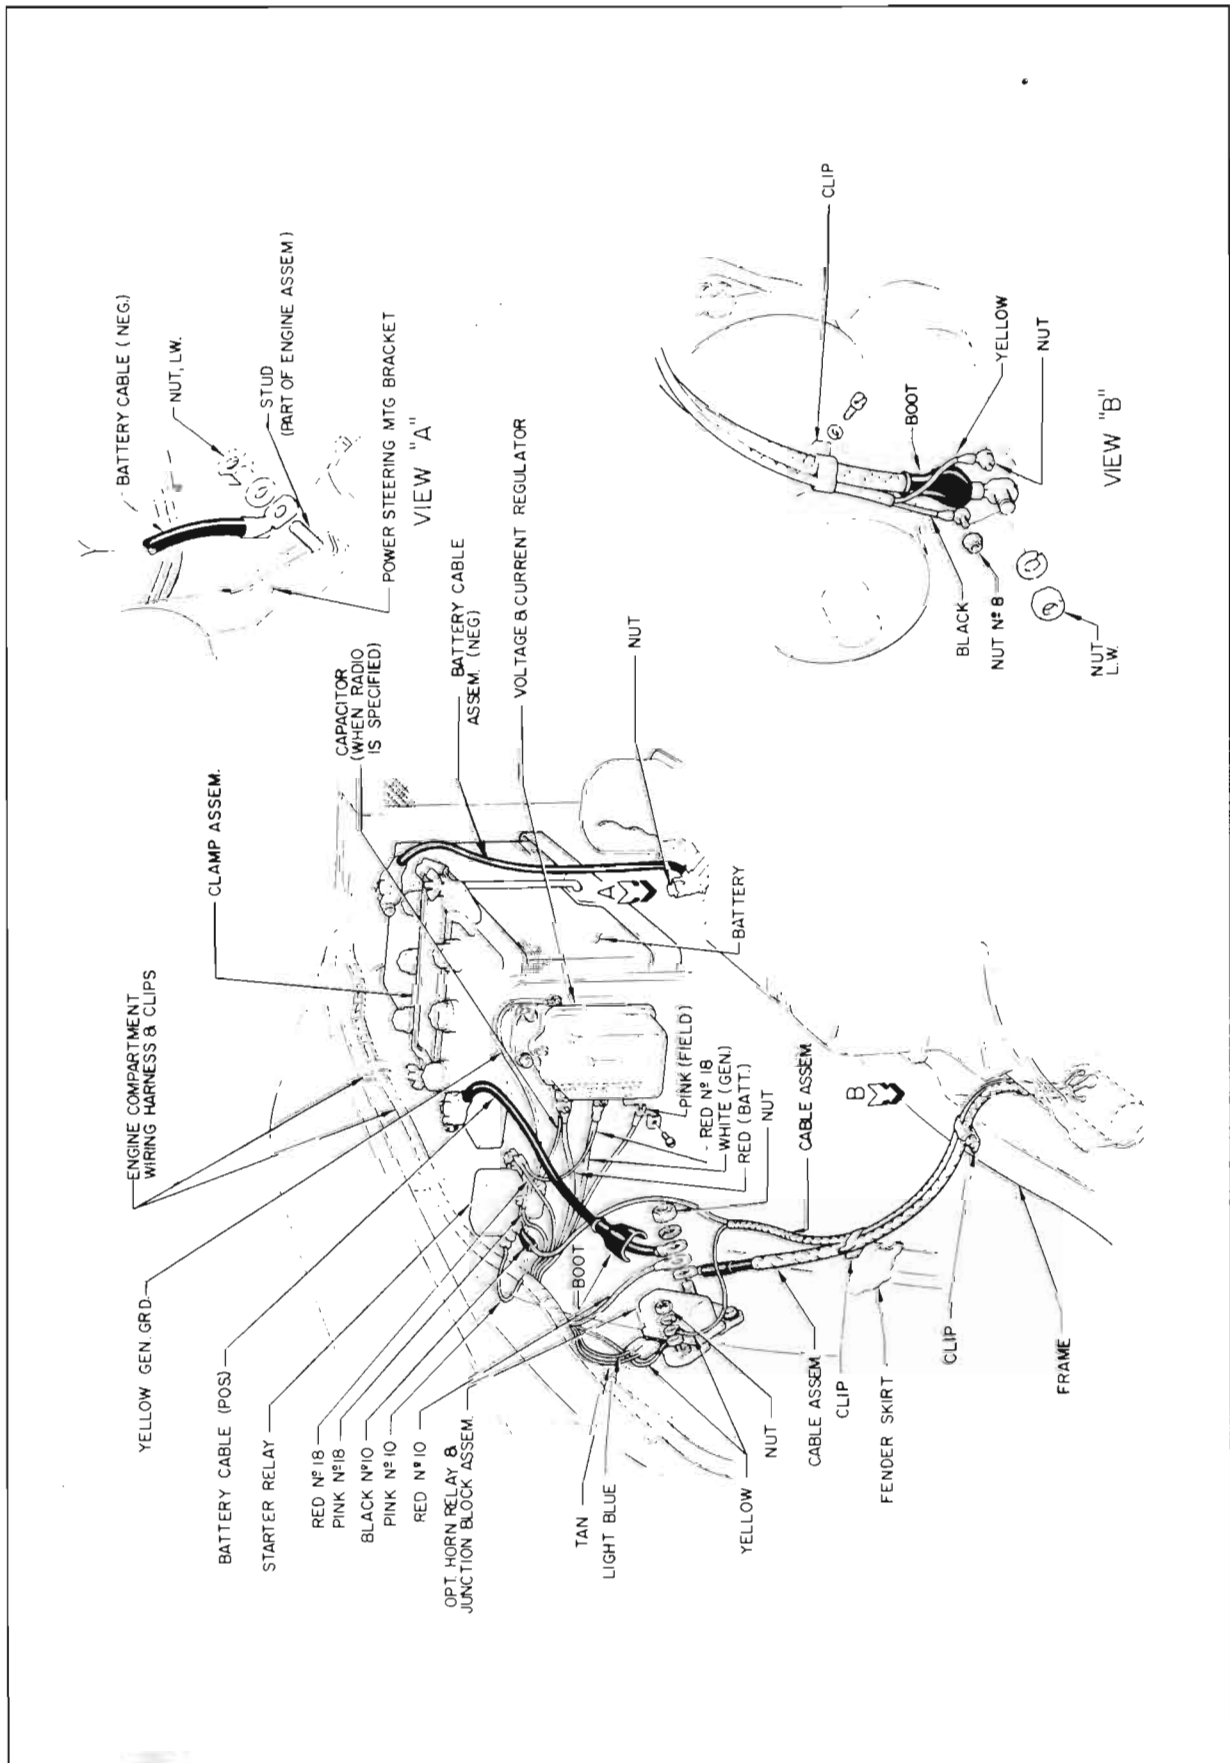


Figure 10-93—Generator Regulator, Starter and Horn Relay Wiring

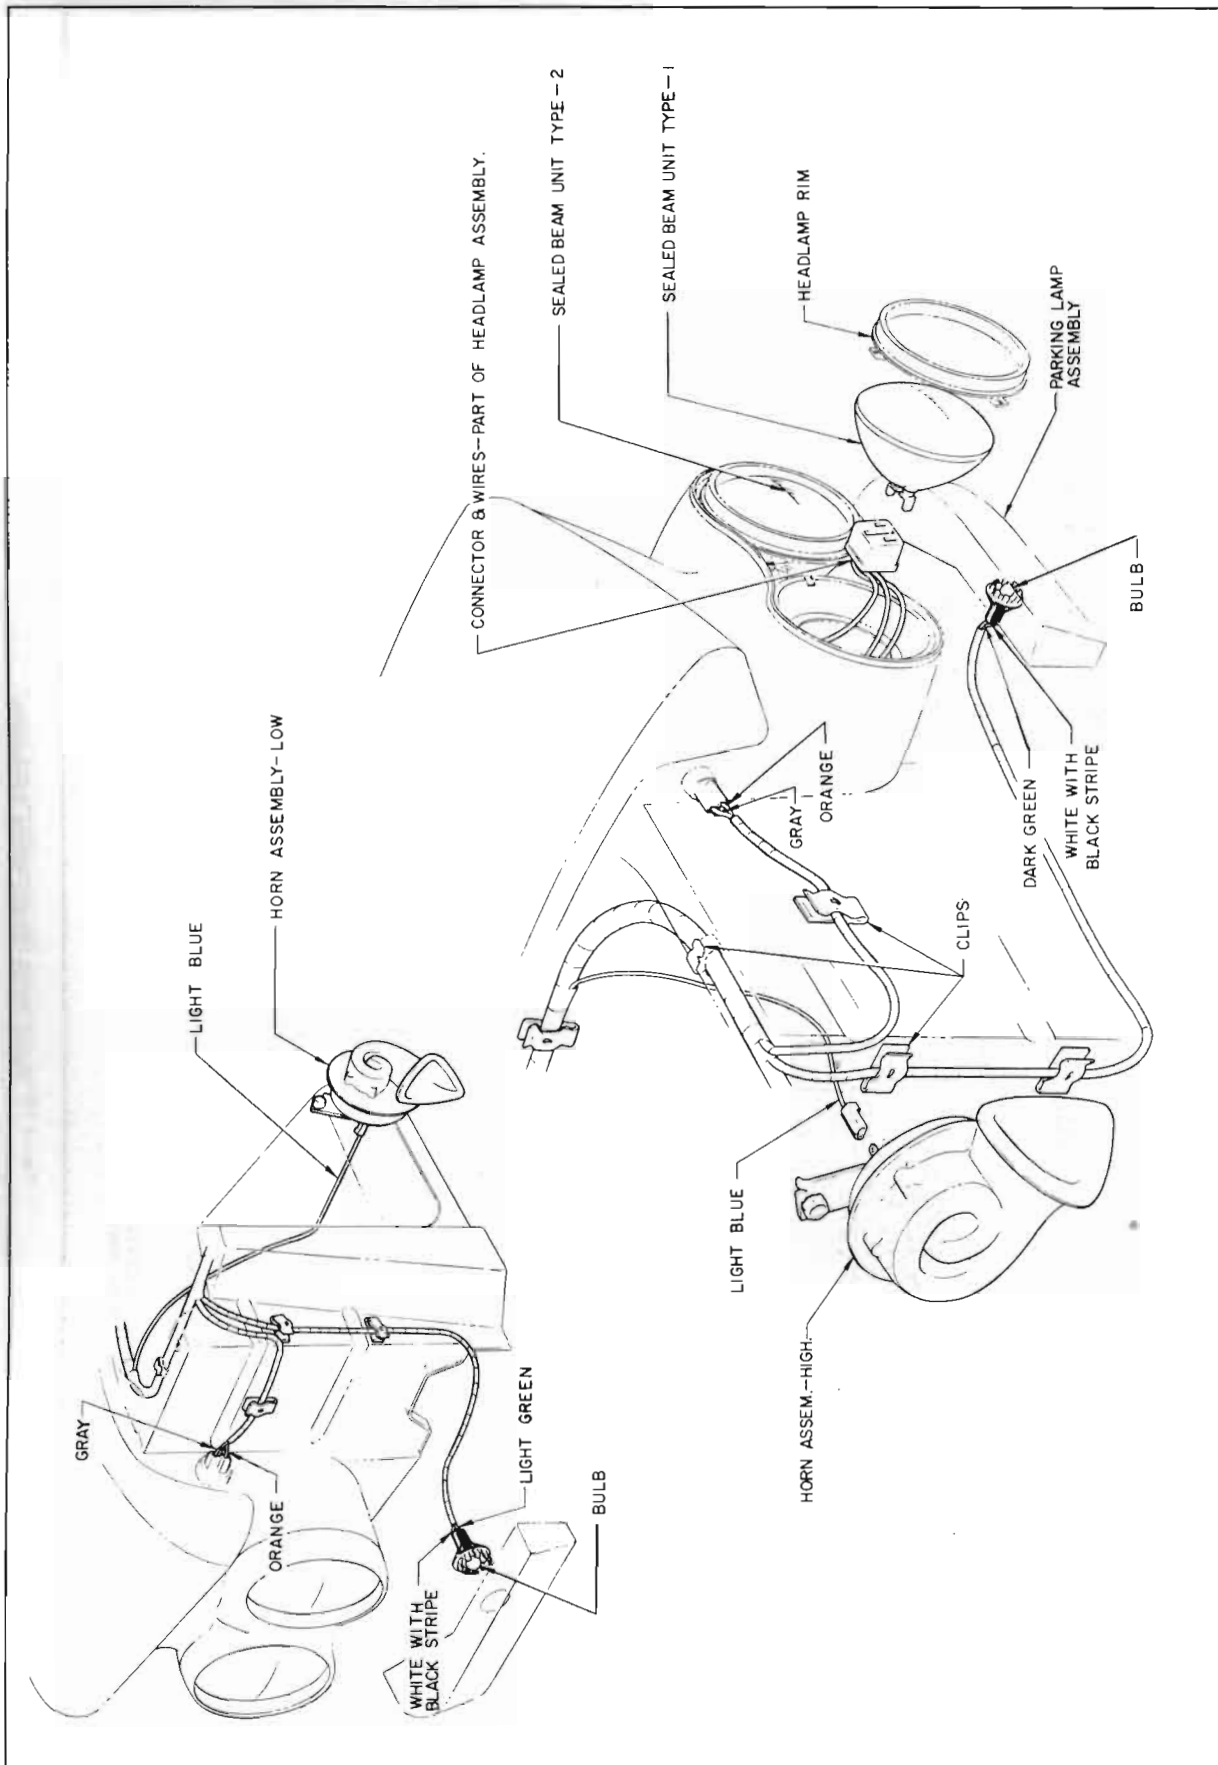


Figure 10-94—Headlamp, Parking Lamp and Horn Wiring

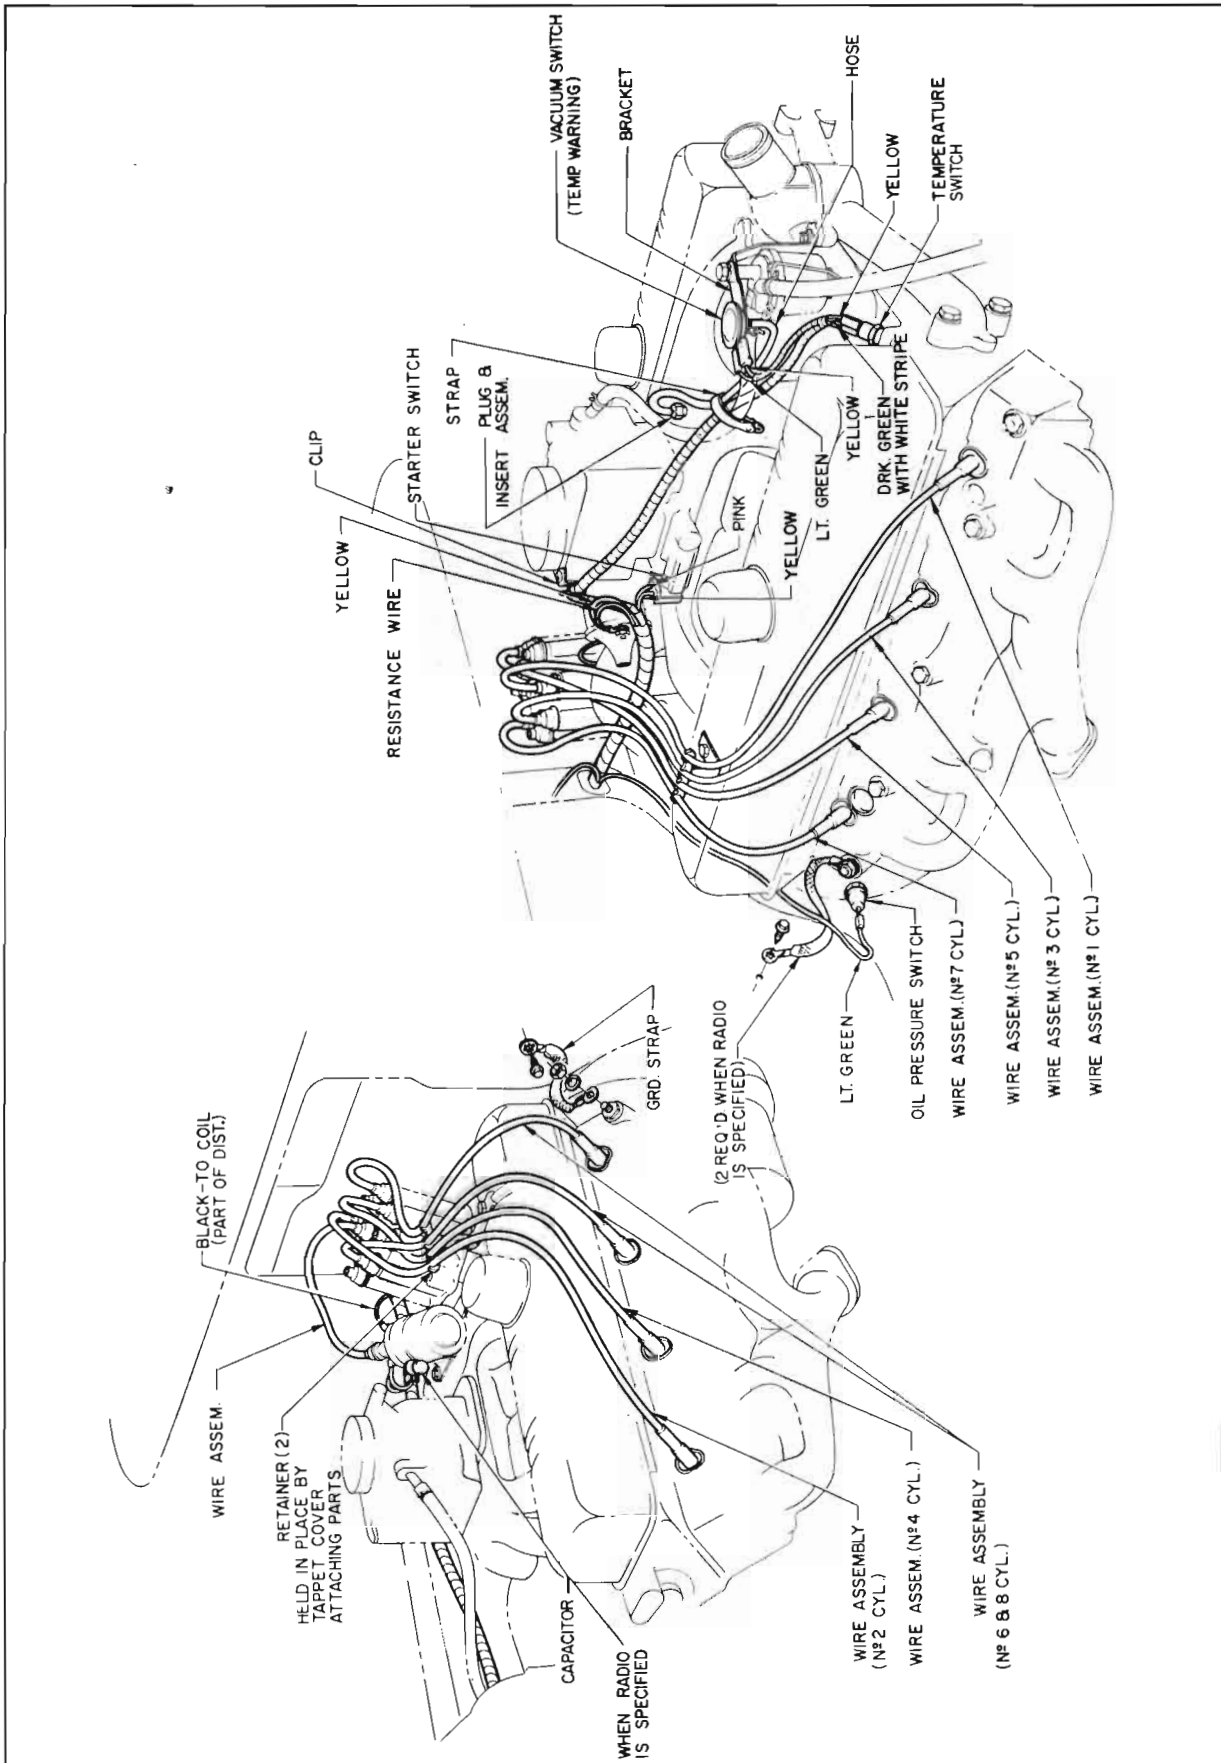


Figure 10-95—Engine Wiring Connections

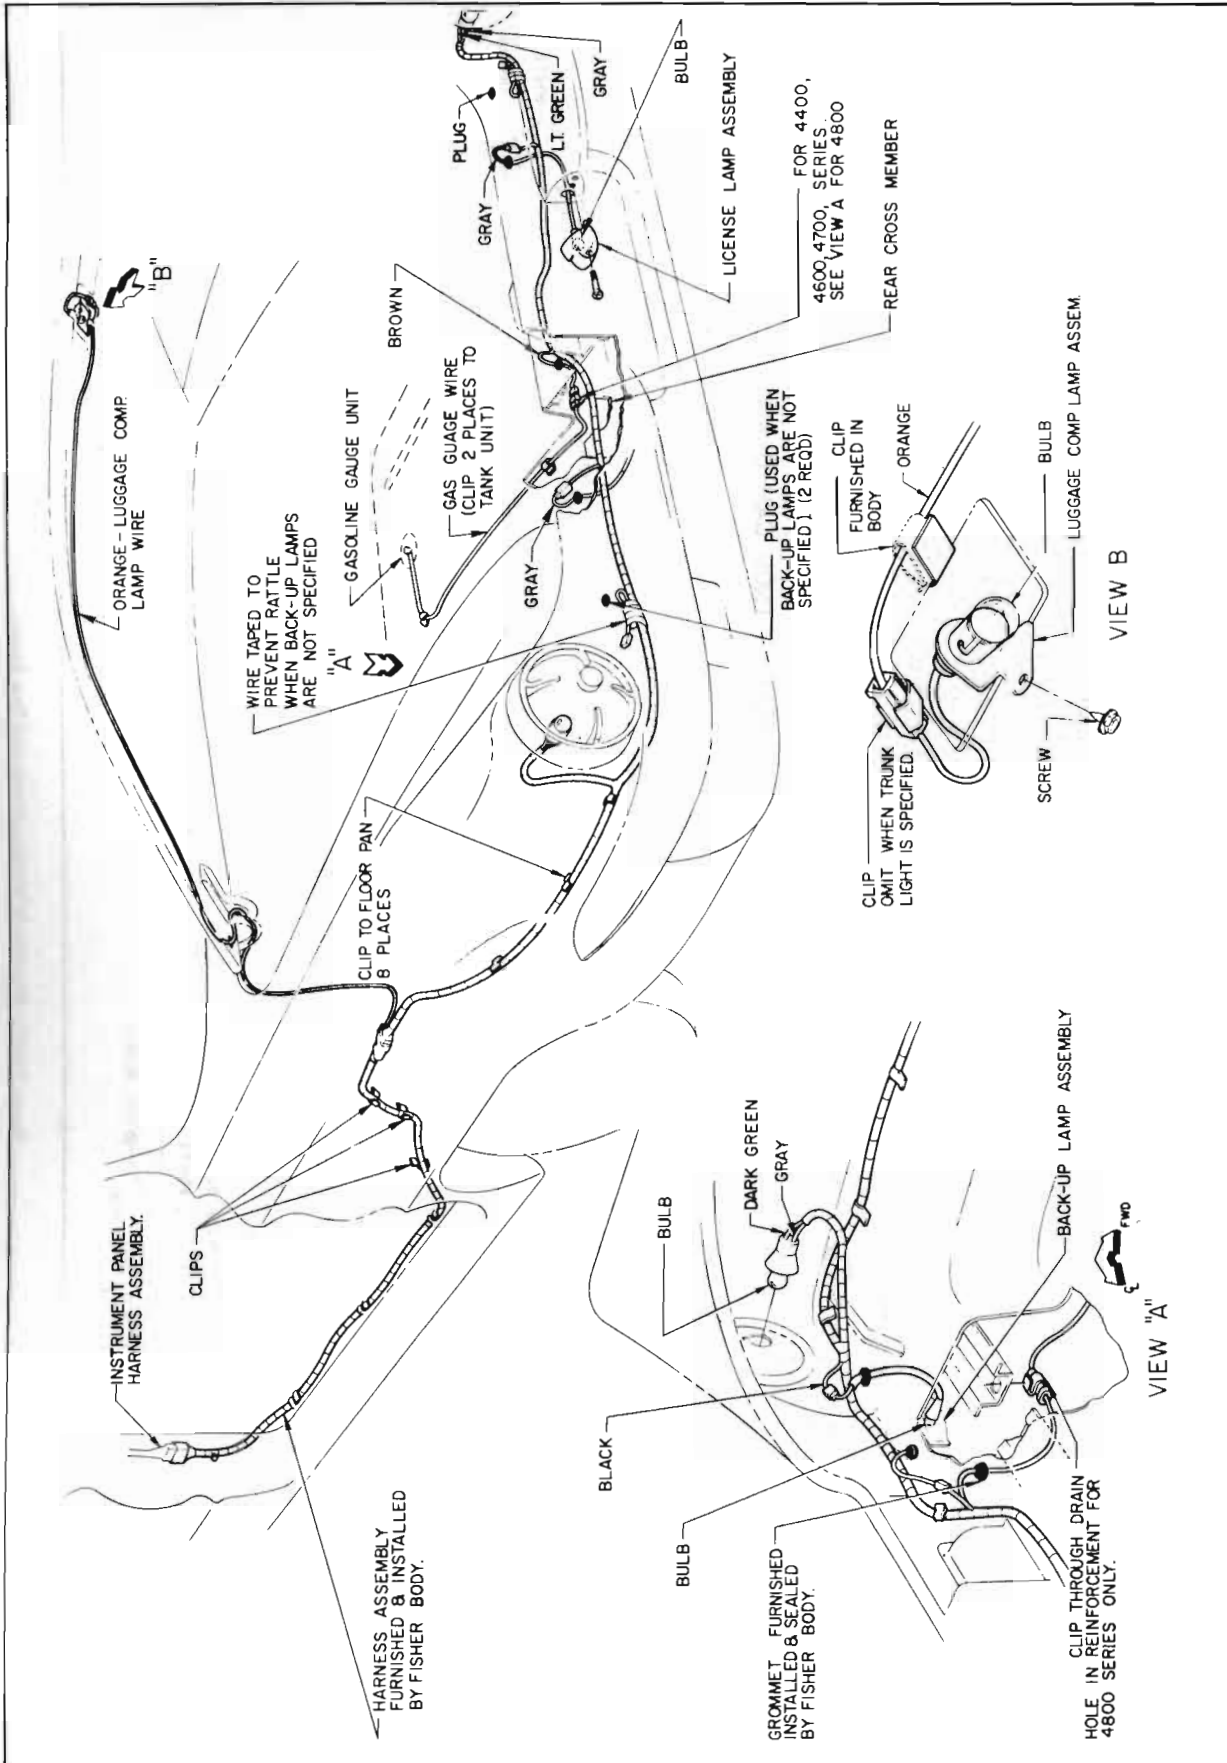


Figure 10-96—Rear End Wiring Harness

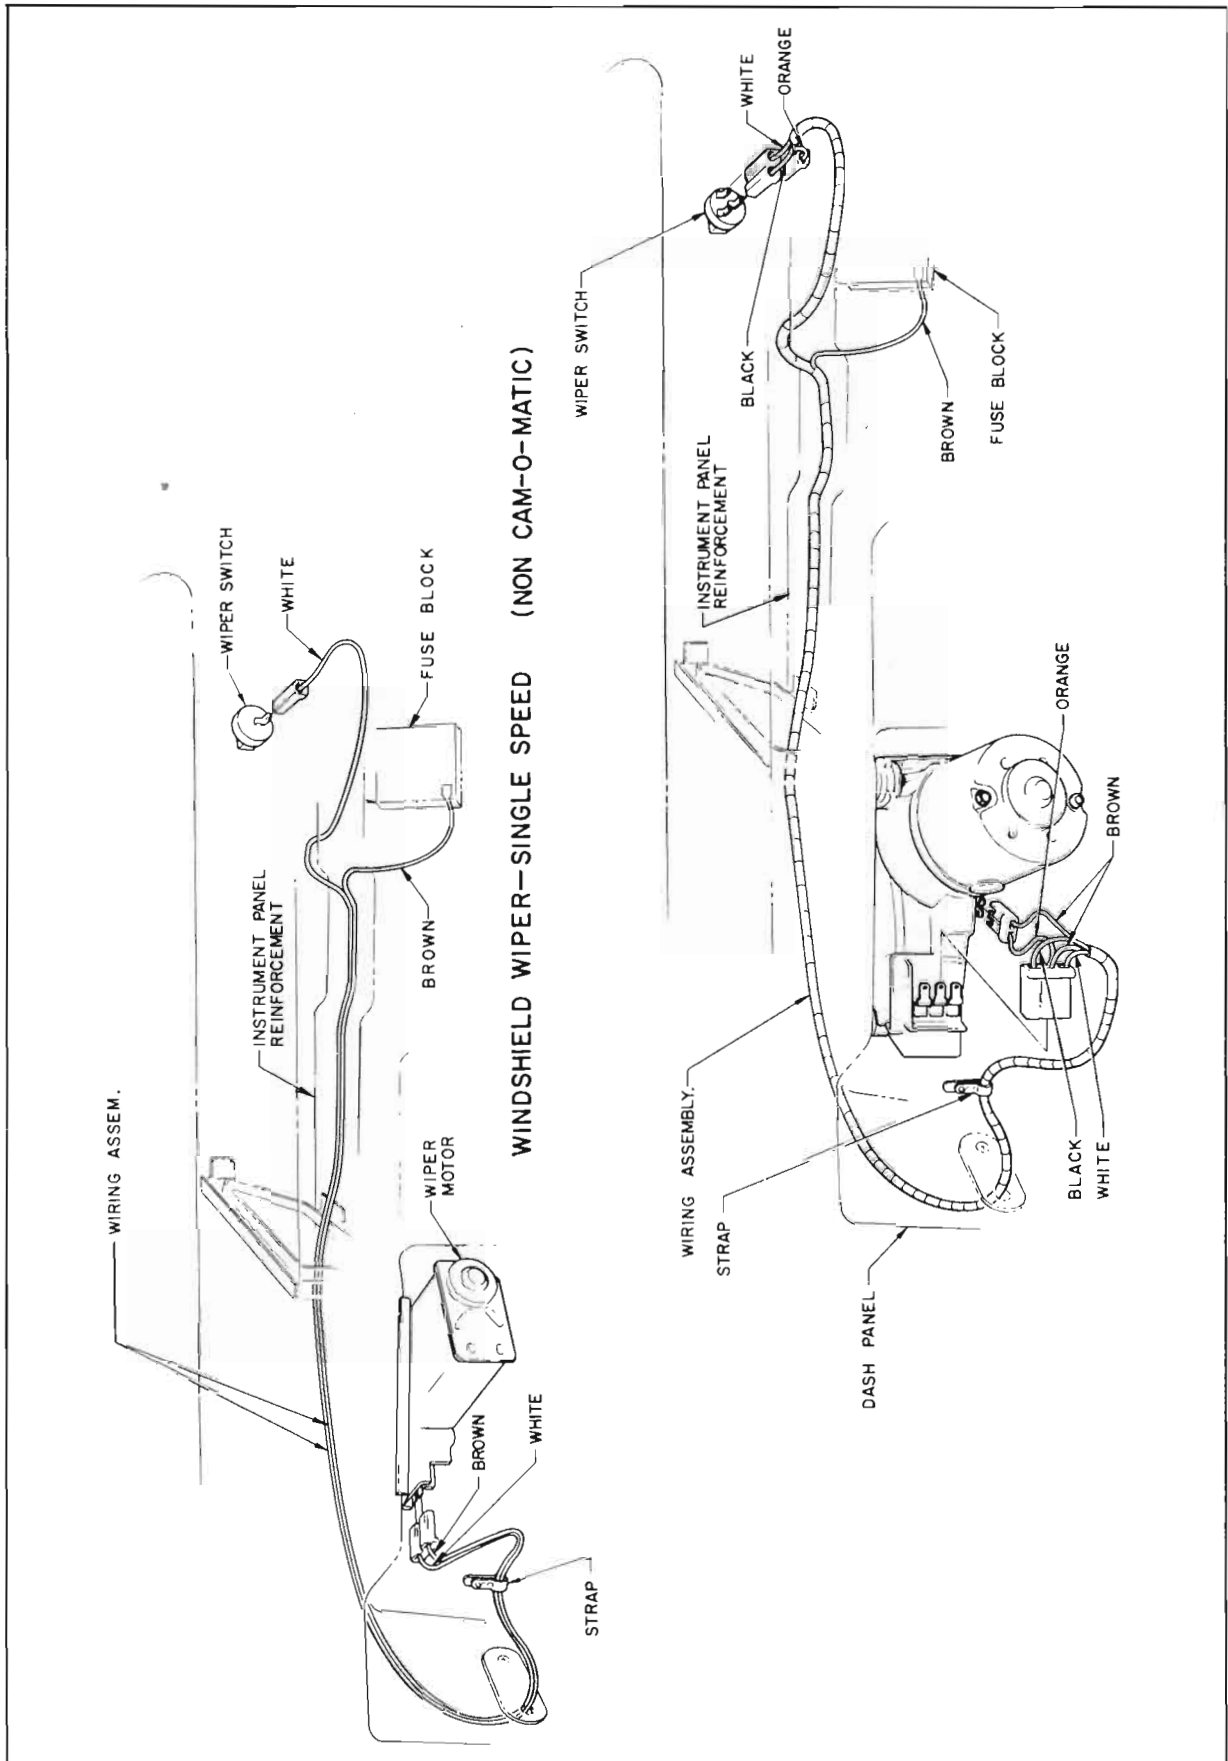


Figure 10-97—Windshield Wipers—Single and Two Speed

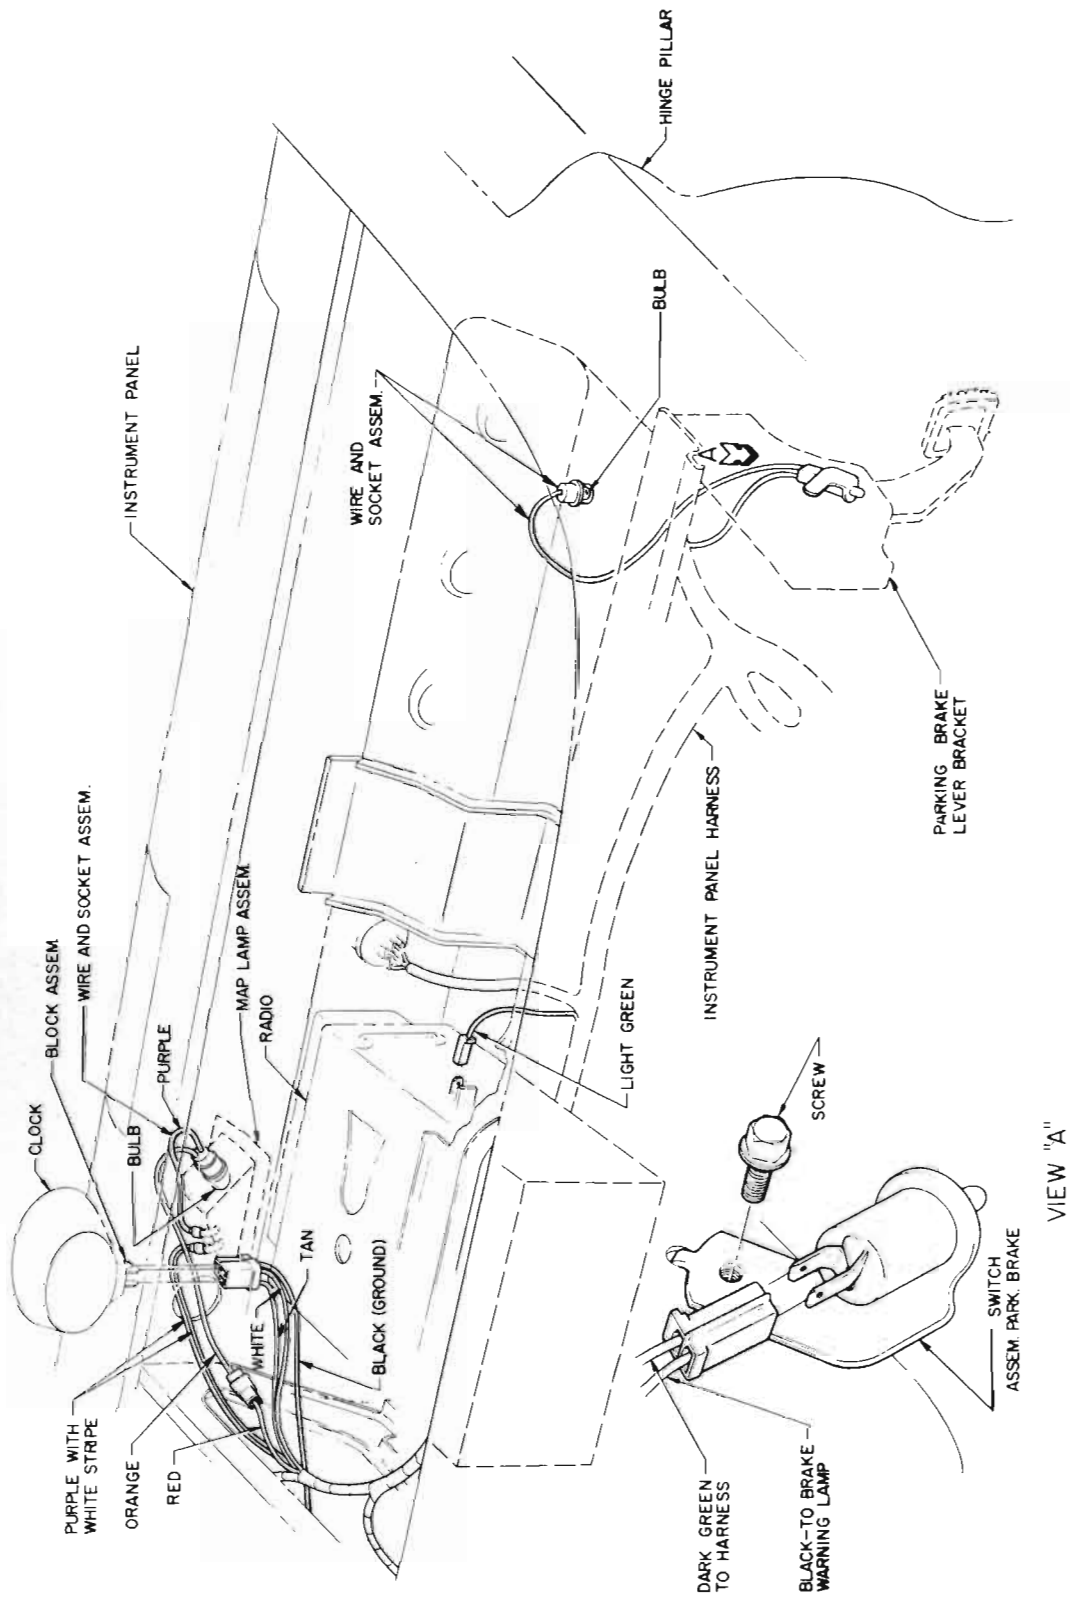


Figure 10-98—Radio, Clock and Brake Warning Lamp

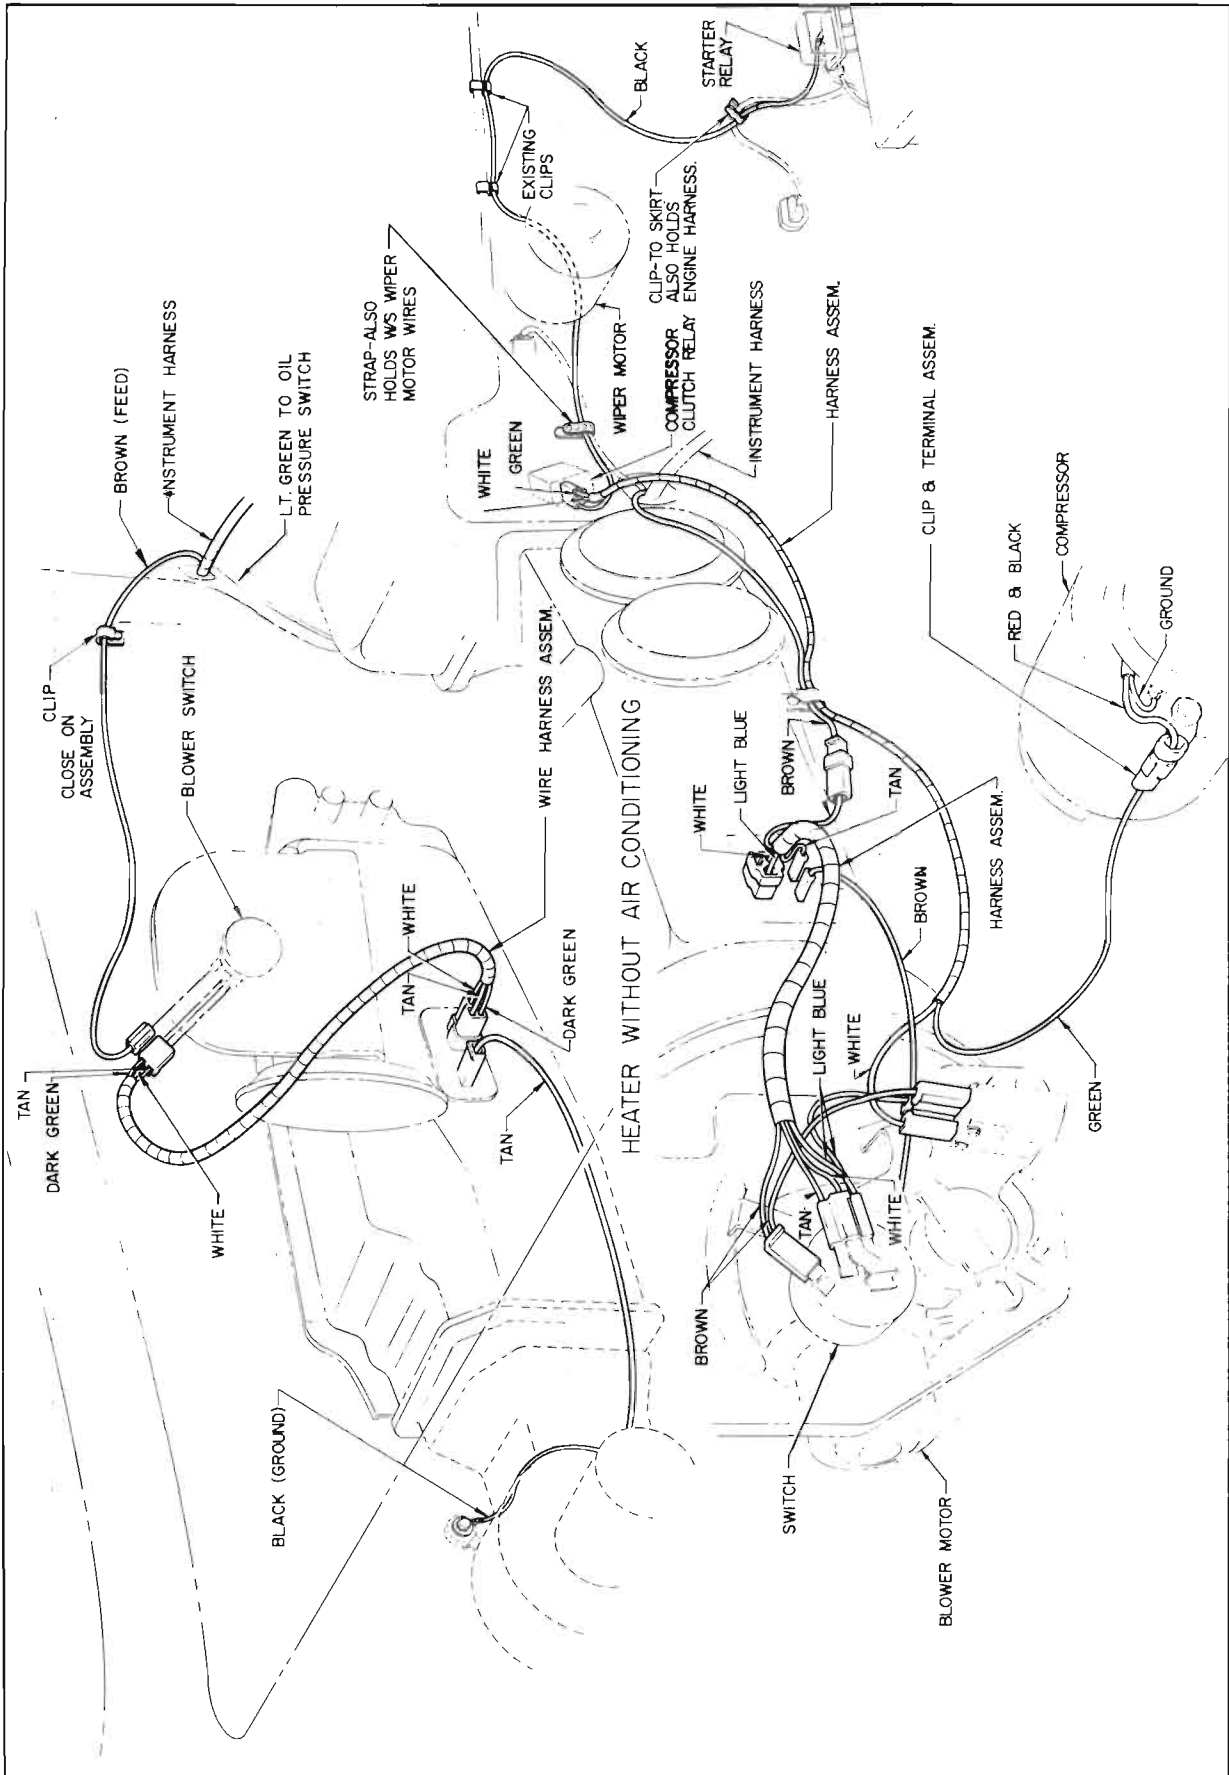


Figure 10-99—Air Conditioning without Heater

 


Figure 10-100—Heater with Air Conditioning

 




Figure 10-102—Chassis Wiring Diagram—Automatic Transmission



J-6663



J-8465



J-8652



J-7099



J-8047

IGNITION AND ELECTRICAL TOOLS

J-6663	T-3 Aimer	J-8465	Guide-Matic Tester
J-7099	Variable Resistor	J-8651	Combination Tester—Guide-Matic and Twilight Sentinel
J-8047	Battery Post and Terminal Cleaning Brush	J-8652	Twilight Sentinel Tester

Figure 10-103—Electrical System Special Tools