

SECTION 10-I
WIRING CIRCUIT DIAGRAMS

CONTENTS OF SECTION 10-I

Paragraph	Subject	Page
10-52	Circuit Diagrams and Fuse Block	10-77

10-52 CIRCUIT DIAGRAMS AND FUSE BLOCK

This section contains schematic wiring circuit diagrams for the complete car. For more detailed body wiring diagrams showing the routing of the wires and the location of the switches, connectors and retaining clips, see Group 13.

A few of the most important wiring terminals are connected with screws. However, most of the terminals have a flat push-pull type connector. With this connector, the terminal on

the wire requires a straight hard push to seat it in the socket. A hard steady pull on the terminal is required to detach it from the socket.

A central fuse block is mounted under the instrument panel on the left side. This fuse block serves as a convenient junction point for a number of circuits, provides a mounting for the direction signal flasher and contains most of the fuses. The fuse block is held in its bracket by a spring clip and may be easily slipped out to check the fuses on one side or to check the connections on the other side. See Figure 10-69.

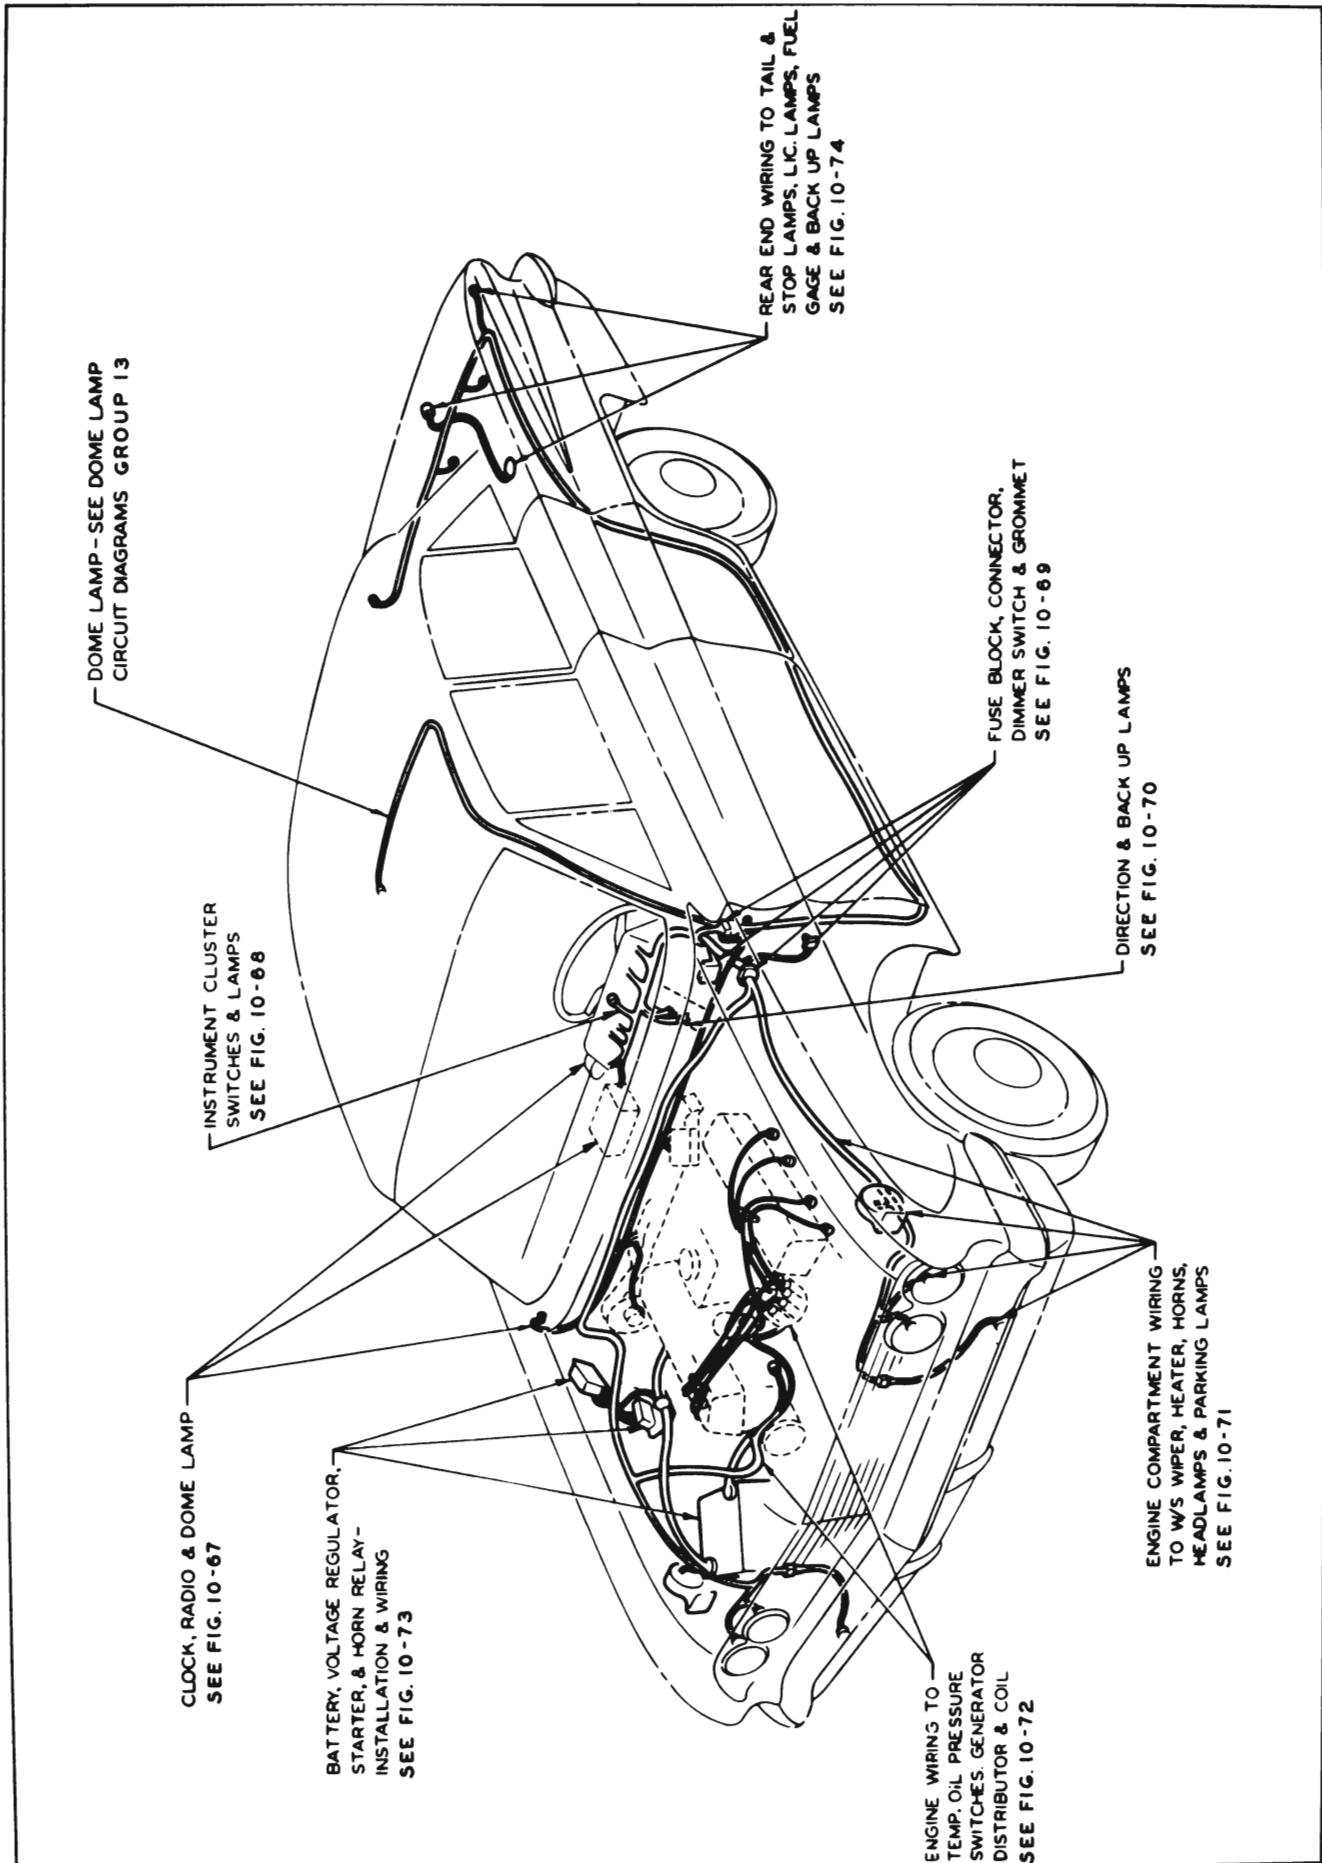


Figure 10-66—Wiring Information

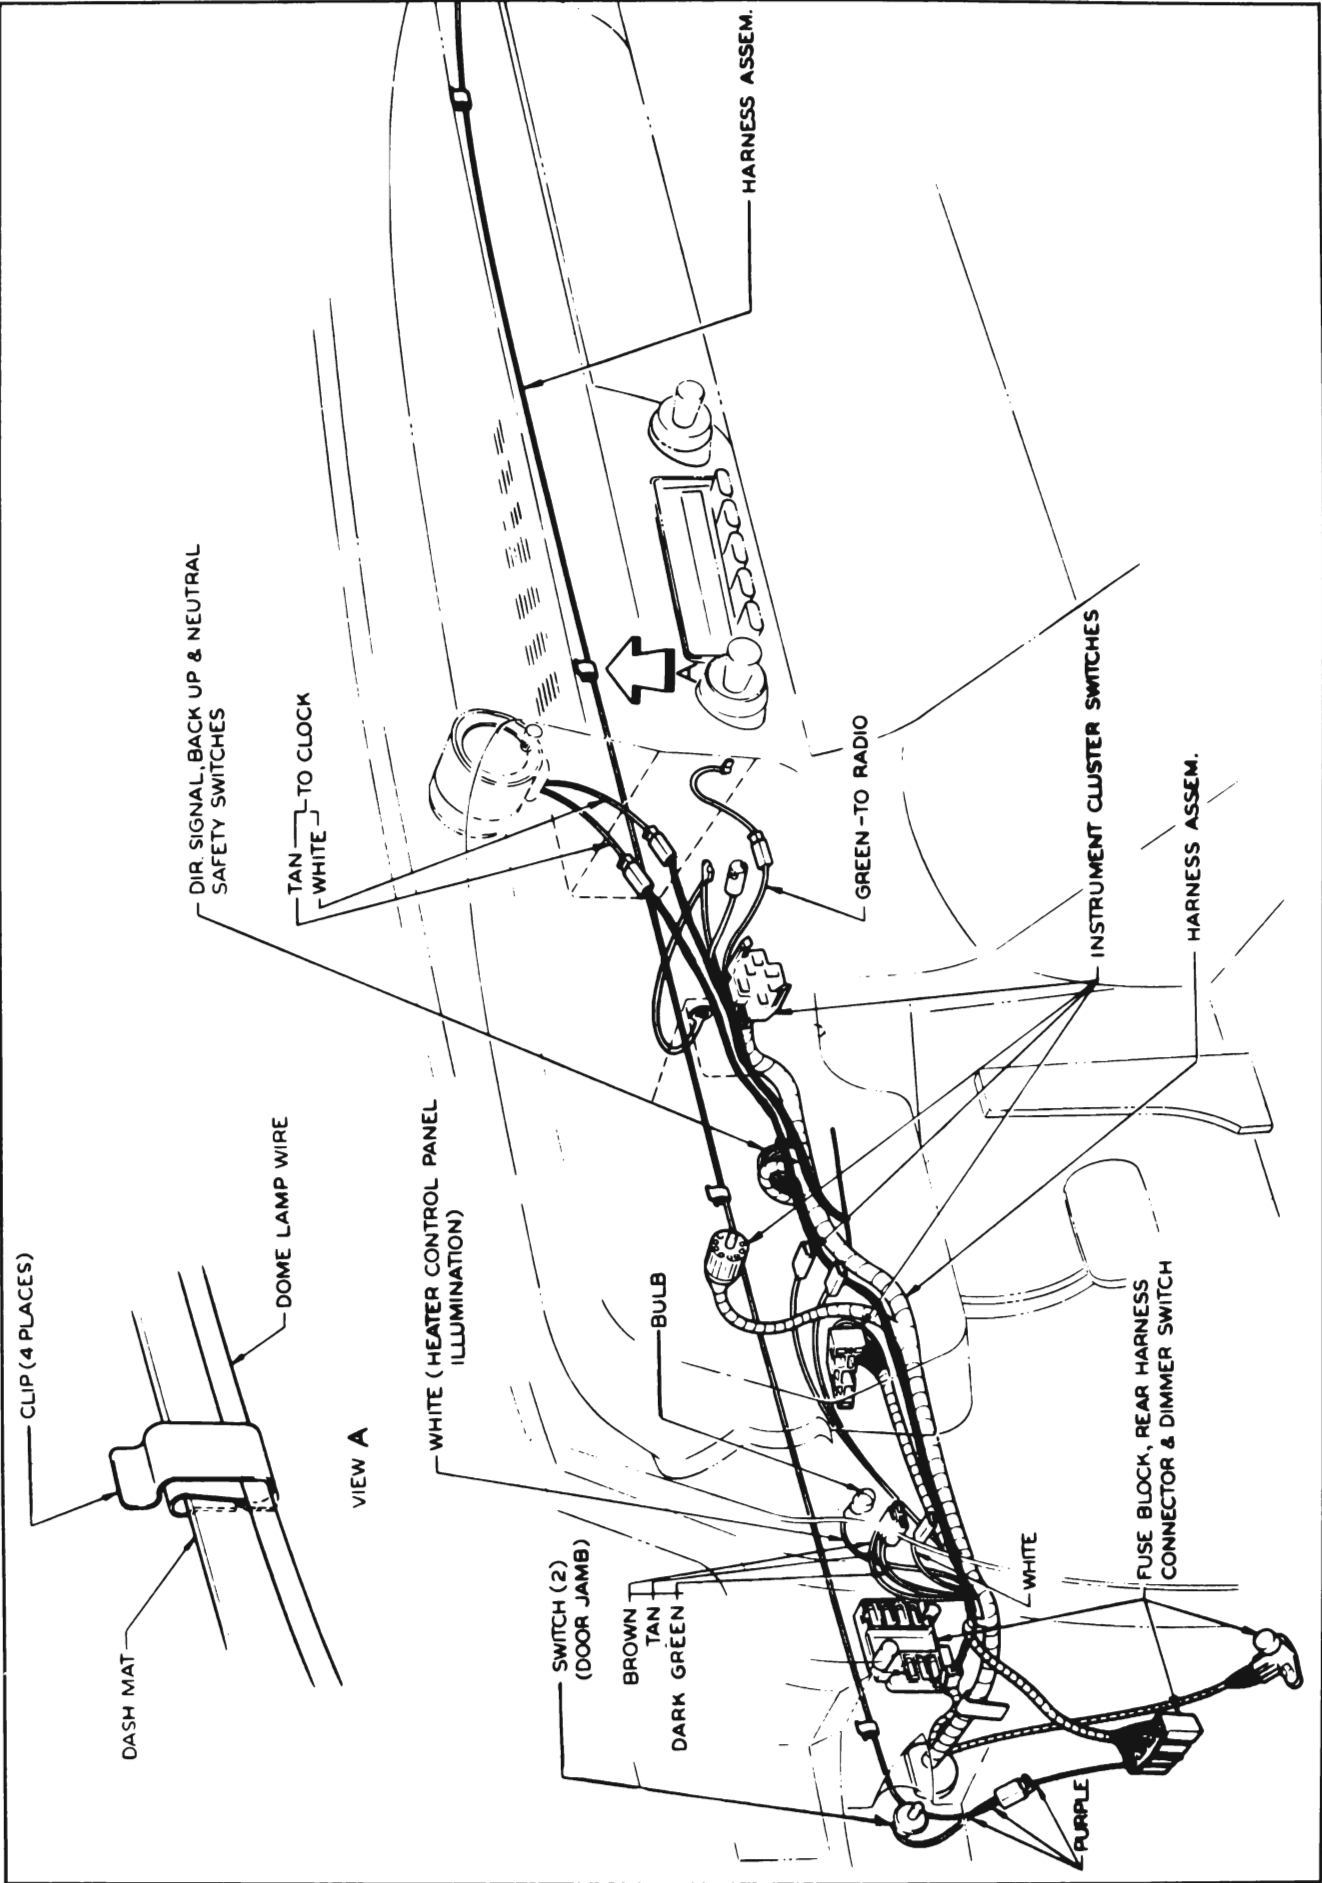


Figure 10-67—Heater, Clock, Radio and Dome Lamp Wiring

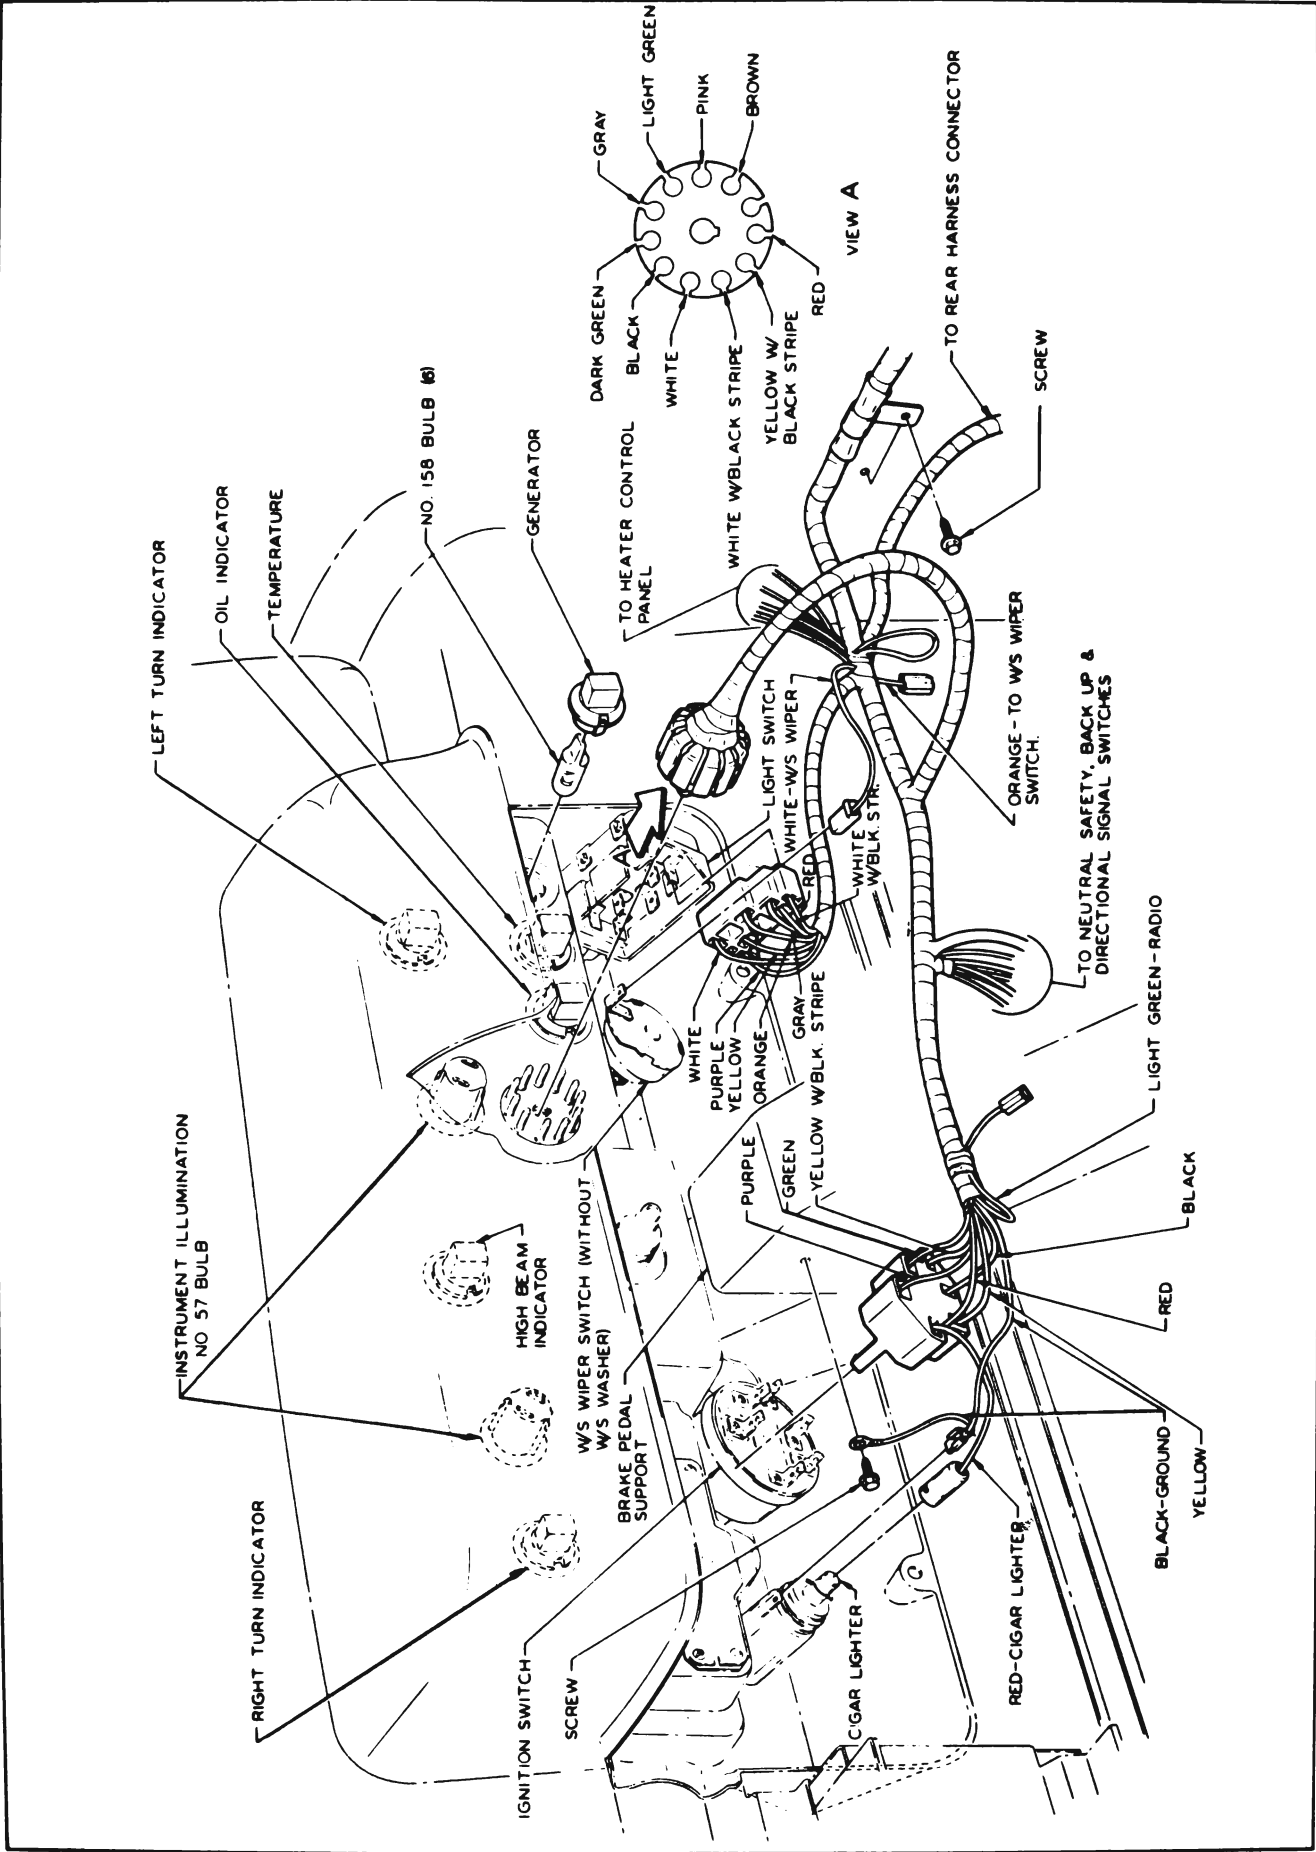


Figure 10-68—Instrument Cluster Switches and Lamps Wiring

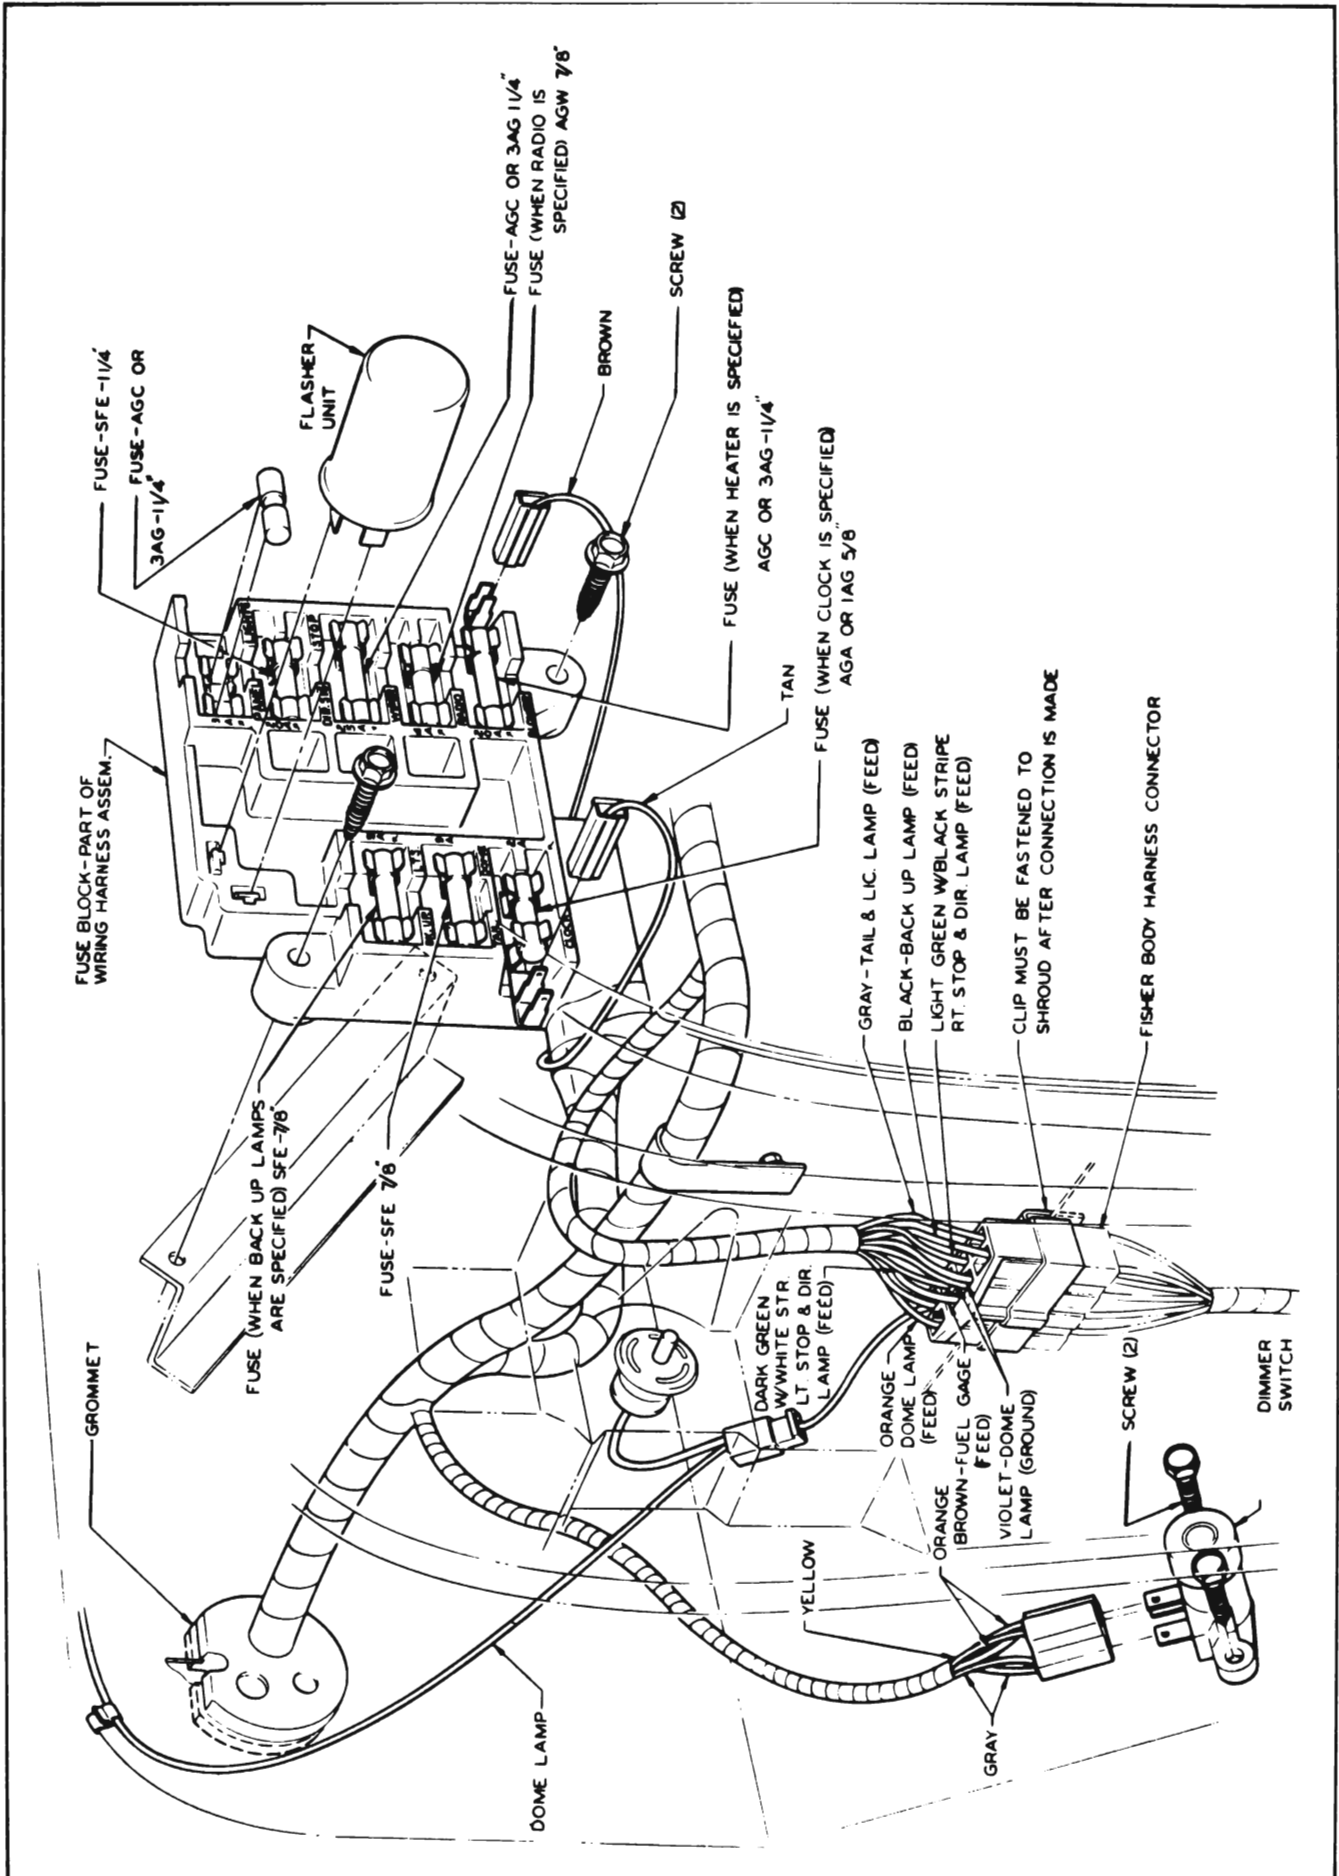


Figure 10-69—Fuse Block, Connector and Dimmer Switch Wiring

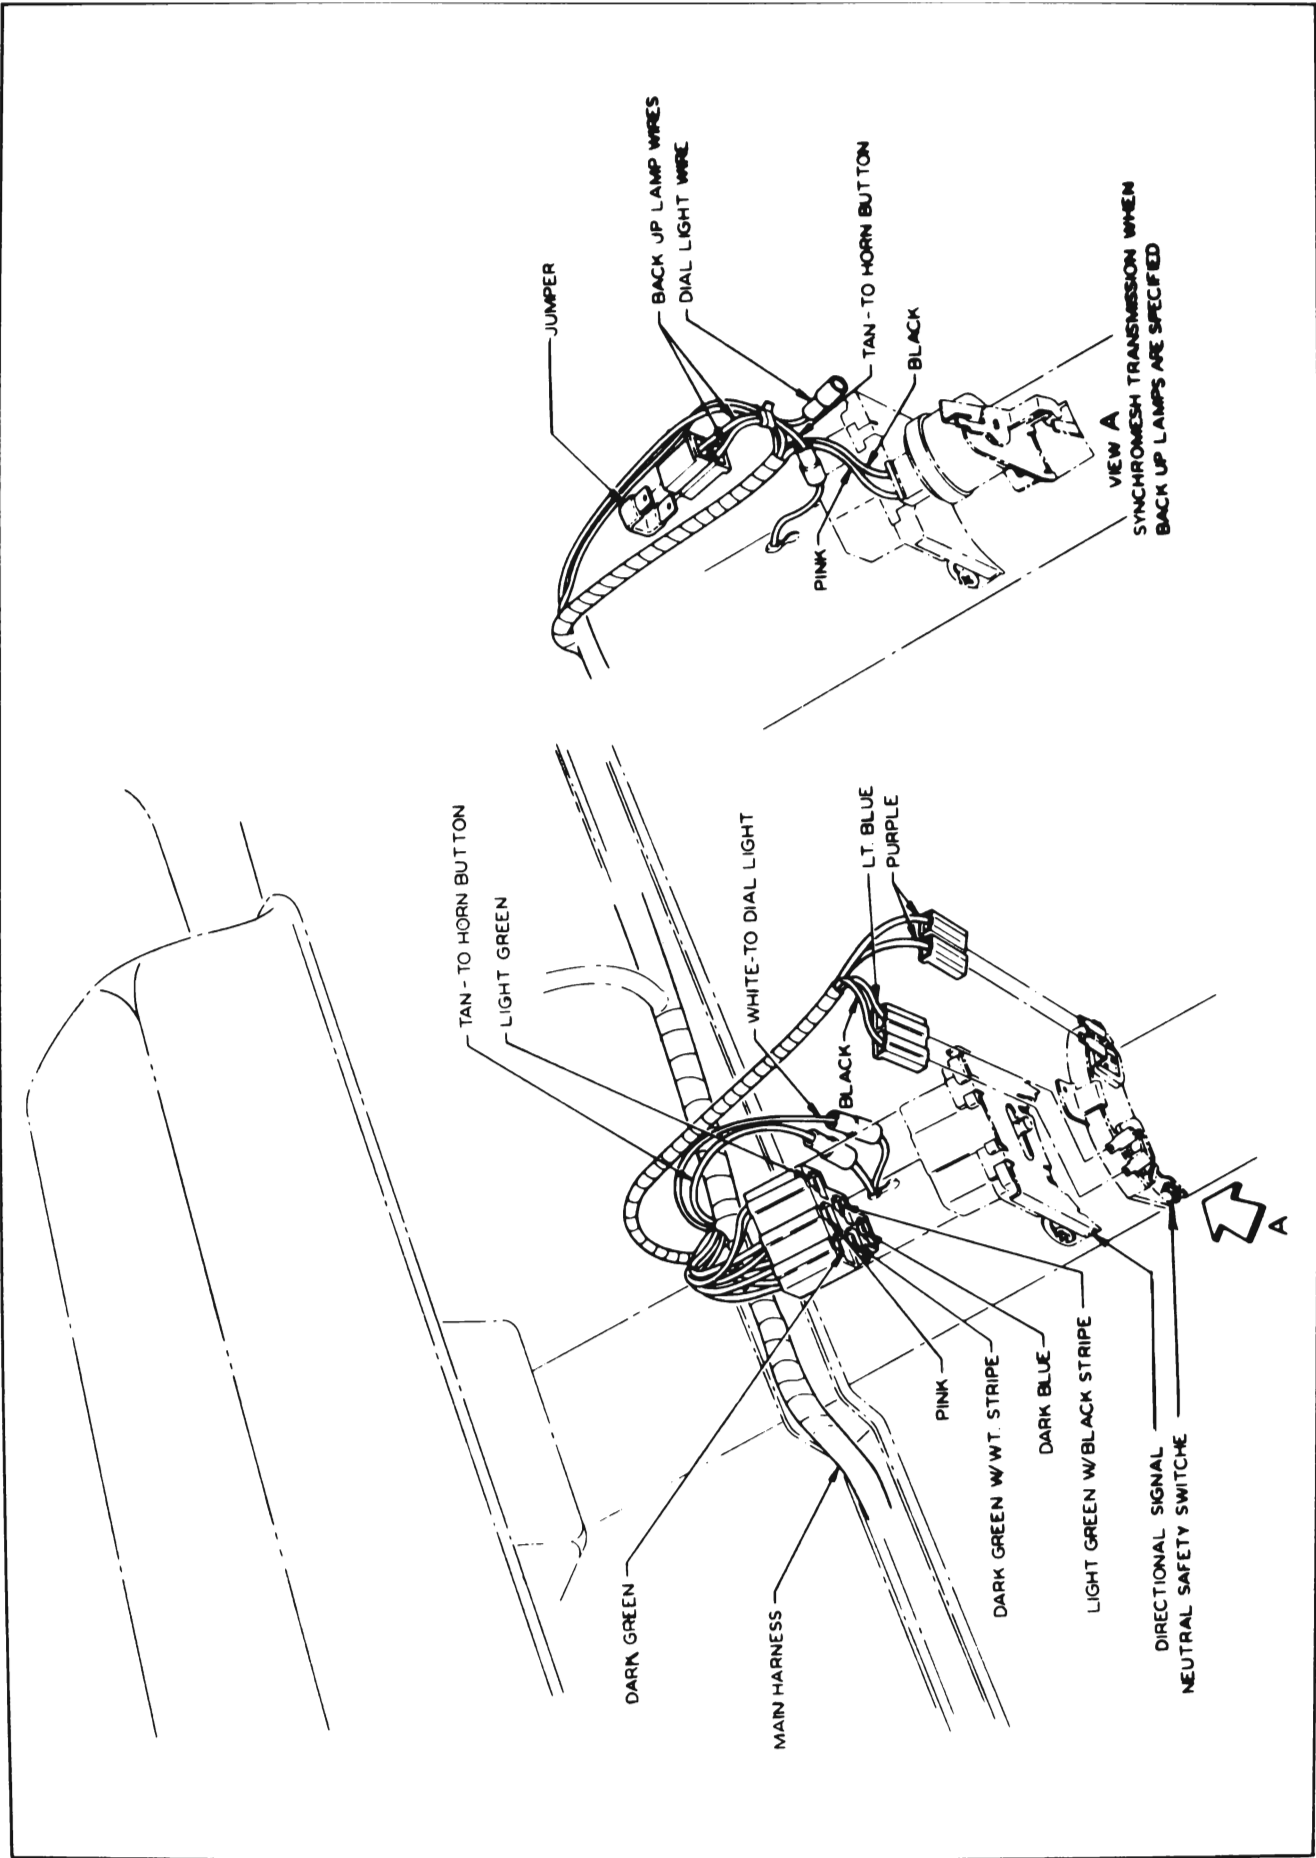


Figure 10-70—Direction and Back-Up Lamps Wiring

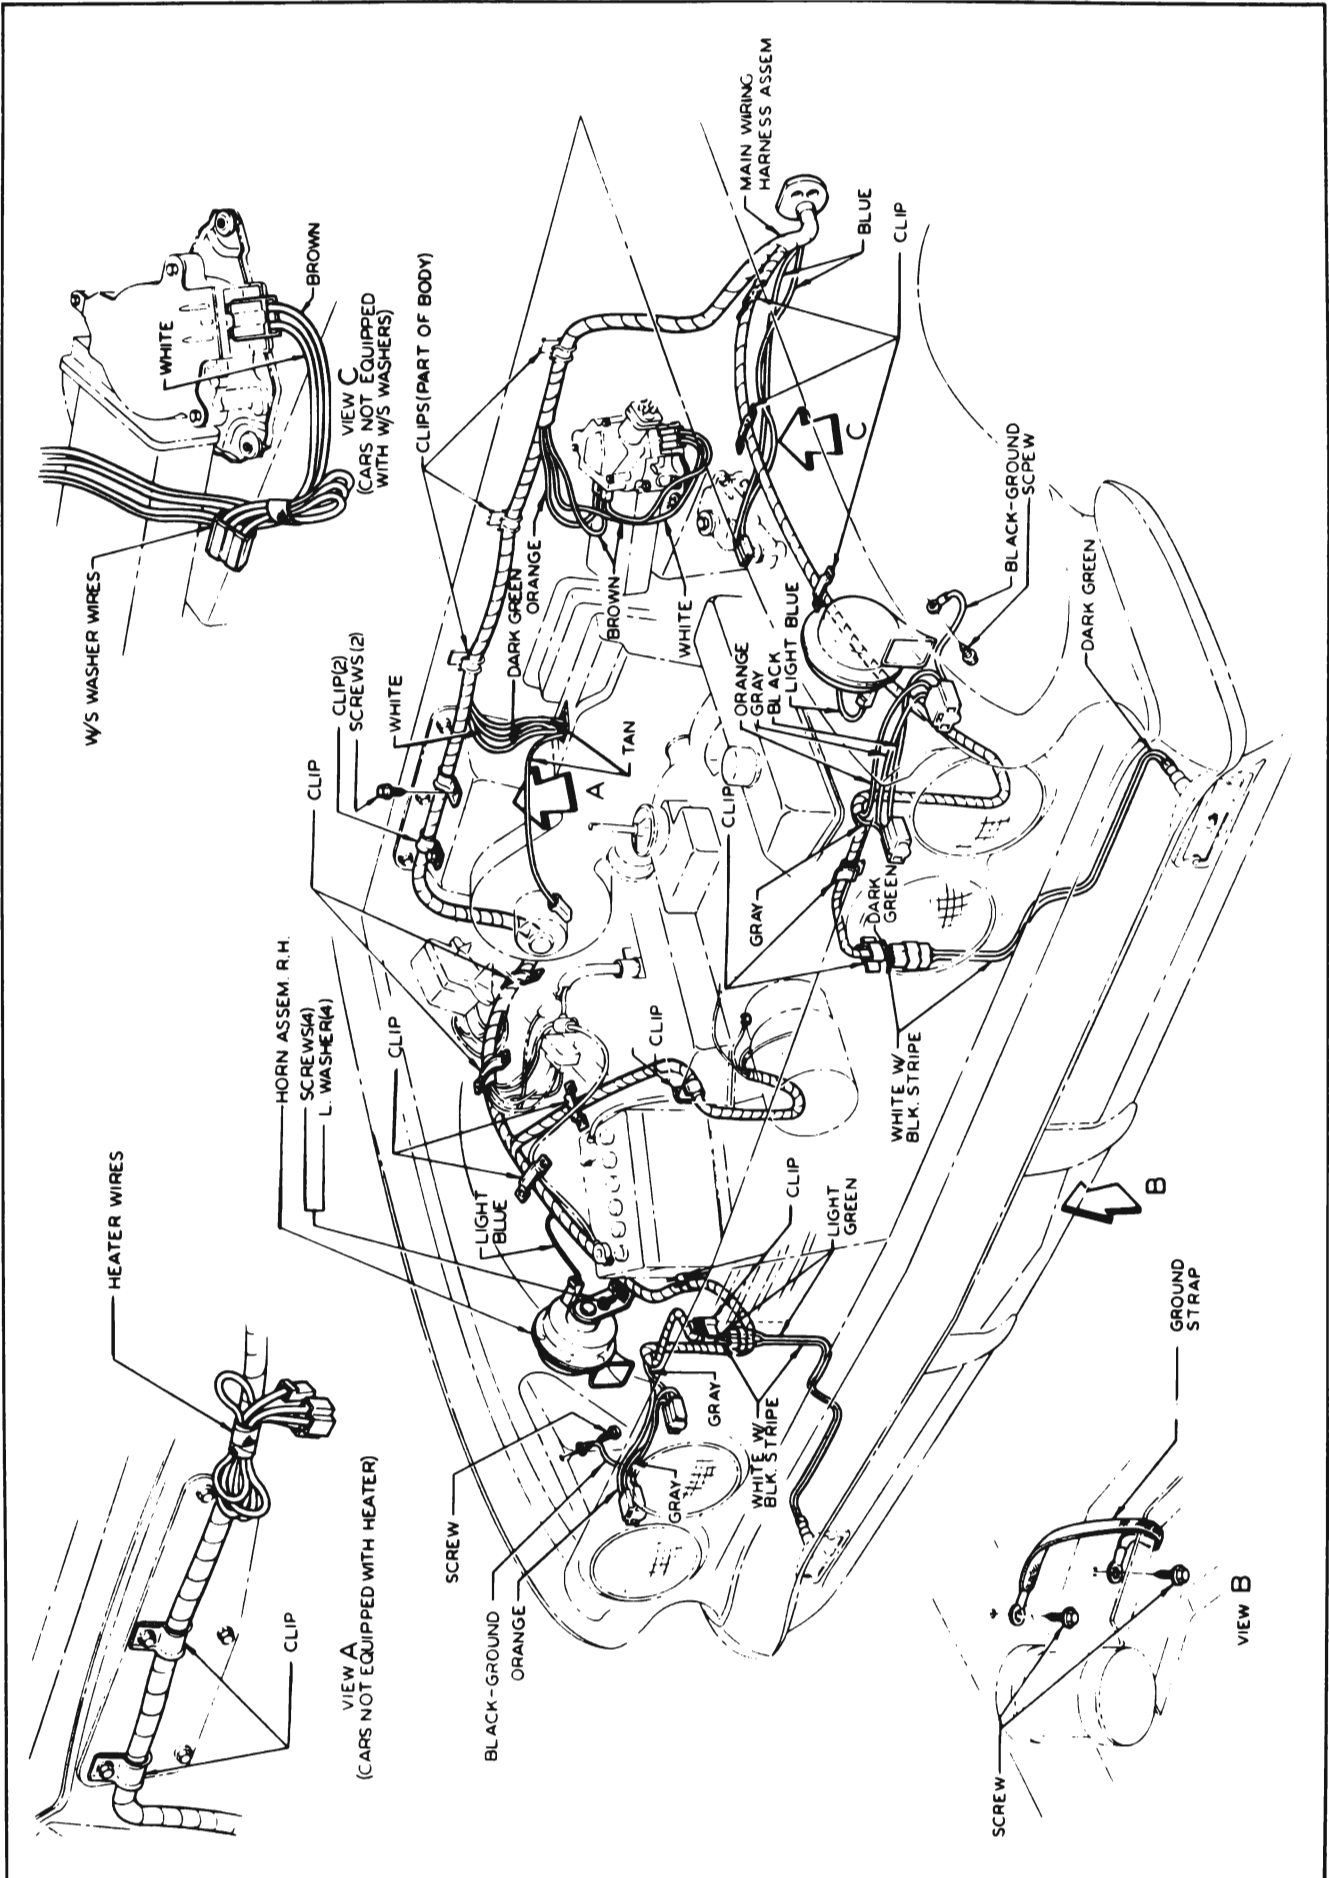


Figure 10-71—W/S Wiper, Heater, Horns, Headlamps and Parking Lamps Wiring

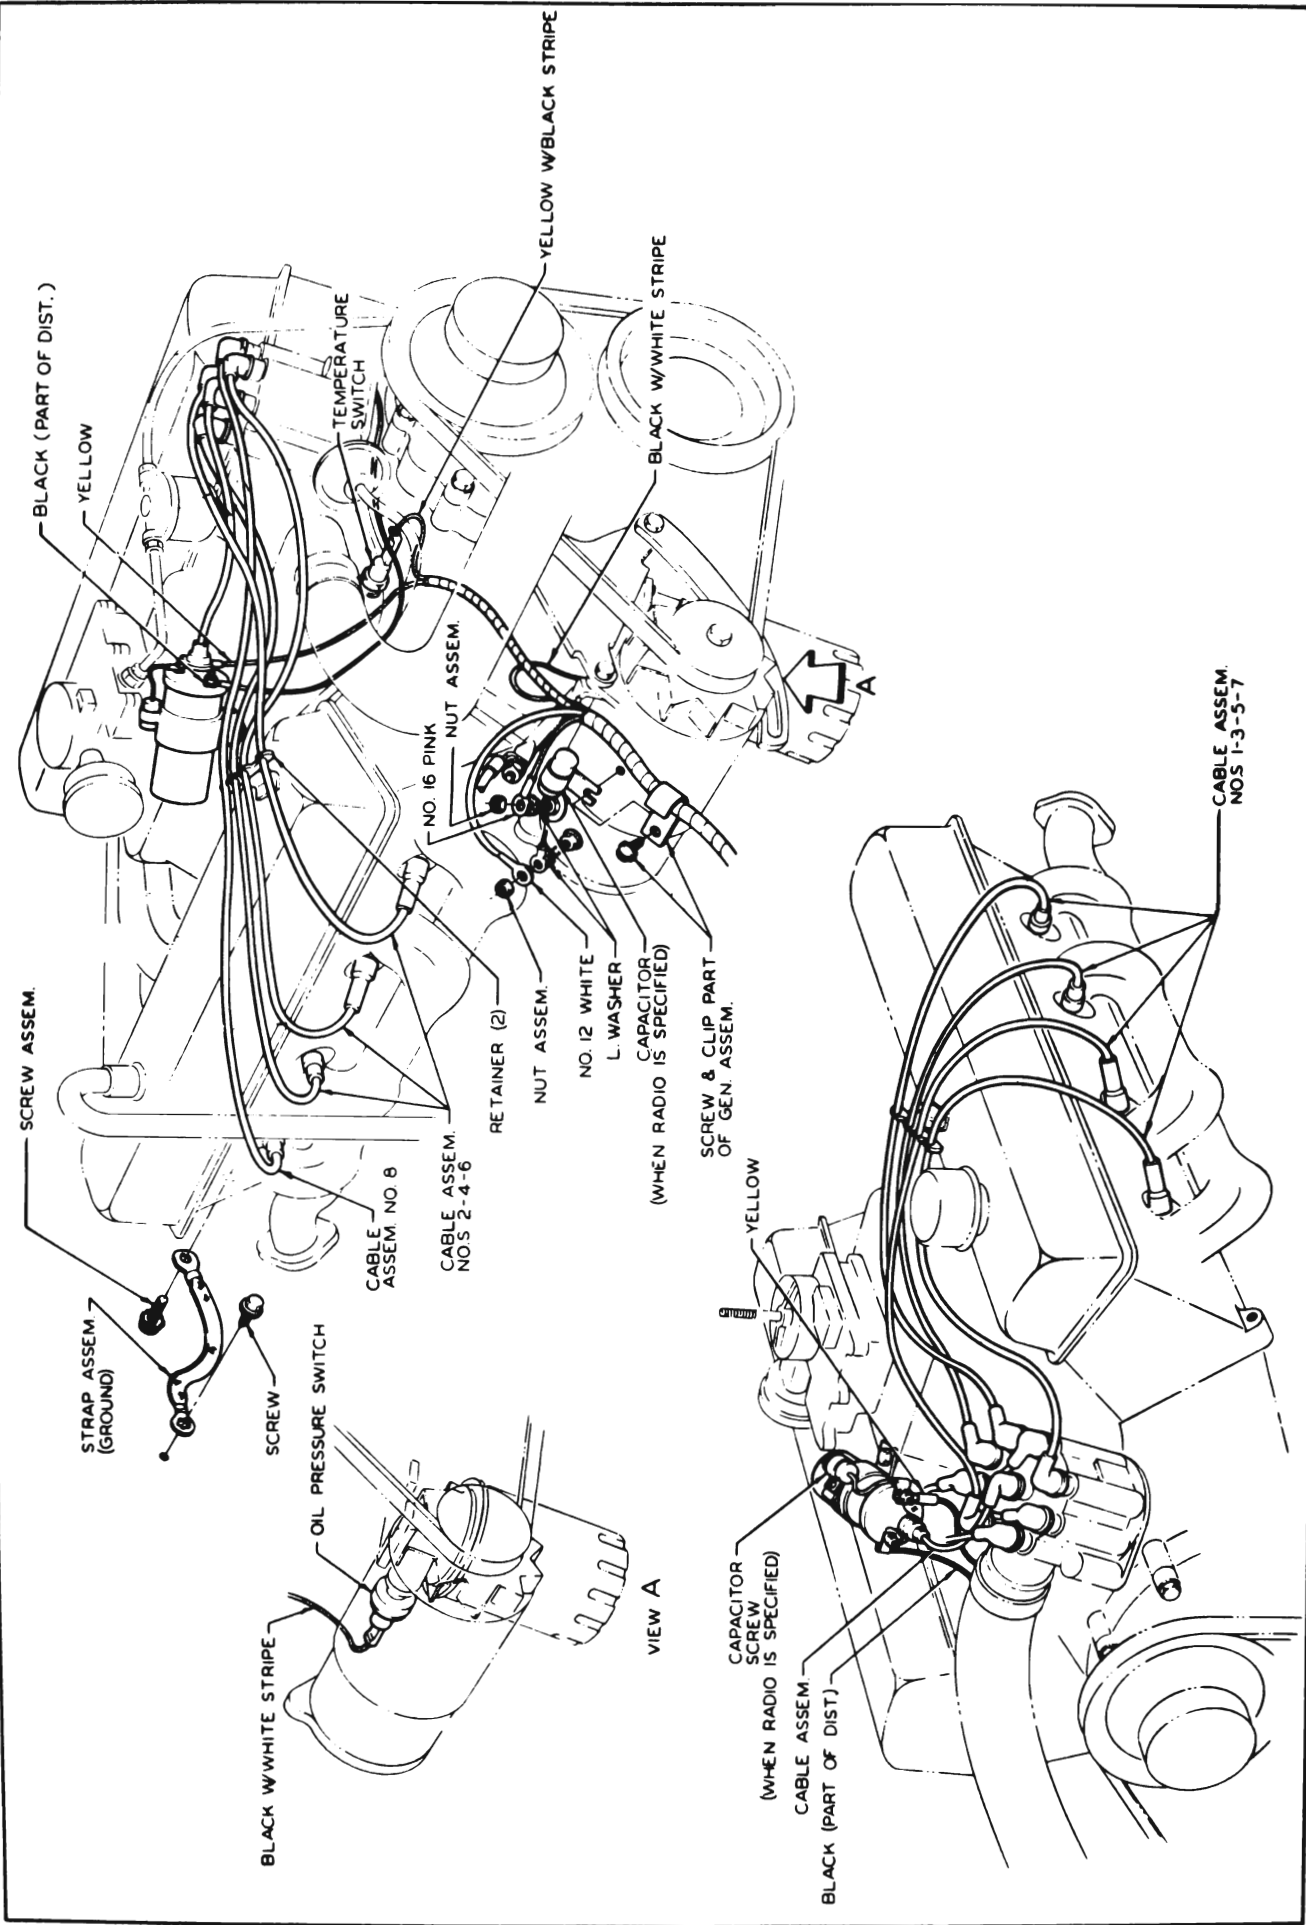


Figure 10-72—Engine Wiring

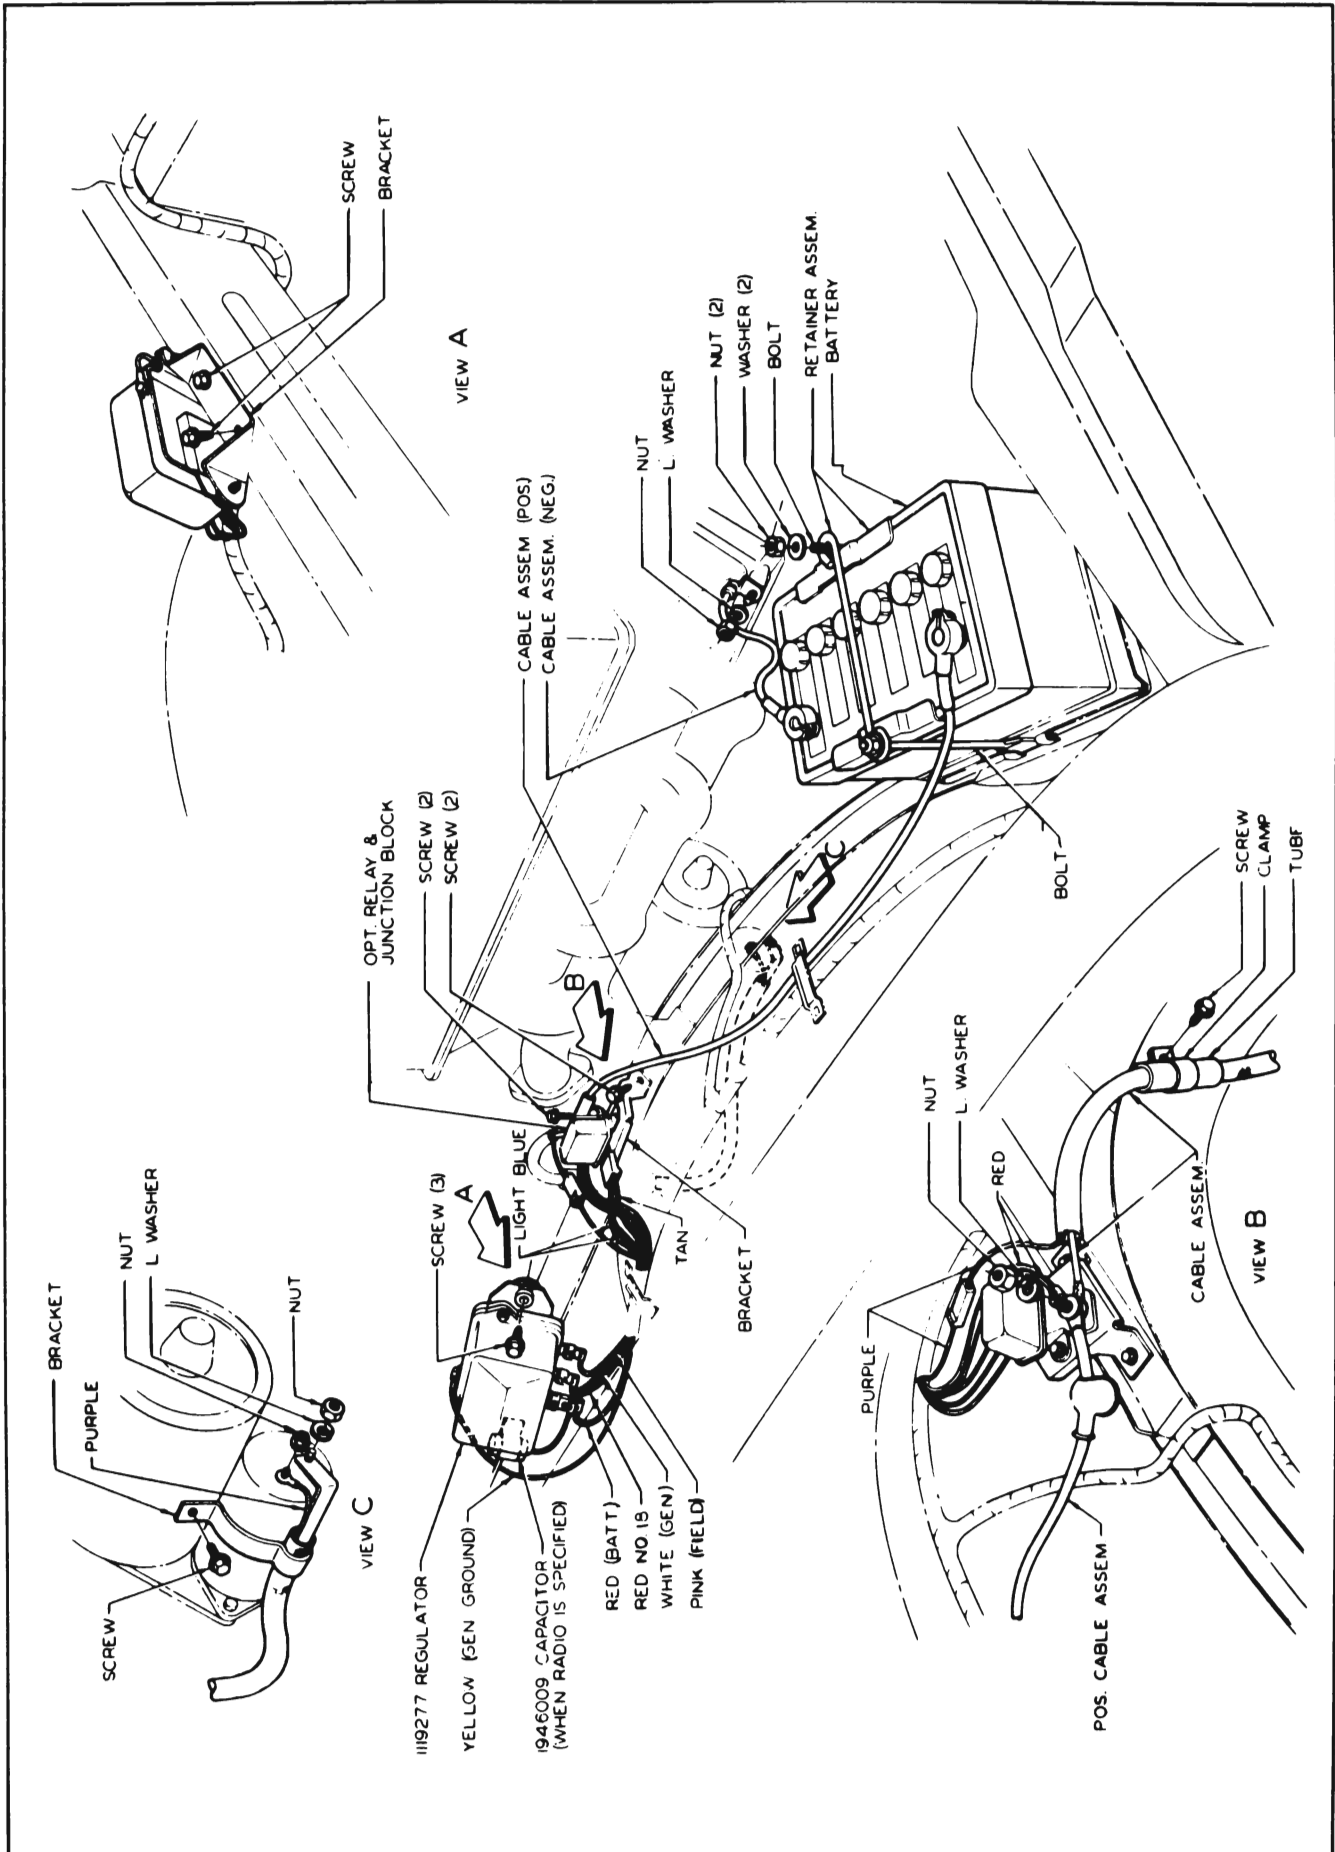


Figure 10-73—Battery, Generator Regulator, Starter and Horn Relay Wiring

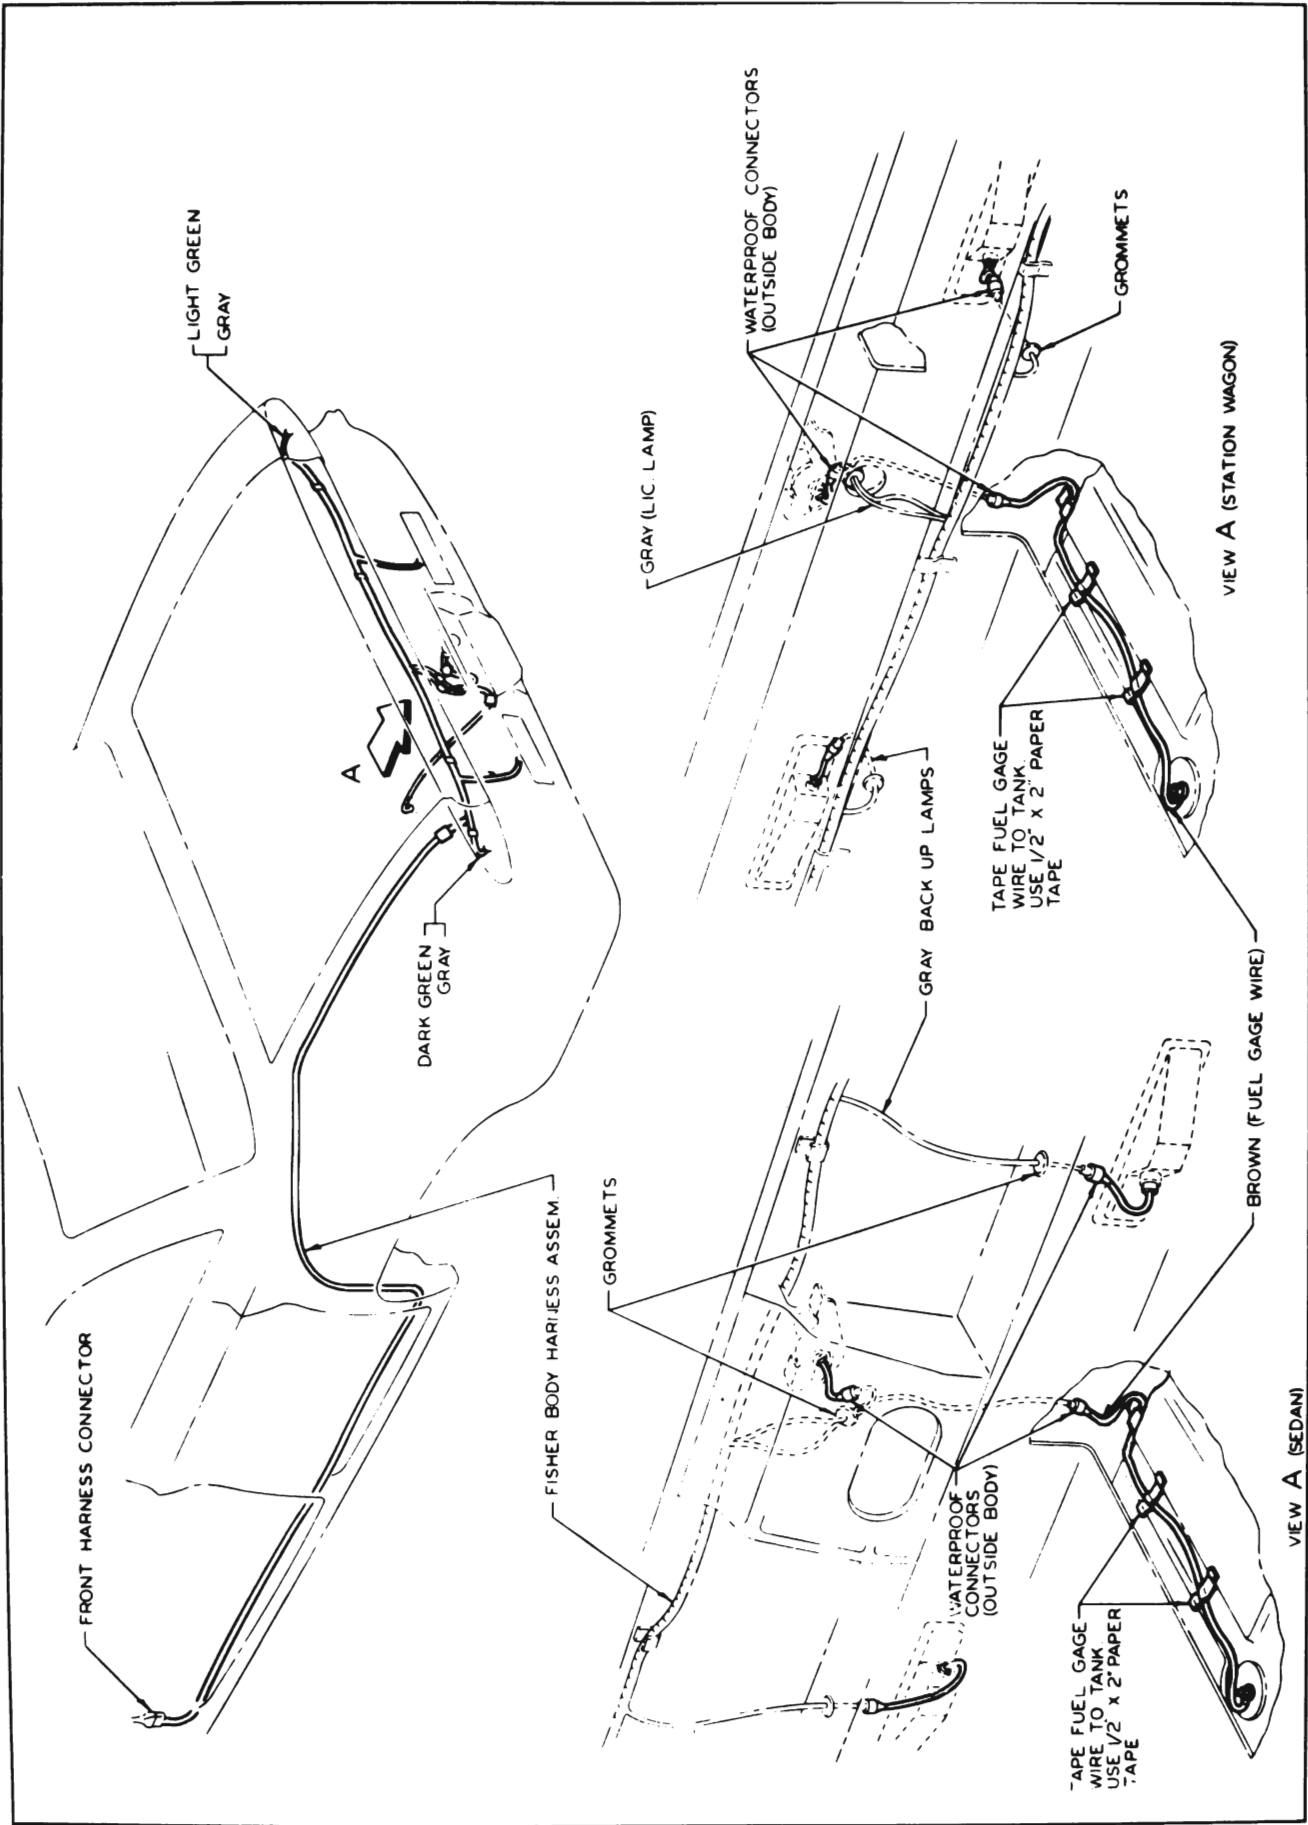


Figure 10-74—License, Back-Up Lamps and Fuel Gauge Wiring

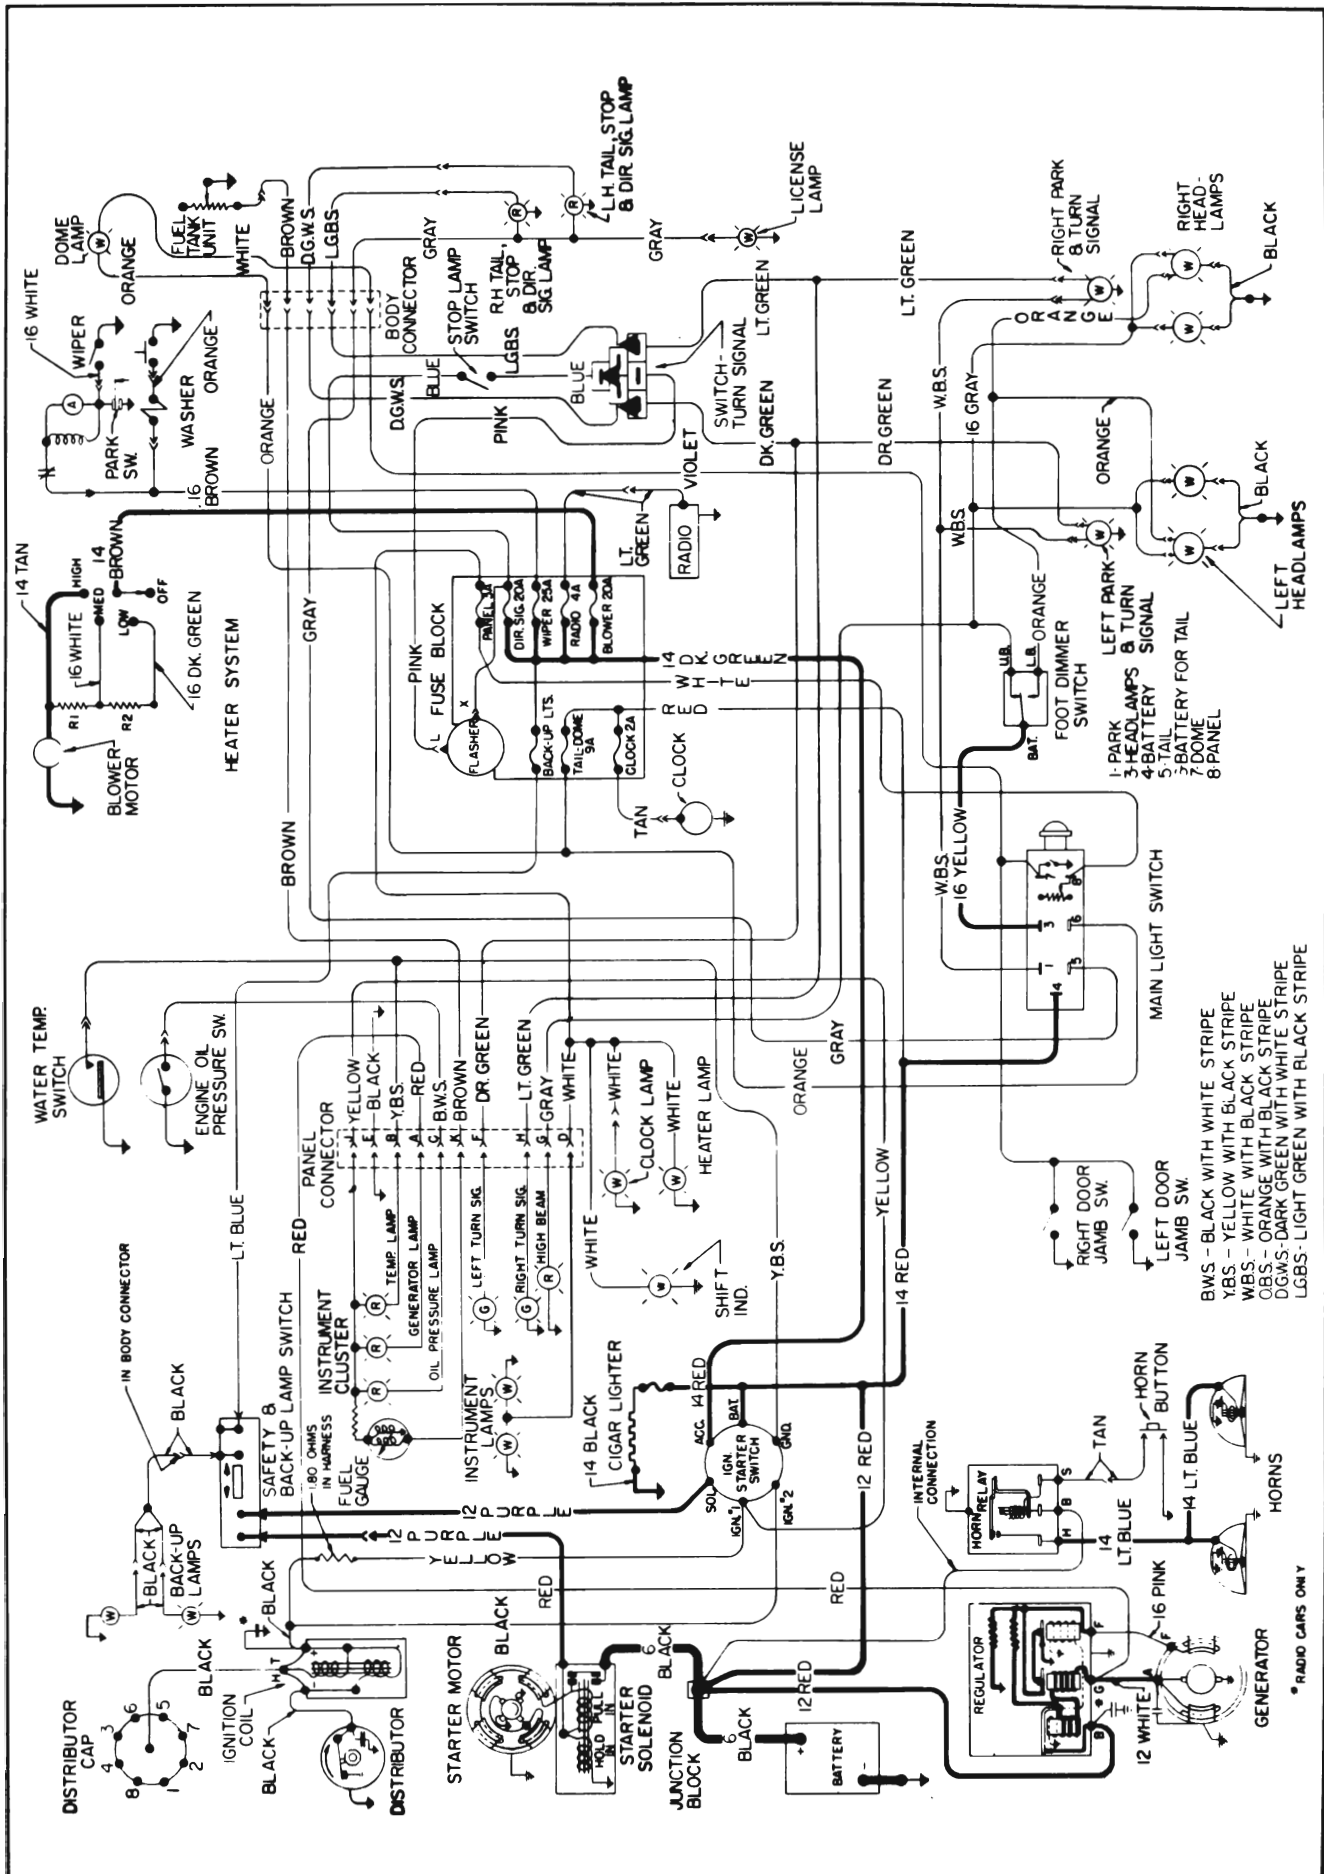


Figure 10-75—Wiring Circuit Diagram

**IGNITION AND ELECTRICAL TOOLS**

- J-6663 T-3 Aimer
- J-7099 Variable Resistor
- J-8047 Battery Post and Terminal Cleaning Brush
- J-8529 Generator Regulator Temperature Gauge
- J-8562 Ignition Switch Nut Wrench
- J-8563 Instrument Panel Nut Wrench

Figure 10-76—Electrical System Special Tools