

SECTION 5-C TRANSMISSION REMOVAL AND INSTALLATION DISASSEMBLY AND ASSEMBLY

CONTENTS OF SECTION 5-C

Paragraph	Subject	Page	Paragraph	Subject	Page
5-14	TRANSMISSION ASSEMBLY: Removal and Installation . . .	5-40	5-25	GOVERNOR LEVER AND PIN: Removal and Re- placement	5-102
5-15	CONVERTER AND GEAR SET: Removal, Disassembly, In- spection and Reassembly . . .	5-42	5-26	TRANSMISSION REAR BEAR- ING: Removal and Installa- tion	5-103
5-16	CONVERTER CLUTCH AND CONVERTER PUMP: Dis- assembly, Inspection and Reassembly	5-51	5-27	RANGE SELECTOR LEVERS AND SHAFT, THROTTLE VALVE CONTROL LEVERS AND SHAFT, AND PARK- ING LOCK ACTUATOR: Removal and Replacement	5-104
5-17	PUMP: Removal, Disassem- bly, Inspection and Reassembly	5-57	5-28	OUTPUT SHAFT, COAST CLUTCH SUPPORT, FOR- WARD CLUTCH PISTON, PARKING LOCK RATCH- ET WHEEL, AND GOVER- NOR ASSEMBLY: Installa- tion	5-107
5-18	REVERSE CLUTCH COM- PONENTS: Removal and Inspection	5-65	5-29	COAST AND OVER-RUNNING CLUTCH ASSEMBLY, FOR- WARD CLUTCH PACK, RE- LEASE SPRING AND APPLY LEVERS: Installation . . .	5-109
5-19	COAST AND OVER-RUNNING CLUTCH ASSEMBLY: Re- moval, FORWARD CLUTCH PACK, RELEASE SPRING, AND APPLY LEVERS: Re- moval and Inspection	5-67	5-30	REVERSE CLUTCH COM- PONENTS AND OIL PUMP: Installation	5-112
5-20	COAST AND OVER-RUNNING CLUTCH: Disassembly, Inspection and Reassembly .	5-71	5-31	VALVE BODY: Installation .	5-117
5-21	OIL PAN: Removal	5-83	5-32	PARKING LOCK PAWL: Removal and Replacement .	5-120
5-22	VALVE BODY: Removal, Disassembly, Inspection and Reassembly	5-83	5-33	OIL PAN AND SEAL: Instal- lation	5-123
5-23	COMPANION FLANGE AND SEAL: Removal and Instal- lation	5-93	5-34	CONVERTER AND GEAR SET: Installation	5-123
5-24	OUTPUT SHAFT, COAST CLUTCH SUPPORT, FOR- WARD CLUTCH PISTON, PARKING LOCK RATCHET WHEEL AND GOVERNOR ASSEMBLY: Removal, Disassembly, Inspection and Reassembly	5-95	5-35	SPEEDOMETER DRIVEN GEAR SLEEVE AND "O" RING: Removal and Re- placement	5-128

5-14 TRANSMISSION ASSEMBLY: REMOVAL & INSTALLATION

a. Removal

1. Raise car and provide support front and rear.
2. Disconnect exhaust crossover pipe both ends and at transmission. Remove pipe.
3. Remove universal joint "U" bolts and slide front propeller shaft rearward to separate universal joint at transmission. Support propeller shaft to avoid weight of propeller shaft damaging center universal joint.

4. Place suitable jack under transmission and fasten transmission securely to jack.

5. Remove transmission mounting pad to crossmember bolts.

6. Remove transmission support crossmember to frame rail bolts at each end of crossmember. Remove crossmember.

7. Disconnect speedometer cable.

8. Loosen shift linkage adjusting swivel clamp nut. Remove cotter key spring and washer attaching equalizer to range selector outer lever. Remove equalizer.

9. Disconnect transmission filler pipe at engine and at transmission. Remove filler pipe.

10. Support engine at oil pan.

11. Remove transmission cover pan to case tapping screws. Remove cover pan.

12. Mark flywheel and converter pump for reassembly in same position, and remove three converter pump to flywheel bolts.

13. Remove transmission case to engine block bolts.

14. Move transmission rearward to provide clearance between converter pump and crankshaft. Lower transmission and move to bench.

IMPORTANT NOTE: Wire the converter assembly to the transmission case or otherwise suitably retain it. If not retained, the converter will fall out if the transmission is tilted forward even slightly.

b. Installation

1. Wire or otherwise retain the converter to the transmission case.

2. Assemble transmission to suitable transmission jack and raise transmission into position. Remove wire. Rotate flywheel or con-

verter to permit coupling of flywheel and converter with original relationship.

3. Install transmission case to engine block bolts. Torque to 30-35 ft. lbs. Do not over-tighten.

4. Install flywheel to converter pump bolts. Torque to 18-25 ft. lbs.

5. Install transmission support crossmember. Install mounting pad to crossmember bolts.

6. Remove transmission jack and engine support.

7. Install transmission cover pan with tapping screws.

8. Install transmission filler pipe and clamp using new "O" ring.

9. Reconnect speedometer cable.

10. Reconnect front propeller shaft to transmission companion flange and install "U" bolts.


11. Reinstall exhaust crossover pipe.

12. Fill transmission.

(a) Add oil till filler pipe is full.

(b) Start engine in Park range, continue adding oil till 6 quarts have been added.


5-15 CONVERTER AND GEAR SET: REMOVAL, DISASSEMBLY, INSPECTION AND REASSEMBLY

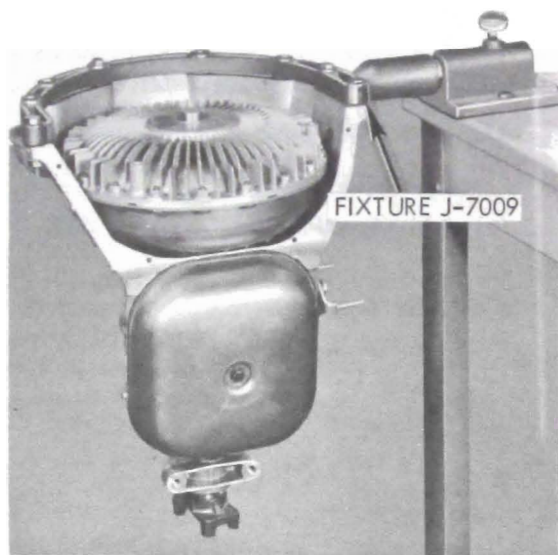

a. Removal and Inspection of Converter and Gear Set


1. Assemble transmission to fixture J-7009 and adapter J-7009-9.

5-100

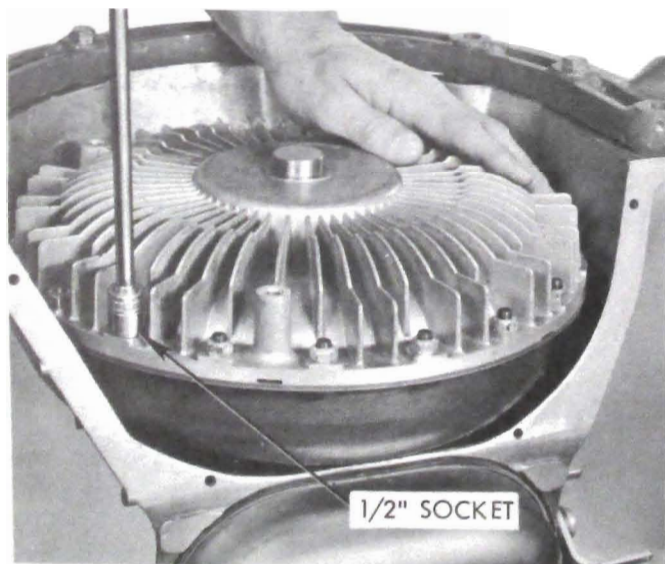


2. Remove converter pump to housing bolts and nuts.

5-101

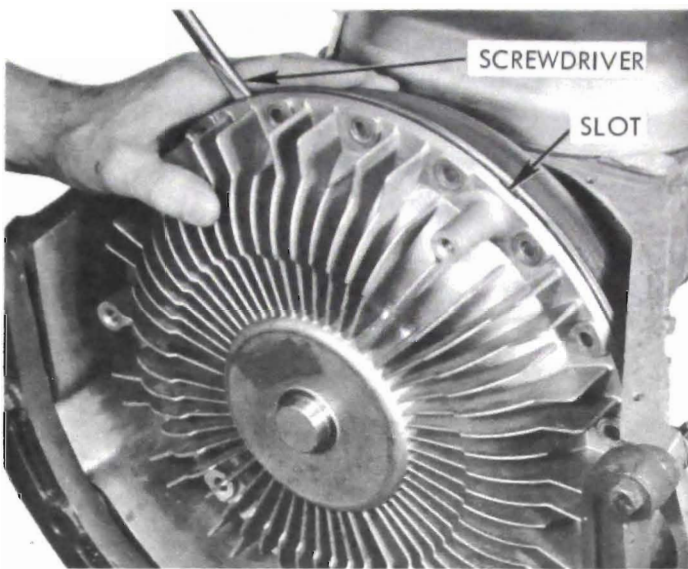


3. Raise transmission to horizontal position. Provide a pail or other suitable receptacle to catch the oil as it drains out of converter. Pry converter pump away from housing by using a screwdriver blade in slots provided.

5-102

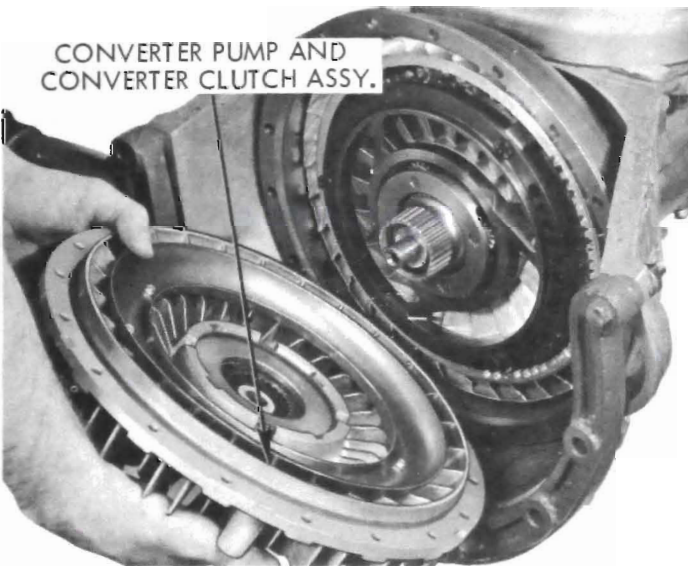


4. Remove converter pump and converter clutch assembly and allow to drain. Refer to paragraph 5-16 for disassembly, inspection and reassembly of converter clutch assembly.

5-103

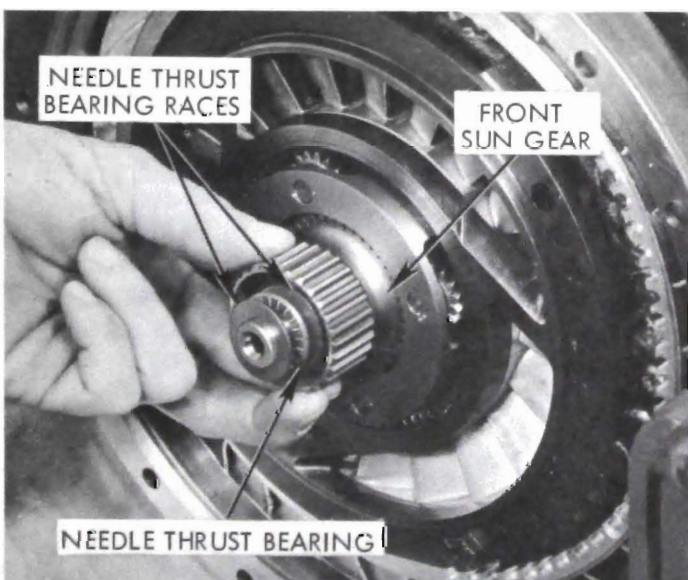


5. Remove front sun gear, needle thrust bearing, and two select fit needle thrust bearing races. Set gear, bearing and races aside on clean working surface.

5-104

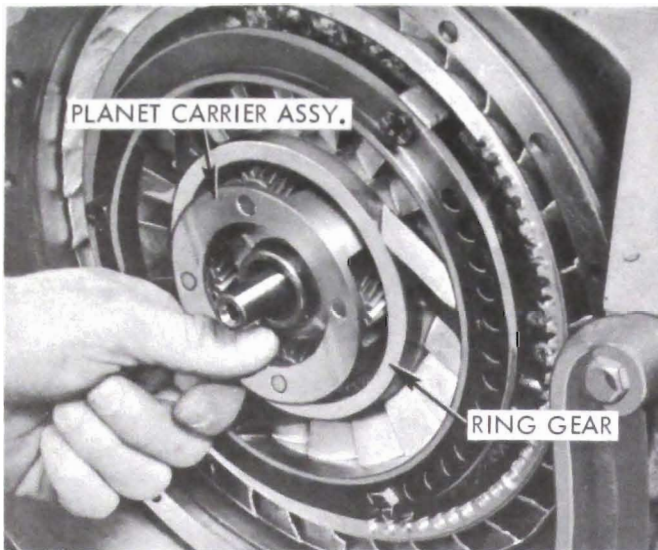


6. Slide planet carrier assembly out of ring gear and place on clean working surface.

5-105

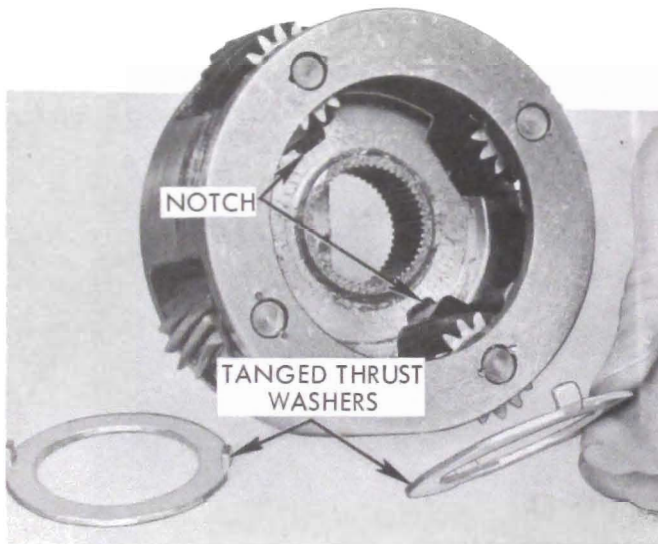


7. Separate front and rear tanged thrust washers from planet carrier assembly. Examine washers for scoring or wear. Check planet pinions for scoring, imbedded metal or looseness on shaft. Worn or loose pinions require replacement of carrier assembly. Pick out imbedded metal with small screwdriver.

5-106

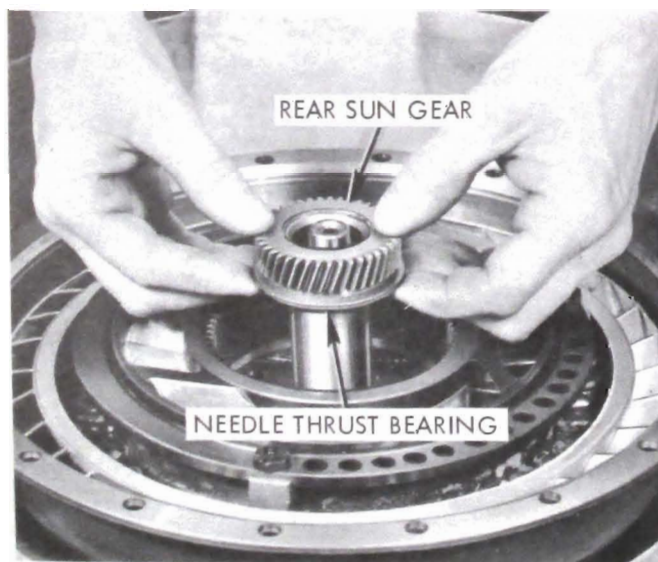


8. With transmission vertical, remove rear sun gear and needle thrust bearing. Set aside on clean surface.

5-107

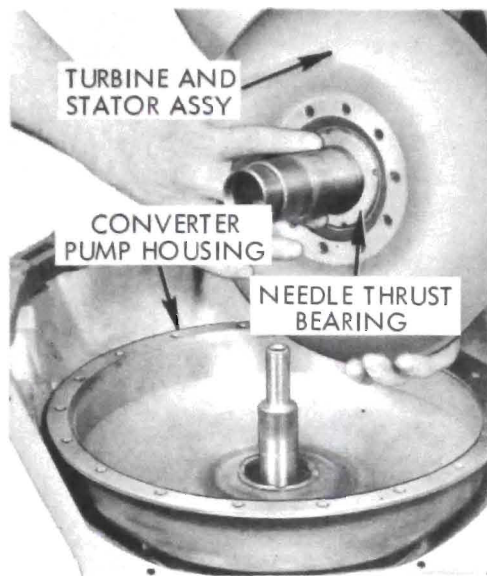


9. Lift turbine and stator assembly and turbine needle thrust bearing out of housing; set aside on clean working surface.

5-108

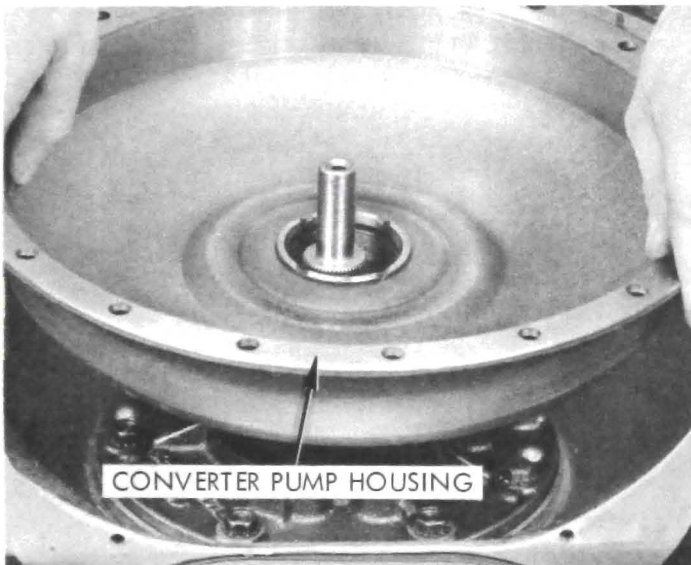


10. Lift converter pump housing out of transmission and set housing hub through hole in bench. To conserve space and for convenience while inspecting and gauging the converter, it is advisable to set the turbine and stator assembly and rear sun gear in the pump housing before proceeding with inspection of parts or further disassembly of transmission.

5-109

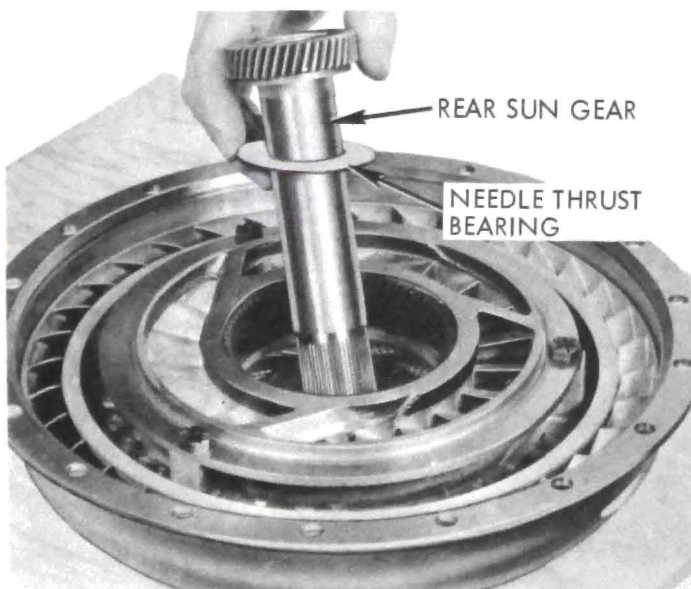


11. Remove rear sun gear and needle thrust bearing from bench assembly. Check gear for scoring or imbedded metal. Pick out imbedded metal with small screwdriver. Check babbitted inner surfaces of gear shaft. If babbitt is chipped or flaked off, rear sun gear must be replaced. Check needle thrust bearing for looseness or wear.

5-110

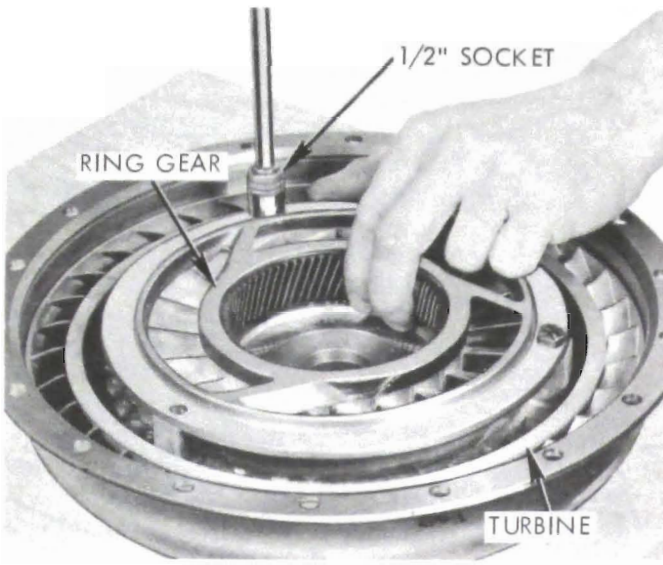


12. Use 1/2" wrench to remove three bolts attaching ring gear to turbine.

5-111

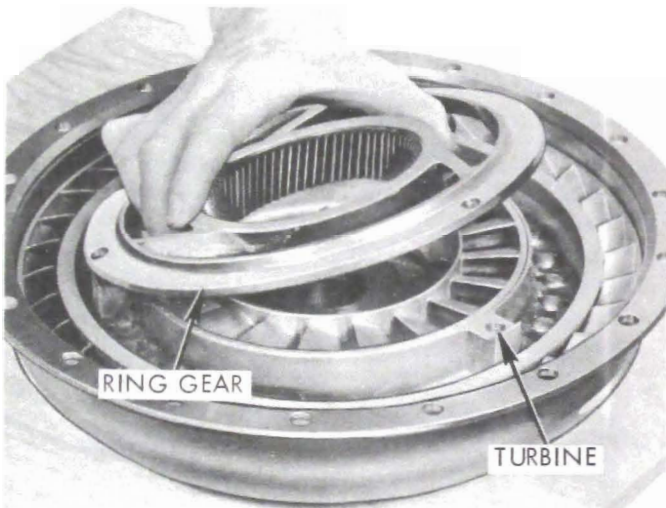


13. Lift ring gear off turbine. Examine ring gear for wear, scoring or imbedded metal. Pick out imbedded metal with small screwdriver.

5-112

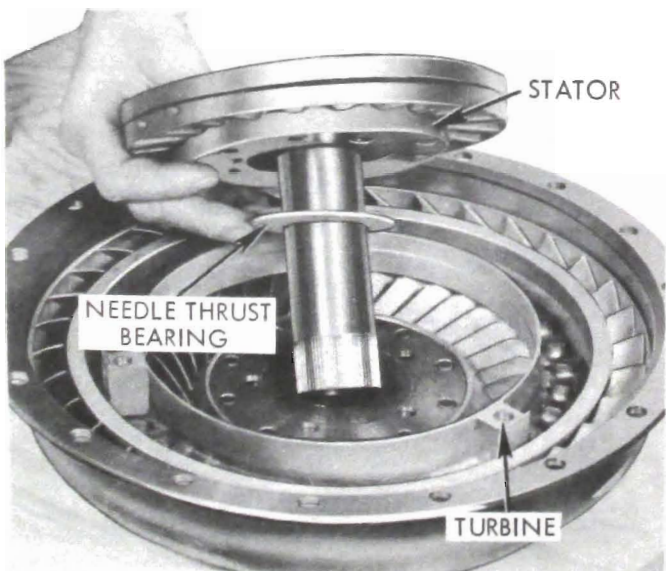


14. Lift stator and needle thrust bearing out of turbine. Check stator for chipped, cracked or broken vanes. Check babbitted inner surfaces of stator shaft. If babbitt is scored or flaked off, the stator must be replaced. Check needle thrust bearing for wear or looseness.

5-113

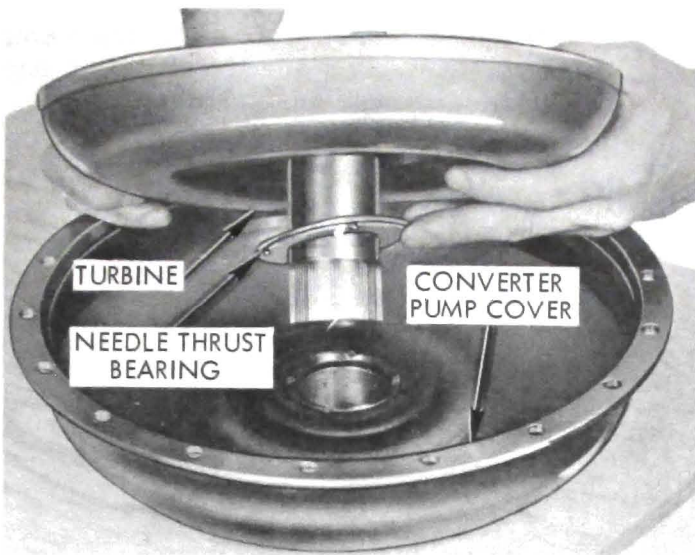

15. Lift turbine and needle thrust bearing out of converter pump cover. Examine turbine for chipped, cracked or broken vanes. Examine babbitted inner surfaces of turbine shaft. If babbitt is scored or flaked off, the turbine must be replaced. Examine converter pump housing hub for scoring, burrs or roughness that might damage pump seal or pump bushing when re-installed.


5-114

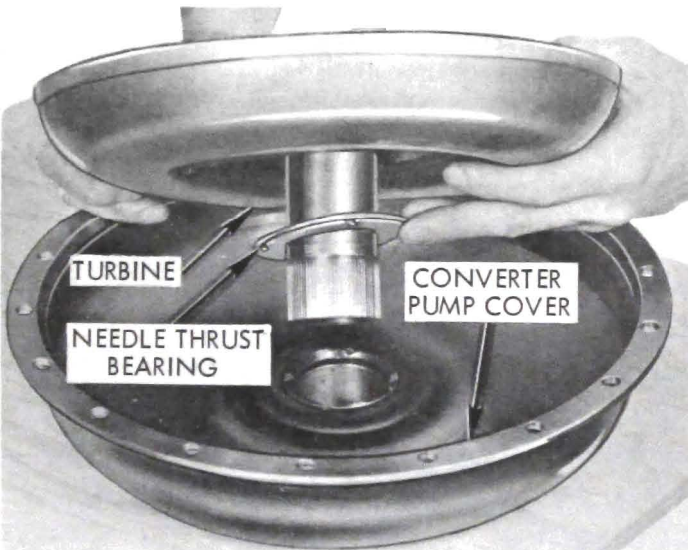

b. Reassembly for Converter Clearance Check


1. Set converter pump housing hub through hole in bench. Place turbine and needle thrust bearing that will be used at final assembly in pump housing.

5-115

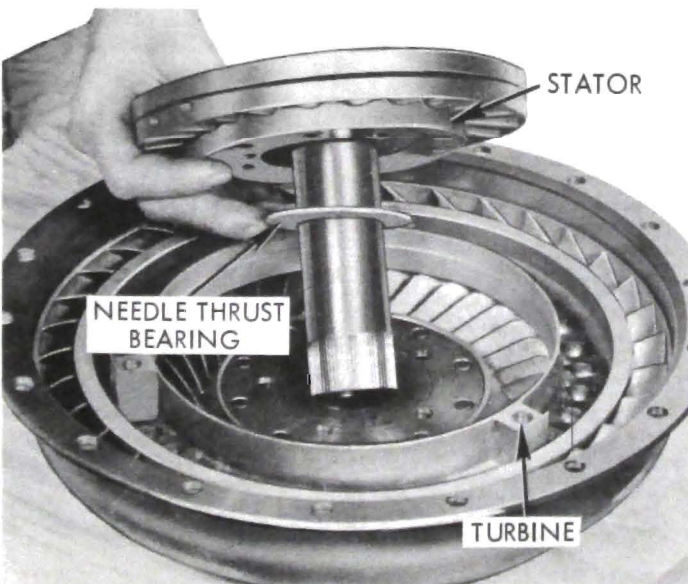


2. Set stator and needle thrust bearing that will be used at final assembly in turbine.

5-116

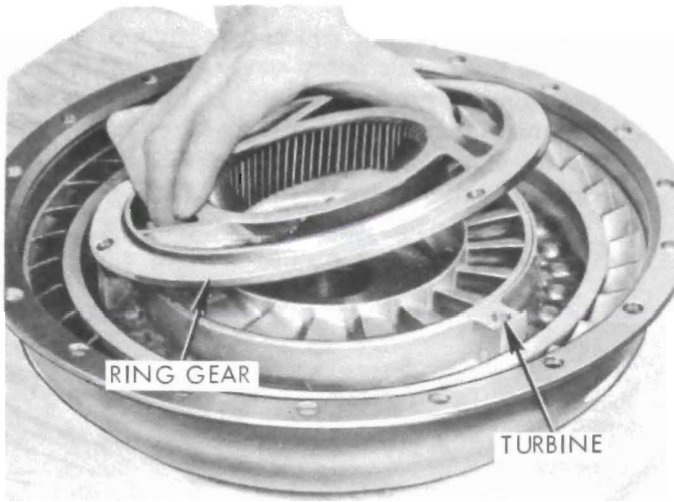


3. Set ring gear in place on turbine. Bolt holes are unevenly spaced so ring gear may be installed in only one position.

5-117

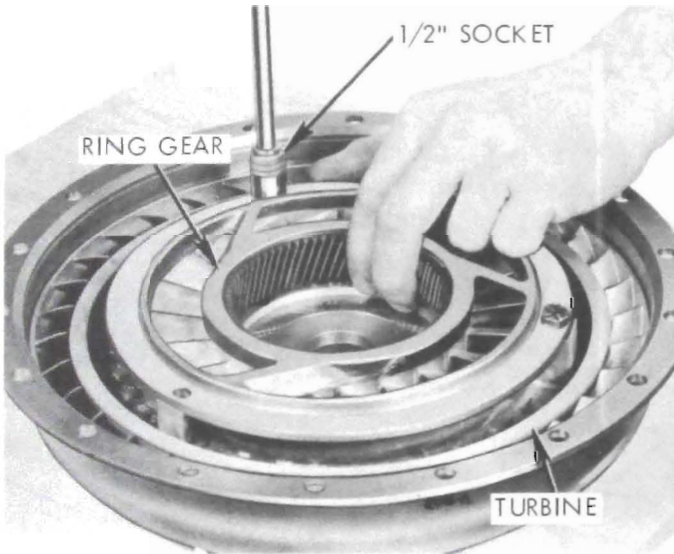


4. Install ring gear to turbine bolts and torque to 15-20 ft. lbs.

5-118

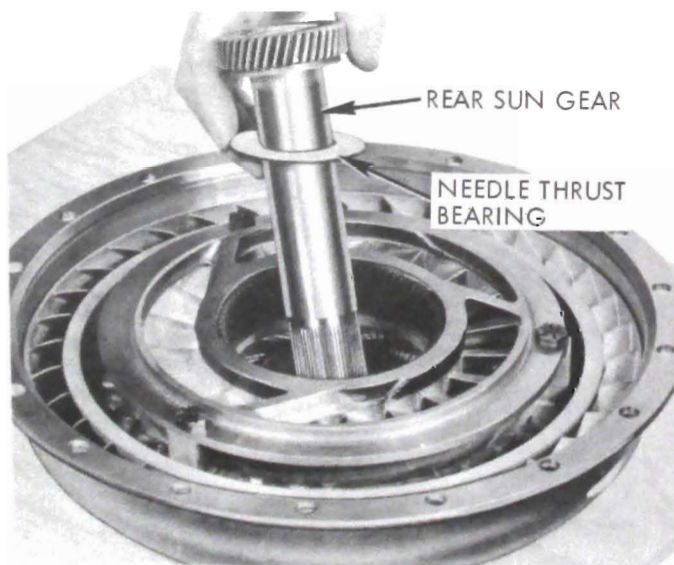


5. Set sun gear and needle thrust bearing that will be used at final assembly in place.

5-119

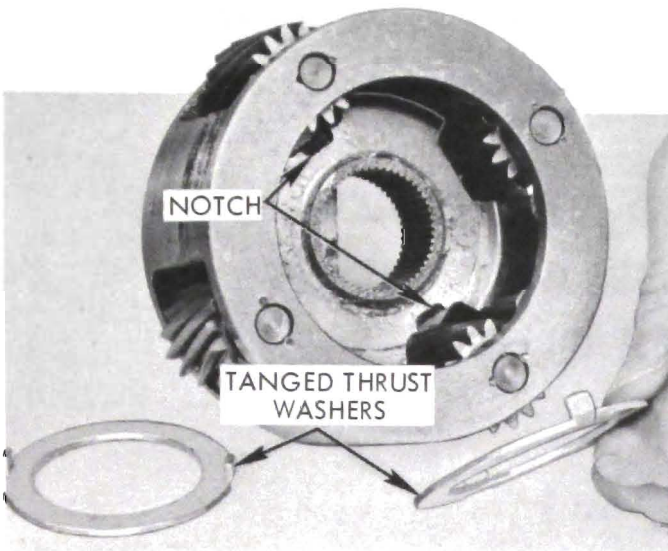

6. Install tanged thrust washers in front and rear of planet carrier. Tangs on washers must engage notches in carrier.

5-120

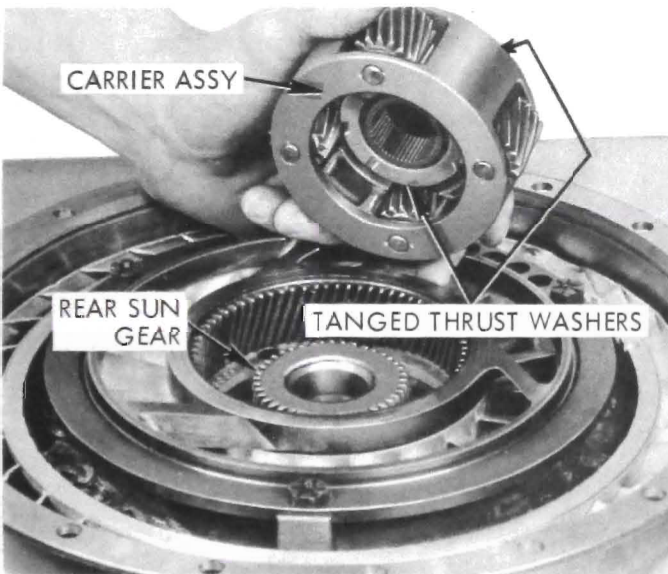

7. Set carrier assembly with tanged thrust washers in place on rear sun gear.


NOTE: Deep side of carrier assembly toward rear sun gear.

5-121




8. Examine front sun gear for wear, scoring or imbedded metal. Pick out imbedded metal with small screwdriver. Be sure tanged thrust washer is in place on forward side of planet carrier. Set front sun gear in place on planet carrier.

5-122

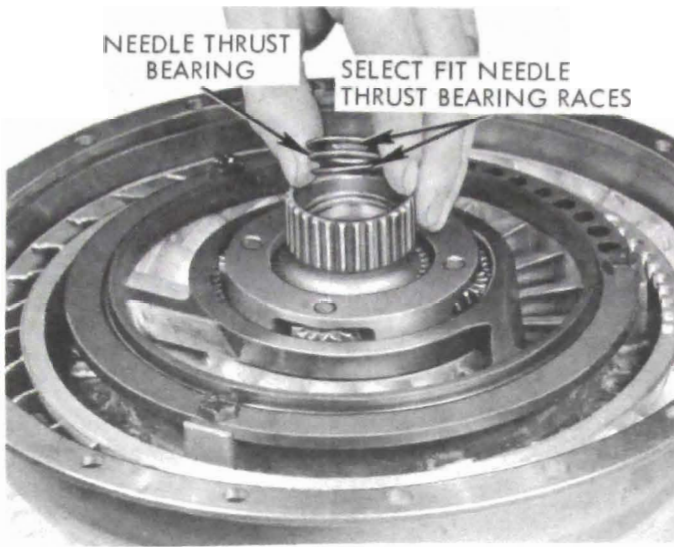


9. Set needle thrust bearing that will be used in final assembly and two select fit needle thrust bearing races in place on top of front sun gear.

5-123

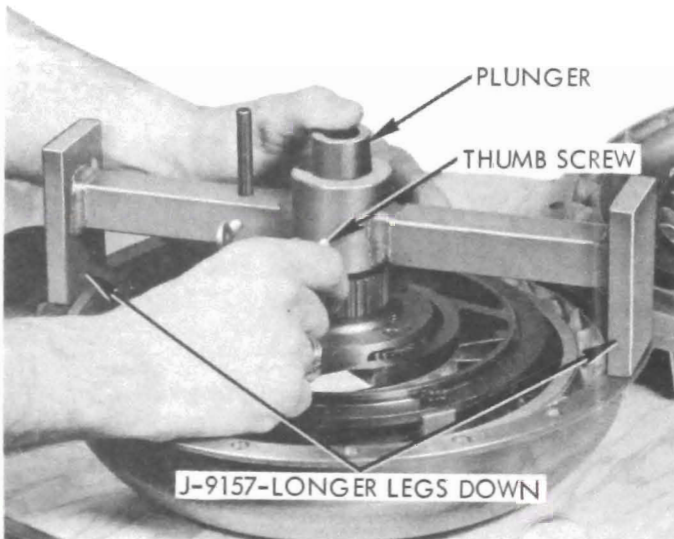

10. Set converter clearance gauge J-9157 on pump housing with longer legs "down" on housing. Loosen thumb screw and push plunger down to bear on needle thrust bearing and races. Tighten thumb screw.

5-124

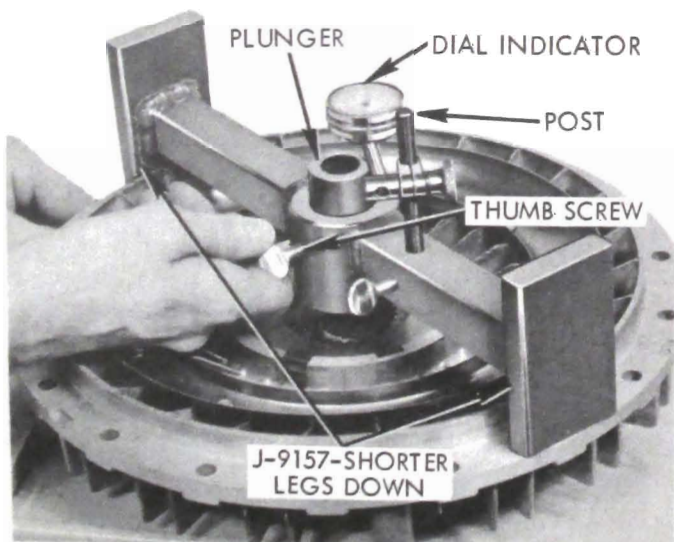


11. Turn gauge J-9157 over (short legs down) and set in place on converter pump. Assemble dial indicator to post with indicator bearing on plunger. "ZERO" the indicator. Loosen the plunger thumb screw; observe indicator reading.

NOTE: If, when the gauge is set in place on converter pump, the plunger holds the gauge up so legs do not rest on pump rim, indicator reading when thumb screw is released will be in compression, not clearance. If plunger drops when thumb screw is released, indicator reading will be in clearance, not compression.

Select needle thrust bearing races to provide .010" clearance to .005" compression. Refer to paragraph 5-34 for installation of converter and gear set. 5-125


5-16 CONVERTER CLUTCH AND CONVERTER PUMP: DISASSEMBLY, INSPECTION AND REASSEMBLY

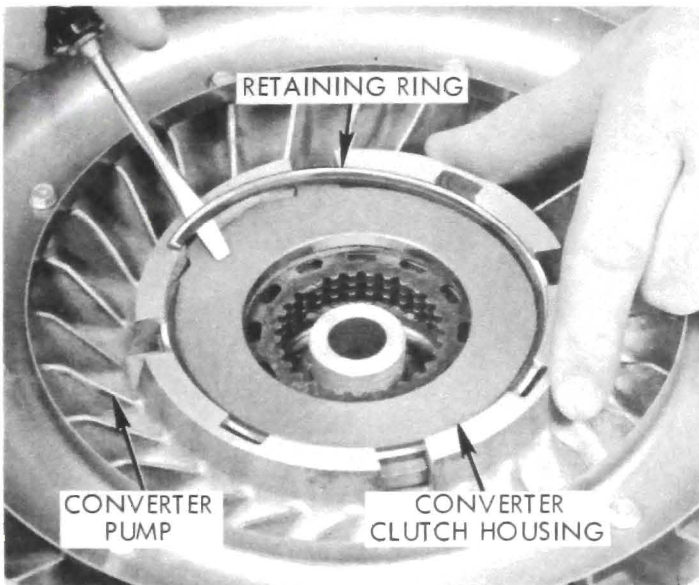

a. Disassembly and Inspection


1. Pry converter clutch housing retaining ring out of groove in converter pump.

5-126

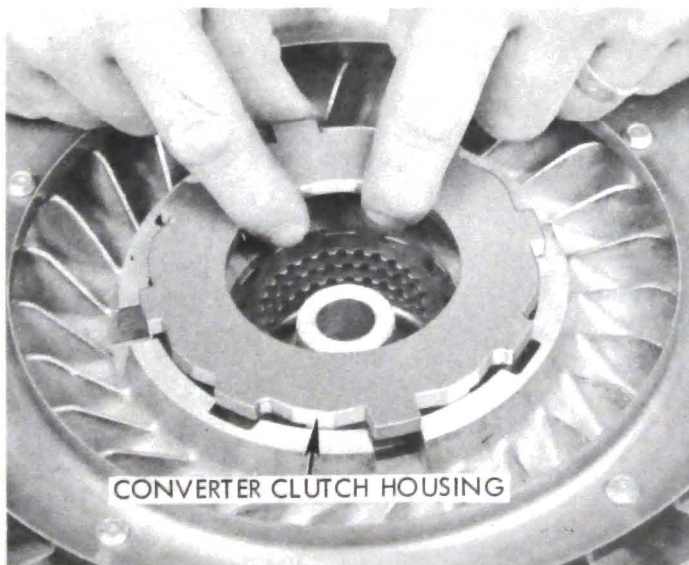


2. Lift converter clutch housing out of converter pump. Examine clutch plate contact surface for wear or scoring.

5-127

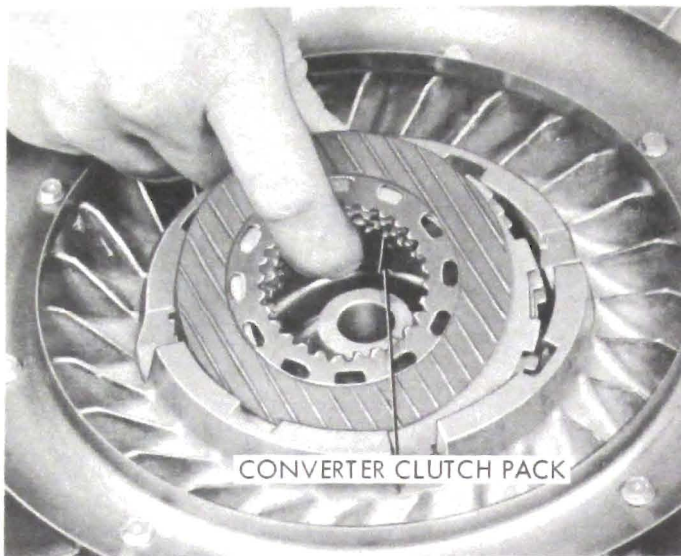

3. Remove converter clutch pack. Examine plates for scoring, warping or excessive wear.


5-128

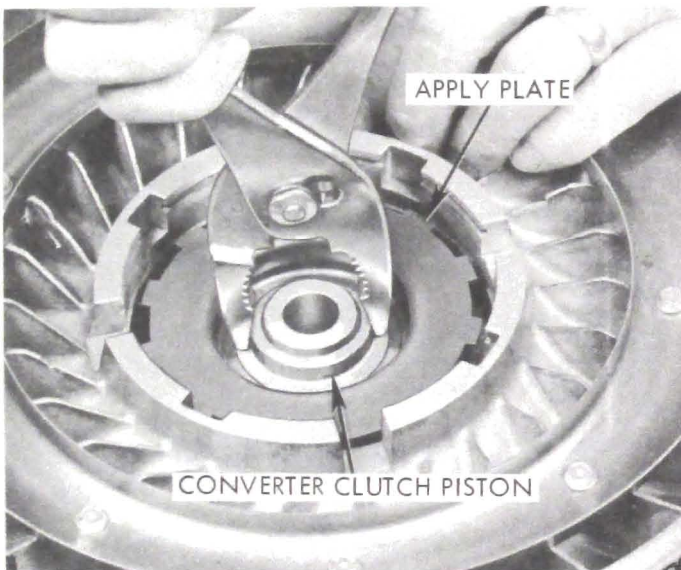

4. Remove converter clutch piston and apply plate using pliers. Examine apply plate for scoring or excessive wear. Check piston bore in converter pump for scoring or pitting. Check inner bore of piston for wear or scoring.


NOTE: Piston and apply plate is serviced as an assembly only.

5-129

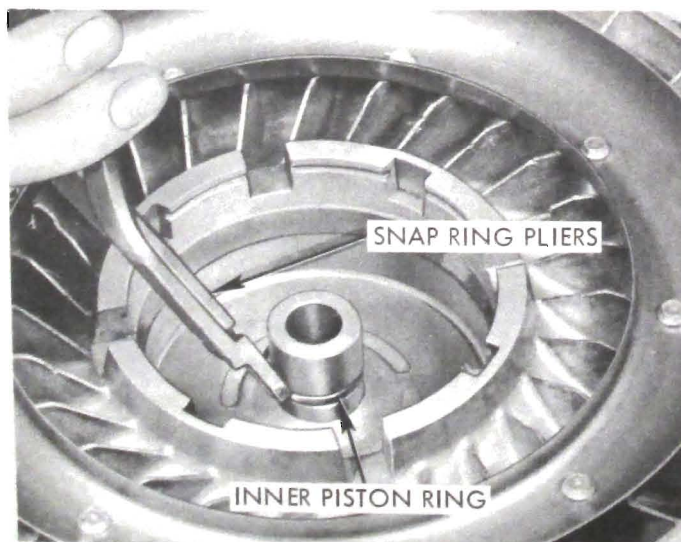


5. Unhook, expand and remove converter clutch piston inner ring. Check for wear or scoring.

5-130

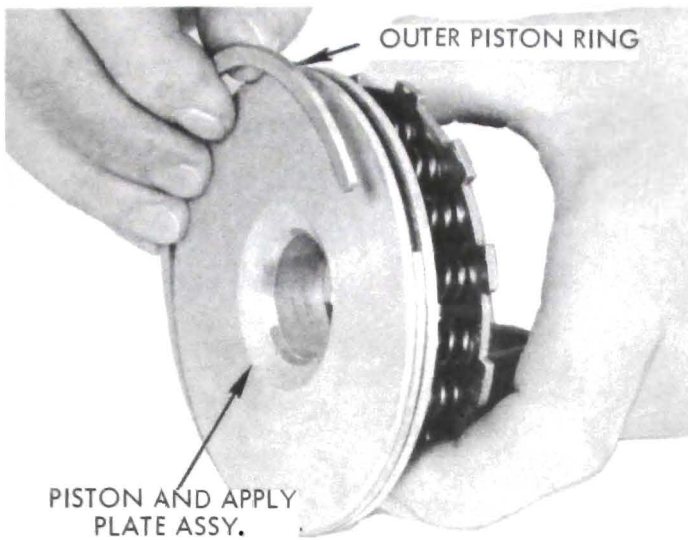

6. Remove and examine converter clutch outer piston ring for cracks or excessive wear.


5-131

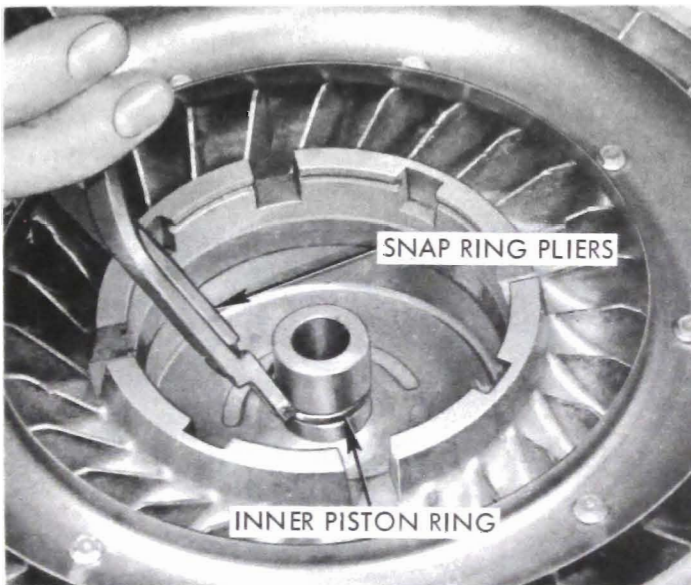

b. Reassembly


1. Examine converter pump for chipped, cracked or broken vanes. Check for damaged or loose pump ring. Expand and install converter clutch inner piston ring and hook ends.

5-132

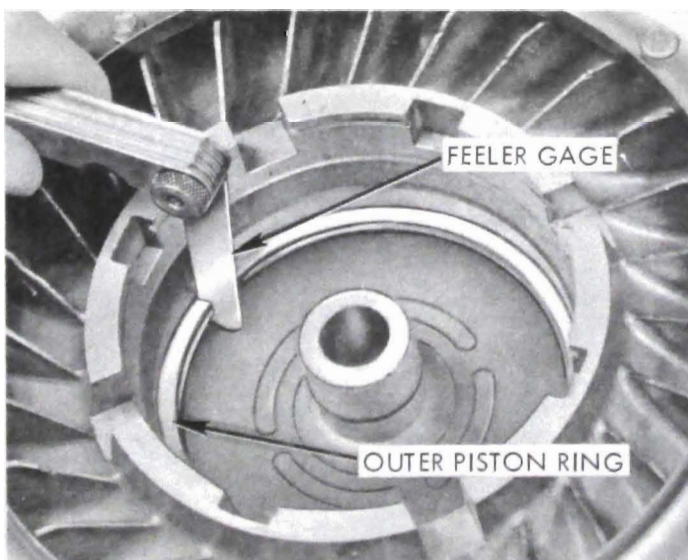


2. Position converter clutch outer piston ring squarely in lower part of bore (about 1/4" from bottom). Check ring gap with feeler gauge. Gap must be between .002" and .007". If gap is less than .002", file end of ring. If gap is more than .010", replace ring.

5-133

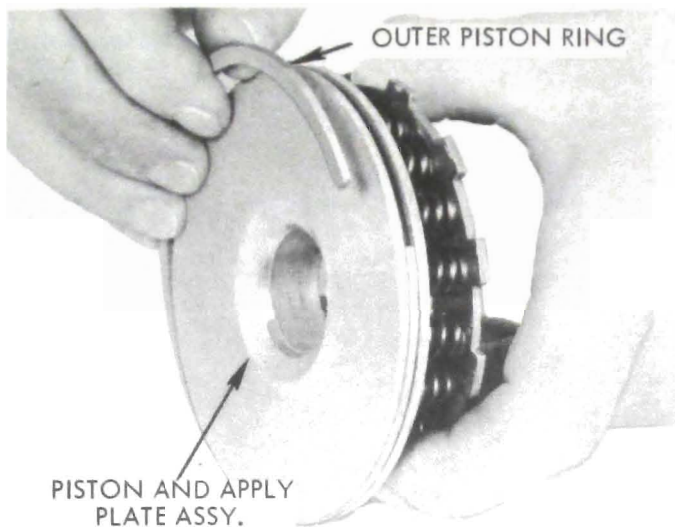

3. Install outer piston ring on converter clutch piston and apply plate assembly.


5-134

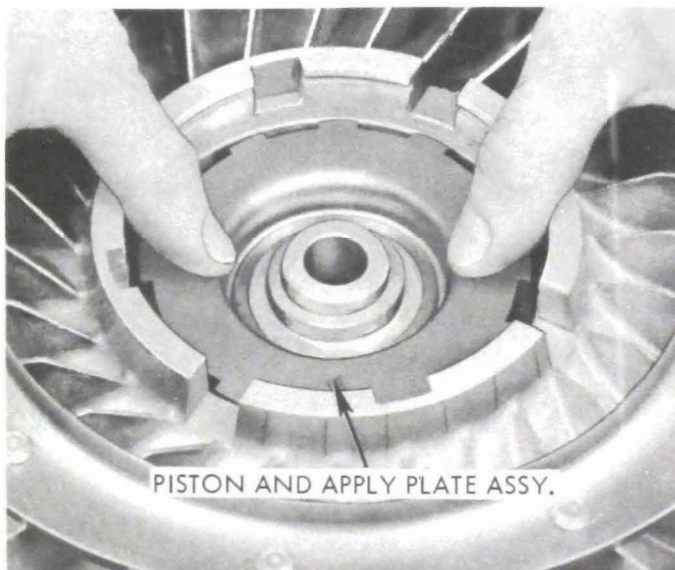

4. Lubricate liberally and push piston and apply plate assembly into bore of converter pump.


NOTE: A chamfer in the bore serves to compress the outer piston ring; however, if difficulty is encountered, a thin feeler gauge may be used to start the ring ends over the chamfer.

5-135

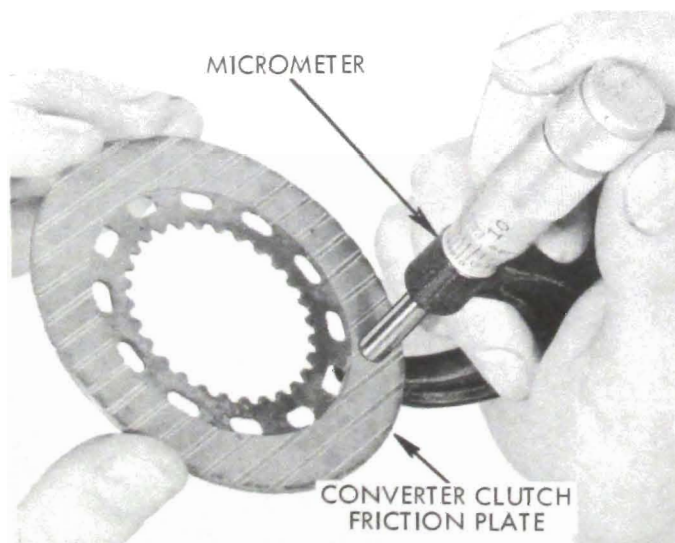


5. Examine converter clutch function plates for evidence of wear, burning or flaking. Measure any questionable plate. When new, converter clutch friction plates are .079"-.084" thick. Plates worn thinner than .074" should be replaced.

5-136

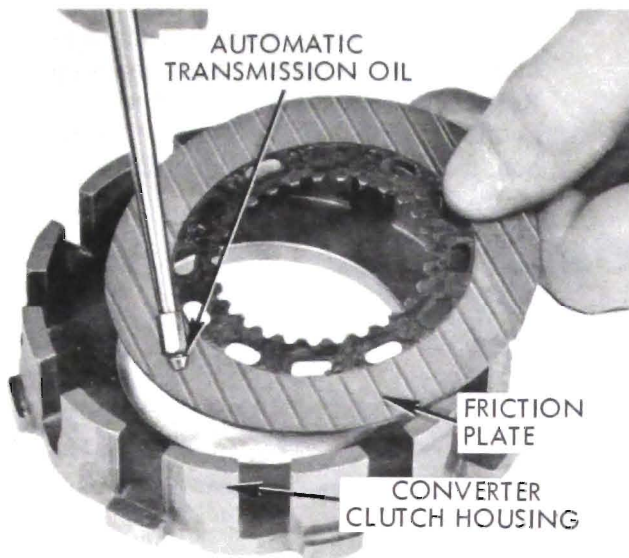

6. Liberally lubricate a friction plate and install in converter clutch housing.

5-137

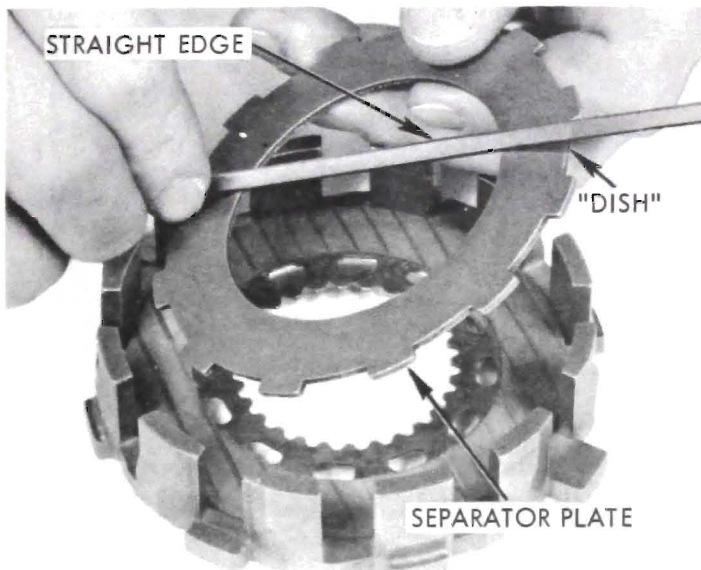

7. Check a separator plate for "dish" by holding a straight edge firmly against the plate. Note "dish" and install separator plate. All separator plates must be installed with "dish" same way.

Continue alternately installing a lubed friction plate and a separator plate until four friction plates and three separator plates have been installed.

5-138




8. Rotate piston apply plate so tangs of apply plate are centered in openings as shown.

5-139



9. Lower converter clutch housing and clutch pack assembly into converter pump. Retain clutch plates with fingers until assembly is properly aligned. Long tangs of housing must engage openings in converter pump.

5-140

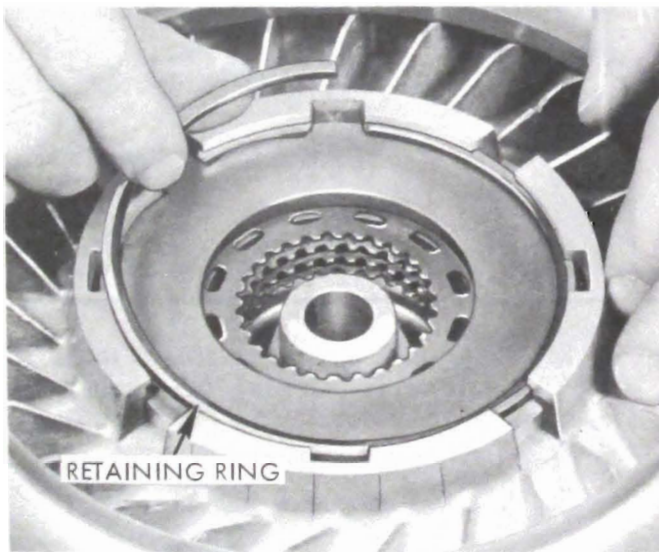


10. Install housing retaining ring over converter clutch housing in groove of converter pump. Tap ring solidly into groove with drift.

5-141

Refer to paragraph 5-34 for installation of converter assembly.


5-17 PUMP: REMOVAL, DISASSEMBLY, INSPECTION AND REASSEMBLY

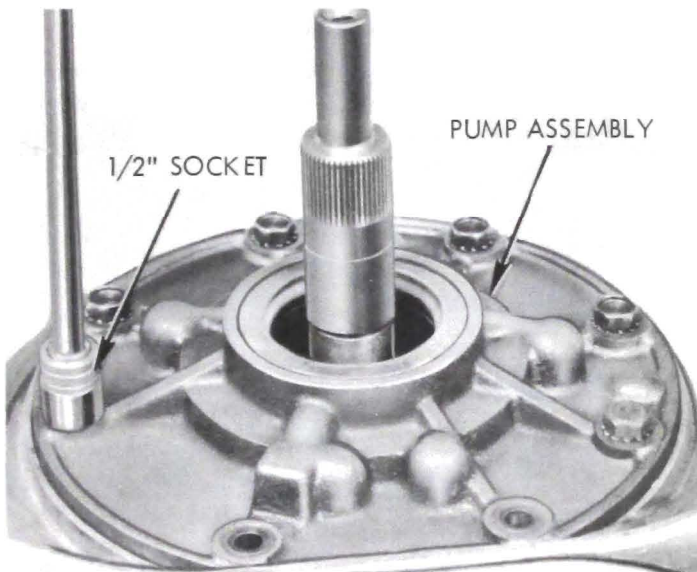

a. Removal


1. Remove special bolts with captive sealing lockwashers (1/2" wrench).

5-142

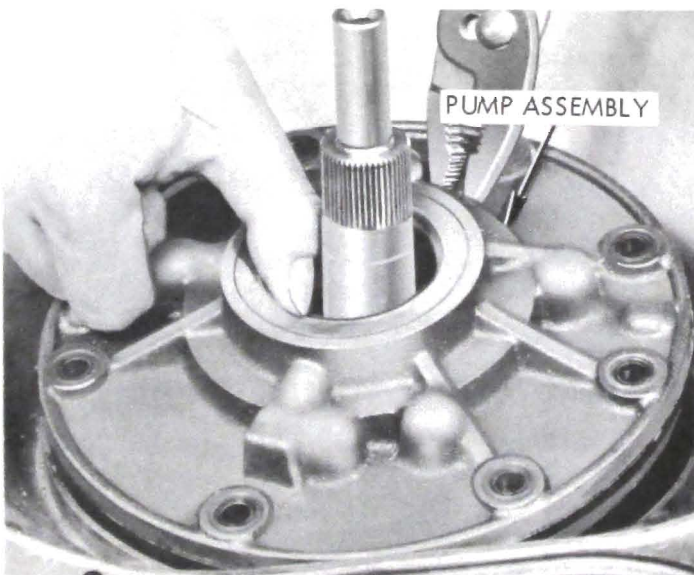

2. Grasp pump body with pliers and hand. Lift pump assembly clear of case.


5-143

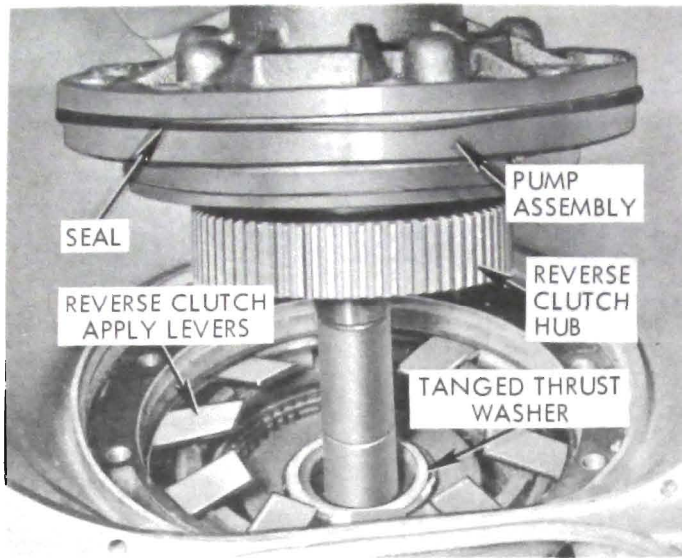

3. Lift pump assembly out of case. Reverse clutch hub will usually be removed with pump. Set reverse clutch hub aside.

NOTE: A tanged thrust washer may remain on top of stator overrunning clutch race. It should be placed in the rear of the reverse clutch hub.


5-144

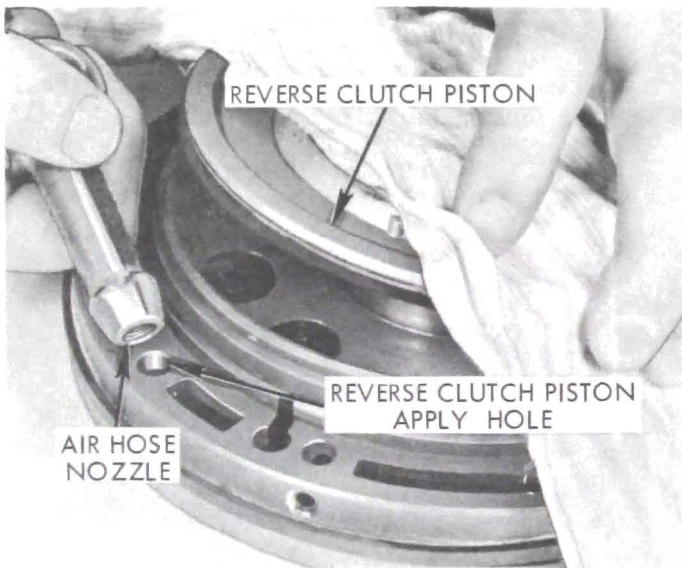

b. Disassembly and Inspection


1. Use air pressure to remove reverse clutch piston from reverse clutch housing. Cover assembly with cloth to protect against oil spatter.

5-145

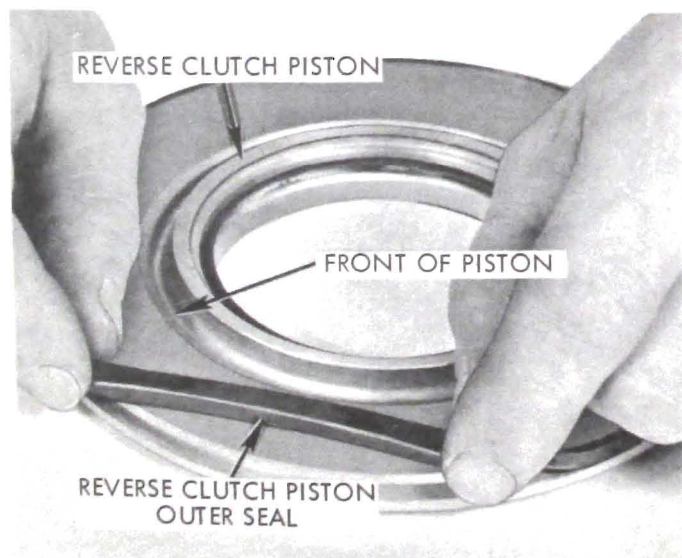


2. Examine reverse clutch piston outer seal for nicks, cuts or wear. If necessary to replace, remove the seal.

5-146

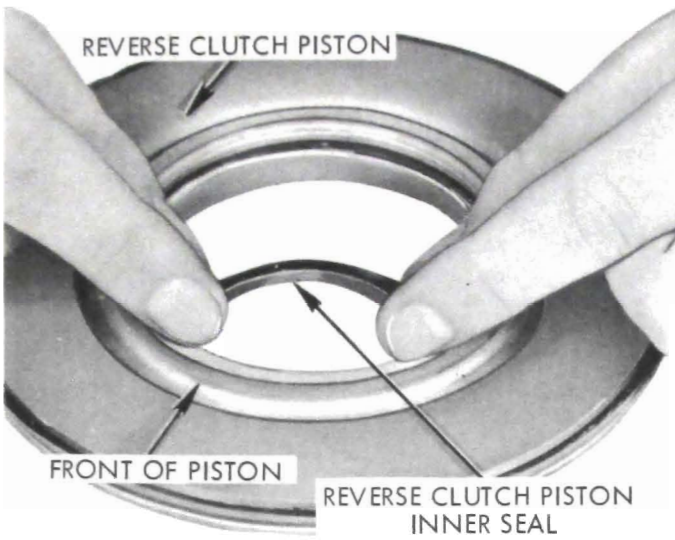


3. Examine reverse clutch piston inner seal for nicks, cuts or wear. If necessary to replace, remove the seal.

5-147

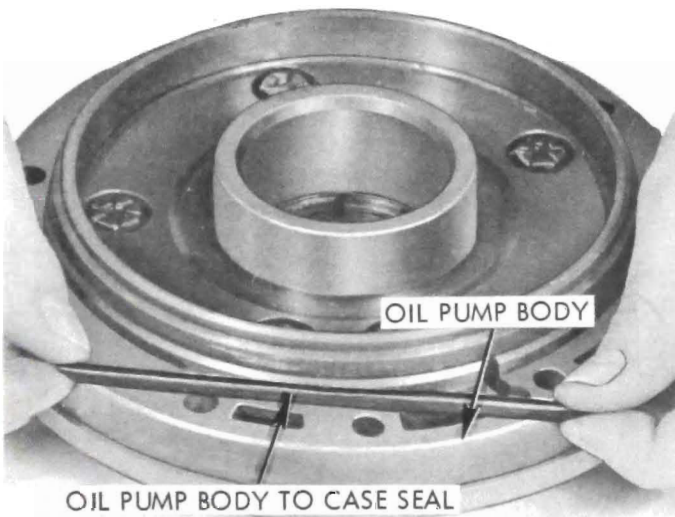


4. Remove and discard oil pump body to case seal.

5-148

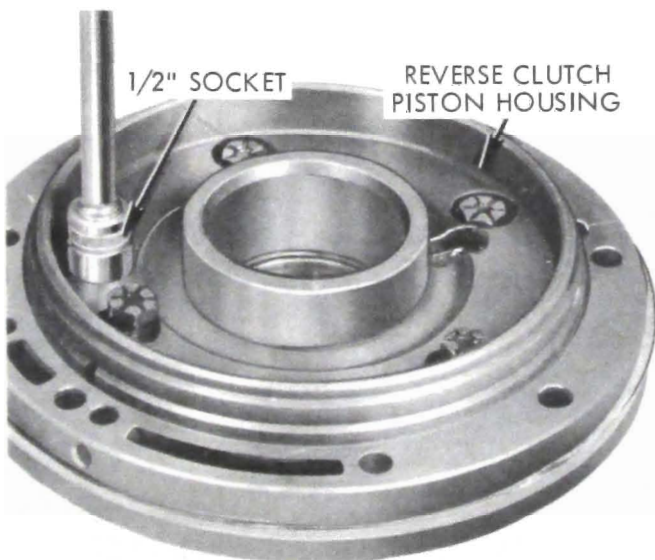

5. Remove reverse clutch piston housing to oil pump body bolts (1/2" socket).


5-149

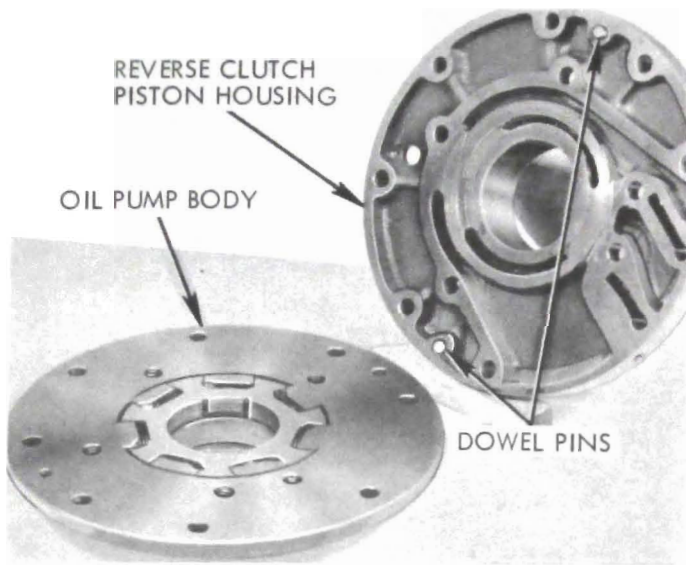

6. Lift reverse clutch piston housing off oil pump. Lift straight up to avoid damage to dowel pin holes.


NOTE: Slipper sealing pins may stick to reverse clutch piston housing and be removed with housing.

5-150

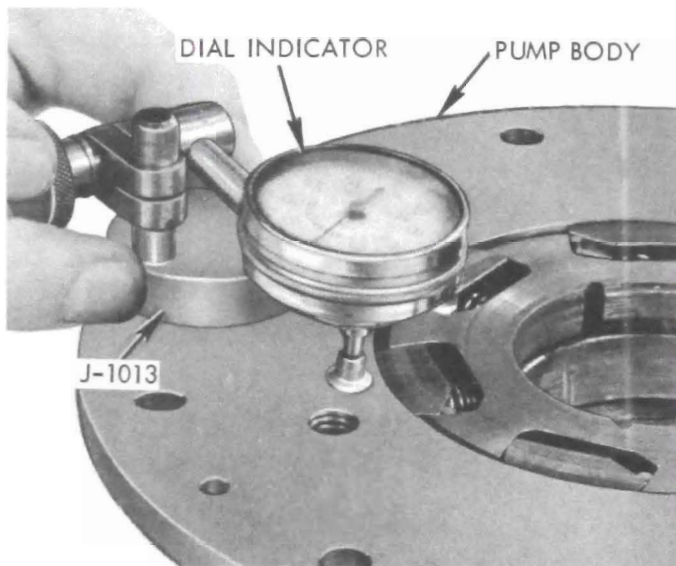


7. Mount a dial indicator on base and "Zero" the indicator on oil pump body.

5-151

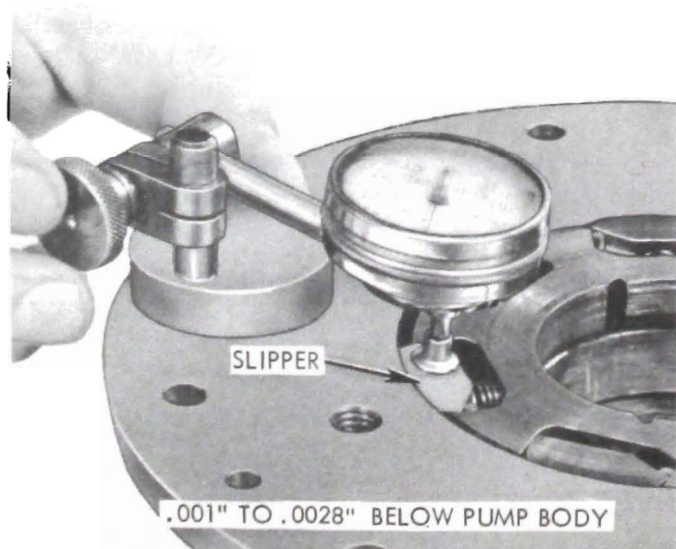


8. Move indicator plunger to bear on oil pump slippers one at a time. Slippers should be from .001" to .0028" below surface of oil pump body.

5-152

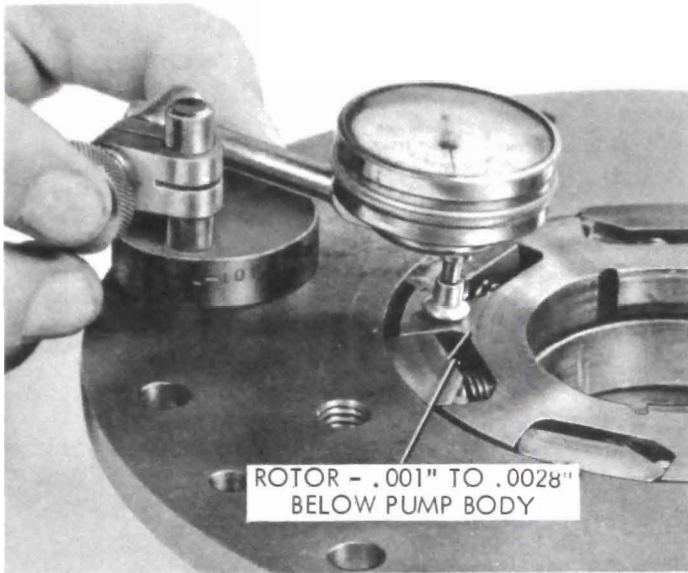


9. Move indicator plunger to rest on rotor. Check rotor in several places. Rotor should be from .001" to .0028" below oil pump body.

5-153

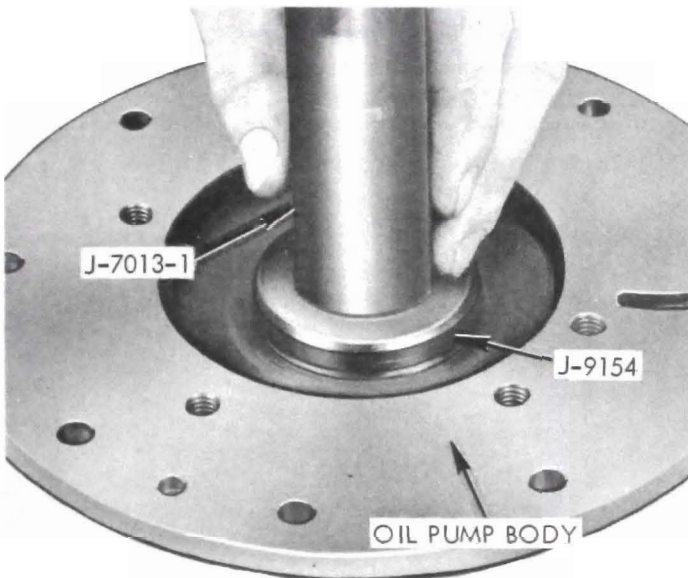

10. Examine bushing; if worn or scored, remove rotor, slippers, springs and pins and drive out bushing and seal with remover J-9154.


5-154

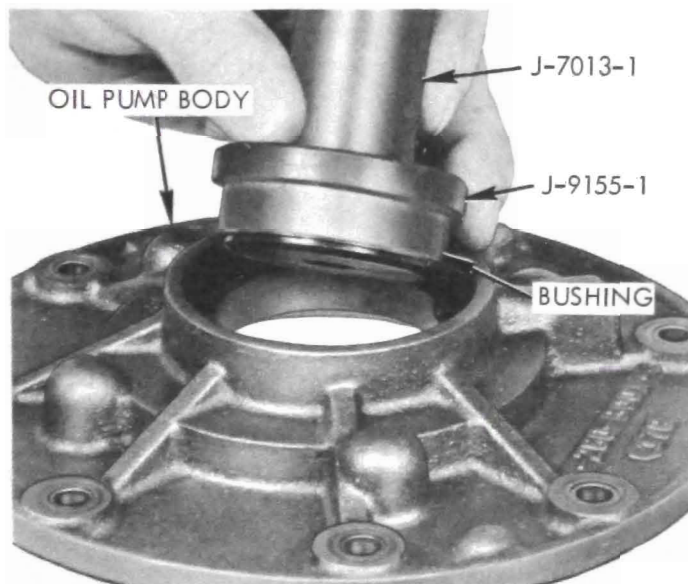

c. Reassembly


1. Install new bushing using installer J-9155.

5-155

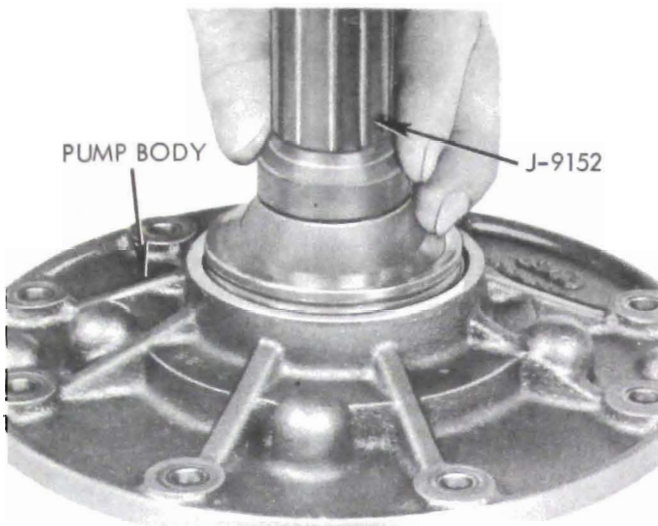


2. Apply Permatex to outer diameter of new seal and install seal using installer J-9152.

5-156

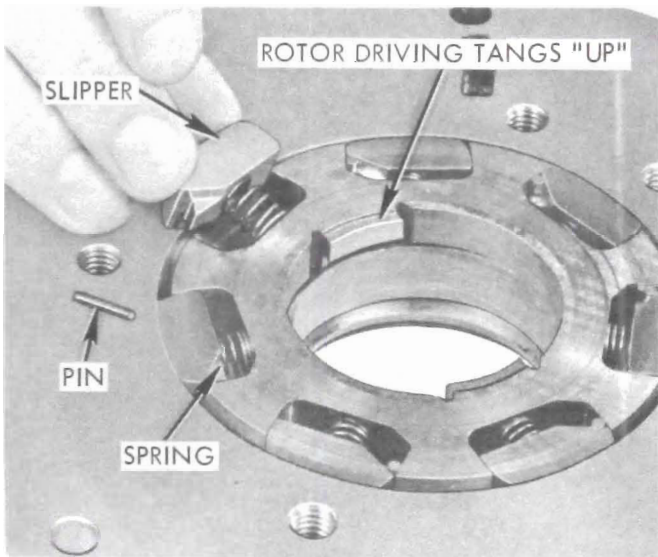


3. Examine rotor, slippers, springs and pins for wear, scoring or pitting. Replace parts not serviceable. Install rotor with driving tangs "up" as shown in figure. Install slippers and springs as shown.

5-157

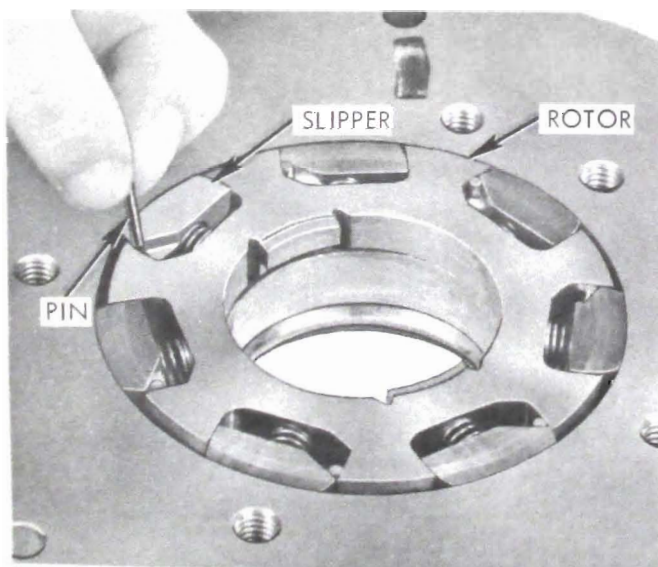


4. Install sealing pins. Lubricate the assembly liberally with automatic transmission oil.

5-158

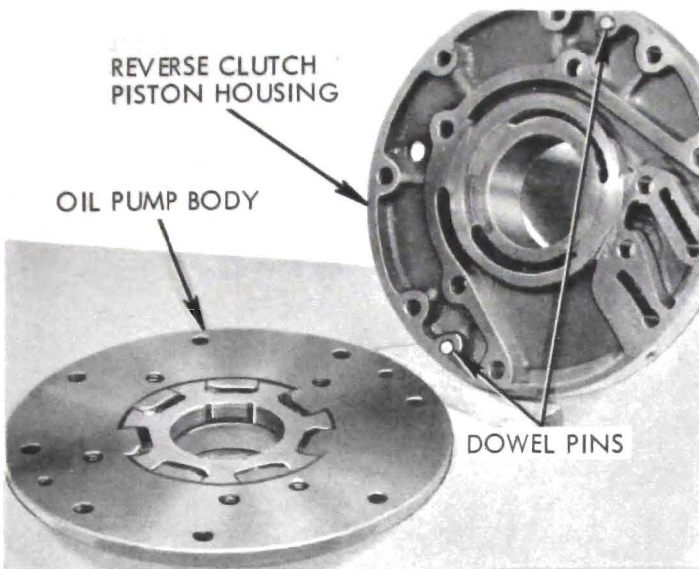


5. Set reverse clutch piston housing squarely in place on pump body. Dowel pins are unevenly spaced so assembly is possible in only one position.

5-159

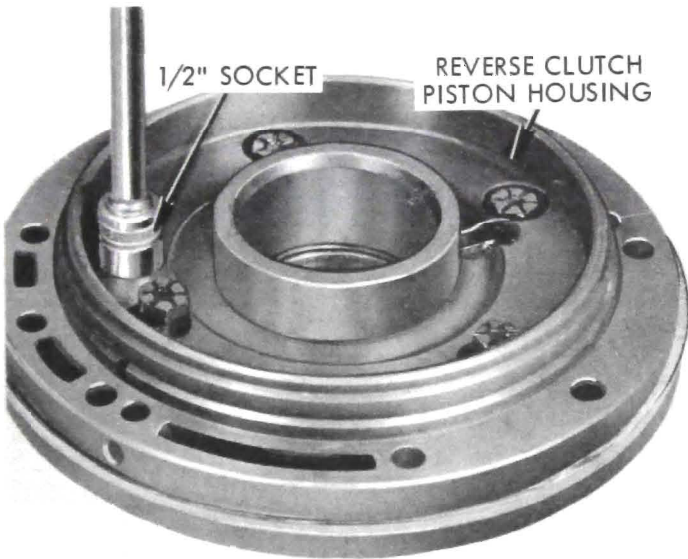


6. Install reverse clutch piston housing to pump body bolts and torque alternately and evenly to 15 to 20 ft. lbs.

5-160

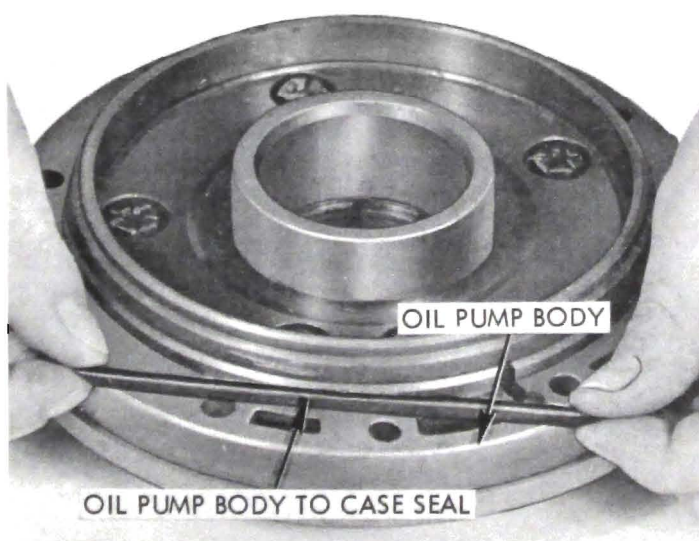


7. Install new oil pump body to transmission case sealing ring.

5-161

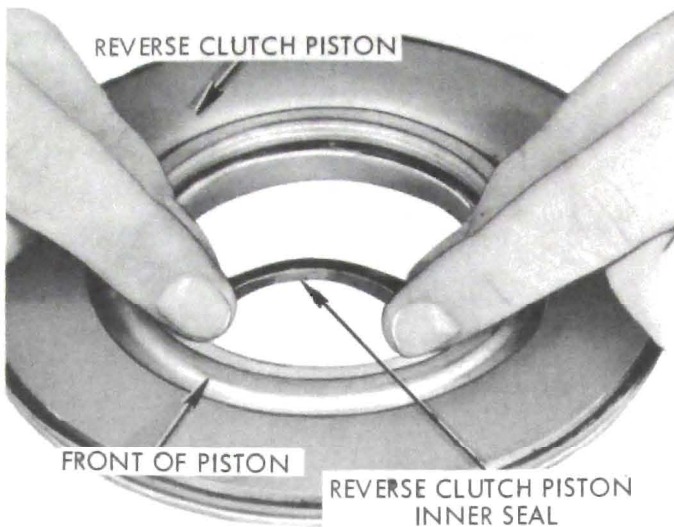


8. Install reverse clutch piston inner seal with lip toward front of piston.

5-162

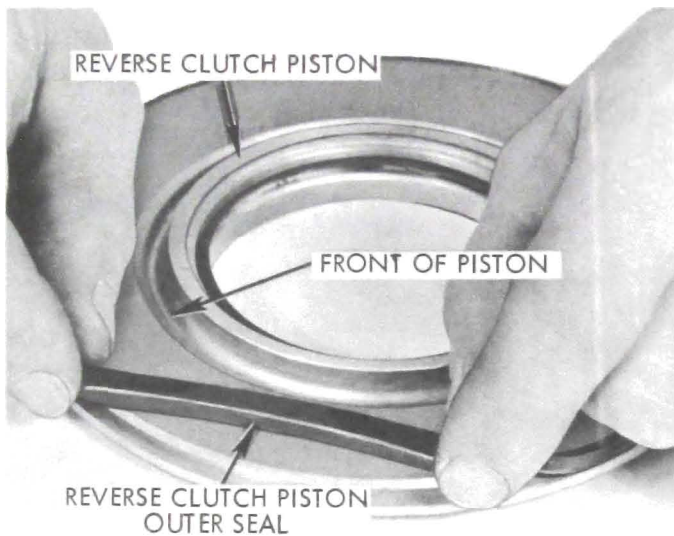

9. Install reverse clutch piston outer seal with lip toward front of piston.

5-163

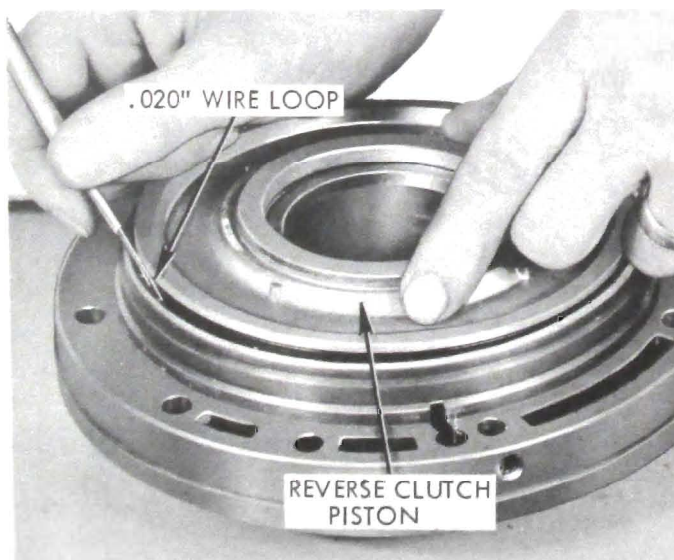

10. Lubricate seals and install piston in piston housing using a loop of smooth wire to start the lips of the seals into the bore.


NOTE: The inner seal lip should be started first.

NOTE: A satisfactory tool can be made by crimping a loop of .020" music wire in a short length of copper tubing.

5-164

Refer to paragraph 5-30 for installation of pump assembly.


5-18 REVERSE CLUTCH COMPONENTS: REMOVAL AND INSPECTION

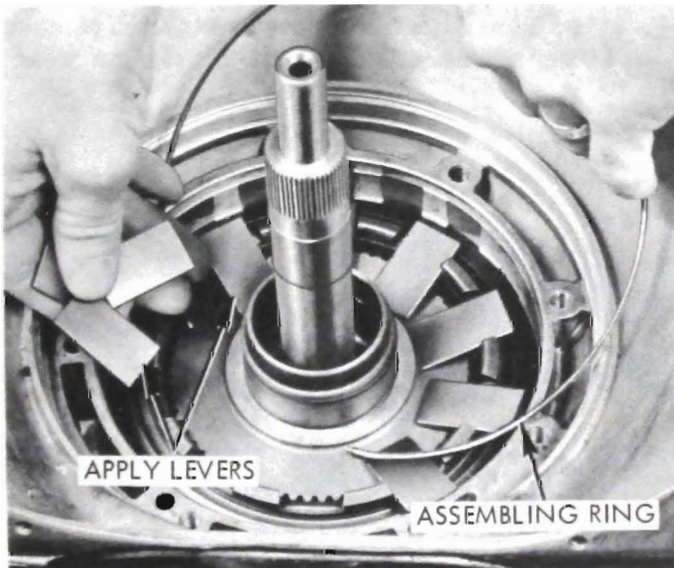

1. Remove lever assembling ring and apply levers. Check levers for wear or bending. Lift out reverse clutch hub, select fit thrust washer on the front side and tanged thrust washer on the rear.


NOTE: Reverse clutch hub and thrust washers may have been removed with pump.

5-165

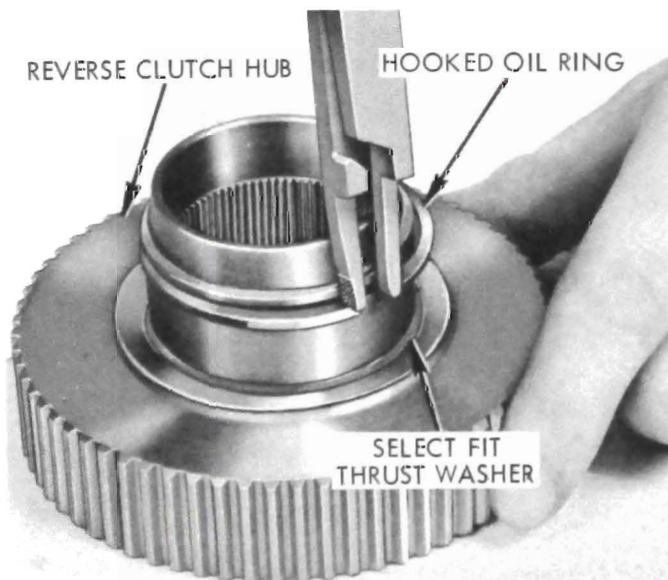


2. Unhook, expand and remove reverse clutch hub oil ring. Examine ring for wear. Remove select fit thrust washer. Examine washer and hub for evidence of wear or scoring.

5-166

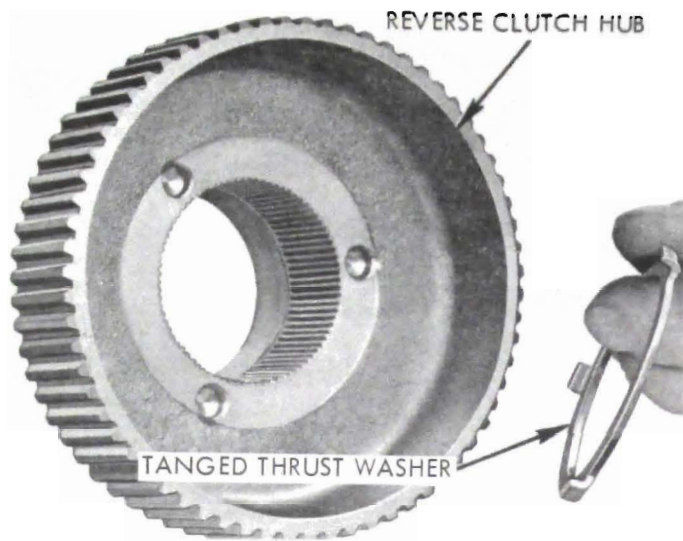


3. Remove tanged thrust washer at rear of clutch hub. Examine for wear.

5-167

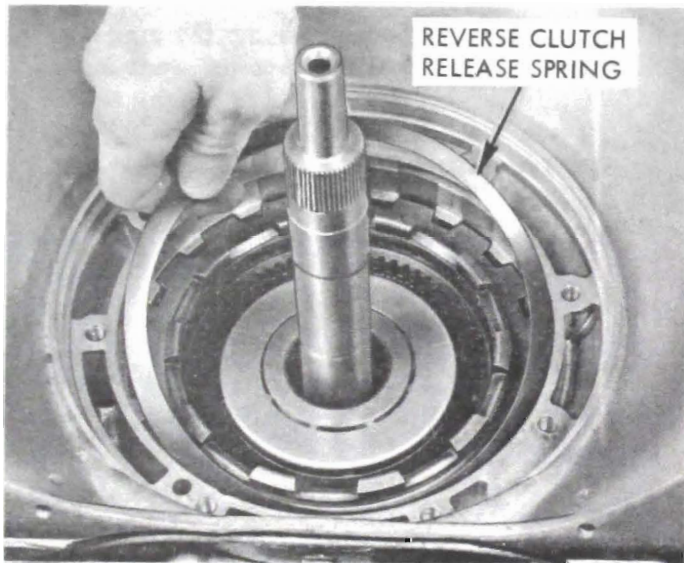


4. Remove bellville reverse clutch release spring. Check spring for cracks or wear.

5-168

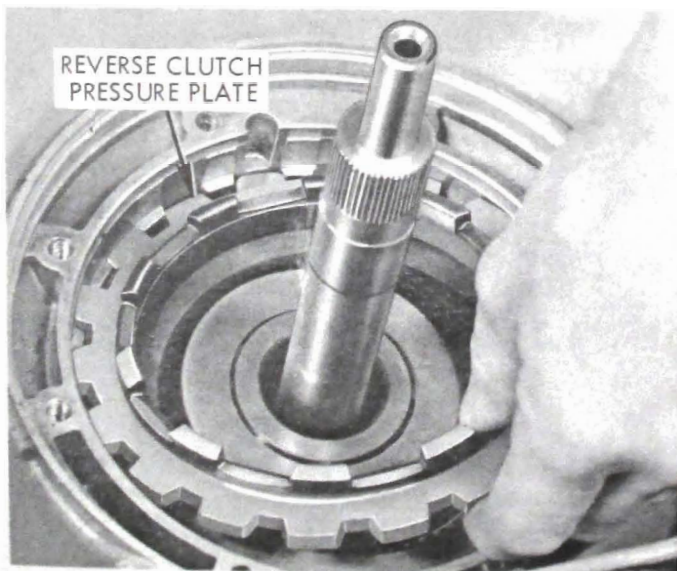


5. Remove reverse clutch pressure plate. Examine plate for wear.

5-169

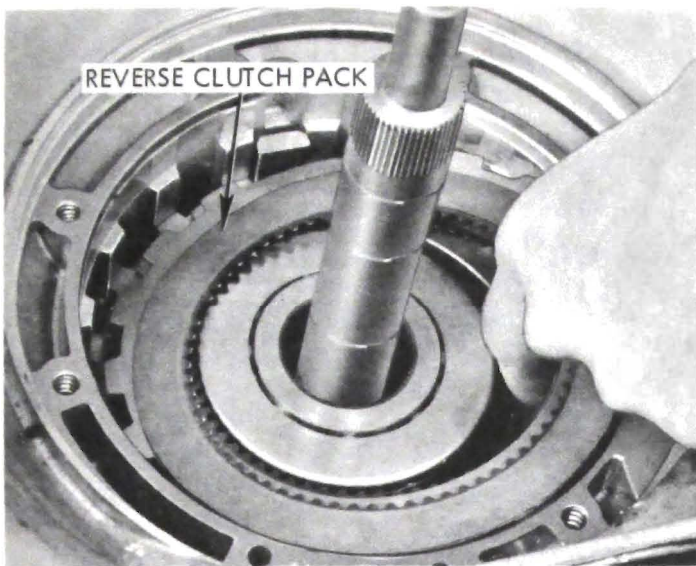

6. Remove reverse clutch pack. Examine plates for wear, flaking, burning or scoring.

5-170

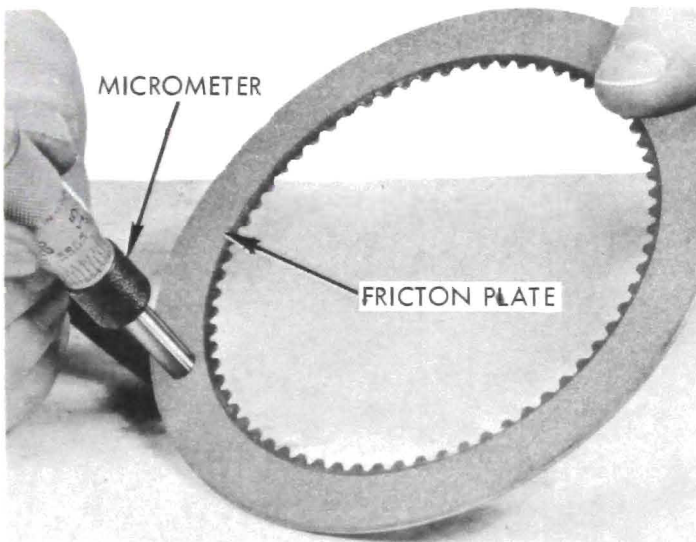


7. Measure reverse clutch friction plates. When new, friction plates are .079'' to .084'' thick. Plates worn thinner than .074'' should be replaced.

5-171


Refer to paragraph 5-30 for installation of clutch components.

5-19 COAST AND OVERRUNNING CLUTCH ASSEMBLY: REMOVAL. FORWARD CLUTCH PACK, RELEASE SPRING AND APPLY LEVERS: REMOVAL AND INSPECTION

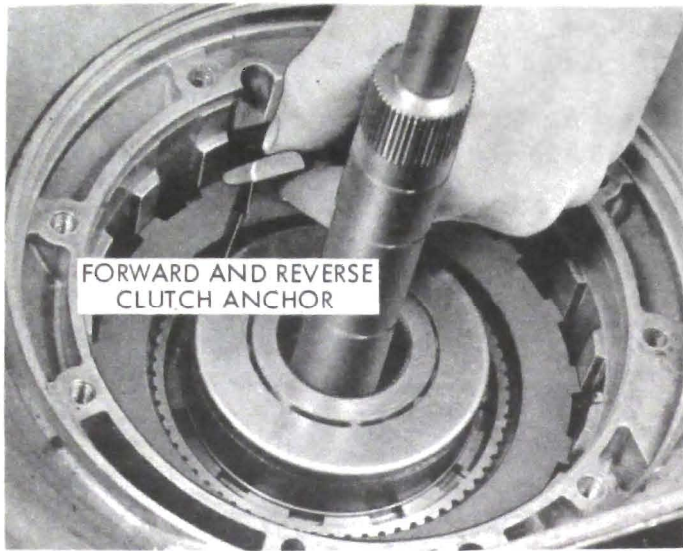


1. Remove forward and reverse clutch anchor.

5-172

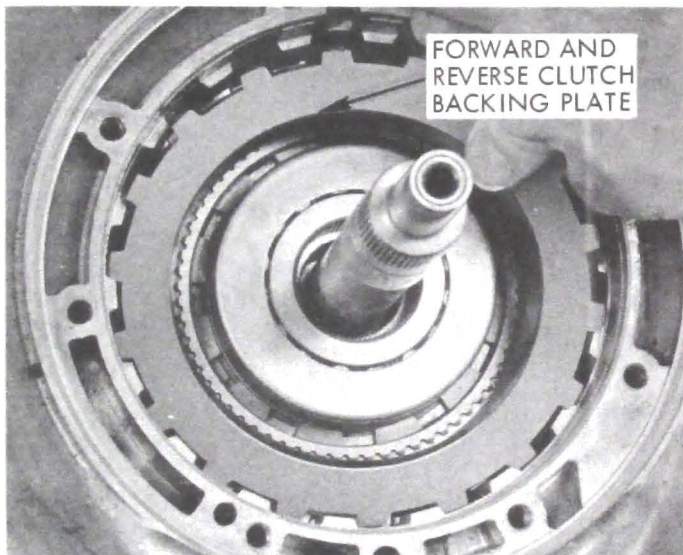

2. Rotate forward and reverse clutch backing plate to disengage lugs from slots in case. Remove backing plate. Examine plate for wear or scoring.


5-173

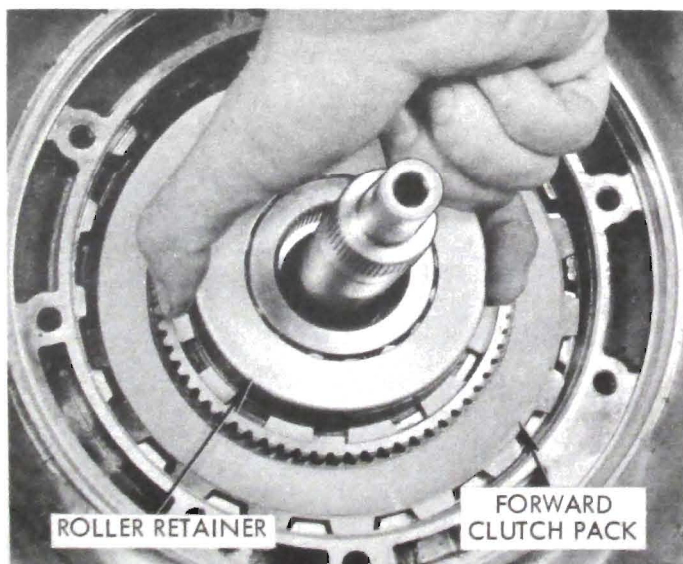

3. Grasp overrunning clutch cam and roller retainer and lift complete coast clutch, overrunning clutch and forward clutch pack out of transmission.


NOTE: The rear externally splined clutch plate will remain in transmission on forward clutch pressure plate. Remove remaining plate and place with forward clutch pack.

5-174

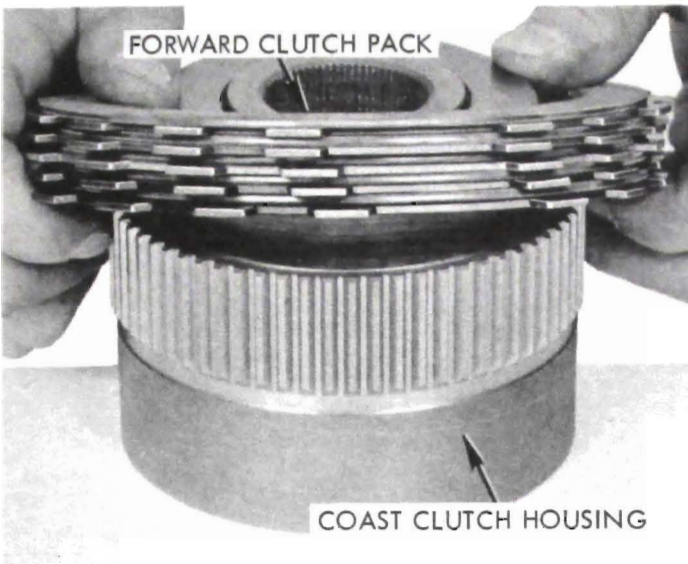


4. Lift forward clutch pack off coast clutch housing. Examine plates for wear, scoring, flaking or warping.

5-175

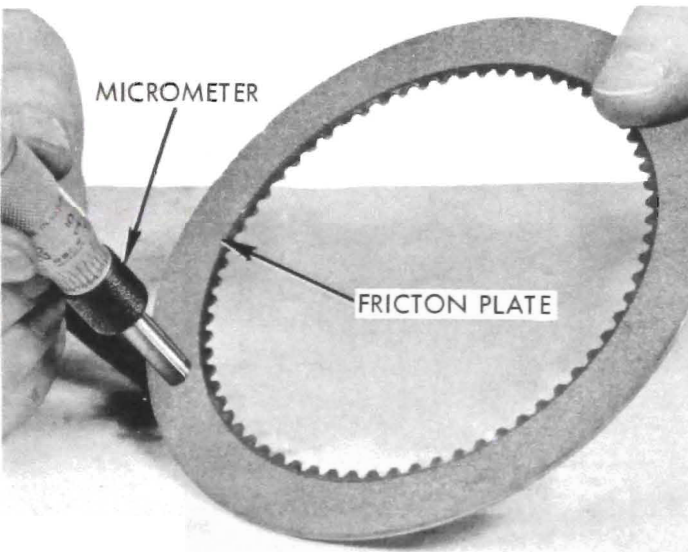


5. Measure forward clutch friction plates. When new, forward clutch friction plates are .079" to .084" thick. Plates worn thinner than .074" should be replaced.

5-176

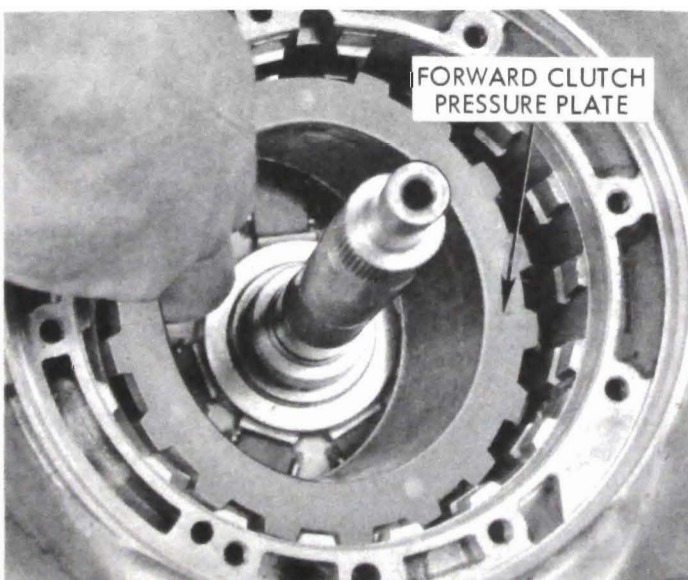


6. Remove forward clutch pressure plate. Examine for cracks or worn spots where levers contact plate.

5-177

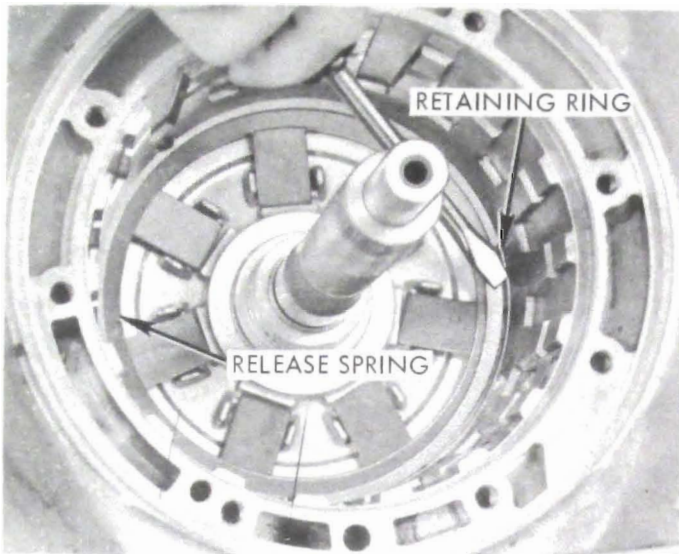


7. Pry forward clutch release spring retaining ring out of groove in case. Remove retaining ring.

5-178

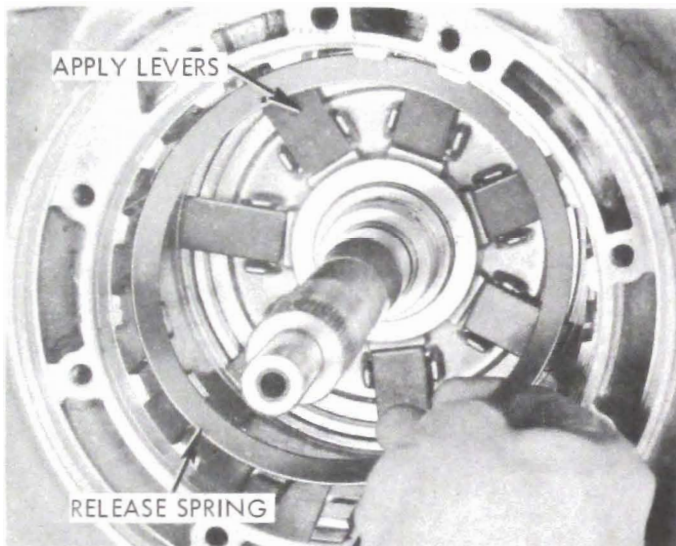

8. Remove bellville forward clutch release spring. Check spring for cracks or wear.

5-179

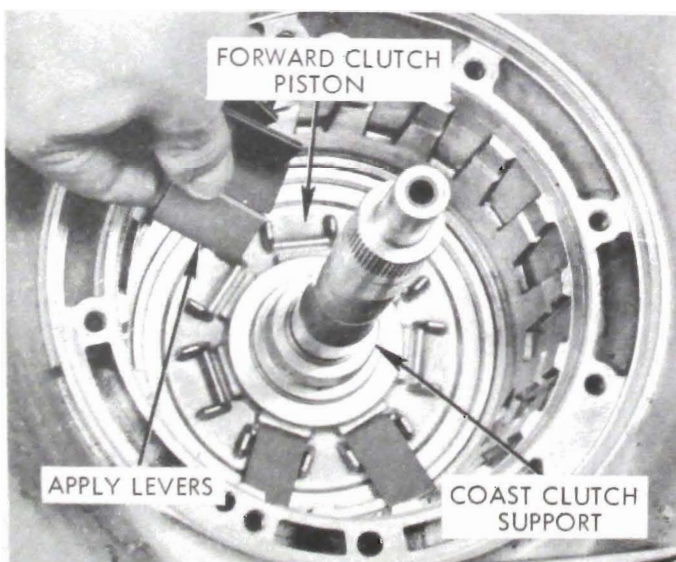


9. Remove forward clutch apply levers. Check levers for wear or bending.

5-180

Refer to paragraph 5-22 for removal of valve body, paragraph 5-23 for removal of companion flange, and paragraph 5-24 for removal of coast clutch support and forward clutch piston.

Refer to paragraph 5-29 for installation of forward clutch.


5-20 COAST AND OVERRUNNING CLUTCH: DISASSEMBLY, INSPECTION AND REASSEMBLY

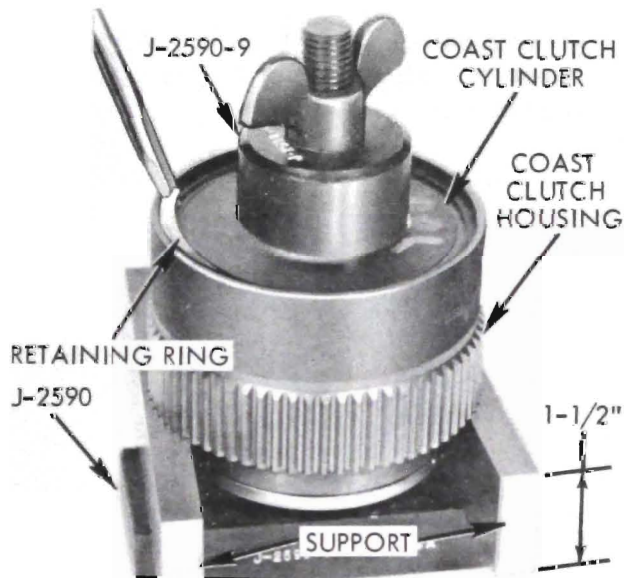

a. Disassembly and Inspection


1. Assemble coast and overrunning clutch assembly in tool J-2590. Provide support so assembly rests on lower edge of coast clutch housing. Tighten wing nut to relieve pressure on coast clutch cylinder to housing retaining ring. Pry ring out of groove in housing and remove ring.

5-181

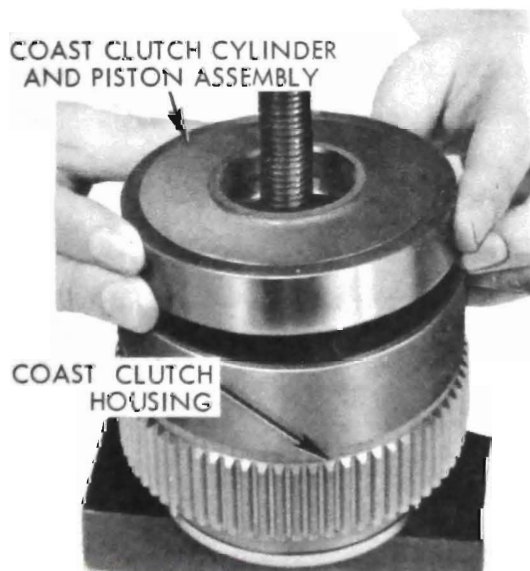


2. Remove wing nut and spacer. Lift coast clutch piston and cylinder out of coast clutch housing.

5-182

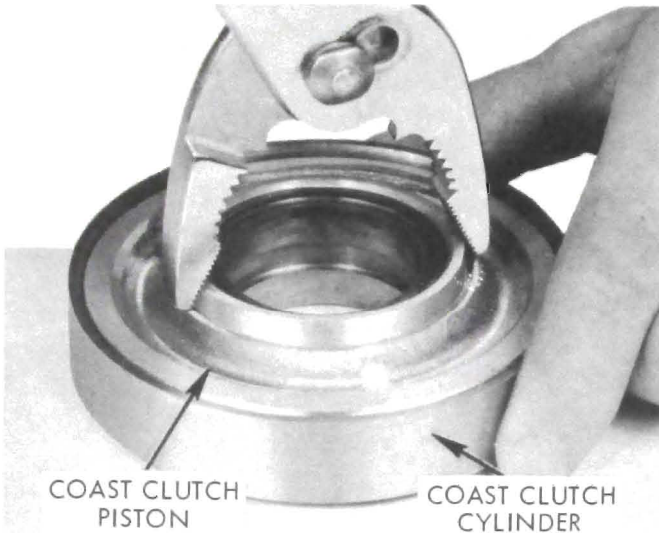


3. Use pliers to remove piston from cylinder. Check cylinder for dirt or scoring.

5-183

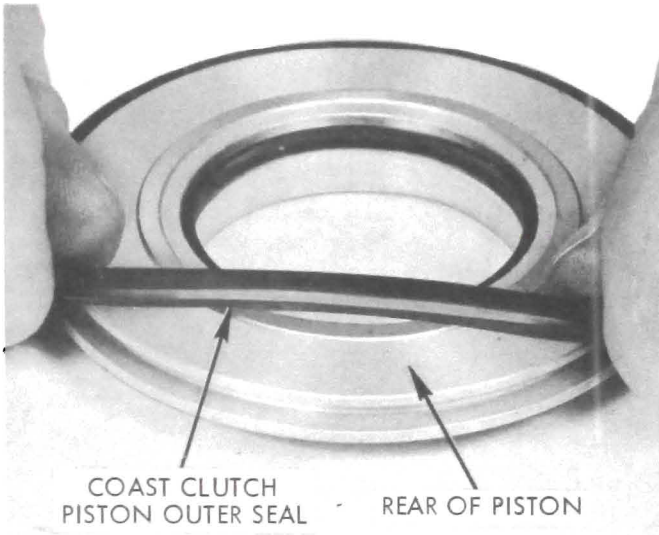


4. Examine piston outer seal for nicks, wear or cuts. If seal is damaged or worn, remove outer seal.

5-184

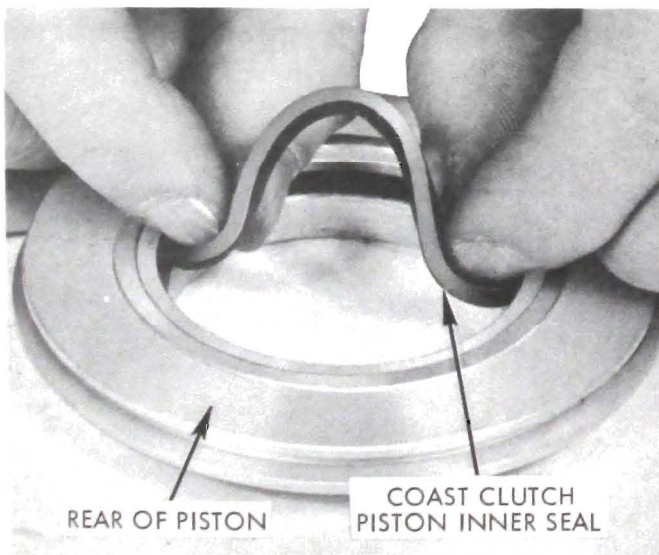


5. Examine piston inner seal for wear, nicks or cuts. If damaged or worn, remove seal.

5-185

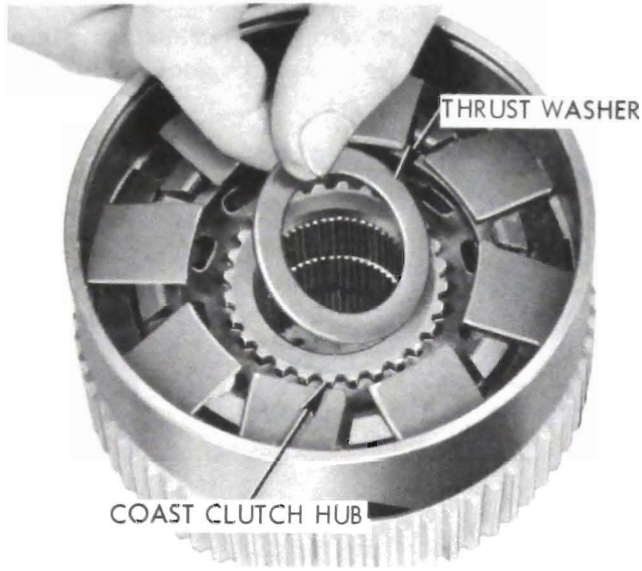


6. Remove coast clutch hub to coast clutch support thrust washer. Examine washer for wear or scoring.

5-186

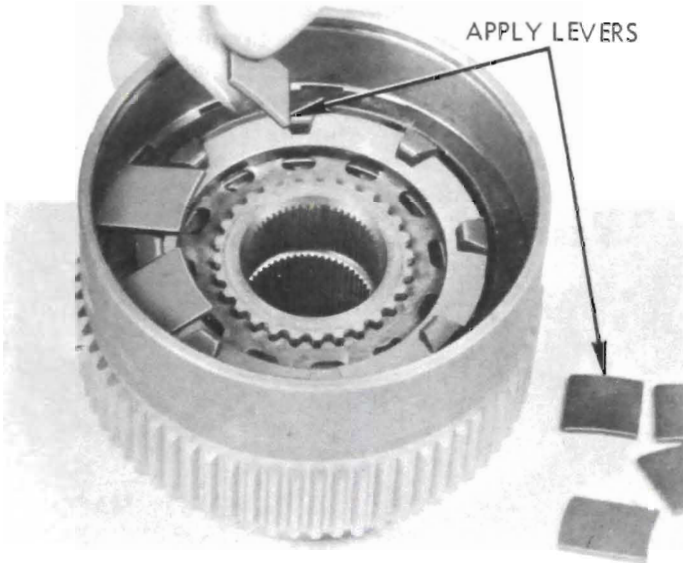

7. Remove coast clutch apply levers. Examine levers for wear or bending

5-187

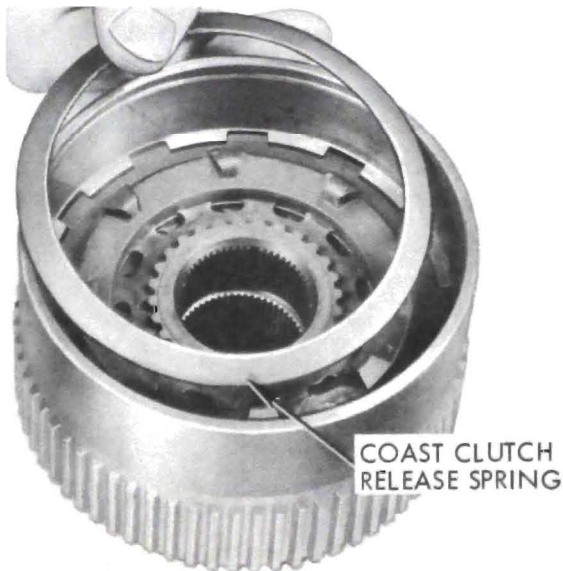


8. Remove coast clutch release spring. Examine spring for wear or cracks.

5-188




9. Remove coast clutch pressure plate. Examine plate for wear or scoring.

5-189

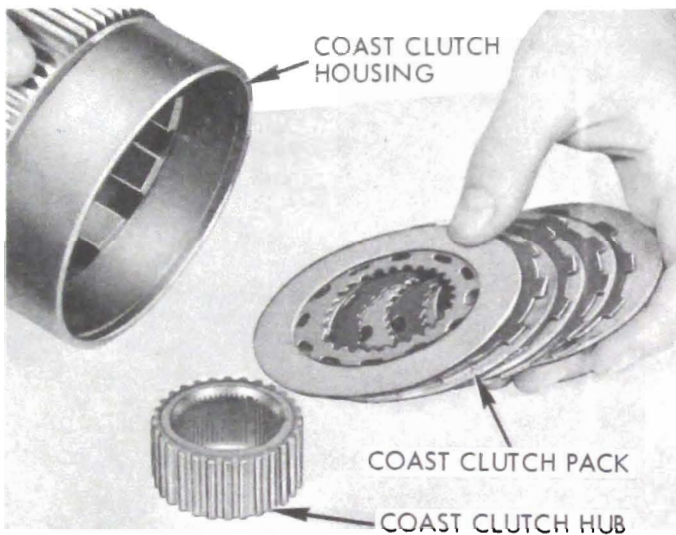


10. Tip coast clutch housing to remove clutch pack and hub. Examine hub for chips or scoring. Examine clutch plates for wear, scoring, burning, flaking or warping.

5-190

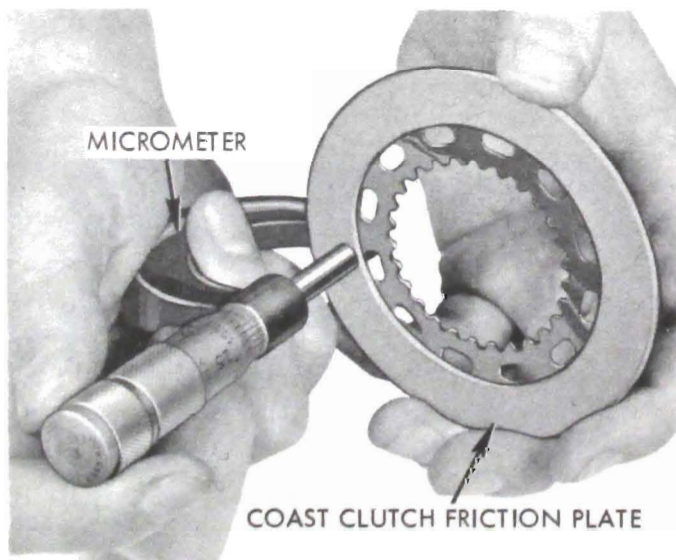


11. Measure the friction plates. When new the plates are .079"-.084" thick. Plates worn thinner than .074" should be replaced.

5-191

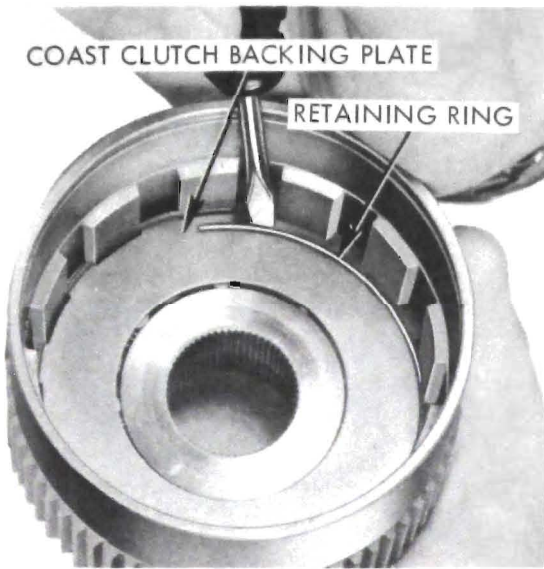


12. Pry cam retaining ring out of groove in backing plate. Remove ring.

5-192

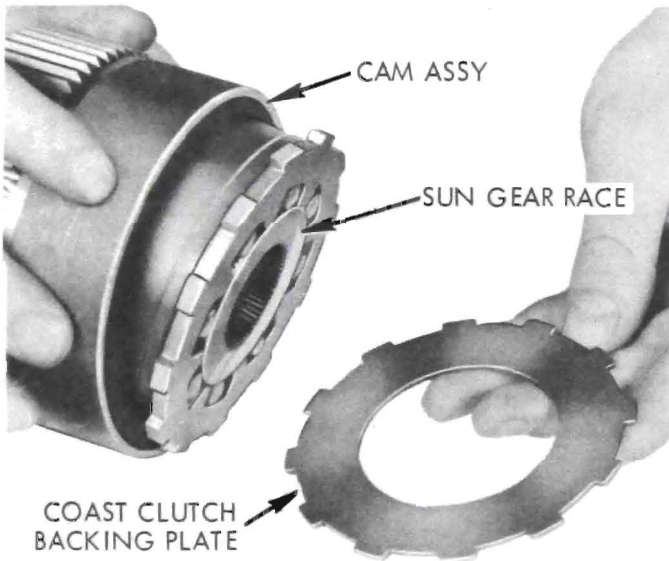


13. Tilt coast clutch housing to remove coast clutch backing plate and overrunning clutch assembly. Examine backing plate for evidence of wear or scoring.

5-193

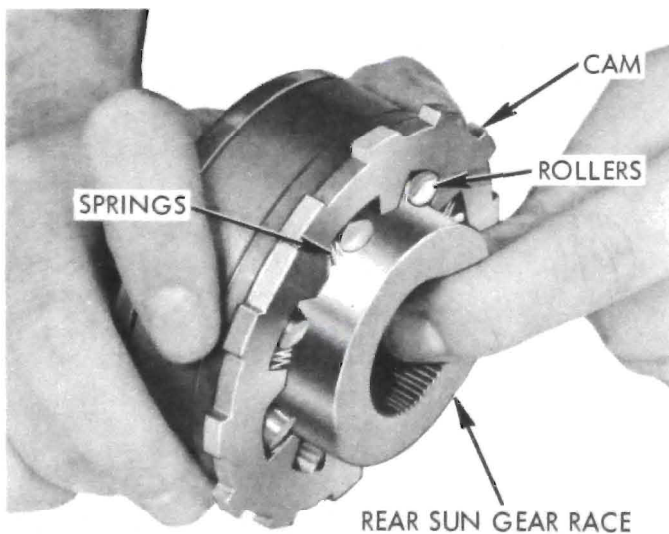


14. Pull rear sun gear race out of cam assembly. Rollers and springs will fall out. Examine race for wear, scoring, denting or damage to splines. Examine rollers for wear or scoring.

5-194

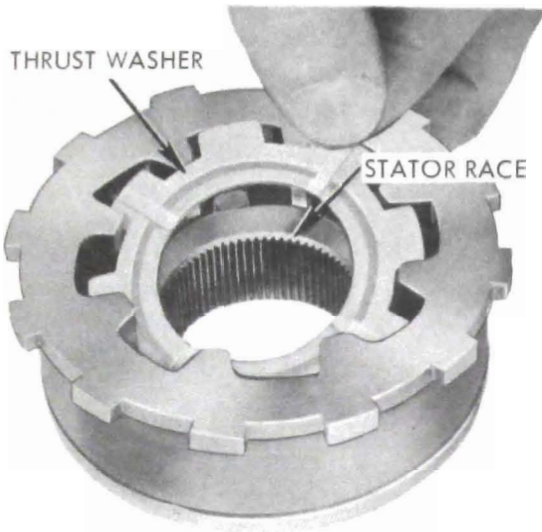


15. Remove roller thrust washer. Examine washer for wear or scoring.

5-195

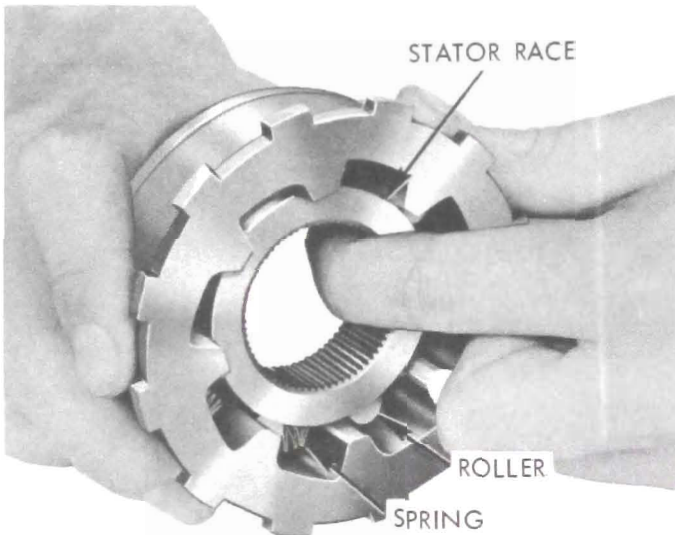

16. Pull stator race out of cam. Rollers and springs will fall out. Examine race for wear, scoring, denting or damage to splines. Check rollers for wear or scoring. Examine cam for wear, scoring, or denting. If cam must be replaced, drive off roller retainer and stake in place on new cam.

5-196

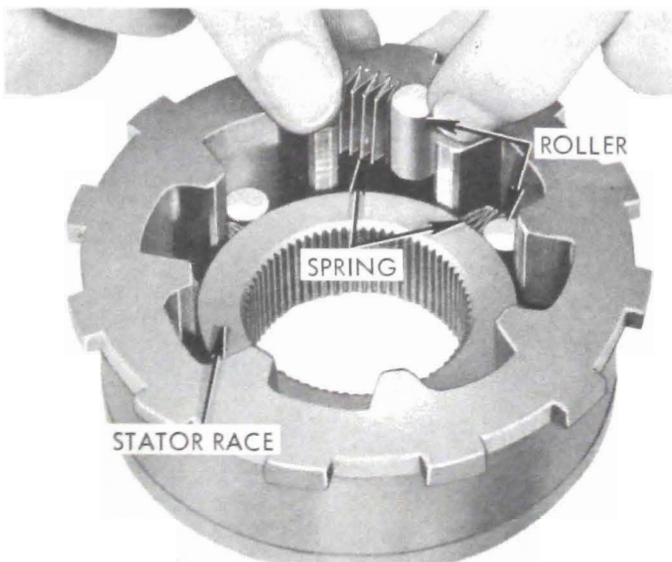


b. Assembly

1. Thoroughly clean all parts before beginning assembly. Set cam and roller retainer on clean surface. Place stator race inside cam. Assemble rollers and springs as shown in figure.


NOTE: Stator race has larger splined I.D. than rear sun gear race.

5-197

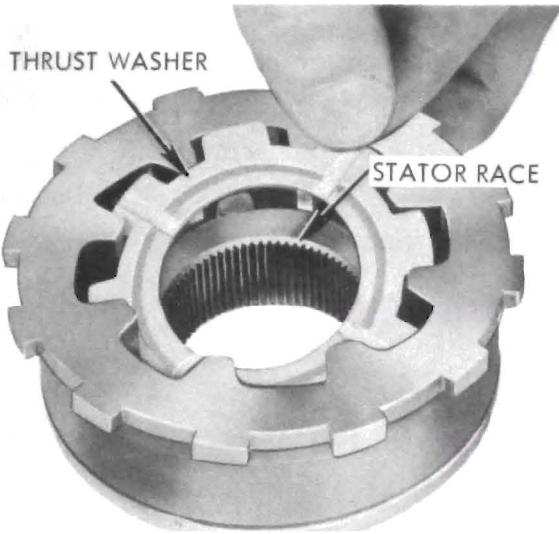


2. Lubricate and install thrust washer on stator race.

5-198

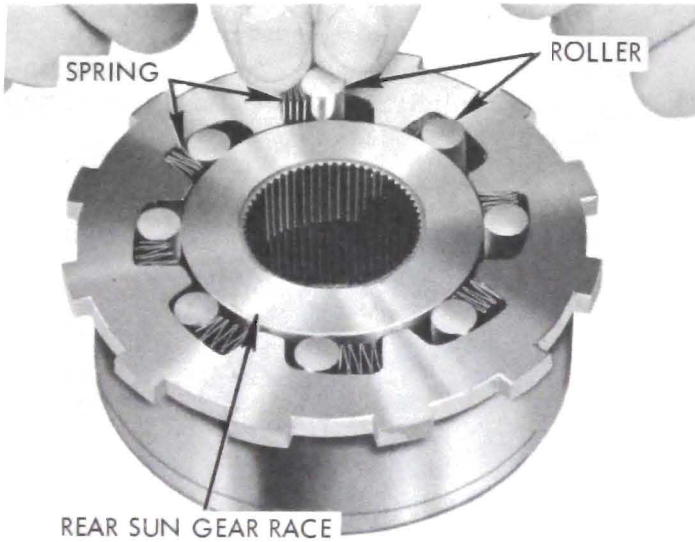


3. Set rear sun gear cam in place on thrust washer. Assemble rollers and springs as shown in figure.

5-199

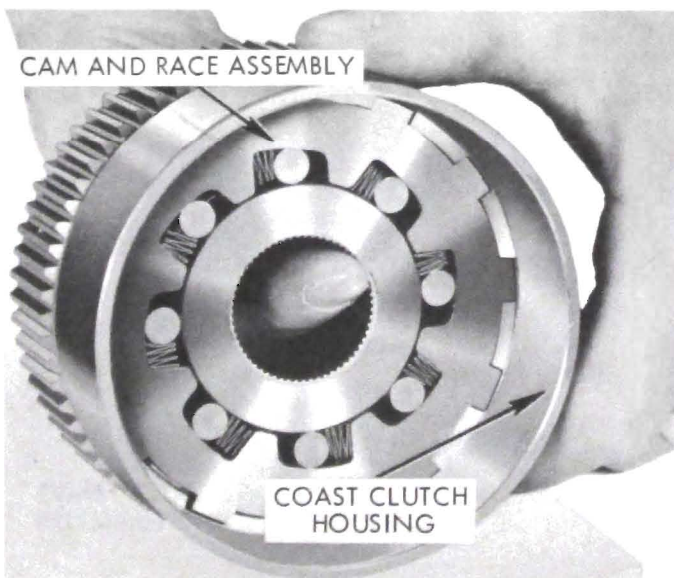


4. Install cam and race assembly in coast clutch housing. Rotate cam assembly so lugs on cam engage notches in coast clutch housing.

5-200

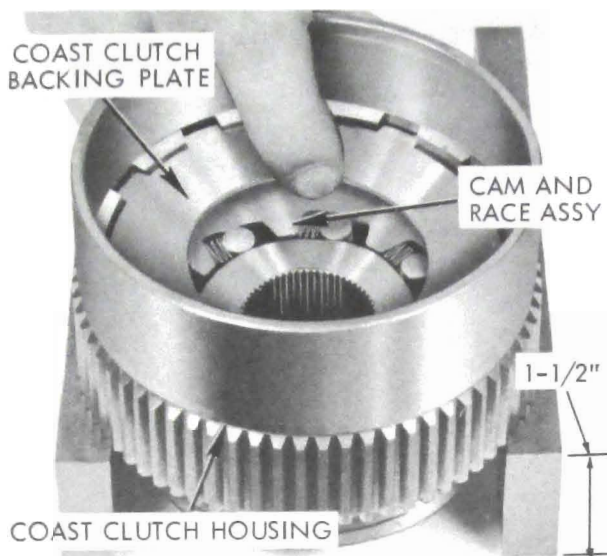


5. Set assembly on blocks or otherwise support on lower edge of coast clutch housing. Install coast clutch backing plate on cam and race assembly.

5-201

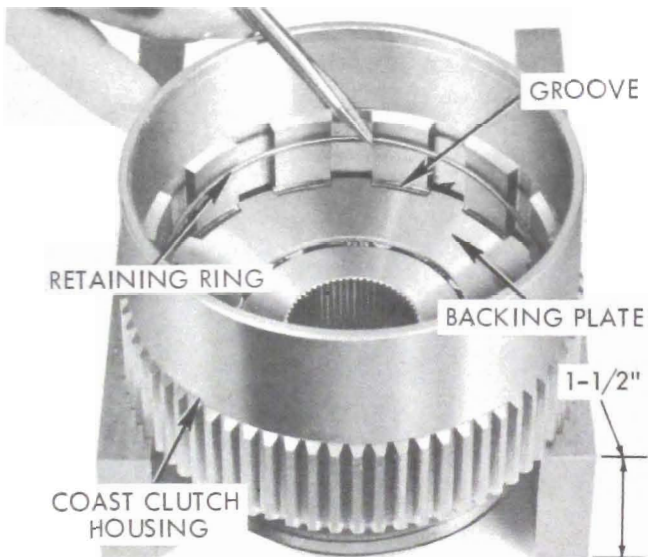


6. With assembly still resting on lower edge of coast clutch housing, install retaining ring solidly in groove of coast clutch housing above backing plate.

5-202

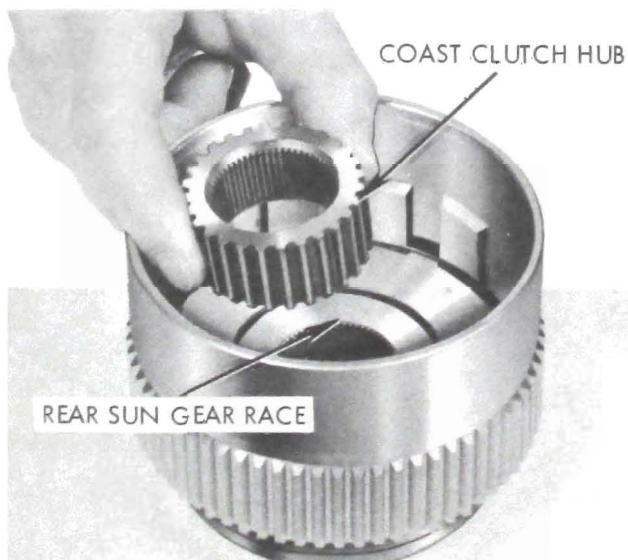


7. Set coast clutch hub in place on rear sun gear race.

5-203

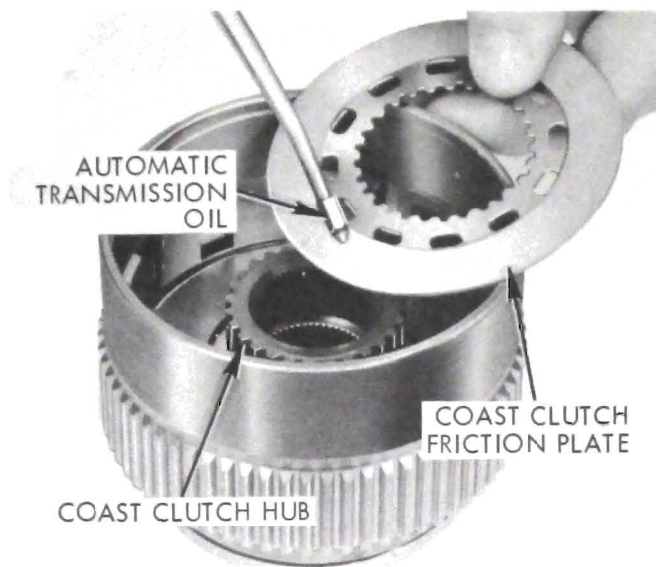

8. Lubricate a coast clutch friction plate with automatic transmission oil and install on backing plate with splines engaged with coast clutch hub splines.


5-204

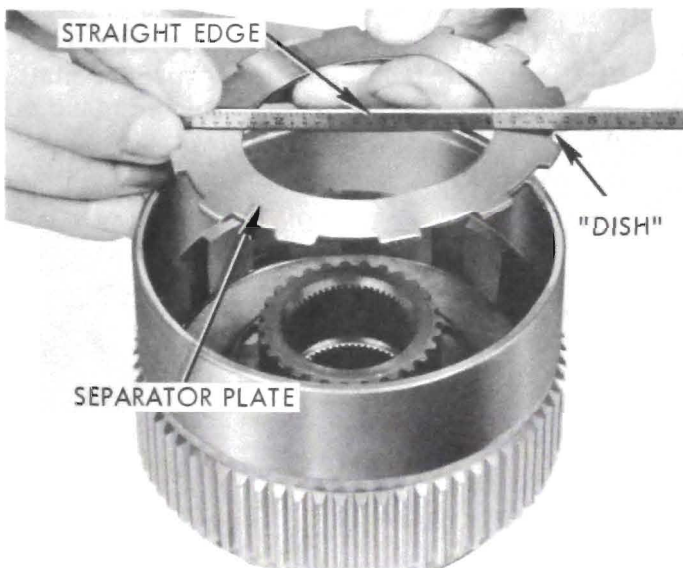

9. Check a coast clutch separator plate for "dish" by holding a straight edge firmly against the plate. Note direction of "dish" and install separator plate.


All separator plates must be installed with "dish" same way. Continue alternately installing a lubed friction plate and a separator plate until five friction plates and four separator plates have been installed.

5-205

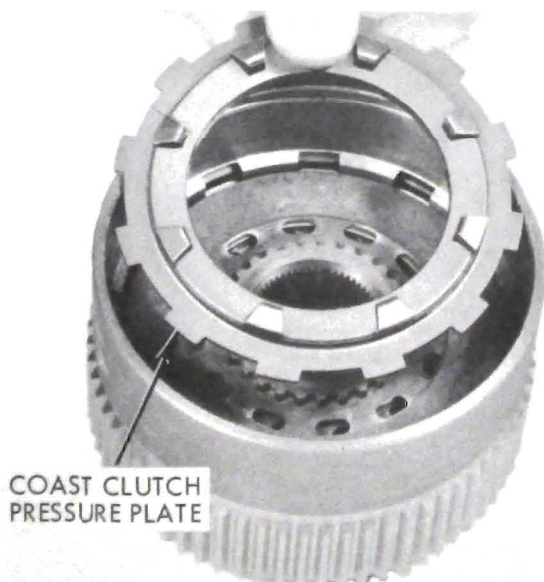


10. Install pressure plate on top of last lubed friction plate. Engage lugs in notches of coast clutch housing.

5-206

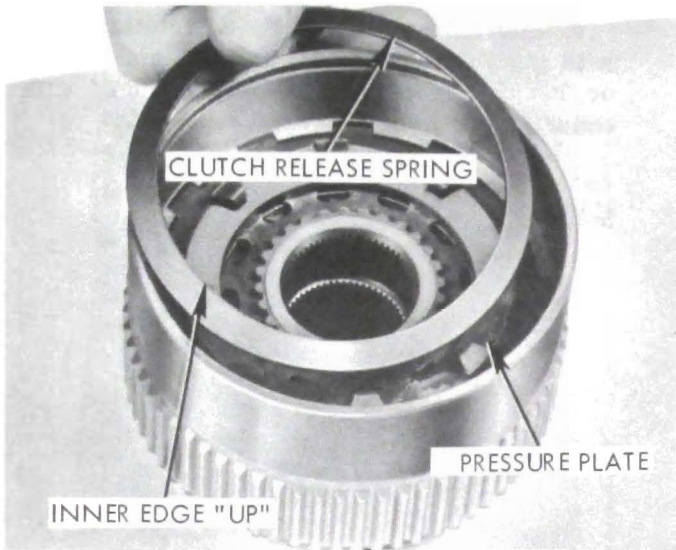


11. Install bellville clutch release spring on pressure plate with inner edge of spring "up".

5-207

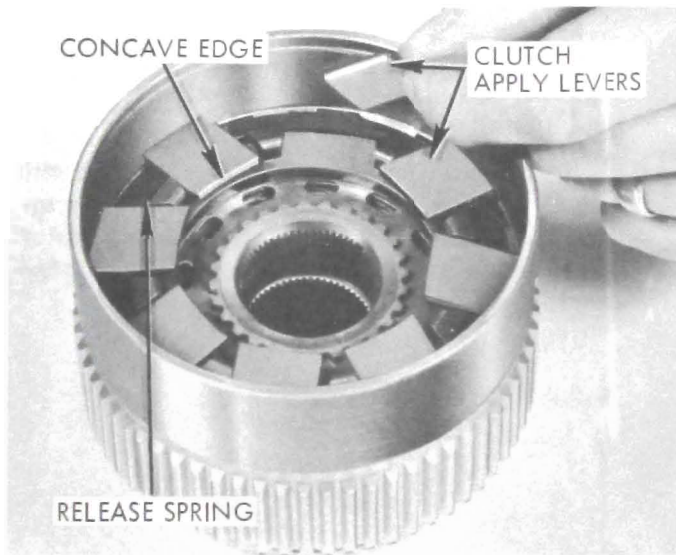


12. Install apply levers, concave edge "in" between the lugs of the pressure plate and flat on release spring. Apply a daub of clean chassis lube on each lever to hold it in place.

5-208

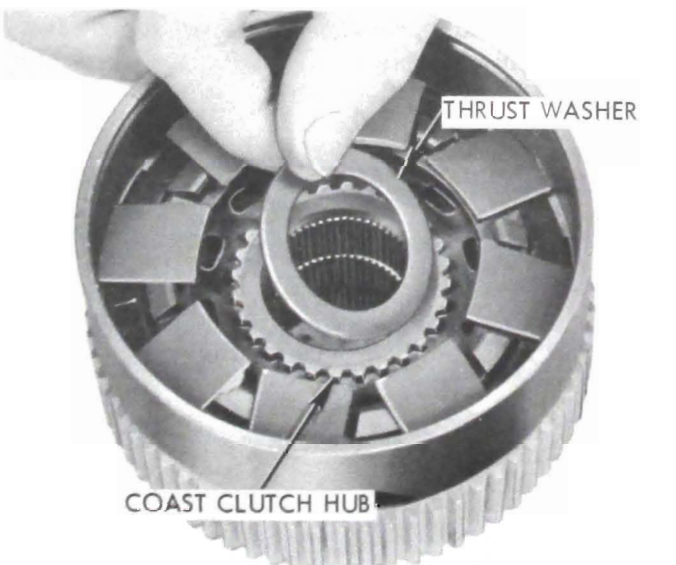


13. Set thrust washer in place on top of coast clutch hub.

5-209

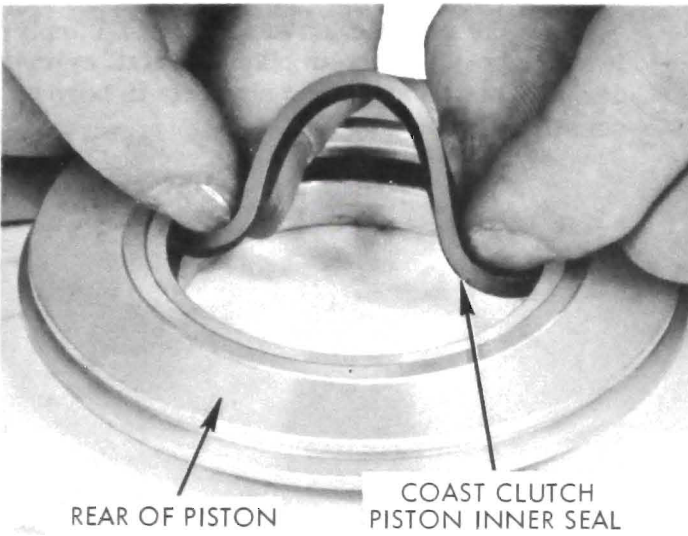


14. Install piston inner seal with lip toward rear of piston as shown in figure.

5-210

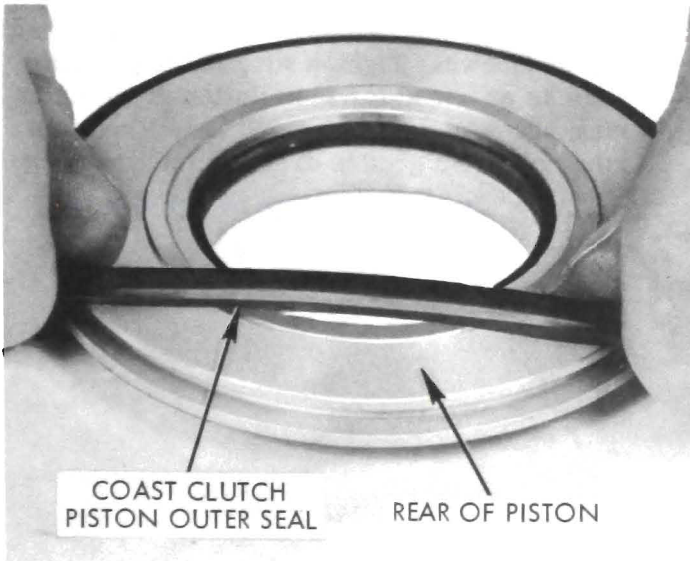

15. Install piston outer seal with lip toward rear of piston as shown in figure.


5-211

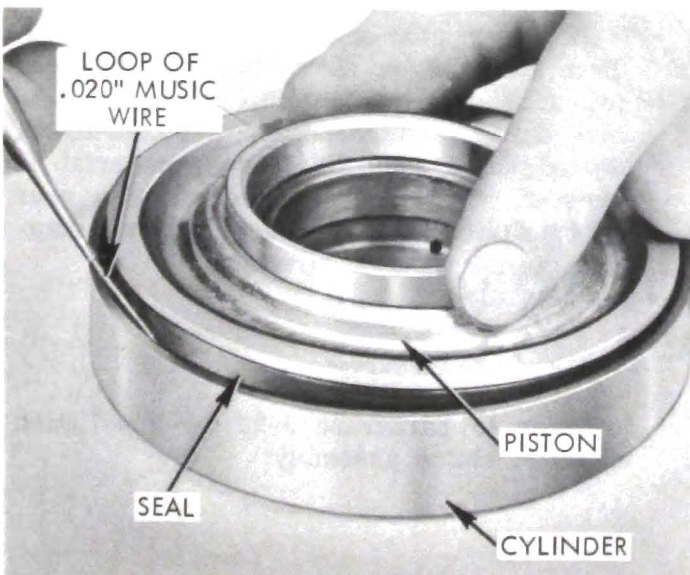

16. Lubricate seals and install piston in bore of coast clutch cylinder by using a loop of smooth wire to start the lips of the seals into the bore.


NOTE: Start inner seal first.

5-212

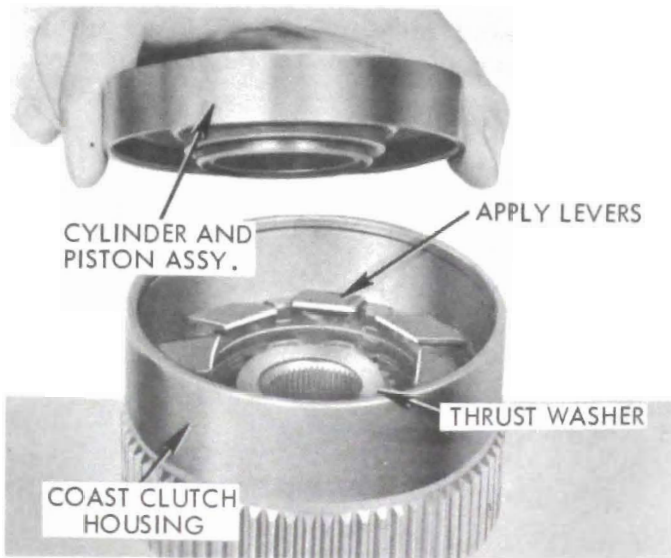


17. Make sure thrust washer and all apply levers are properly in place. Install cylinder and piston assembly squarely in bore of coast clutch housing.

5-213

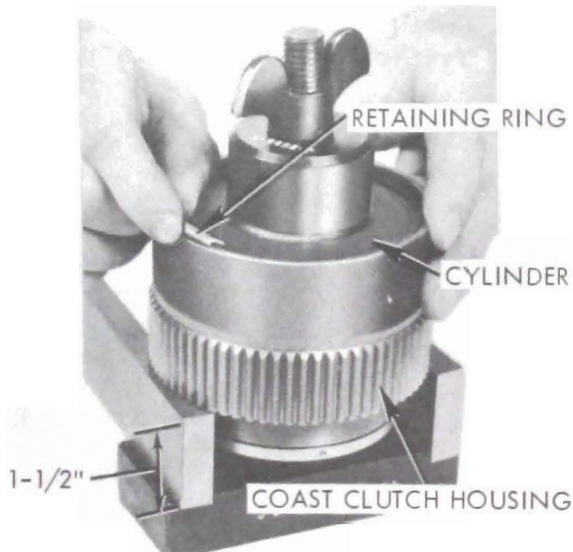

18. Assemble tool J-2590 to clutch assembly as shown. Tighten wing nut until clearance is provided for installation of retaining ring above piston cylinder. Install retaining ring solidly in groove of coast clutch housing. Remove tool J-2590.

5-214

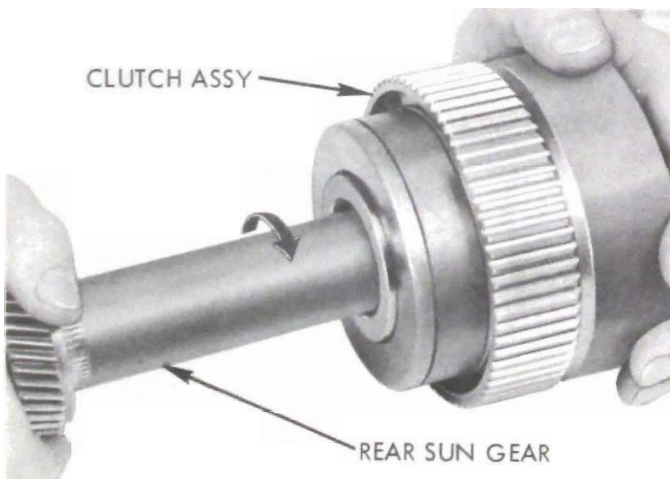


19. Insert rear sun gear in sun gear race. Turn sun gear as shown in figure to check for drag on coast clutch. Excessive drag may indicate clutch separator plates all not dished same way, or foreign material is present. Correct if necessary. Sun gear overrunning clutch should not permit rotation opposite arrow direction.

5-215

Refer to paragraph 5-29 for installation of coast clutch assembly.


5-21 OIL PAN: REMOVAL

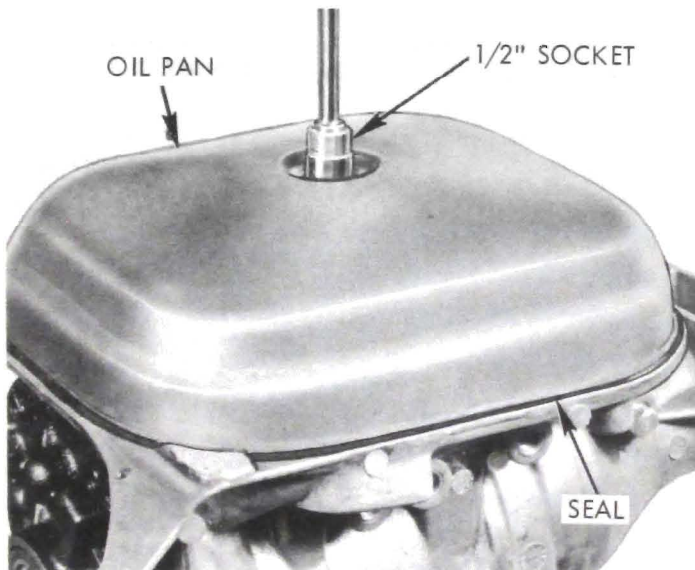

1. Remove oil pan bolt and gasket (1/2" wrench). Remove oil pan and seal.


5-216

5-22 VALVE BODY: REMOVAL, DISASSEMBLY, INSPECTION AND REASSEMBLY

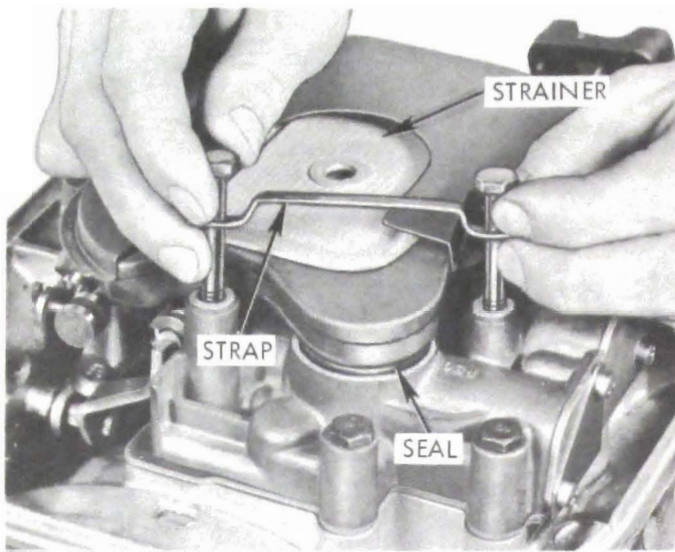**a. Removal**


1. Remove oil strainer strap bolts (7/16" wrench). Remove strap, strainer, and strainer "O" ring. Discard "O" ring.

5-217

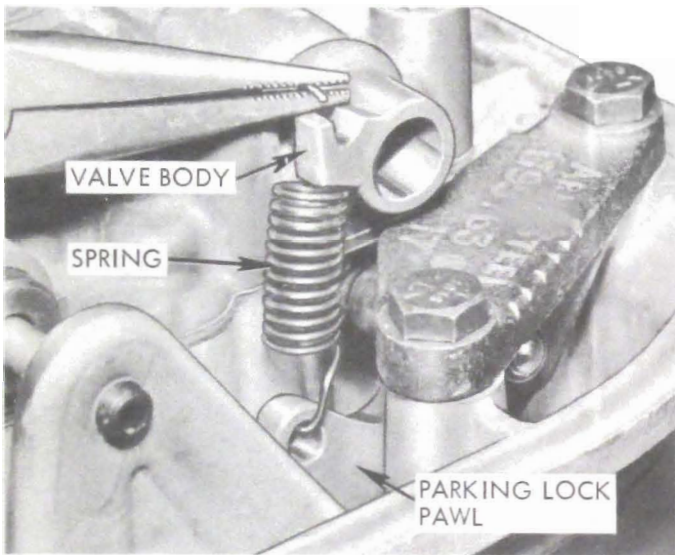

2. Use needle nose pliers to remove parking lock pawl disengaging spring.

5-218

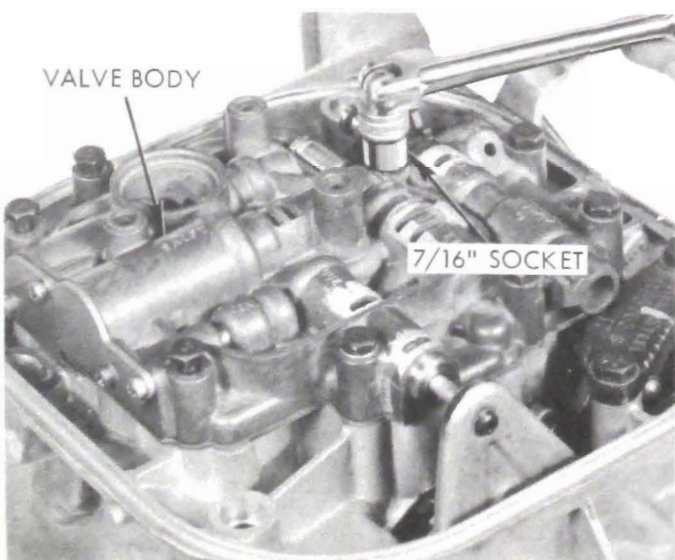


3. Remove remaining valve body attaching bolts. Remove valve body assembly. Take care when removing valve body, as some of the valves can fall out. Set valve body on clean working surface.

5-219

b. Disassembly and Inspection


1. Remove range selector and governor valve. Tilt valve body to remove governor valve pin.

5-220

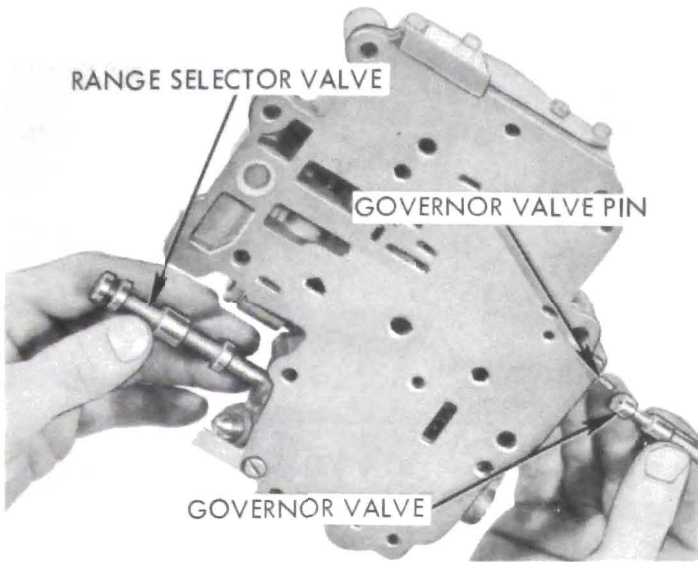


2. Remove throttle detent valve and throttle pressure regulator valve spring.


5-221

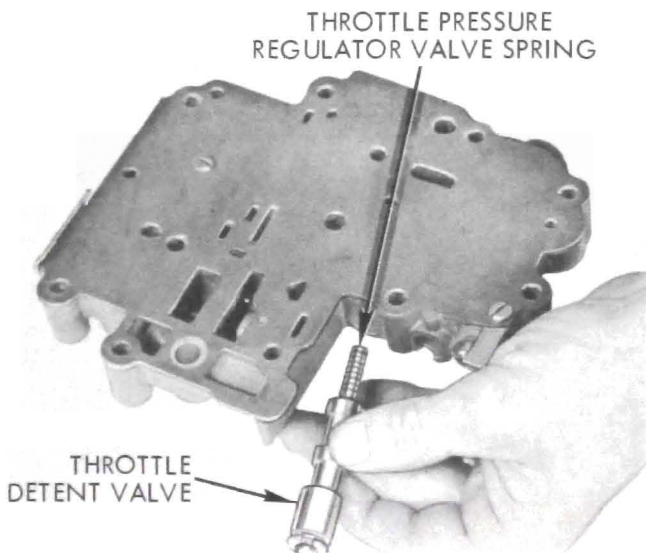

3. Remove two screws attaching valve body plate and gaskets to valve body. Detent poppet may slide out when screws are removed.


5-222

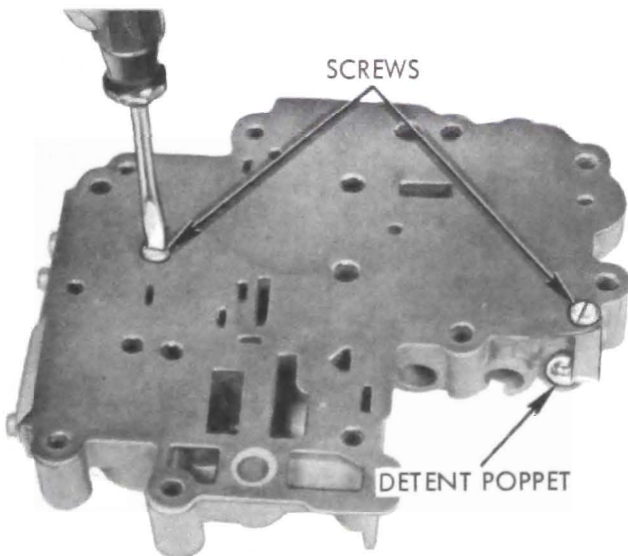

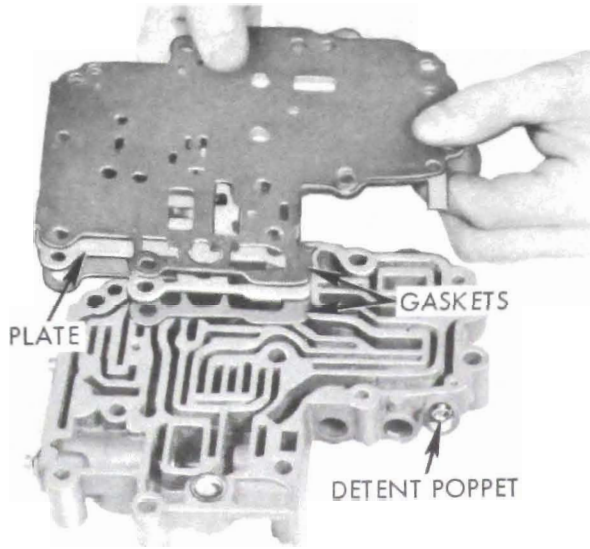


4. Remove valve body plate and gaskets. Check gasket for evidence of leakage or improper installation.

5-223

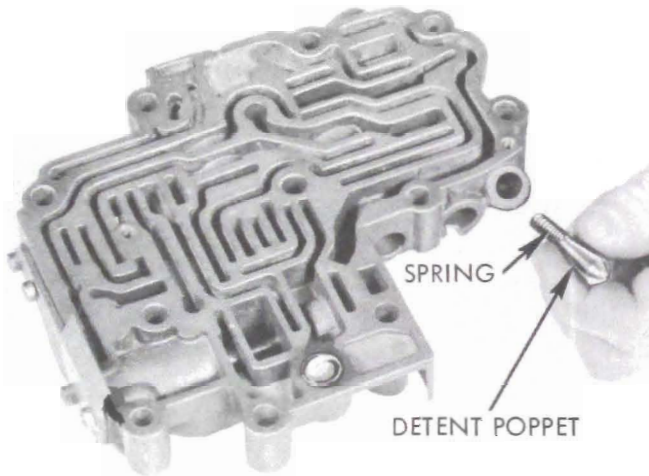

5. Remove selector lever detent poppet and spring.

5-224

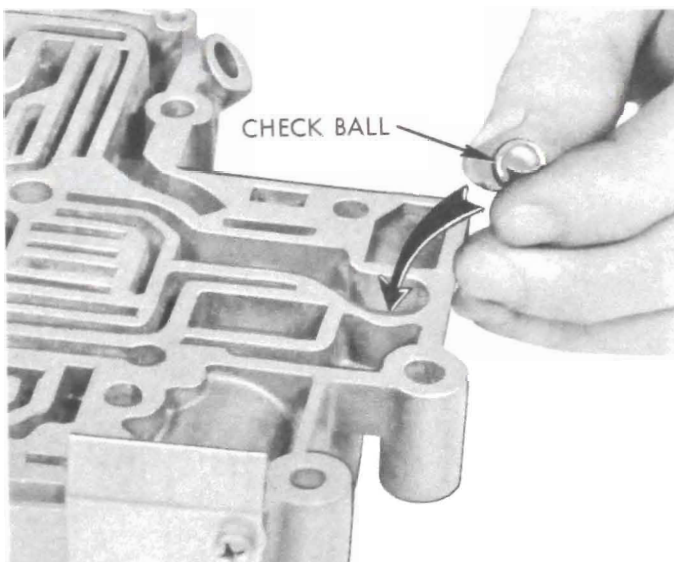


6. Remove check ball.

5-225


7. Remove pressure regulator valve stop.

5-226

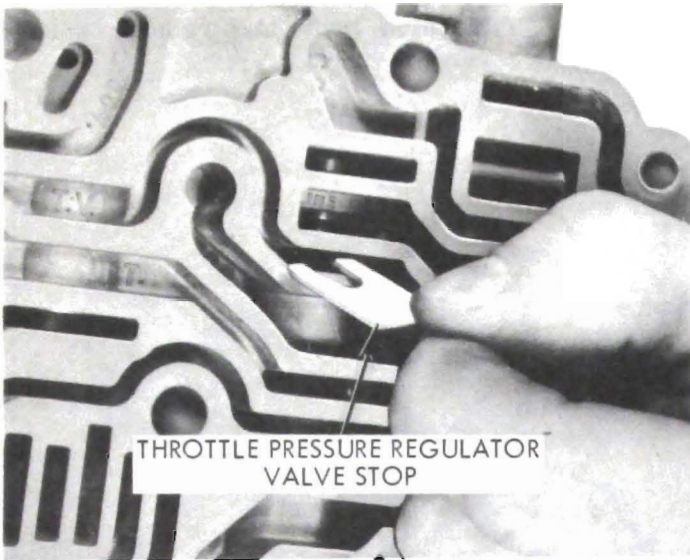


8. Tilt valve body and remove throttle pressure regulator valve.


5-227

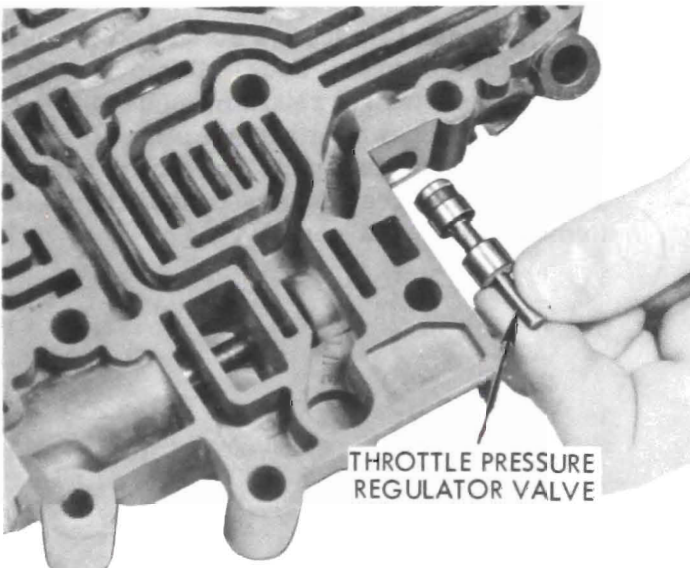

9. Press in on governor valve sleeve to release spring pressure on retainer. Invert valve body to allow removal of retainer. Remove sleeve and second stage governor valve spring.


5-228

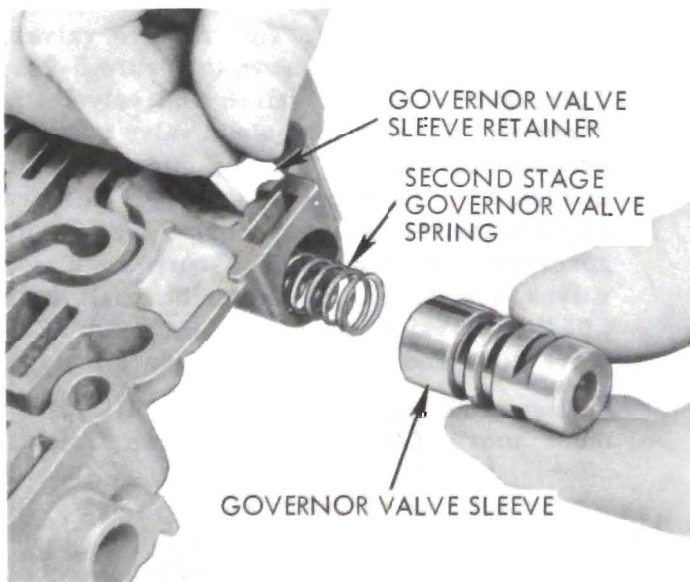

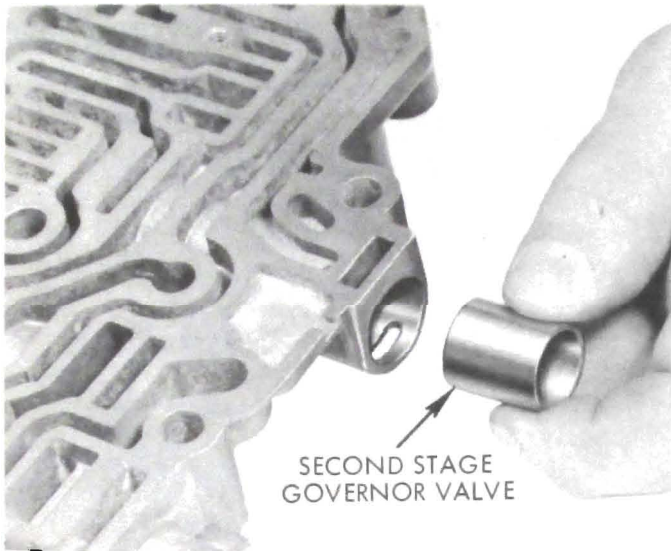

10. Tilt valve body and remove second stage governor valve.

5-229

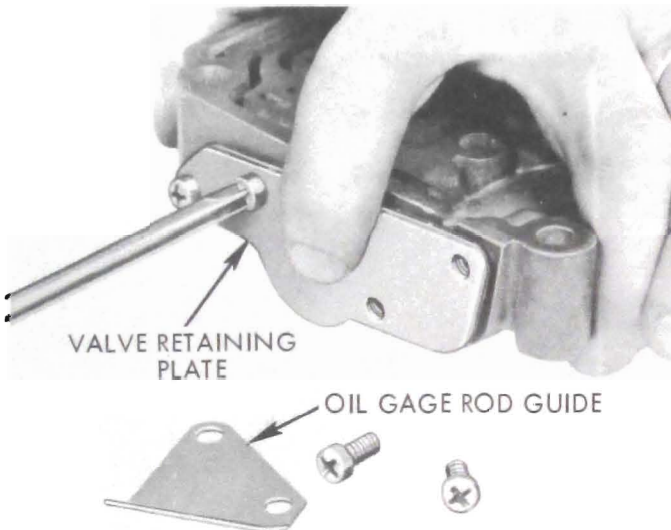

11. Remove two screws attaching oil gauge rod guide to valve body. Remove guide. Firmly hold valve retaining plate and remove two screws attaching plate to valve body. Release the plate carefully against pressure of three springs behind the plate. Remove plate and gasket.

5-230

12. Tilt valve body and remove valves, sleeves and springs shown in Figure 5-231. Thoroughly clean all valves and valve body in solvent. Inspect valves and valve body for evidence of wear or damage due to foreign material or improper assembly. Be sure small holes in converter pressure regulator, governor, and throttle pressure regulator valves are clear. Be certain small hole (.032") in valve body plate is clear. Dry valve body and valves with clean air blast.

Test each valve in its bore. All valves must move freely of their own weight.


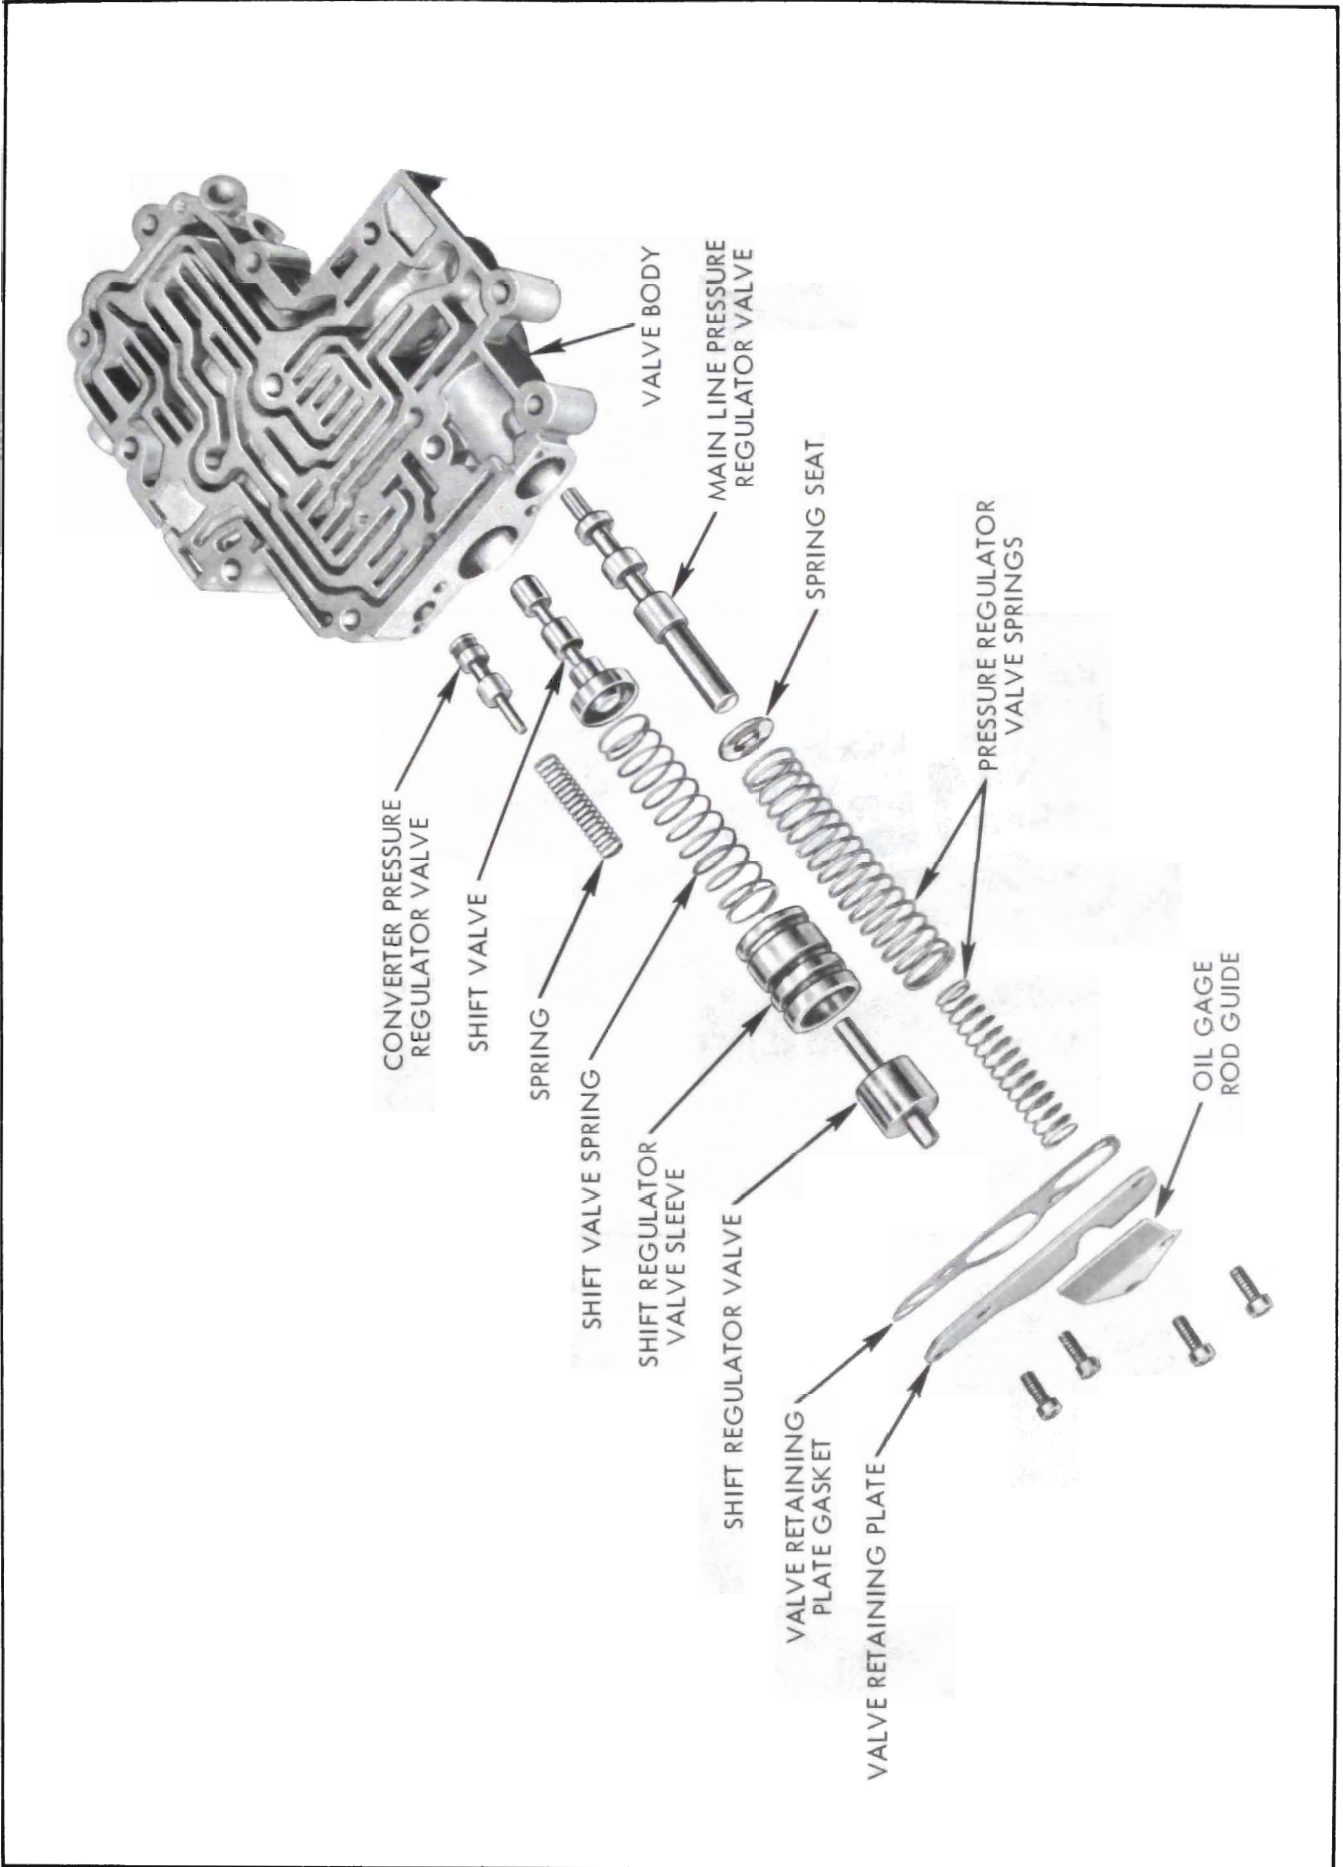


Figure 5-231

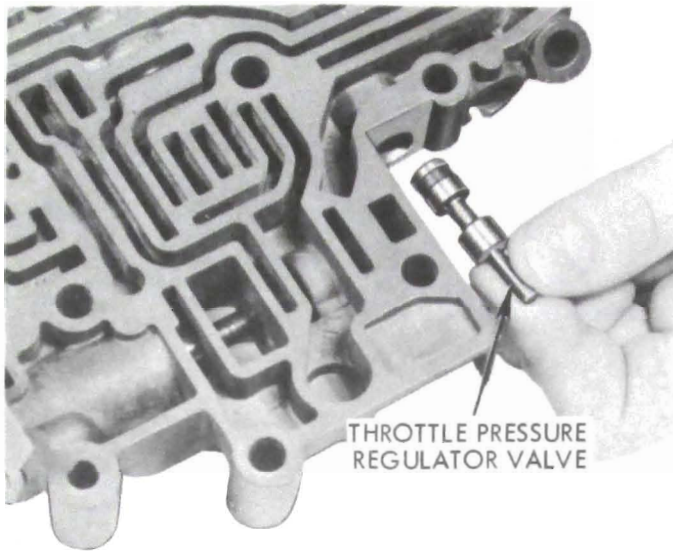

c. Reassembly

1. Begin reassembly of valve body by installing converter pressure regulator, shift, and main line pressure regulator valves, sleeves and springs as shown in Figure 5-231. Use new valve retaining plate to valve body gasket; install plate and oil gauge rod guide. Install and tighten screws.

2. Install throttle pressure regulator valve. Tilt valve body so valve slides to bottom of bore.

5-232




3. Be sure throttle pressure regulator valve is at bottom of bore. Install throttle pressure regulator valve stop as shown in figure. Check to be sure stop is in correct opening.

5-233




4. Install second stage governor valve.

5-234

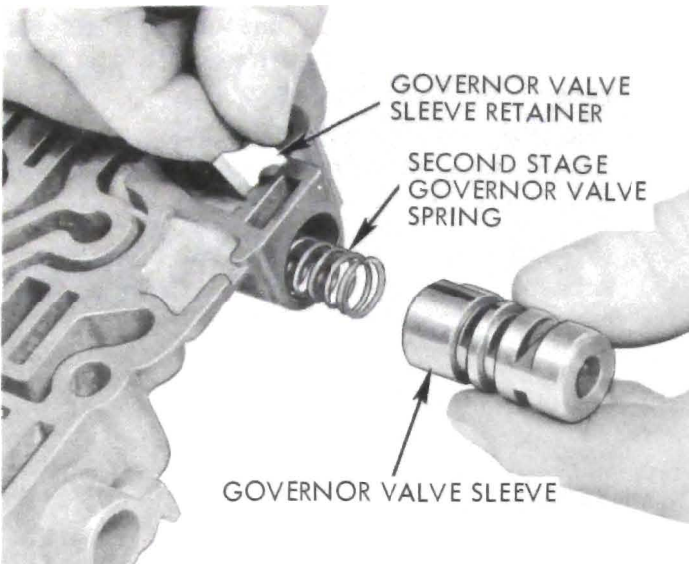


5. Install second stage governor valve spring, sleeve and retainer. Press in on sleeve against spring pressure and install retainer through valve body in wide slot of sleeve.

5-235

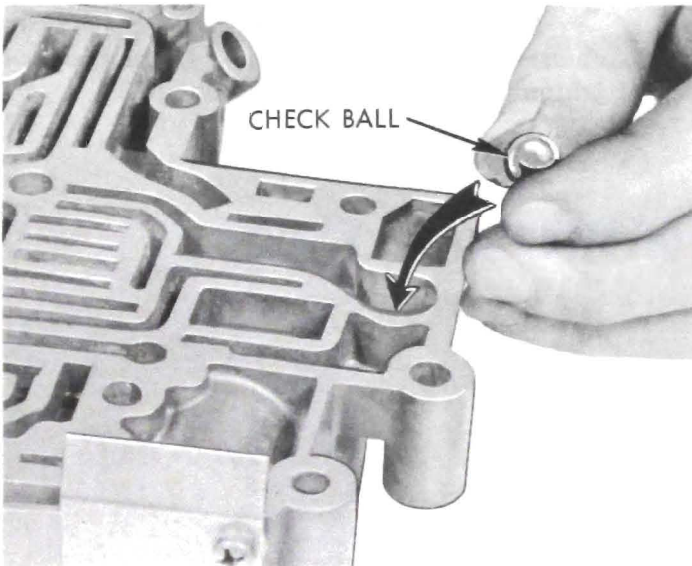


6. Install check ball.

5-236

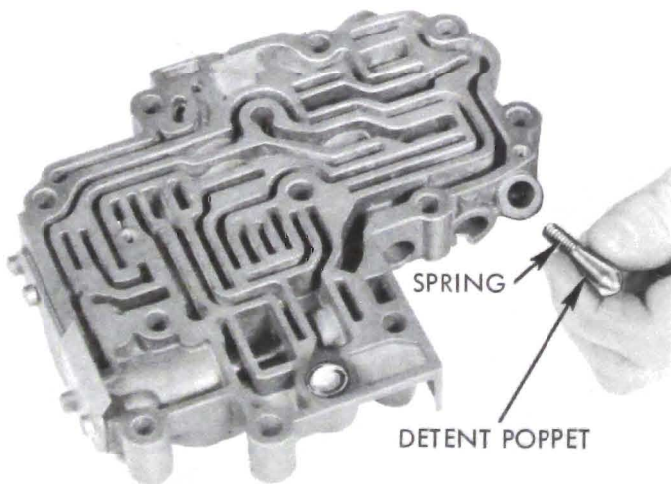

7. Install detent poppet and spring.

5-237

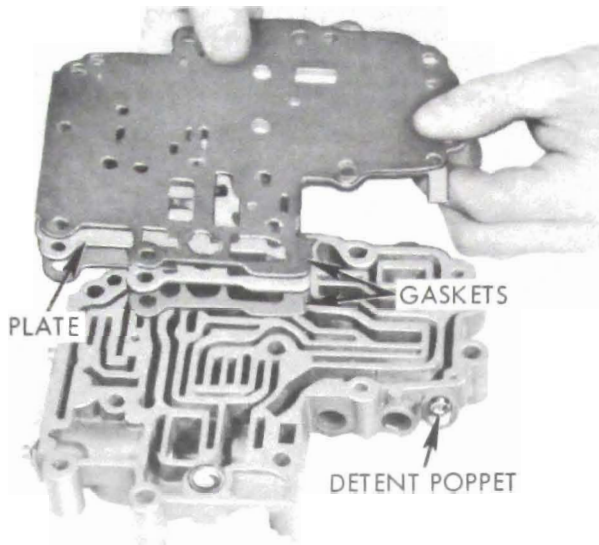


8. Use new gaskets, one on each side of valve body plate. Position plate and new gaskets on valve body.

NOTE: It will be necessary to depress detent poppet to allow plate attaching screws to be started.


NOTE: Service inner and outer plate gaskets are identical, while production inner and outer gaskets are not. Always use two new service gaskets when reassembling valve body.

5-238

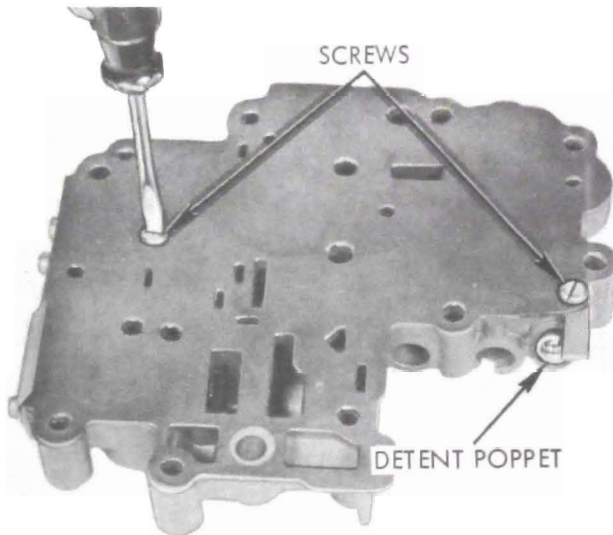


9. Make sure detent poppet is properly in place and install screws. Do not over-tighten as gasket may be damaged.

5-239

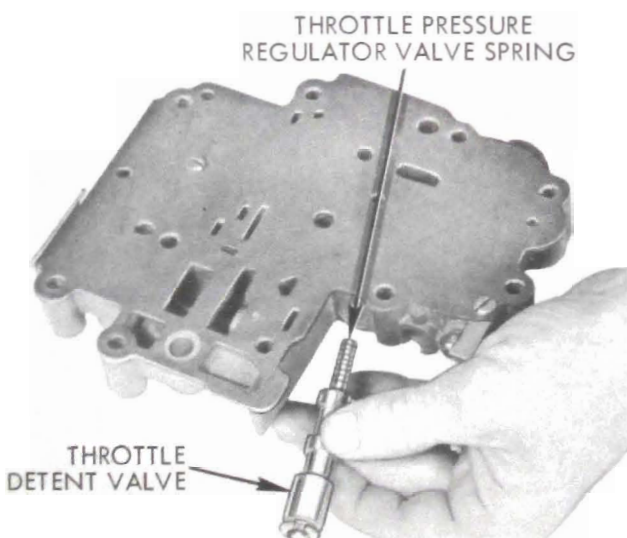

10. Install throttle detent valve and throttle pressure regulator valve spring.

5-240

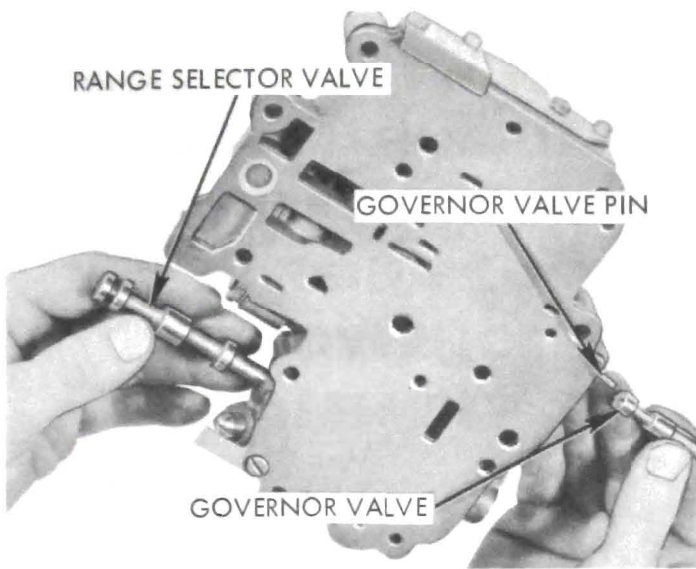


11. Install range selector valve, governor valve and pin.

NOTE: It may be necessary to shake valve body to start governor valve pin through hole in second stage governor valve.

5-241

If coast clutch support is to be removed, set valve body aside. Refer to paragraph 5-31 for installation of valve body.


5-23 COMPANION FLANGE AND SEAL: REMOVAL AND INSTALLATION

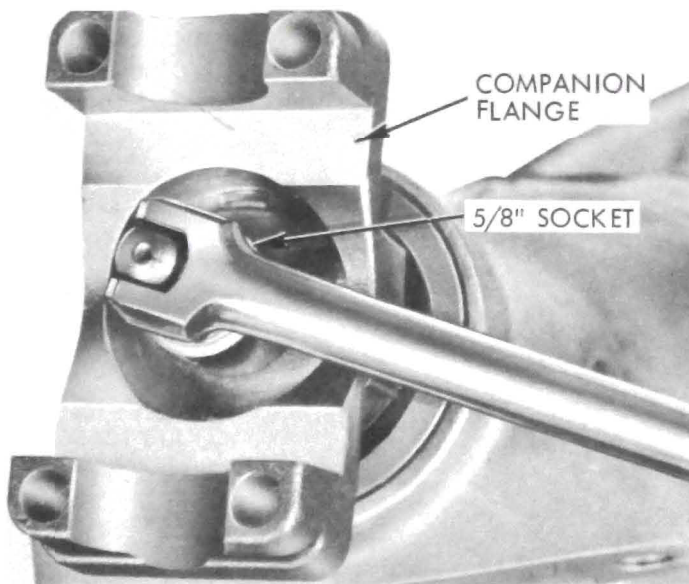

a. Removal

1. Engage parking lock pawl and remove companion flange to output shaft attaching bolt (5/8" socket); tap flange off output shaft.


5-242

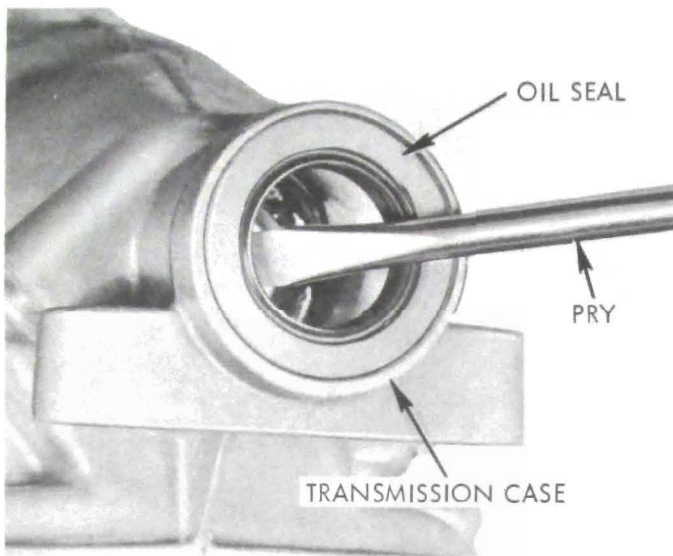

2. Pry old seal out of transmission case.

NOTE: The seal may be removed with transmission in car if care is taken to avoid damage to output shaft splines.

5-243

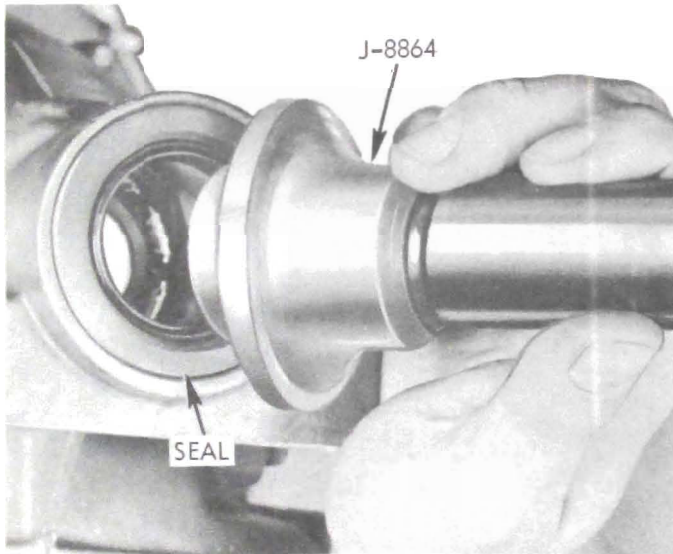


b. Installation

1. Install new seal using Installer J-8864.

NOTE: Seal may be installed with transmission in car.


5-244

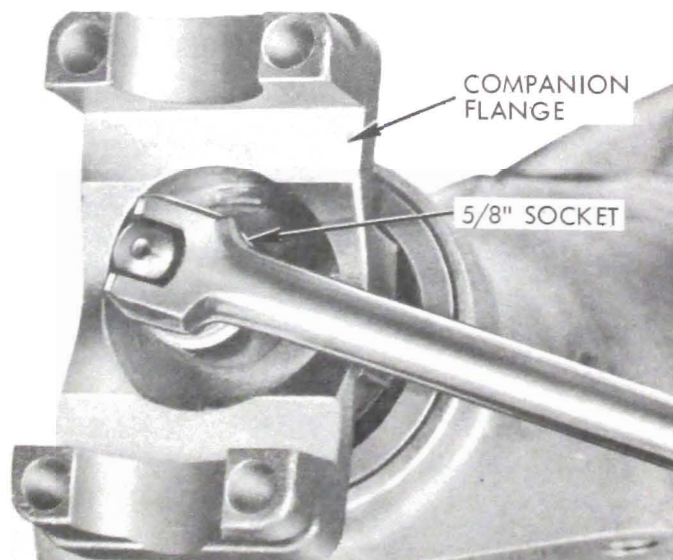

2. Engage parking lock pawl. Lubricate companion flange and install. Install companion flange attaching bolt and torque to 45-55 ft. lbs.

5-245


5-24 OUTPUT SHAFT, COAST CLUTCH SUPPORT, FORWARD CLUTCH PISTON, PARKING LOCK RATCHET WHEEL AND GOVERNOR ASSEMBLY: REMOVAL, DISASSEMBLY, INSPECTION, REASSEMBLY

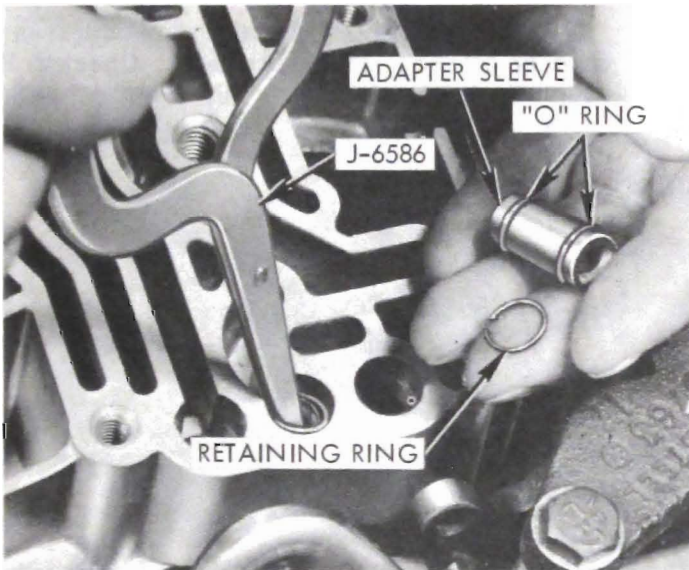

a. Removal


1. Remove companion flange (par. 5-23). Use tool J-6586 to pull three adapter sleeves and retainer out of transmission case and coast clutch support. Examine "O" rings for nicks or cuts. Discard any questionable rings.

5-246

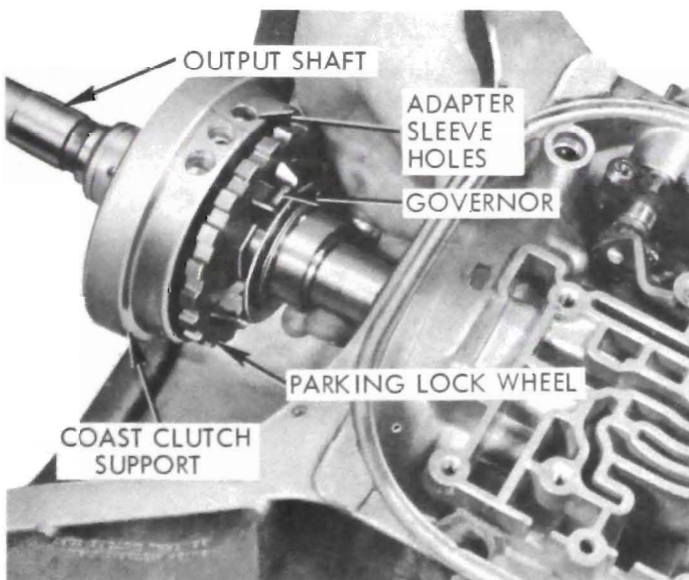

2. Pull output shaft forward to remove shaft, coast clutch support, parking lock ratchet wheel and governor as an assembly. Speedometer driving gear will be pulled off output shaft as shaft is pulled through rear bearing. Remove gear through companion flange seal.


5-247

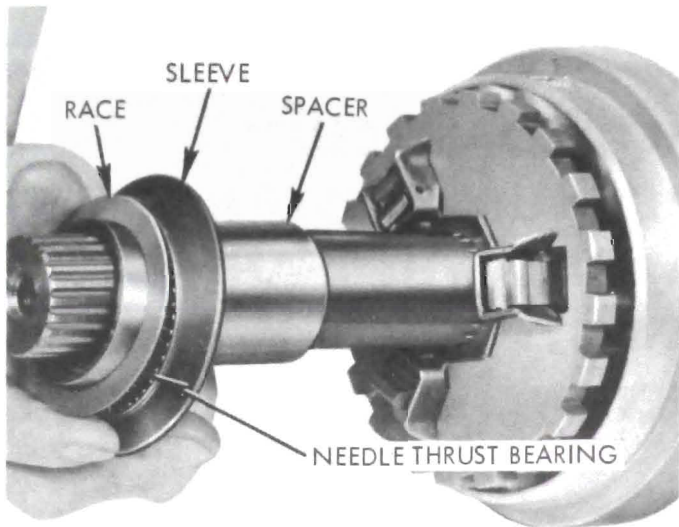

b. Disassembly and Inspection


1. Slide governor lever actuating sleeve, needle thrust bearing, thrust bearing race and parking lock ratchet wheel spacer off rear of output shaft. Examine needle thrust bearing, race, and sleeve for wear or scoring.

5-248

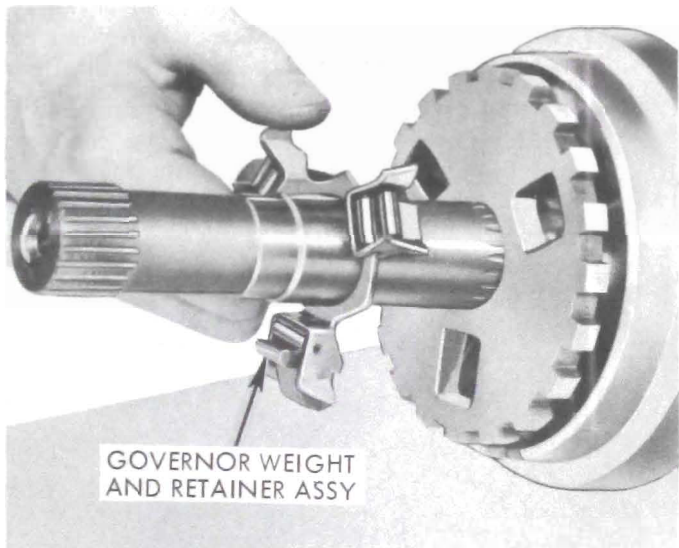


2. Slide governor weight and retainer assembly off rear of output shaft. Check roll pins for looseness in weights.

5-249

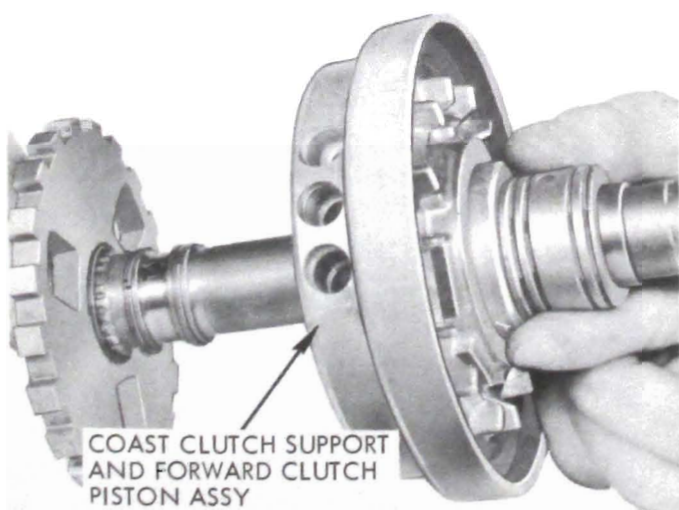


3. Slide coast clutch support and forward clutch piston assembly off forward end of output shaft.

5-250

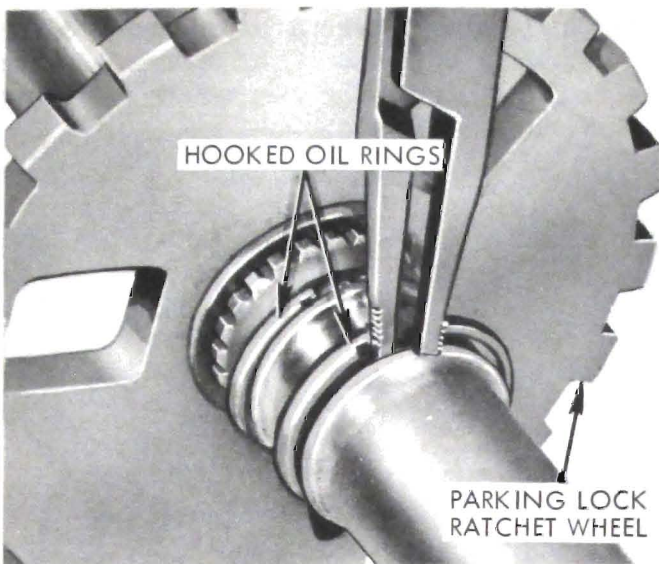

4. Examine two hooked oil rings on output shaft just forward of parking lock ratchet wheel. If worn or scored, unhook, expand and remove the rings.

5-251

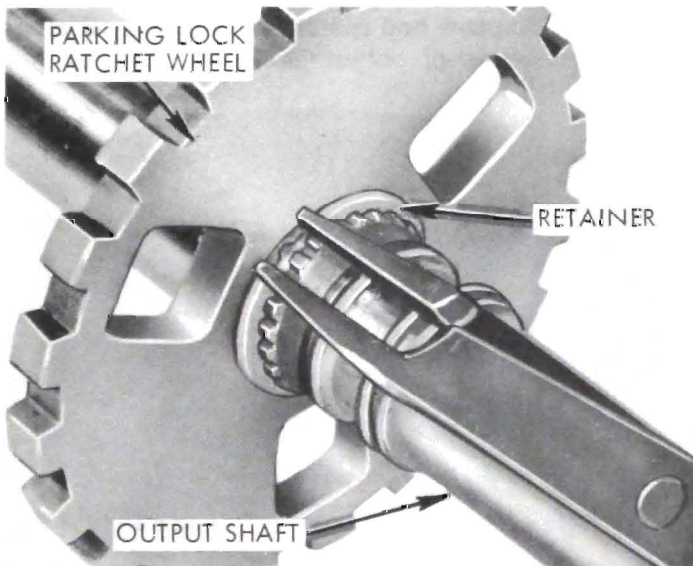

5. If parking lock ratchet wheel is worn or broken, expand and remove retaining ring on output shaft forward of wheel. Slide parking lock ratchet wheel off forward end of output shaft.


Examine output shaft for damaged splines, scored bearing surfaces, broken ring lands, etc.


5-252

c. Assembly of Parking Lock Ratchet Wheel and Output Shaft

1. Install parking lock ratchet wheel with spline chamfer toward rear of output shaft.

5-253

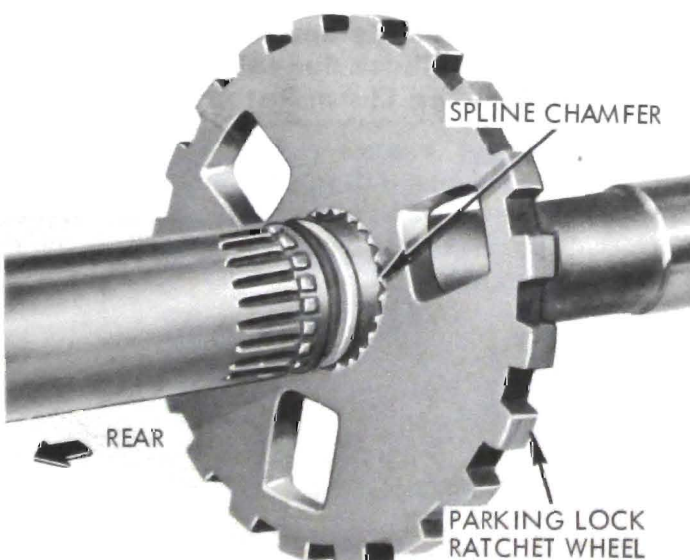

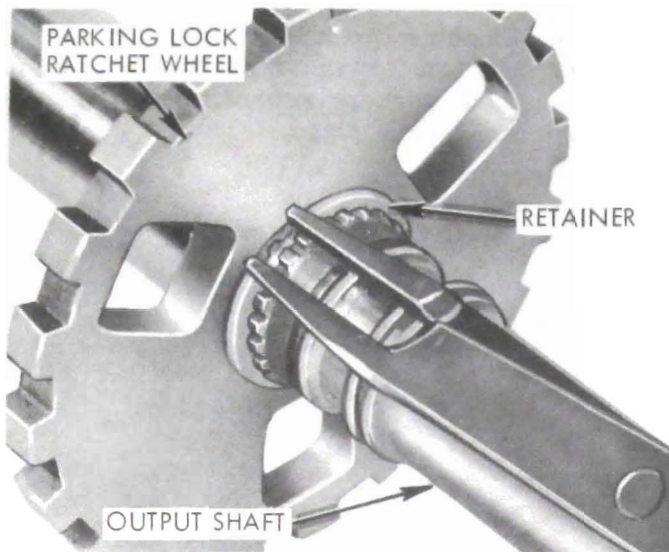


2. Position parking lock ratchet wheel rearward on output shaft splines. Expand and install retaining ring solidly in groove of output shaft.

5-254



3. Expand and install two hooked oil rings in grooves of output shaft.

5-255

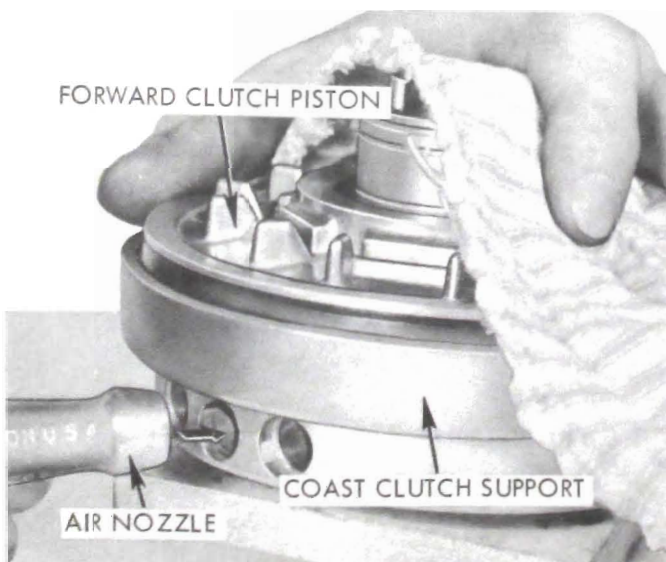

d. Disassembly and Inspection of Coast Clutch Support and Forward Clutch Piston


1. Cover assembly with a cloth as protection against oil spatter and direct compressed air into center oil transfer sleeve hole to remove forward clutch piston from coast clutch support.

5-256




2. Examine two hooked oil rings on coast clutch support. If worn or scored, unhook, expand, and remove the rings. Examine inner bore of support where output shaft oil rings contact support for wear or scoring.

5-257

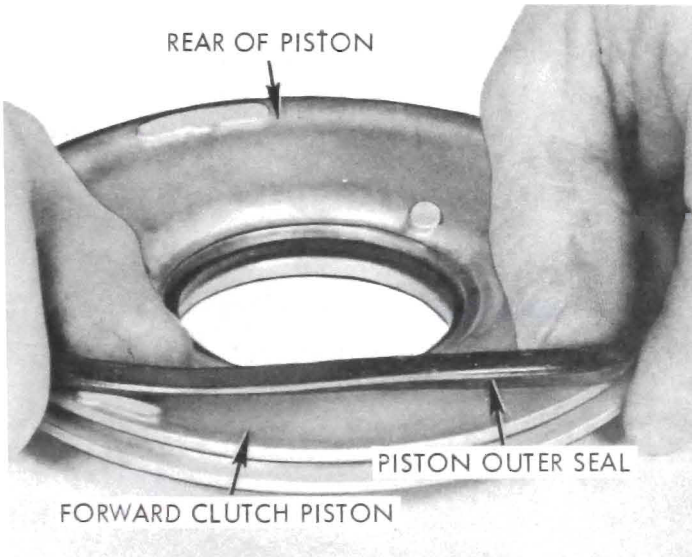

3. Examine forward clutch piston outer seal. If nicked, torn or worn, remove the seal.

5-258

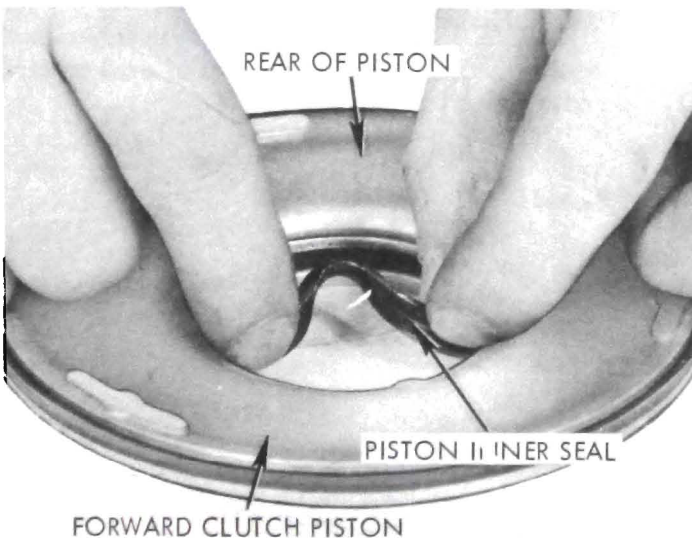

4. Examine forward clutch piston inner seal. If nicked, torn or worn, remove the seal.


5-259



e. Reassembly of Coast Clutch Support and Forward Clutch Piston


1. Install and hook ends of oil rings on coast clutch support.

5-260

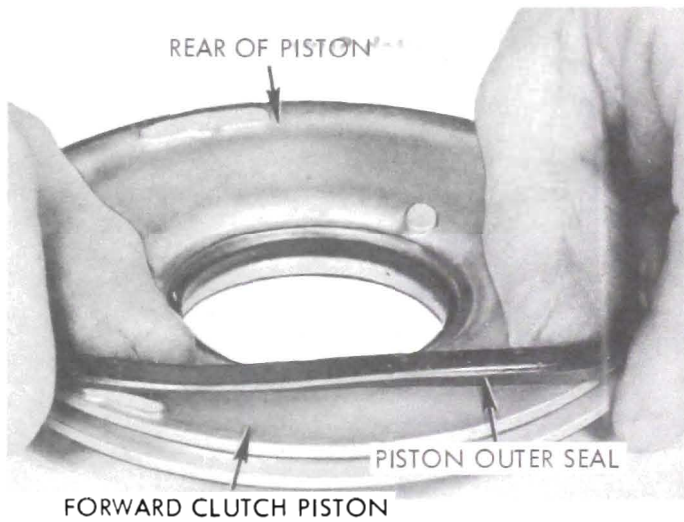


2. Install forward clutch piston outer seal on piston. Lip of seal toward rear of piston.

5-261

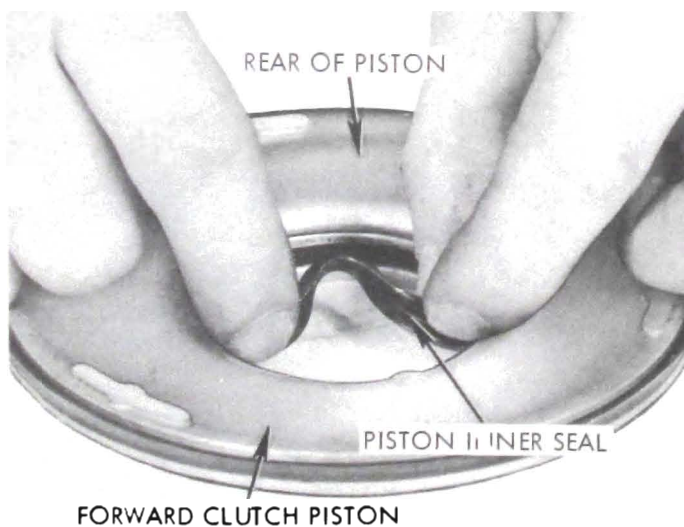

3. Install forward clutch piston inner seal on forward clutch piston. Lip of seal toward rear of piston.


5-262

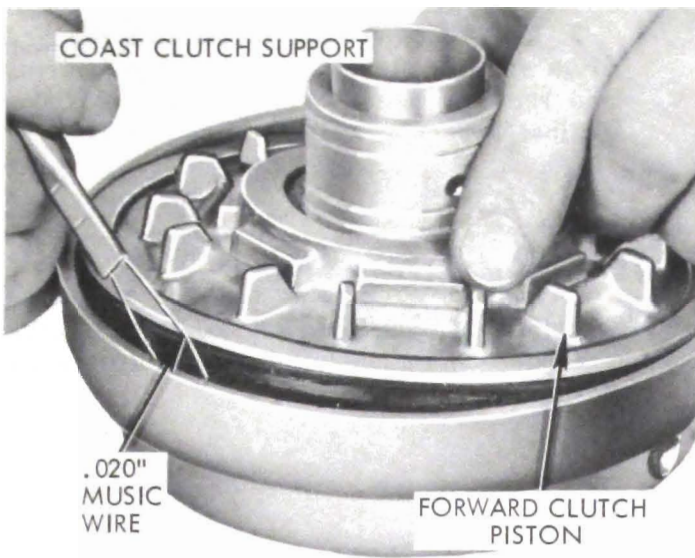

4. Lubricate seals and install forward clutch piston in coast clutch support. A loop of smooth wire may be used as an aid in starting the seal lip into the piston bore.

NOTE: Start inner seal lip first.


5-263

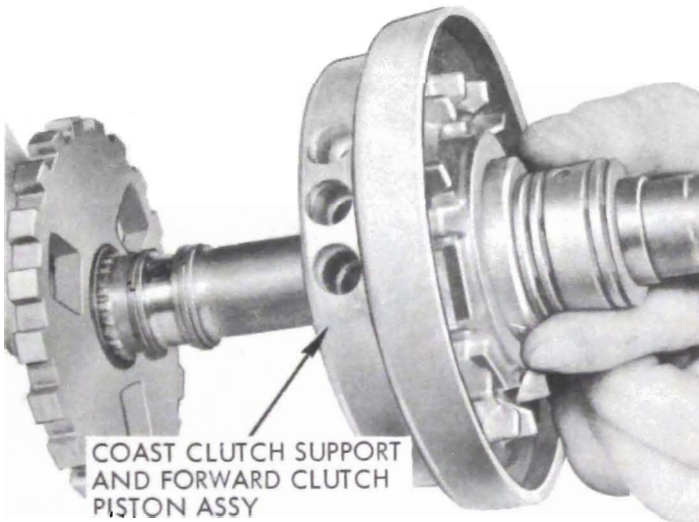

f. Assembly of Output Shaft, Coast Clutch Support, Forward Clutch Piston, Parking Lock Ratchet Wheel and Governor Assembly.


1. Lubricate oil rings and slide coast clutch support and forward clutch piston assembly on output shaft.

5-264

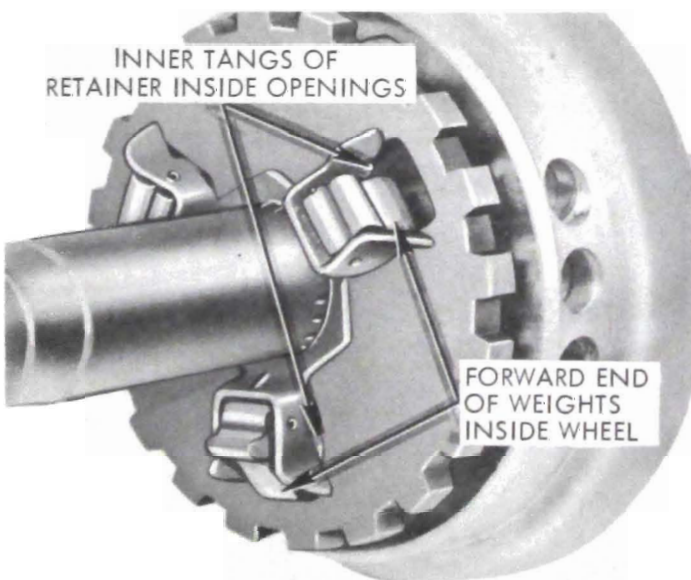

2. Slide governor weight retainer and governor weight assembly on rear of output shaft. Be certain weights and retainers are positioned as shown in figure. Inner tangs of retainer must be inside the openings of parking lock ratchet wheel. Forward end of weights must also be inside openings of wheel.

5-265

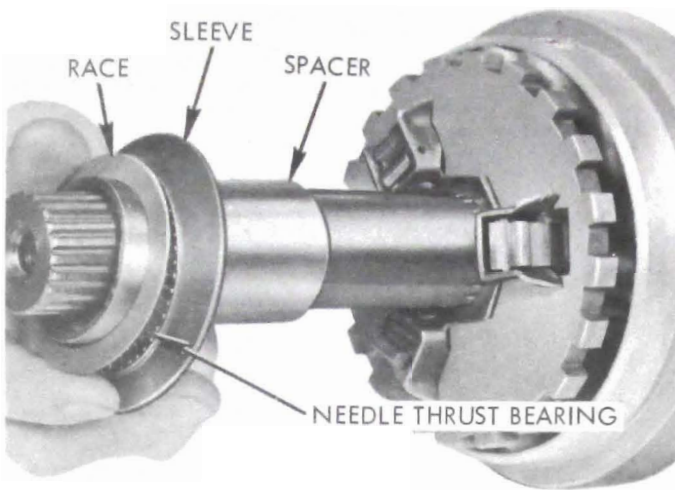


3. Lubricate needle thrust bearing and slide spacer, sleeve, needle thrust bearing and race on rear of output shaft. Position against governor weights.

5-266

If further work is to be done on transmission, set assembly aside. Refer to paragraph 5-28 for installation of output shaft assembly.


5-25 GOVERNOR LEVER AND PIN: REMOVAL AND REPLACEMENT

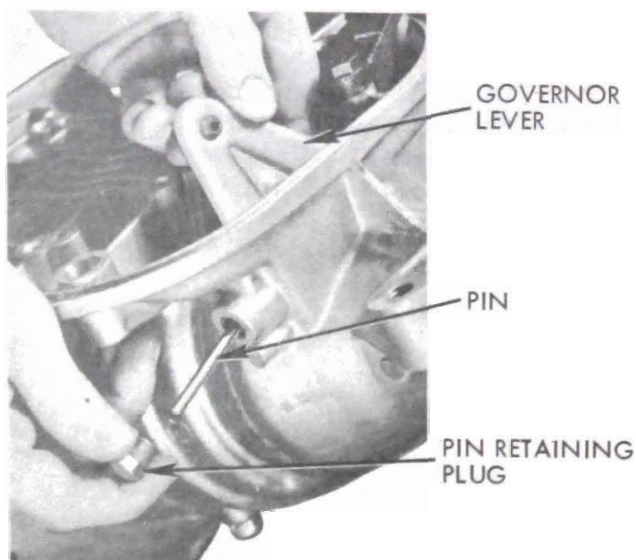

If lever is damaged or pin hole is badly worn, remove pin retaining plug in side of transmission case. Slide pin out of case and lever. Replace parts as necessary. Install pin through case and lever. Install plug.

5-267


5-26 TRANSMISSION REAR BEARING: REMOVAL AND INSTALLATION

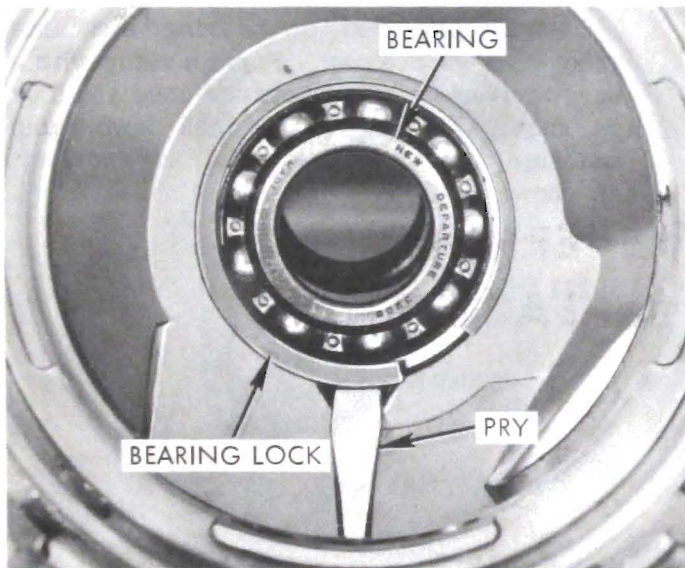

a. Removal


1. Remove governor lever and pin (par. 5-25). If bearing is defective, pry bearing lock out of groove in case.

5-268

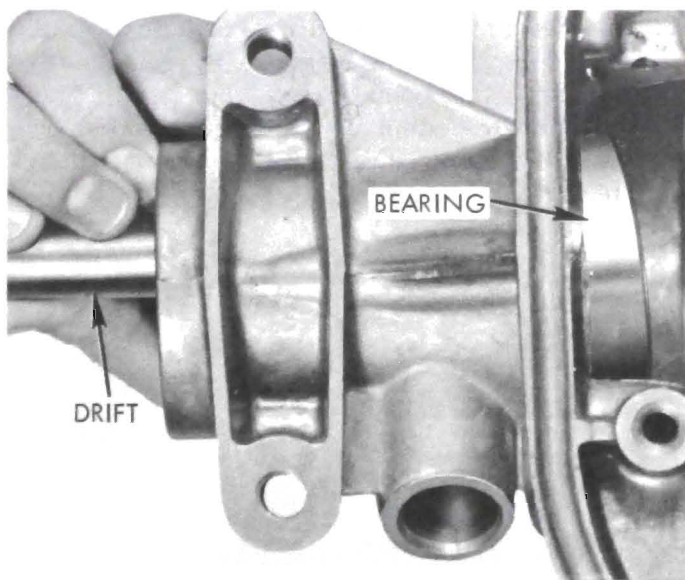


2. Drive bearing out of case using a drift inserted from the rear.

5-269

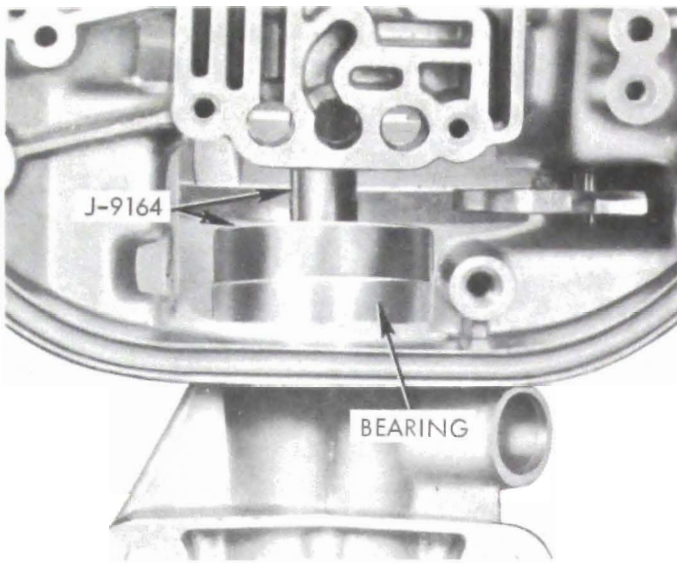**b. Installation**

1. Drive new bearing squarely into case using Installer J-9164.


5-270

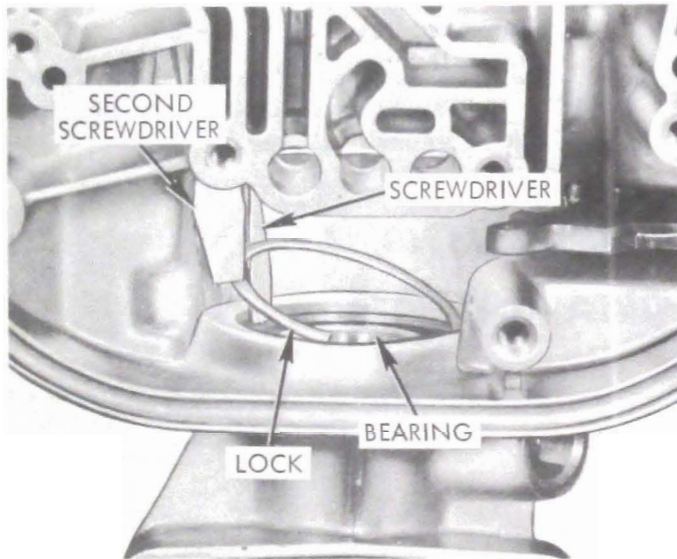

2. Start one end of bearing lock into groove above bearing. Form a ramp with a screwdriver inserted between case and lock as shown in figure. Push lock down ramp and into groove with second screwdriver as shown in figure.

5-271


5-27 RANGE SELECTOR LEVERS AND SHAFT, THROTTLE VALVE CONTROL LEVERS AND SHAFT, AND PARKING LOCK ACTUATOR: REMOVAL AND REPLACEMENT

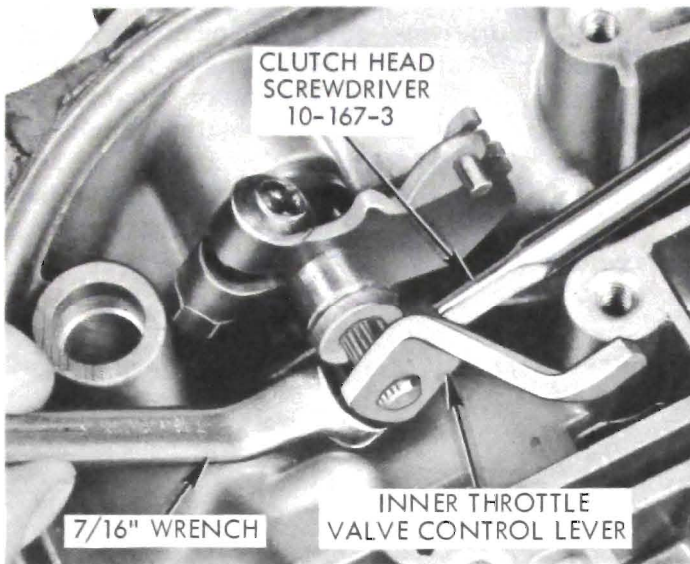

a. Removal of Inner Throttle Valve Control Lever


1. Use clutch head screwdriver 10-167-3 and 7/16" wrench to remove screw and nut attaching lever to shaft.

5-272

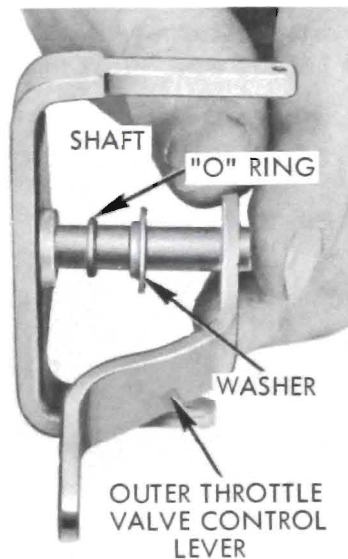

2. Slide inner lever off shaft and remove. Slide outer lever and shaft out of range selector shaft. Check "O" ring; if worn or torn, remove "O" ring.


5-273

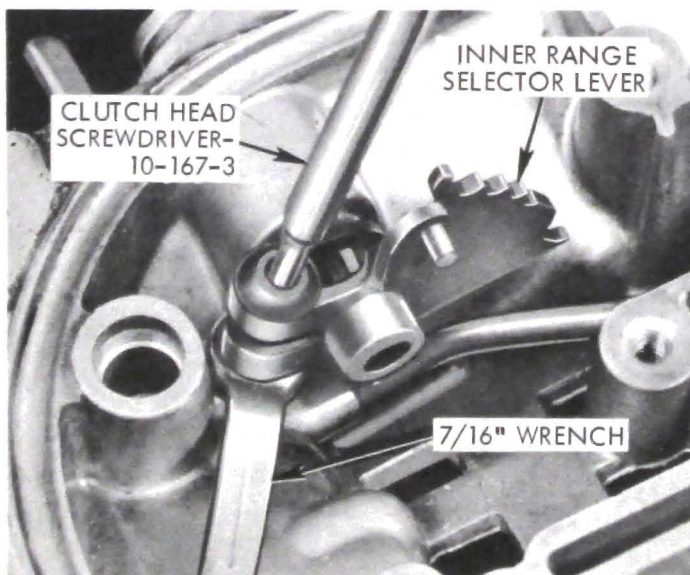

b. Removal of Range Selector Levers and Shaft and Parking Lock Actuator


1. Use clutch head screwdriver 10-167-3 and 7/16" wrench to remove screw and nut attaching range selector inner lever to shaft.

5-274

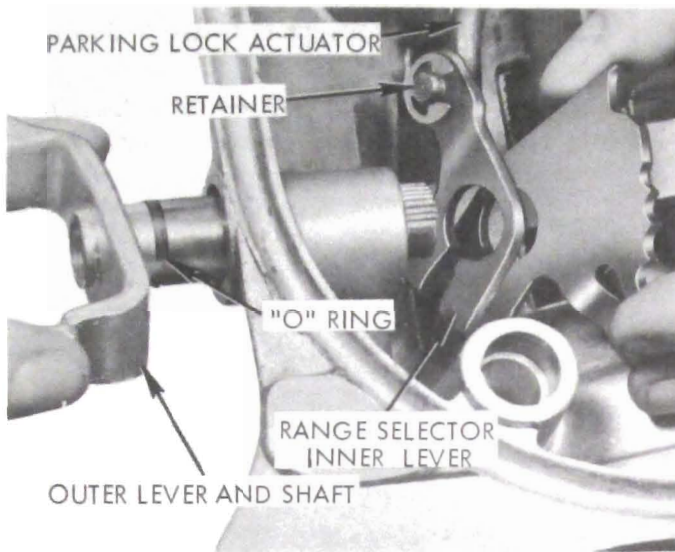

2. Slide range selector inner lever off selector shaft. Remove inner lever and parking lock actuator assembly. If actuator or inner selector lever requires replacement, snap off actuator retainer and assemble new parts as necessary. Examine shaft "O" ring. If worn, nicked or cut, remove "O" ring.


5-275

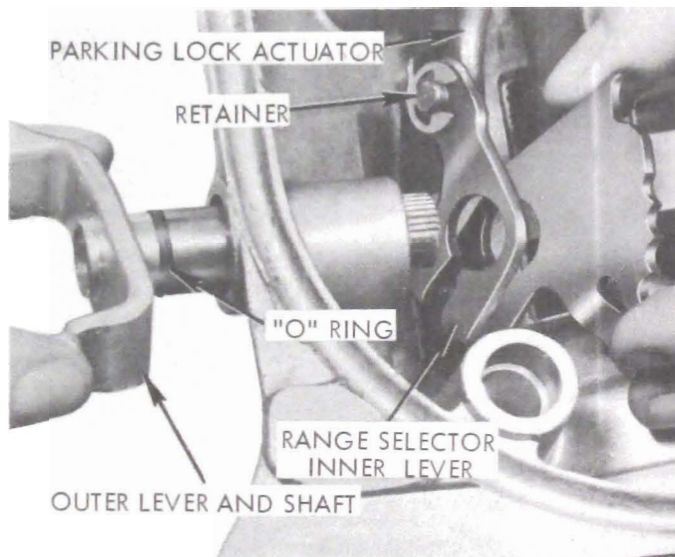

c. Installation of Range Selector Levers and Shaft


1. Install and lube "O" ring. Slide shaft through case and carefully align splines on shaft with splines in inner lever. Hold outer lever and shaft "in" against case and push inner lever completely on shaft.

5-276

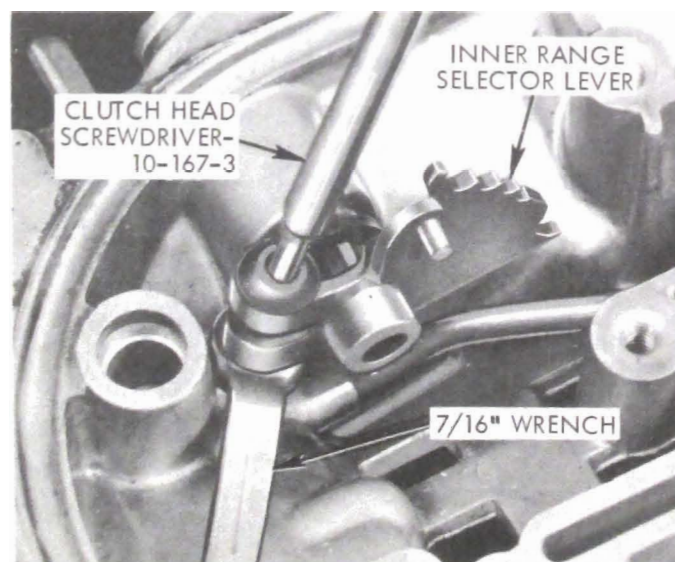

2. Install and tighten screw and nut.


5-277

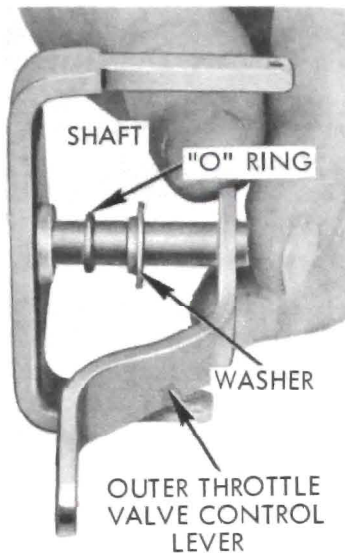

d. Installation of Throttle Valve Control Levers and Shaft

1. Assemble special washer and "O" ring on throttle control lever shaft as shown in figure. Lube "O" ring. Slide shaft into range selector shaft.


5-278

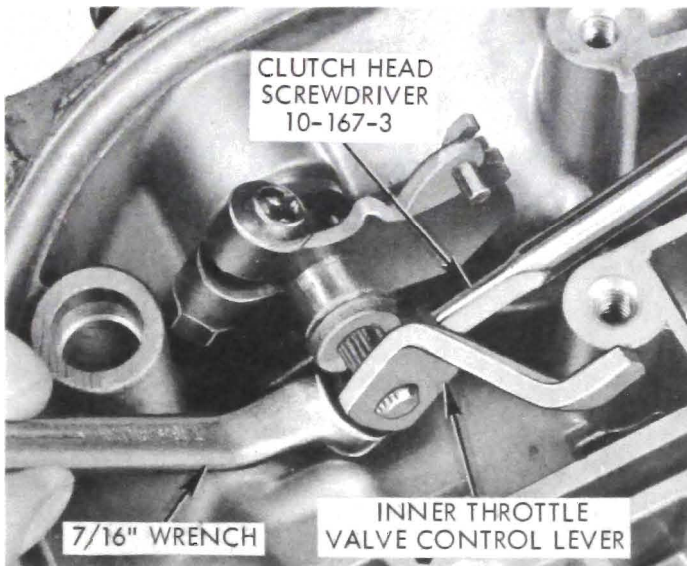

2. Carefully engage splines on shaft with splines in inner lever. Press lever on shaft completely. Install and tighten clutch head screw and nut.

5-279


5-28 OUTPUT SHAFT, COAST CLUTCH SUPPORT, FORWARD CLUTCH PISTON, PARKING LOCK RATCHET WHEEL, AND GOVERNOR ASSEMBLY: INSTALLATION

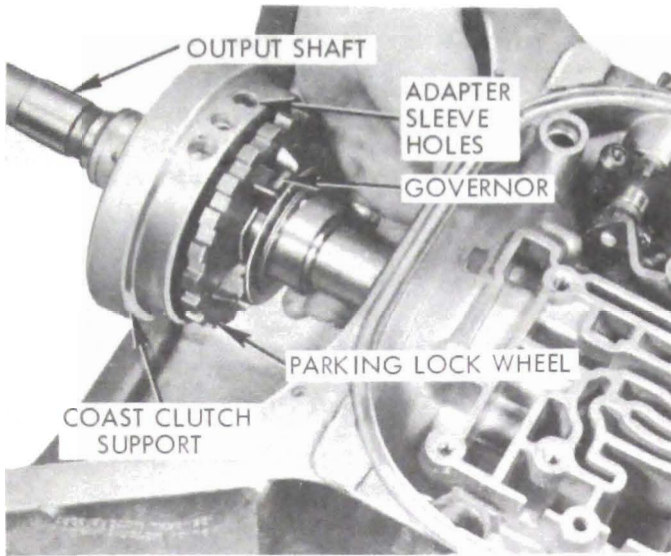

1. Lube coast clutch support O.D. and position support so oil transfer holes are "up". Hold governor assembly in position against parking lock wheel and start rear of shaft through bearing. Ease assembly into position. If parking lock pawl is installed, hold it "up" out of the way to allow assembly to move fully into case.


When correctly positioned in case, the coast clutch support oil transfer holes will line up with oil transfer holes in case. If necessary to rotate support, insert smooth punch through oil transfer holes in case to rotate support. Use care to avoid nicking or denting either support or case.

5-280

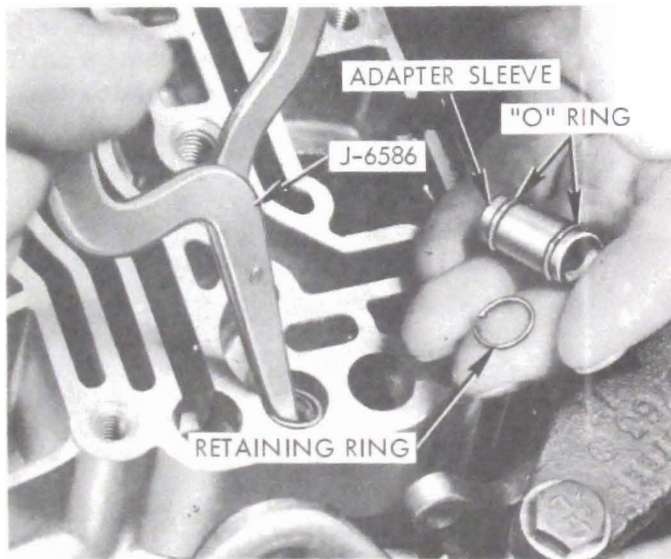

2. Be certain holes in case and support line up. Lube and install oil transfer sleeves and "O" rings, and retainers. Retainers should be positioned flat against sleeves.


5-281

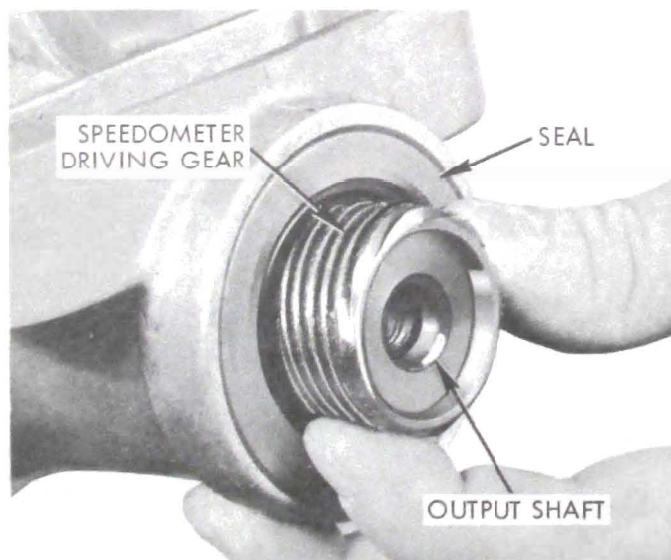

3. Lubricate liberally with chassis lube to avoid damage to seal, and install speedometer driving gear on output shaft. Install companion flange (par. 5-23).


5-282

5-29 COAST AND OVER-RUNNING CLUTCH ASSEMBLY, FORWARD CLUTCH PACK, RELEASE SPRING AND APPLY LEVERS: INSTALLATION

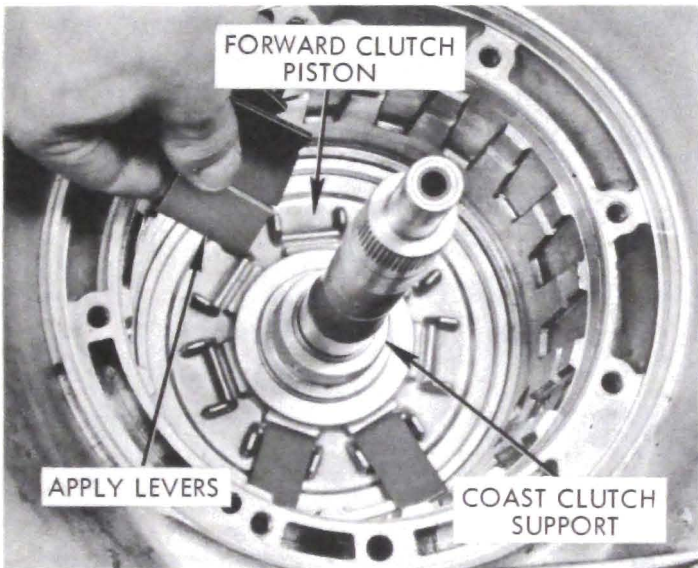


1. With transmission case in vertical position, install forward clutch apply levers as shown in figure.

5-283

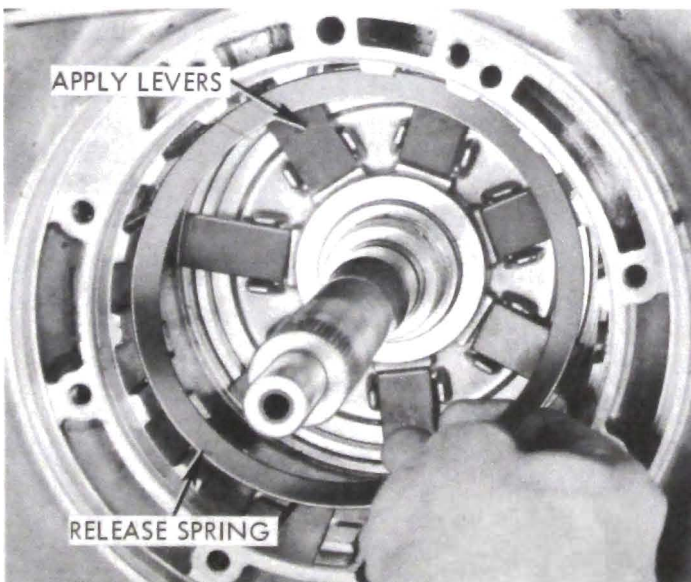

2. Install forward clutch release spring flat on levers (inner edge of spring "down").


5-284

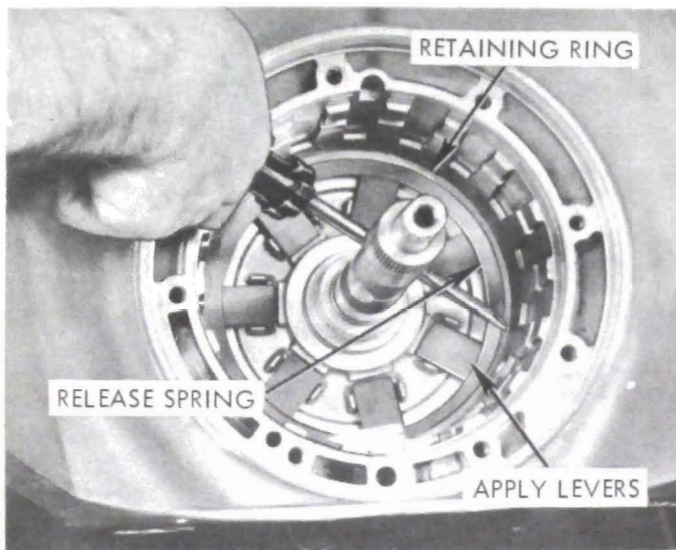

3. Install release spring retainer solidly in groove of case.


IMPORTANT NOTE: The release spring may move to one side and prevent easy installation of retaining ring. Center the spring as necessary to install ring fully into groove. It is absolutely necessary that the retaining ring be correctly installed. Check - Be certain retaining ring is in groove all the way around.

5-285

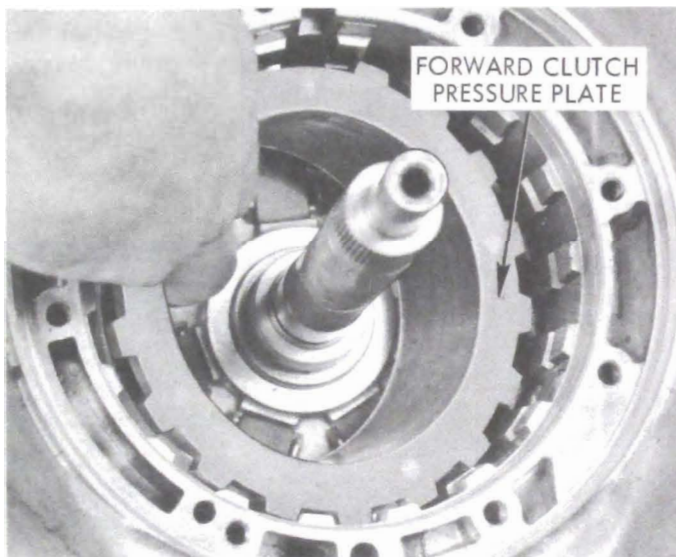


4. Set forward clutch pressure plate in place on apply levers. Take care to position wide space between lugs toward top of case for installation of anchor later.

5-286

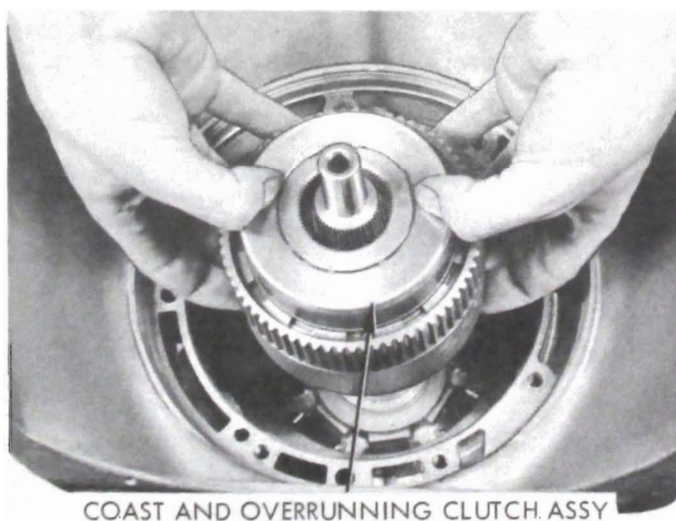


5. Set coast and overrunning clutch assembly in place on coast clutch support.

5-287

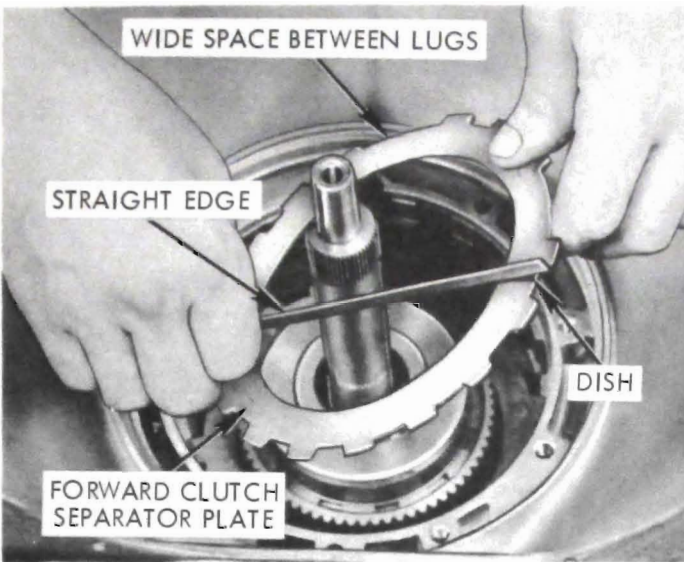

6. Check a forward clutch separator plate (no notches on lugs) for "dish". Note direction of dish and install it on forward clutch pressure plate. Take care to position wide space between lugs toward top of case for installation of anchor later.


5-288

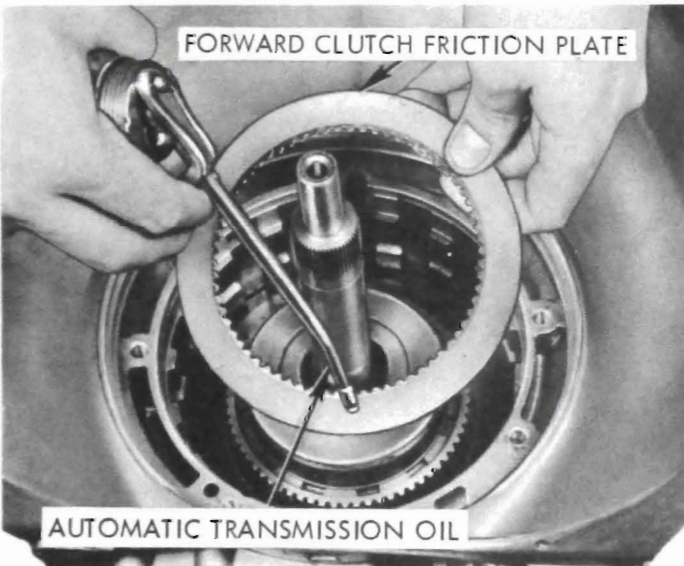

7. Lubricate a forward clutch friction plate with automatic transmission oil. Install over coast clutch housing by engaging splines of plate with splines on coast clutch housing. Continue alternately installing a separator plate and a lubed friction plate until five separator plates (all "dished" same way) and five friction plates have been installed.

NOTE: All separator plates must be installed with wide space between lugs toward top of case for installation of anchor later.


5-289

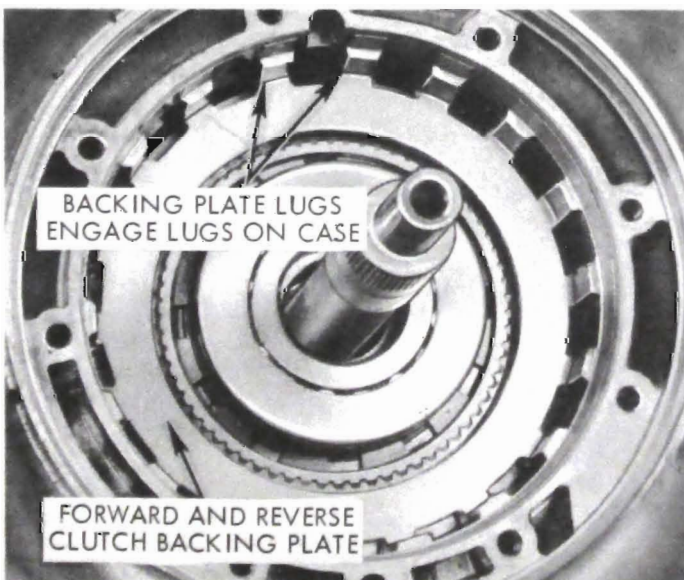

8. Install forward and reverse clutch backing plate on top of forward clutch pack. Rotate backing plate so lugs on backing plate engage lugs in case.

NOTE: The backing plate should require no force to install. Correct installation of forward clutch pack will provide sufficient clearance and require no force to install backing plate.


5-290

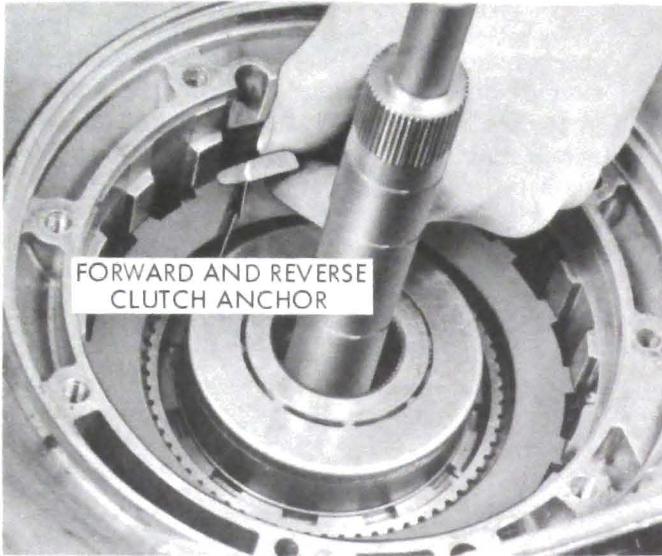

9. Install forward and reverse clutch anchor in slot at top of case.


5-291

5-30 REVERSE CLUTCH COMPONENTS AND OIL PUMP: INSTALLATION

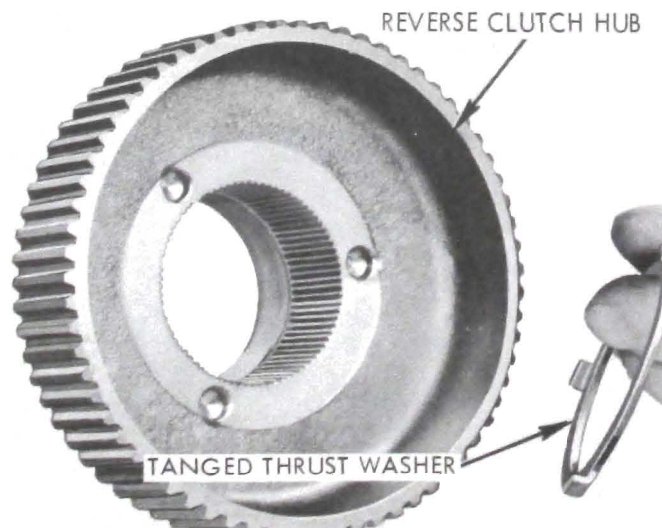


1. Be sure tanged thrust washer is in place at rear of reverse clutch hub.

5-292

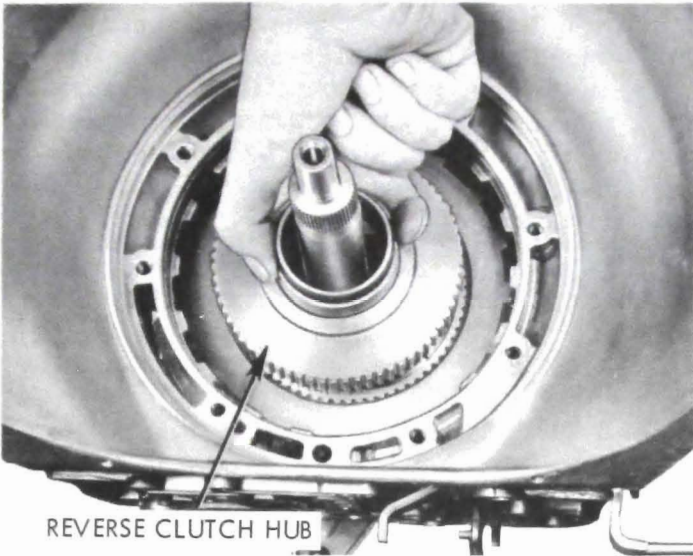


2. Set reverse clutch hub in place on overrunning clutch assembly.

5-293

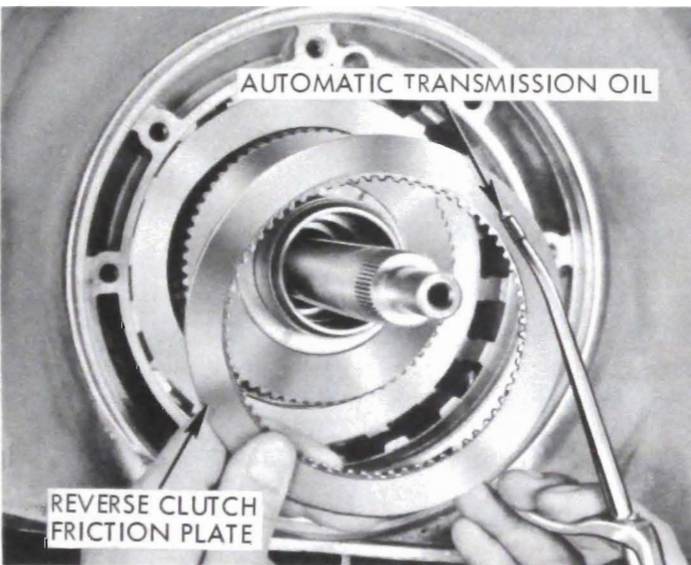


3. Lubricate and install a reverse clutch friction plate on forward and reverse clutch backing plate by engaging splines on hub with splines on plate.

5-294

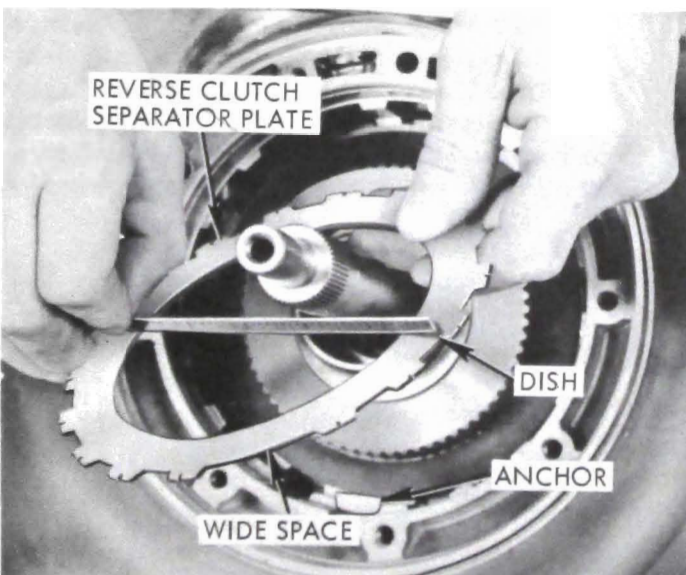

4. Check a reverse clutch separator plate (notch in tangs) for "dish". Note direction of "dish" and install separator plate above friction plate. Install plate with wide space between lugs toward top of transmission to clear anchor. Continue the build-up of clutch pack by alternately installing a lubed friction plate and a separator plate until four friction plates and three separator plates have been installed. All separator plates must be installed with "dish" same way.


5-295

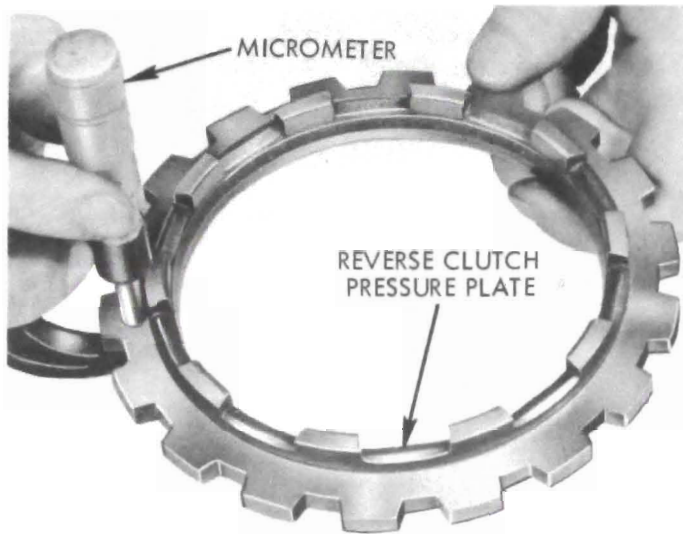

5. Reverse clutch pressure plates are supplied in two thicknesses. If a new pressure plate is being installed, measure the old plate in an unworn area near the end of a lug. The new plate to be installed must be the same thickness or reverse clutch pack clearance will be adversely affected.

Install pressure plate over top friction plate with wide space between lugs toward top of transmission to clear anchor.

5-296

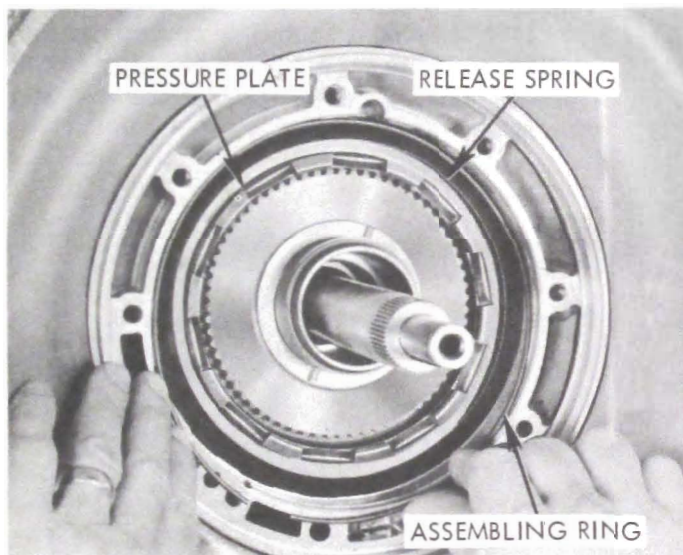


6. Install release spring and assembling ring over pressure plate.

NOTE: Center edge of release spring "up".


5-297

NOTE: Do not install apply levers until hub clearance has been checked and thrust washer between reverse clutch hub and reverse clutch piston housing has been selected.

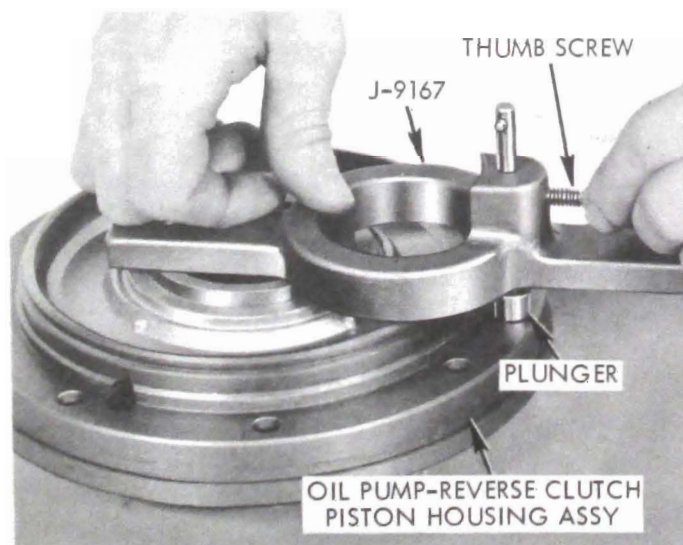


7. Set gauge J-9167 on oil pump - reverse clutch piston housing assembly with gauge bearing firmly on center hub of reverse clutch piston housing. Loosen thumb screw and allow plunger to bear on gasket surface of oil pump assembly. Tighten thumb screw.

5-298

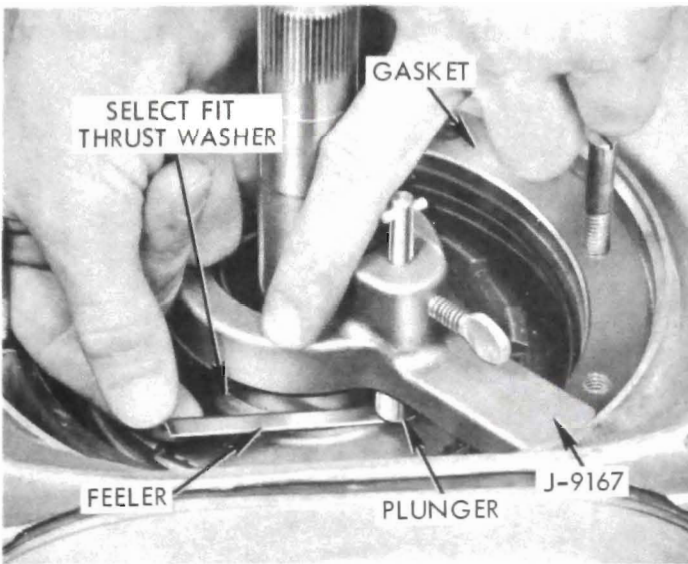

8. Install new oil pump gasket over 5/16 - 18 guide pins in case. Place a select fit reverse clutch hub to reverse clutch piston housing thrust washer in position on hub. Set gauge J-9167 over reverse clutch hub with ends of gauge resting squarely on gasket. Check clearance between end of plunger and select fit thrust washer with .006" and .035" feeler gauges. If the .006" feeler will not fit between the end of the plunger and the washer, select one size thinner washer. If the .035" feeler will fit between the end of the plunger and the washer, select one size thicker washer.


5-299

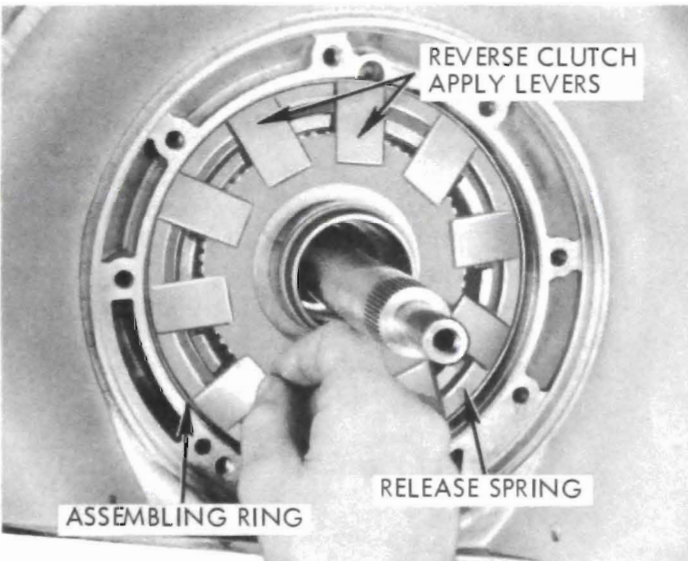

9. Install reverse clutch apply levers in notches of pressure plate, flat on release spring and with lever ends under the assembling ring. Push assembling ring down on levers to hold them in place. Chassis lube daubed on levers will help keep them in place.


NOTE: It is not necessary to remove gasket and guide pins for this operation.

5-300

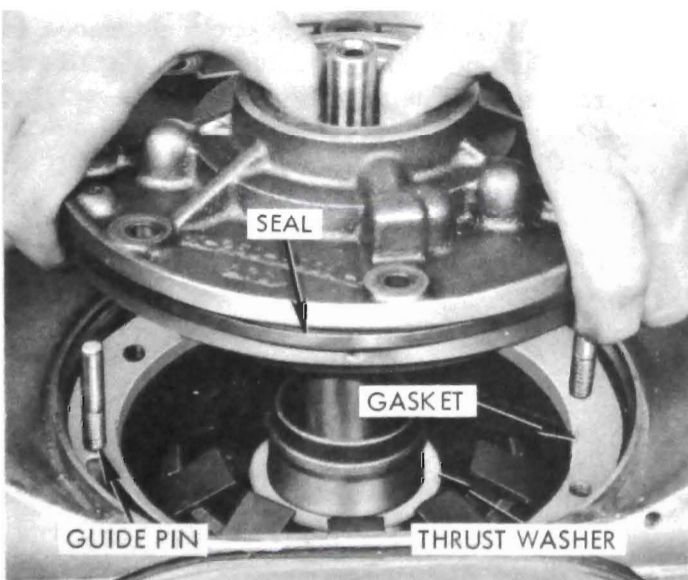


10. Liberally lube thrust washer and oil pump body to case seal. Carefully line up bolt holes with guide pins and lower pump into place.

5-301

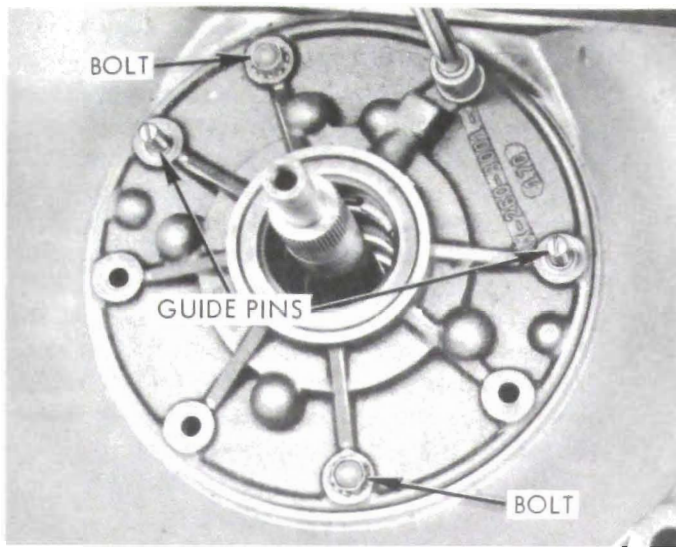

11. Install and tighten at least three oil pump body to case bolts.


5-302

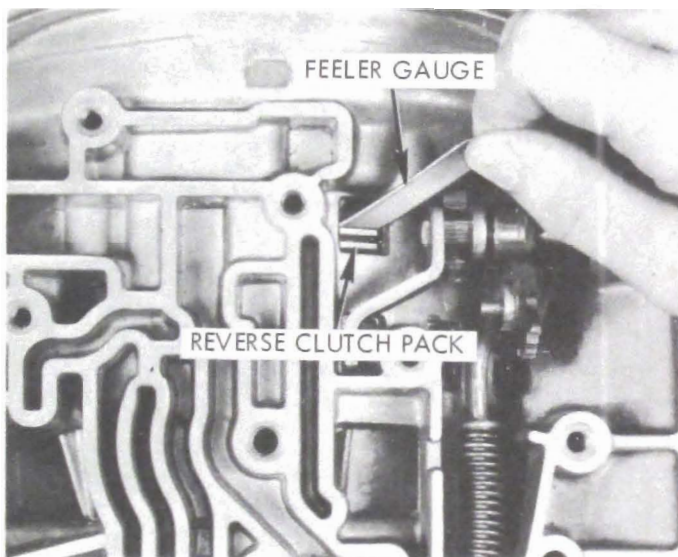

12. Insert a .029" feeler gauge through the case between a reverse clutch friction plate and a separator plate. A .029" feeler should go and a .051" feeler should not go.

If pack clearance is less than .030", it may be due to incorrect pressure plate, separator plates not all "dished" same way or apply levers incorrectly installed and binding on piston. If pack clearance is more than .050" it may be due to incorrect pressure plate or excessively worn friction or separator plates.


5-303

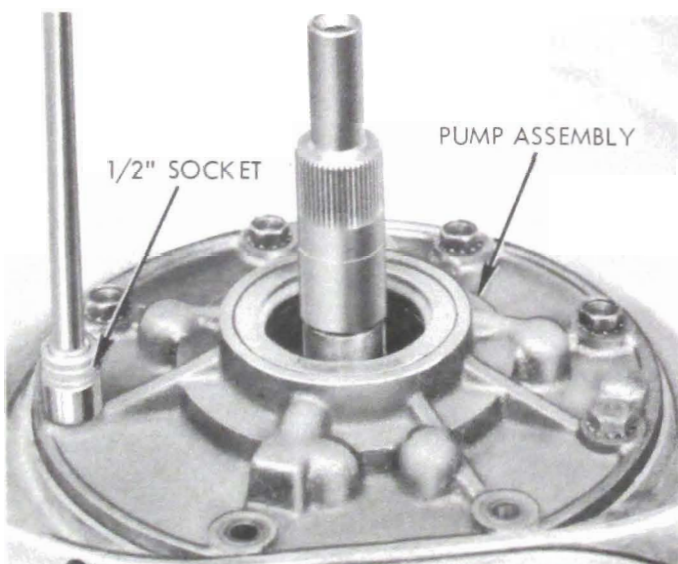

13. If reverse clutch pack clearance is satisfactory, remove guide pins, install remaining special bolts and captive sealing lock washers. Torque alternately and evenly to 20-24 ft. lbs.


5-304

5-31 VALVE BODY: INSTALLATION

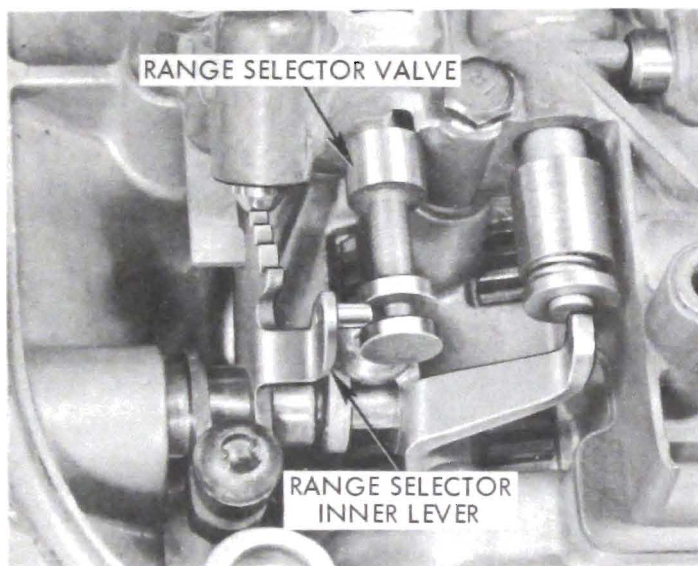


1. Be certain surfaces of case and valve body are clean. Set valve body assembly in place and engage pin of range selector inner lever with groove of selector valve.

5-305

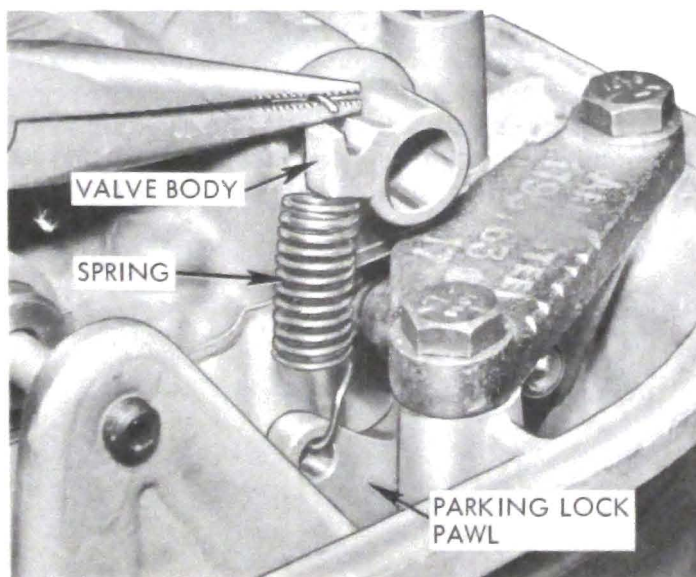


2. Install parking lock pawl disengaging spring.

5-306

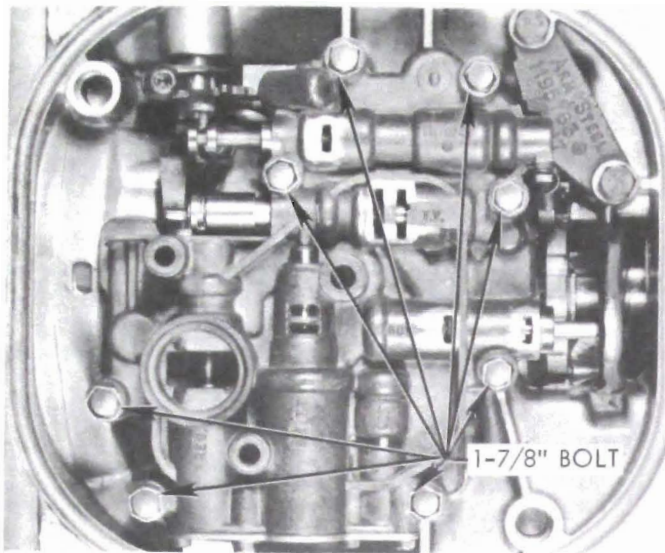


3. Install 1/4 - 20 x 1-7/8" bolts in locations shown.

5-307

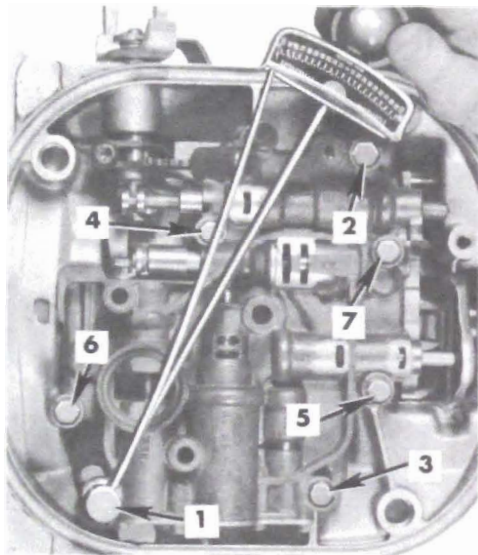


4. Torque bolts in sequence shown to 100 inch pounds.

5-308

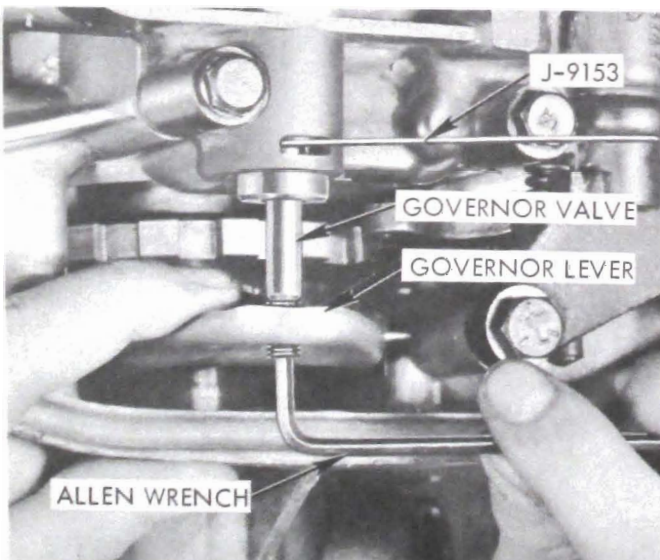


5. Insert a .025" feeler J-9153 between forward edge of rear land of governor valve and valve sleeve. Hold governor lever rearward and valve forward against feeler. Adjust screw so screw just touches end of valve with valve held "in" against feeler. Remove feeler.

5-309

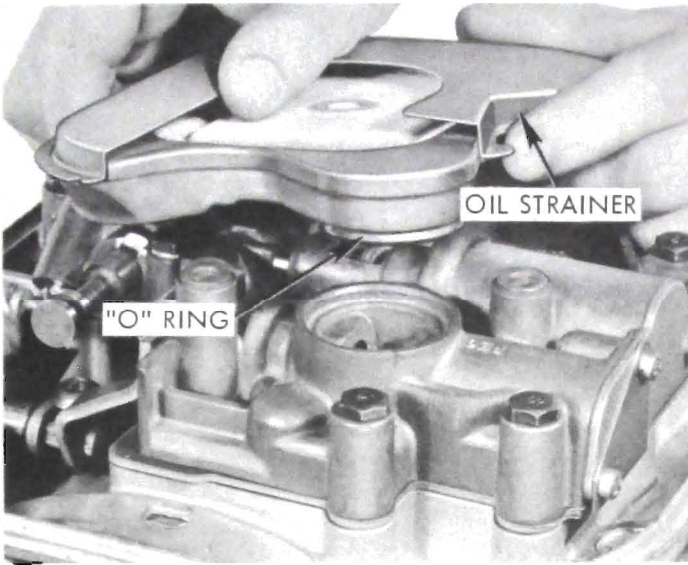


6. Install new "O" ring on oil strainer and set strainer in place on valve body.

5-310

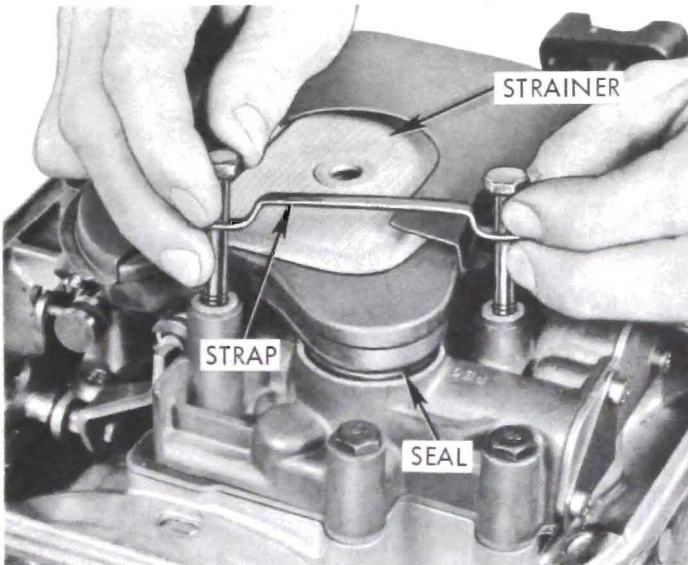

7. Install strainer strap and two 1/4 - 20 x 2-1/2" bolts.


5-311

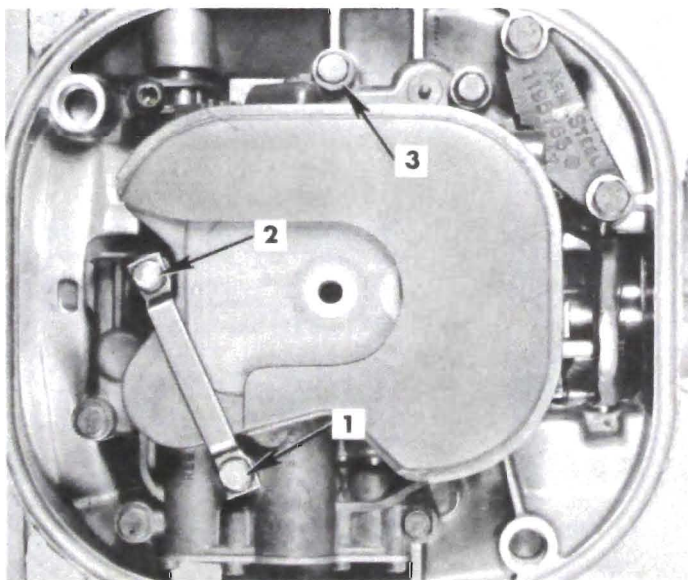

8. Torque bolts indicated to 100 inch pounds in sequence shown.

5-312

5-32 PARKING LOCK PAWL: REMOVAL AND REPLACEMENT

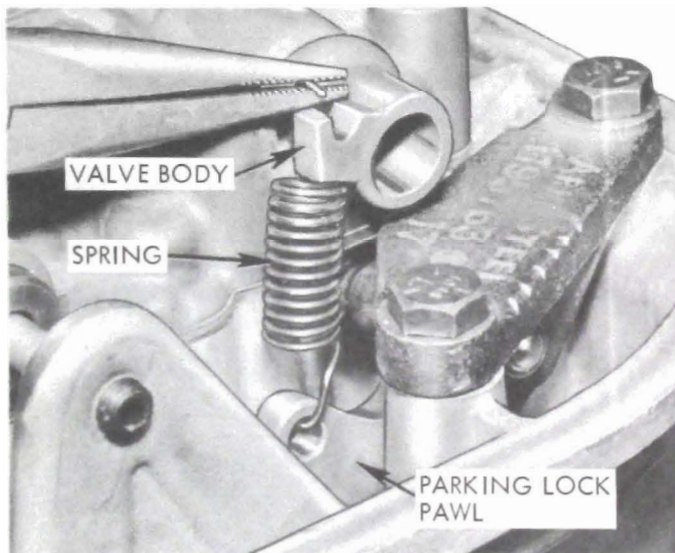


NOTE: This operation can be performed with transmission in car.

a. Removal


1. Remove oil pan and seal (par. 5-21); remove parking lock pawl disengaging spring.

5-313

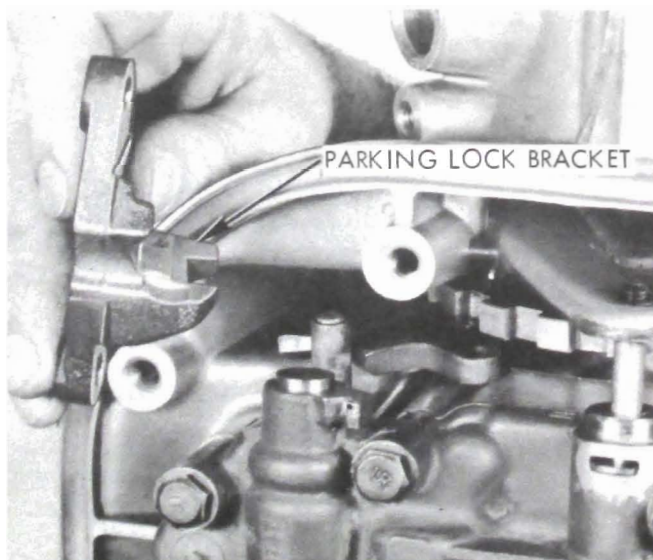


2. Remove parking lock bracket to case bolts (1/2" wrench). Remove bracket.

5-314

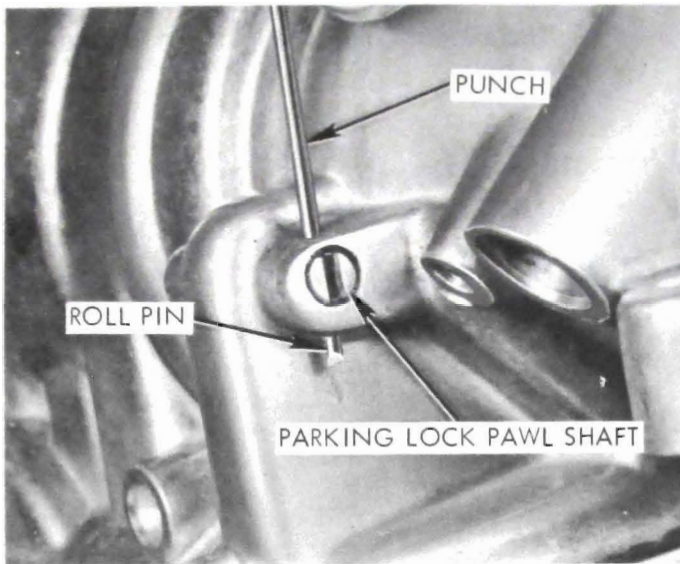

3. Use a small punch or drift to drive parking lock pawl shaft pin out of case.


5-315

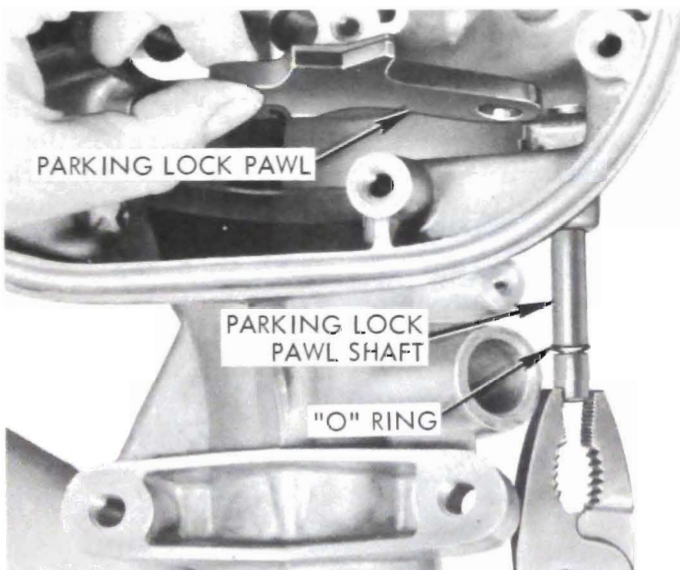

4. Pull parking lock pawl shaft and "O" ring out of case. Remove pawl.

NOTE: It may be necessary to start shaft out of case using needle nose pliers to grip the shaft inside the case.


5-316

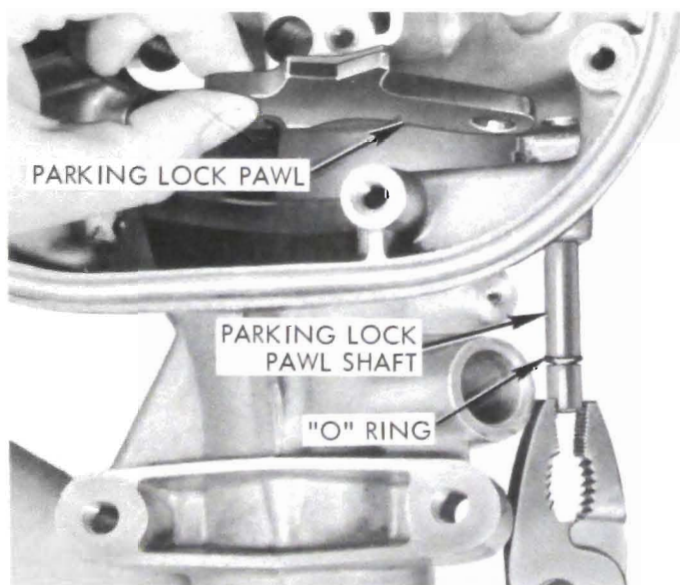

b. Replacement


1. Install and lube "O" ring on parking lock pawl shaft. Align pawl with shaft and install shaft with slot lined up with hole in case. Install roll pin.

5-317

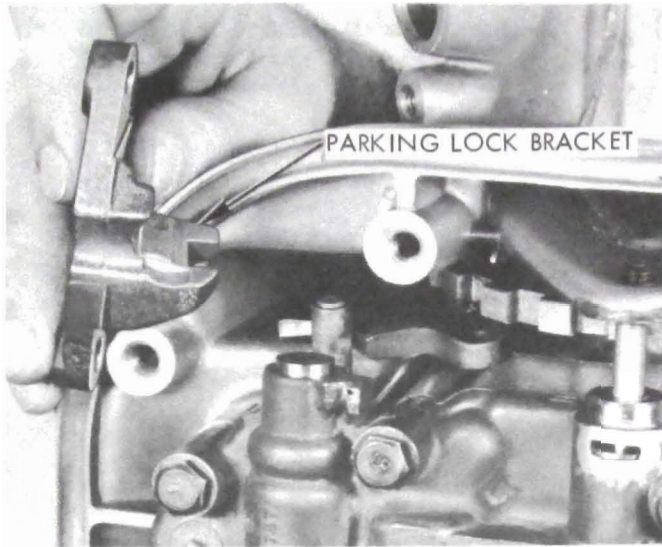


2. Install parking lock bracket but do not tighten bolts.

5-318

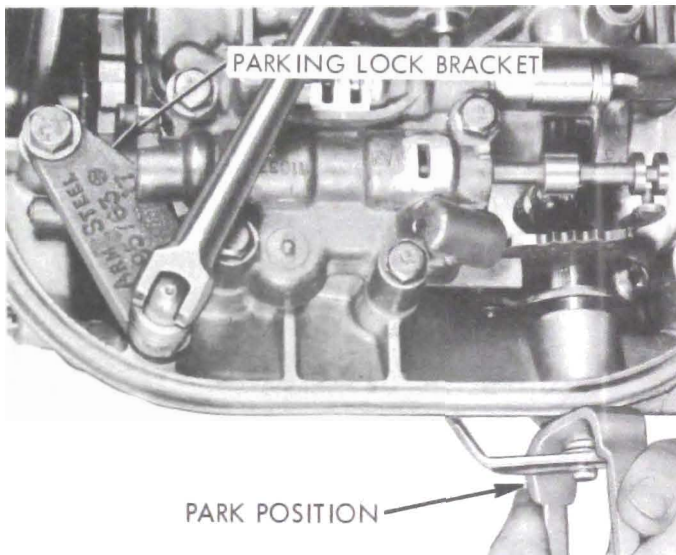

3. Shift transmission to park position. Turn output shaft so pawl engages wheel. Tighten parking lock bracket bolts. Move selector to neutral and back to park position. Check for freedom of travel between park and neutral ranges. If a bind exists, use .001" shim stock under one or both bracket bolts. Torque bolts to 15-20 ft. lbs.


5-319

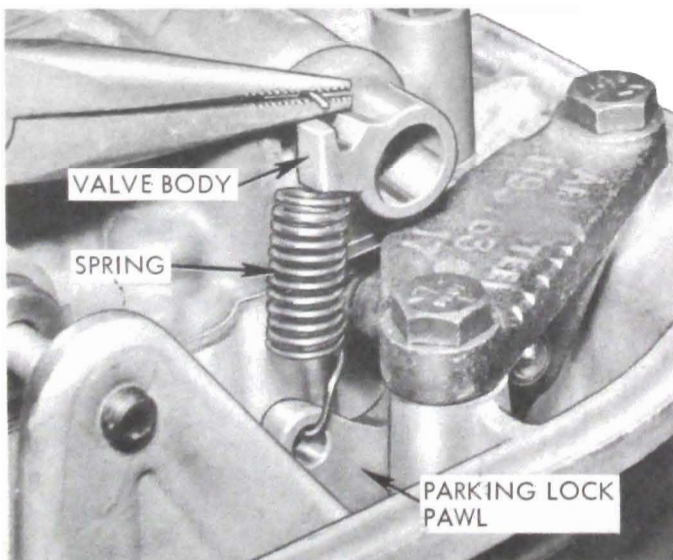

4. Install parking lock pawl disengaging spring.

5-320


5-33 OIL PAN AND SEAL: INSTALLATION

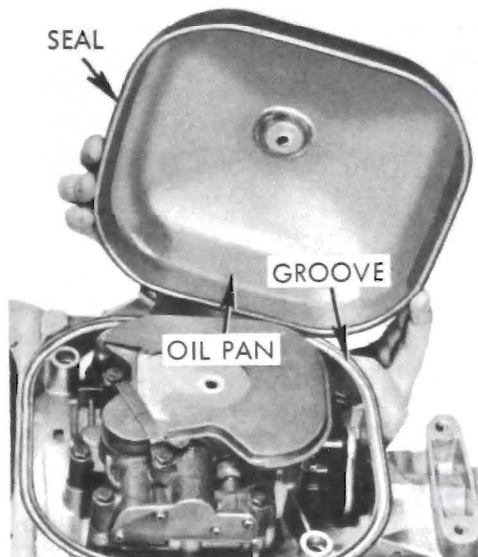

1. Assemble new seal to oil pan and set oil pan in place.

5-321


NOTE: Unless care is used to avoid stretching seal when installing seal on oil pan, difficulty will be encountered. A suggested alternate is to place seal in position in case groove around valve body and set oil pan on seal. Rap pan sharply with palm of hand to install seal on pan.

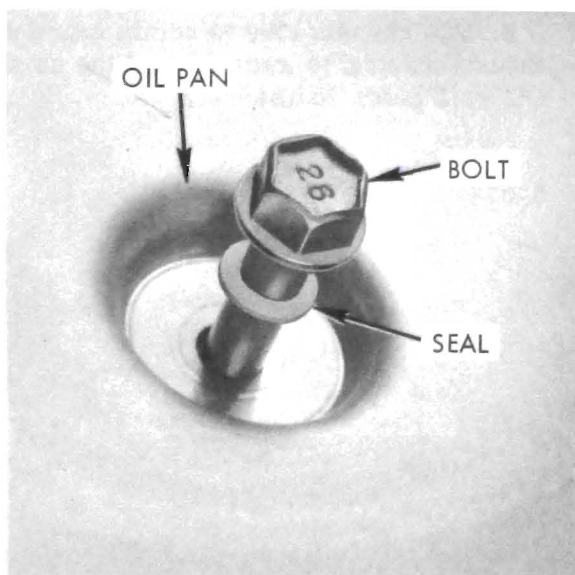

2. Assemble new seal on bolt and install bolt. Torque to 15-20 ft. lbs.

5-322

5-34 CONVERTER AND GEAR SET: INSTALLATION

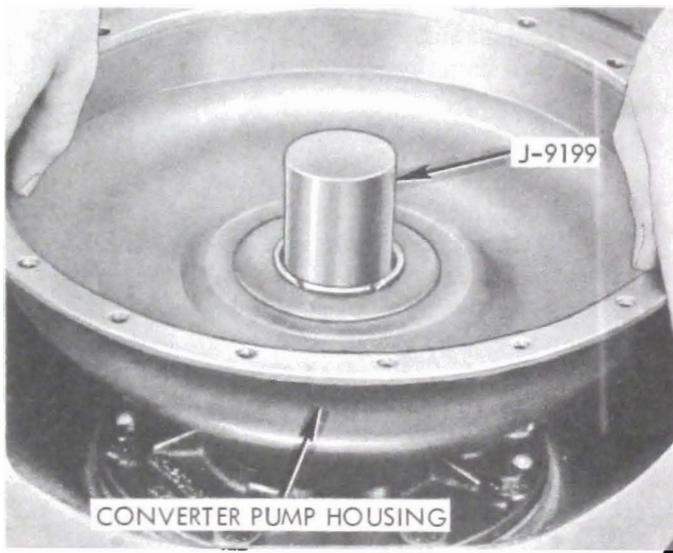


1. Set converter pump housing assembly tool J-9199 over output shaft. Tool centers converter pump housing so housing hub does not damage seal during installation. Lube hub of pump housing and install carefully. Rotate housing to engage lugs on pump with slots of converter pump housing hub. Remove tool J-9199.

5-323




2. Use chassis lube to retain caged needle thrust bearing to rear of turbine as shown. Oil exit holes to the rear.

5-324

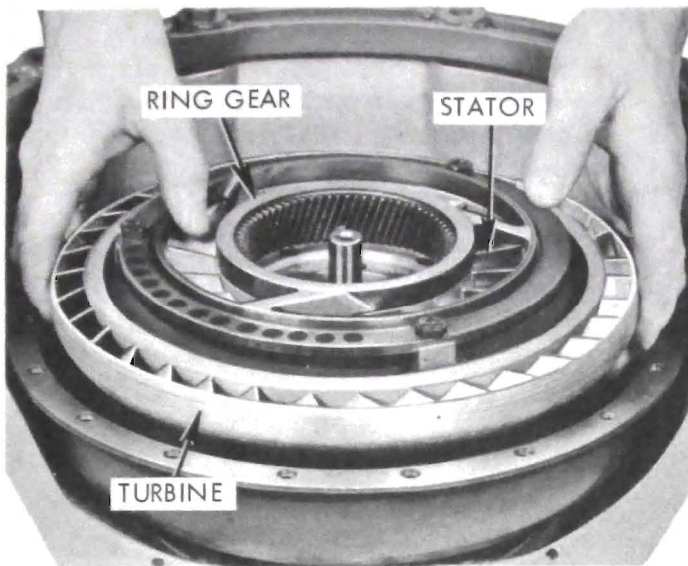


3. Set stator and turbine assembly into pump housing carefully to avoid damage to splines. Rotate turbine and stator to engage splines. The stator and turbine will drop into place when splines are lined up.

5-325

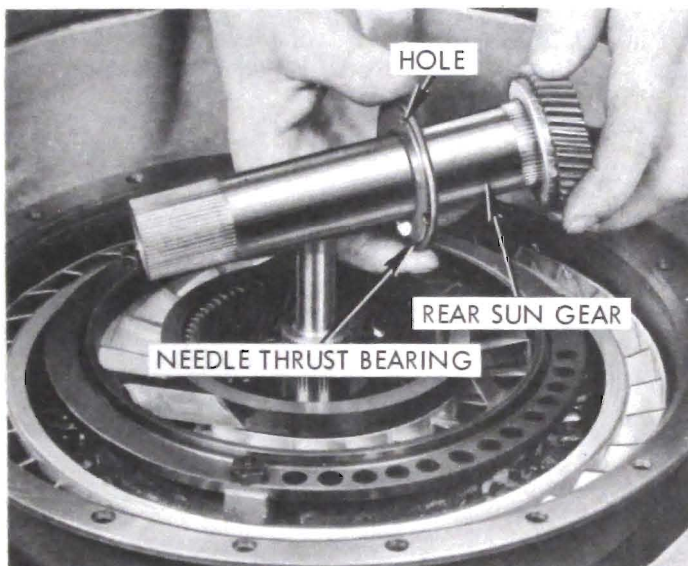

4. Assemble caged needle thrust bearing to rear of rear sun gear as shown. Oil exit holes to the rear.


5-326

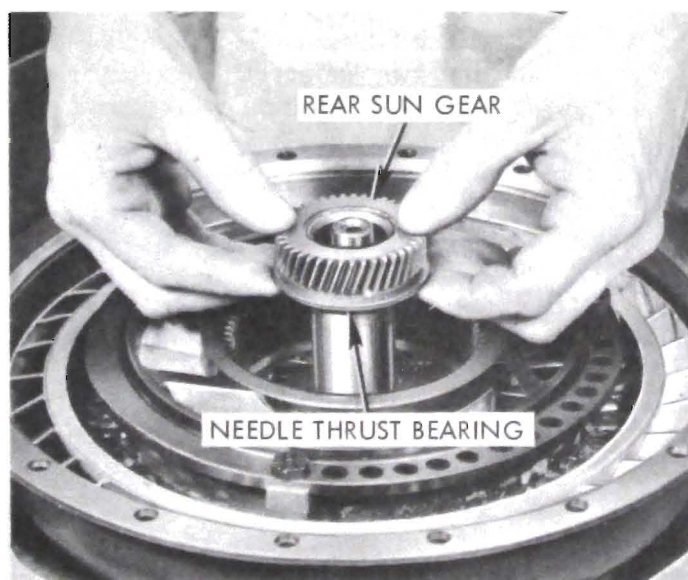

5. Lubricate sun gear shaft inside and out. Slide sun gear and needle bearing carefully into place. Rotate the gear to engage splines.


NOTE: Two sets of splines must be engaged (sun gear race and coast clutch hub). Do not force the gear as spline damage may result.

5-327

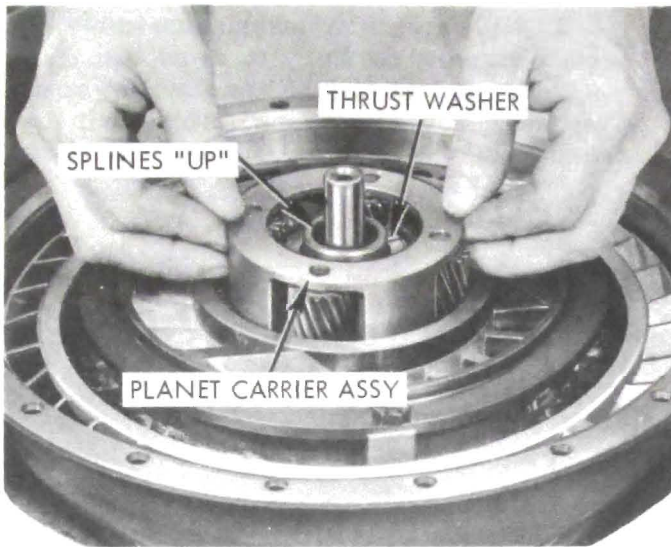


6. Set planet carrier over rear sun gear with tanged thrust washers in place front and rear. Deeper pocket of carrier "down" toward rear sun gear and splined portion "up".

5-328

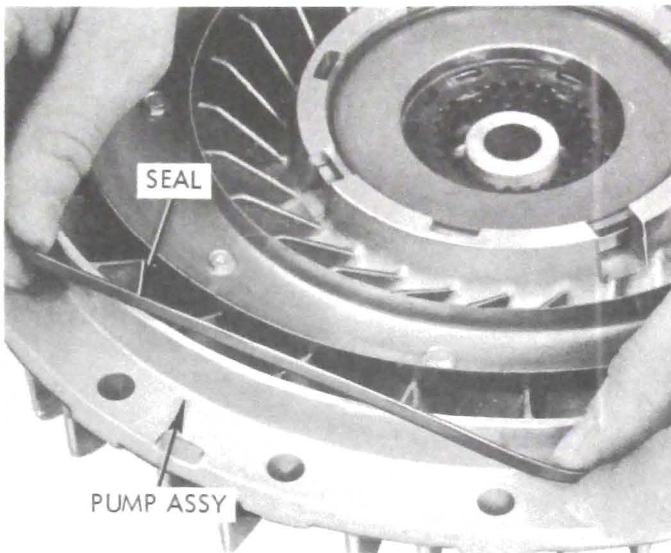


7. Assemble new converter pump oil seal to pump. The seal is square section and must not be twisted.

5-329

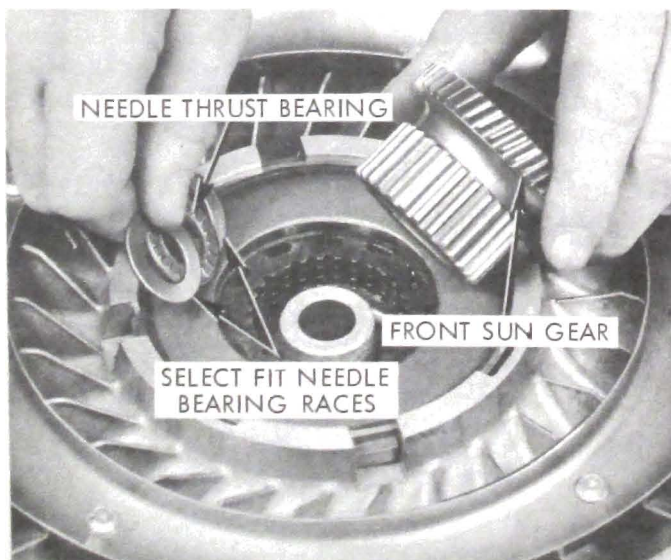


8. Lubricate and assemble needle thrust bearing and two select fit bearing races into front sun gear. Retain with chassis lube.

5-330

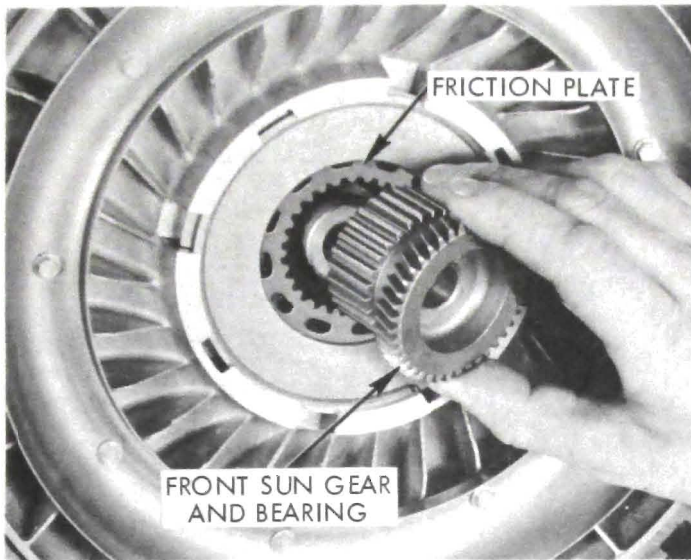


9. Engage splines on sun gear hub with splines of converter clutch friction plates. Rotate gear while pressing down very lightly till all splines are engaged.

5-331

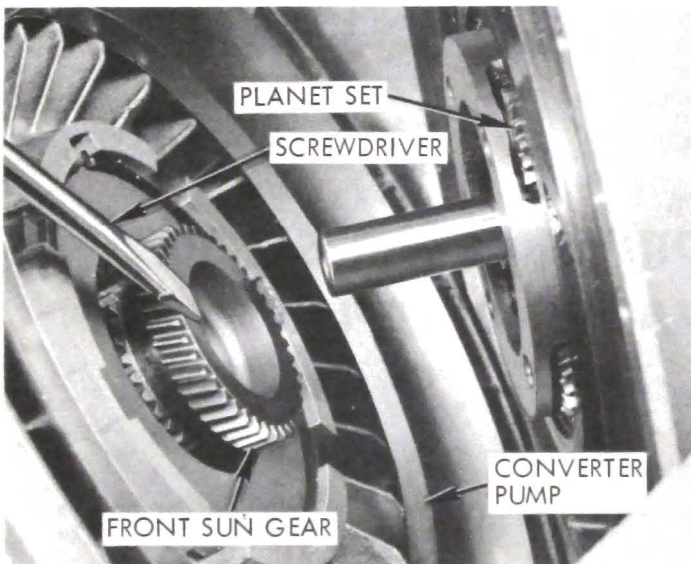


10. Hold front sun gear in place with long screwdriver while positioning converter pump against pump housing. Remove screwdriver. Rotate the assembly very slightly to mesh the front sun gear with the planet pinions. When gears are in mesh, push converter pump into converter housing and pull housing toward pump.

5-332

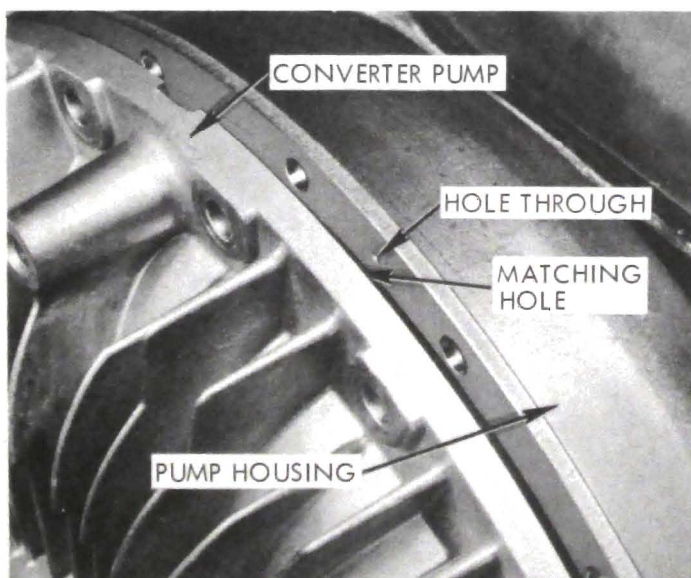

11. Before installing pump housing to converter pump bolts, check locating hole through housing and matching hole part way through converter pump flange. These holes must line up to preserve balance of assembly.


5-333

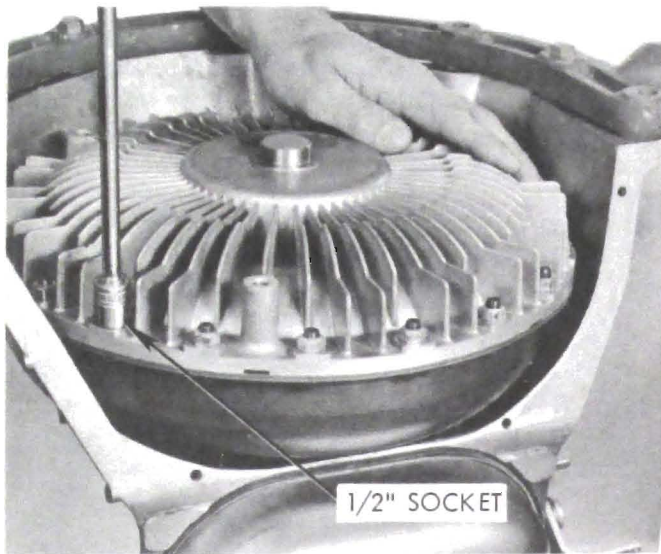

12. Set transmission vertical. Install and tighten special nuts and bolts alternately and evenly. Torque to 15-20 ft. lbs. Wire or otherwise retain converter assembly to case prior to removal from fixture.

5-334


5-35 SPEEDOMETER DRIVEN GEAR SLEEVE AND "O" RING: REMOVAL AND REPLACEMENT

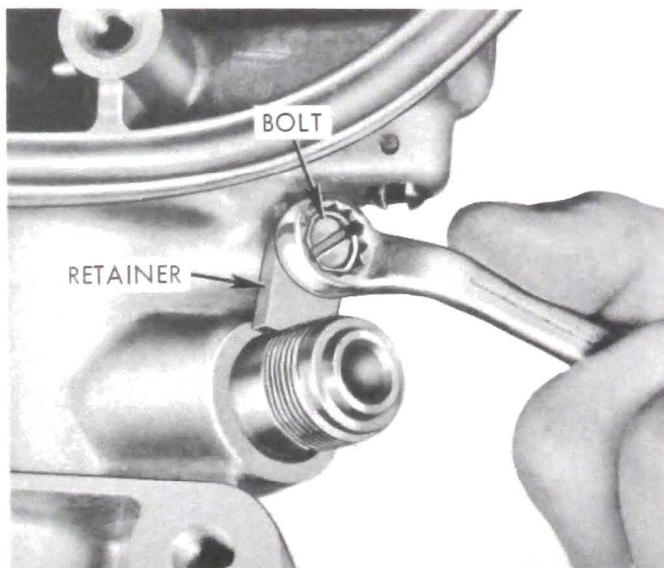

a. Removal (Reverse Removal Procedure for Replacement)

1. Remove bolt attaching speedometer driven gear sleeve retainer to case. Remove retainer.

5-335

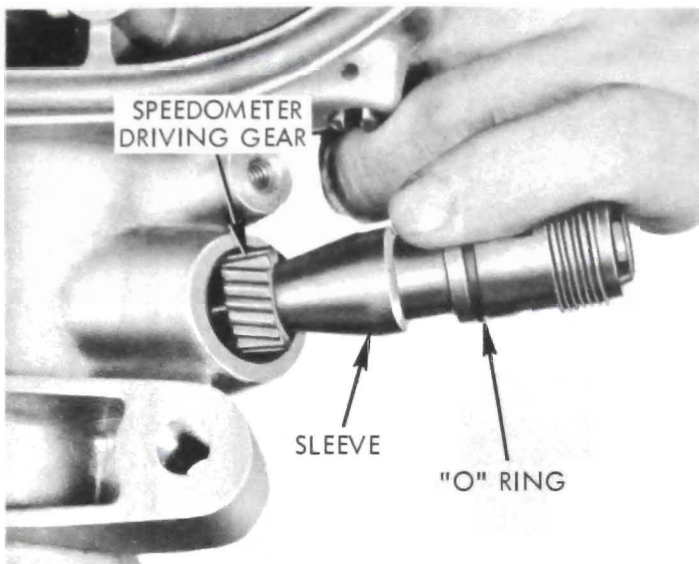


2. Slide driven gear sleeve, gear, and "O" ring out of case. Examine "O" ring for nicks or tears. Replace if necessary.

NOTE: Plastic gear and shaft are not retained in sleeve. If replacement of the gear is necessary, slide gear and shaft out of sleeve.

5-336

NOTE: Reverse removal procedure for replacement.

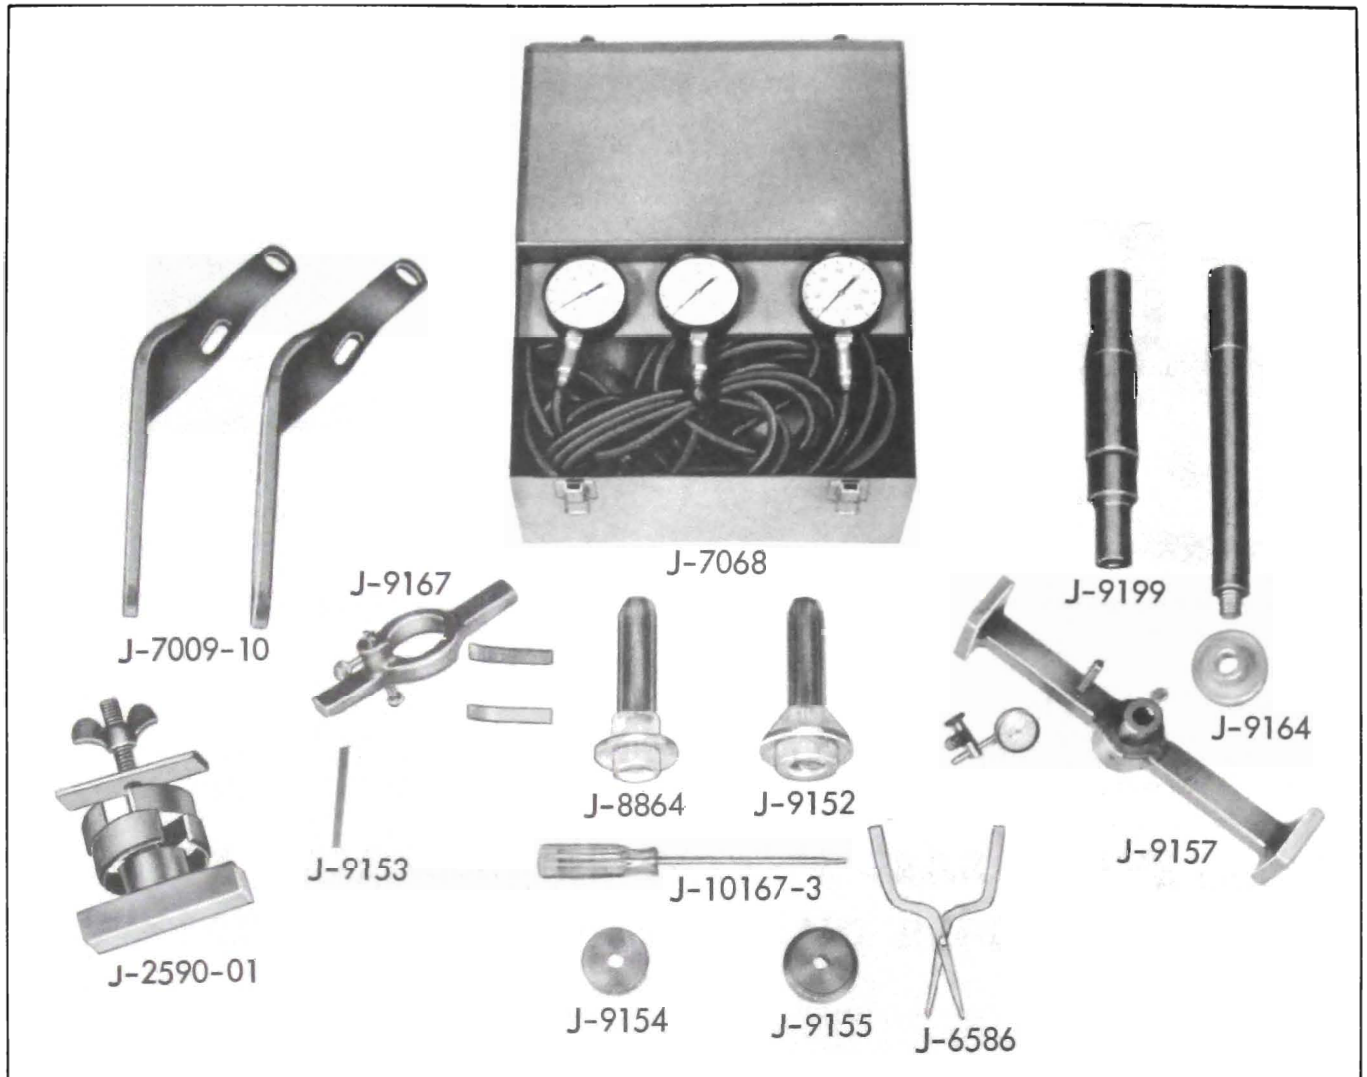

AUTOMATIC TRANSMISSION SPECIAL TOOLS

J-2590-01	Clutch Spring Compressor
J-6586	Oil Delivery Sleeve Remover and Installer
J-7009-10	Adapter Kit (Use with J-7009 Transmission Holding Fixture)
J-7068	3 - Gauge Pressure Gauge Set
J-8864	Transmission Seal Installer
J-9152	Oil Pump Seal Installer
J-9153	Governor Setting Gauge
J-9154	Oil Pump Bushing Remover
J-9155	Oil Pump Bushing Installer
J-9157	Convertor Clearance Gauge
J-9164	Transmission Bearing Installer (Includes Handle)
J-9167	Reverse Clutch Hub Clearance Gauge (2 feelers)
J-9199	Convertor Pump Housing Assembly Tool
J-10167-3	Palm Grip Clutch Head Screw Driver

Figure 5-337—Automatic Transmission Special Tools