

**SECTION 11-D
REMOTE CONTROL OUTSIDE MIRROR
AND SEAT BELTS**

CONTENTS OF SECTION 11-D

Paragraph	Subject	Page
11-20	Remote Control Mirror Installation	11-72
11-21	Seat Belt Installation	11-72

**11-20 REMOTE CONTROL
OUTSIDE MIRROR
INSTALLATION**

Figures 11-114 and 11-115 show the installation of the remote control outside mirror. This mirror is a factory or dealer installed accessory.

**11-21 SEAT BELT
INSTALLATION**

Figures 11-116 through 11-120 show the seat belt installation. The front seat belts are factory or dealer installed. The rear seat belts are only dealer installed.

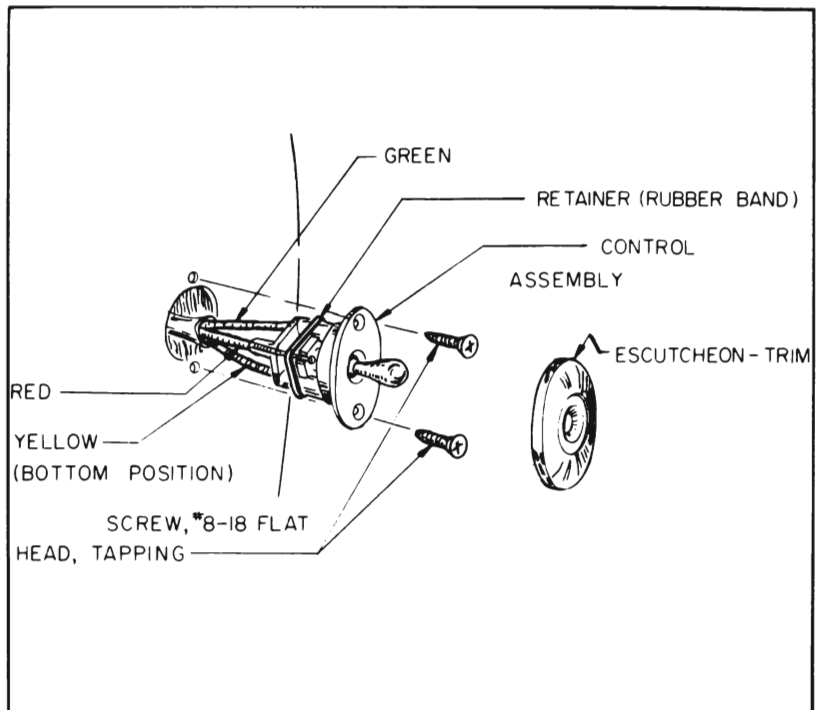


Figure 11-114—Remote Control Outside Mirror Installation—View 1

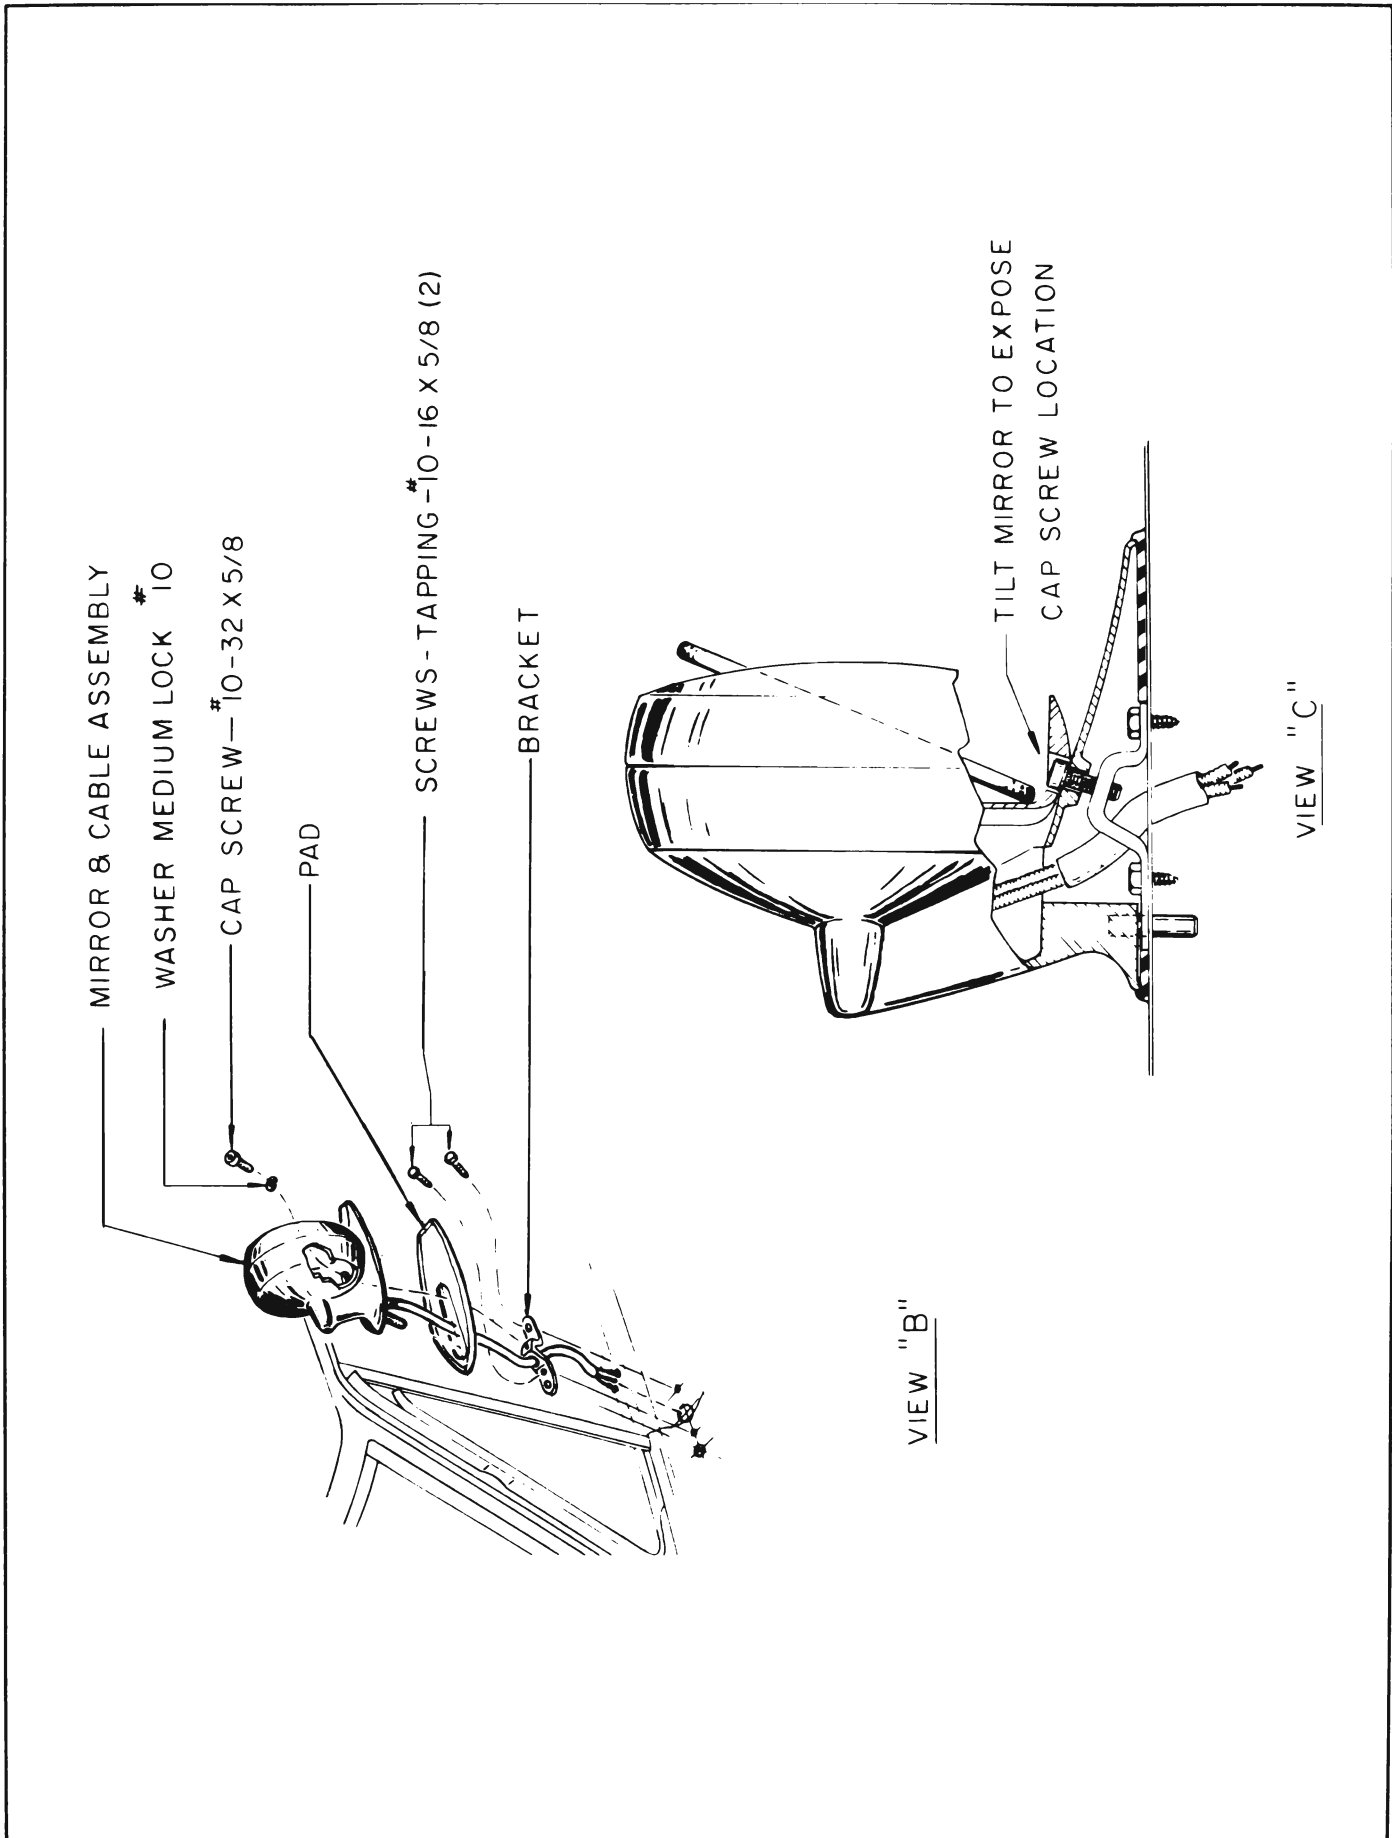


Figure 11-115—Remote Control Outside Mirror Installation—View 2

FRONT SEAT BELT INSTALLATION (BUCKET TYPE ALL JOBS)


- 1: LOCATE RUBBER SEALING PLUGS UNDER CARPET AT BOLT LOCATIONS, BY USING FINGER PRESSURE, OR WITH AN AWL FROM BENEATH THE BODY.
- 2: CUT HOLE IN CARPET AND EXTRACT RUBBER SEALING PLUGS. (SEE VIEW "A").
- 3: POSITION BELT ANCHOR PLATES ON FLOOR AND FASTEN IN PLACE WITH SPECIAL BOLTS & WASHERS. SEE VIEW "D".

BUCKLES MUST ALWAYS BE ON INBOARD SIDE TO ELIMINATE POSSIBLE DAMAGE BY DOOR


FRONT SEAT BELT ASM.

TIGHTEN BELT BY PULLING ON FREE END OF WEBBING

CUT HOLE IN CARPET REMOVE RUBBER SEALING PLUG

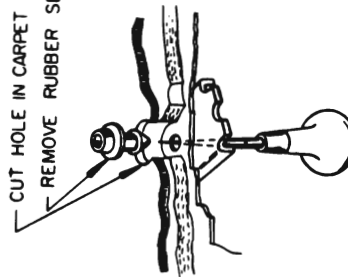


VIEW - "A"

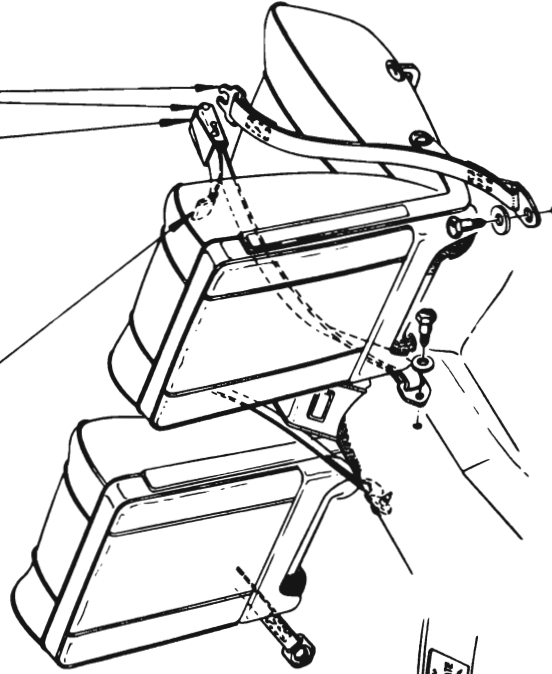

VIEW "C"


LETTER "F" OR "R" AT THIS LOCATION ON MANUFACTURES LABELS IDENTIFIES FRONT OR REAR SEAT BELTS.

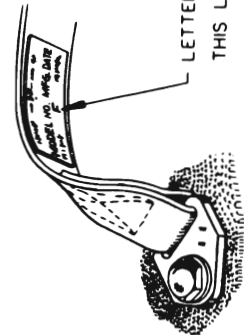

VIEW - "B"

Figure 11-116—Seat Belt Installation - Illustration #1

- FRONT SEAT BELT INSTALLATION (BENCH TYPE ALL JOBS)
- 1: LOCATE RUBBER SEALING PLUG UNDER CARPET AT BOLT LOCATIONS BY USING FINGER PRESSURE, OR WITH AN AWL FROM BENEATH THE BODY.
 - 2: CUT HOLE IN CARPET AND EXTRACT RUBBER SEALING PLUG. SEE VIEW "F".
 - 3: SLIT FABRIC AS SHOWN IN VIEWS "G", "H" & "K".
 - 4: THREAD SEAT BELTS FROM TOP SIDE OF SEAT BETWEEN CUSHION & SEAT BACK THRU SLIT IN FABRIC AS SHOWN (VIEWS "G", "H" & "K" EXCEPT ON BUCKET SEAT JOBS, WHERE BELTS ARE ROUTED ON OUTSIDE OF SEATS).
 - 5: ASSEMBLE TRIM COVERS ON INBOARD SEAT BELTS, TO SEAT BACKS AS SHOWN IN "G", "H" & "K".
 - 6: POSITION BOLT ANCHOR PLATES AND FASTEN IN PLACE WITH SPECIAL BOLTS AS SHOWN IN VIEW "D".
 - 7: ADJUST BELTS AND LOCATE ON SEAT AS SHOWN IN VIEW "E".

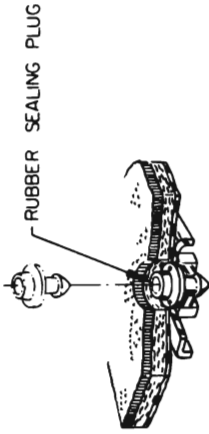

VIEW "F"

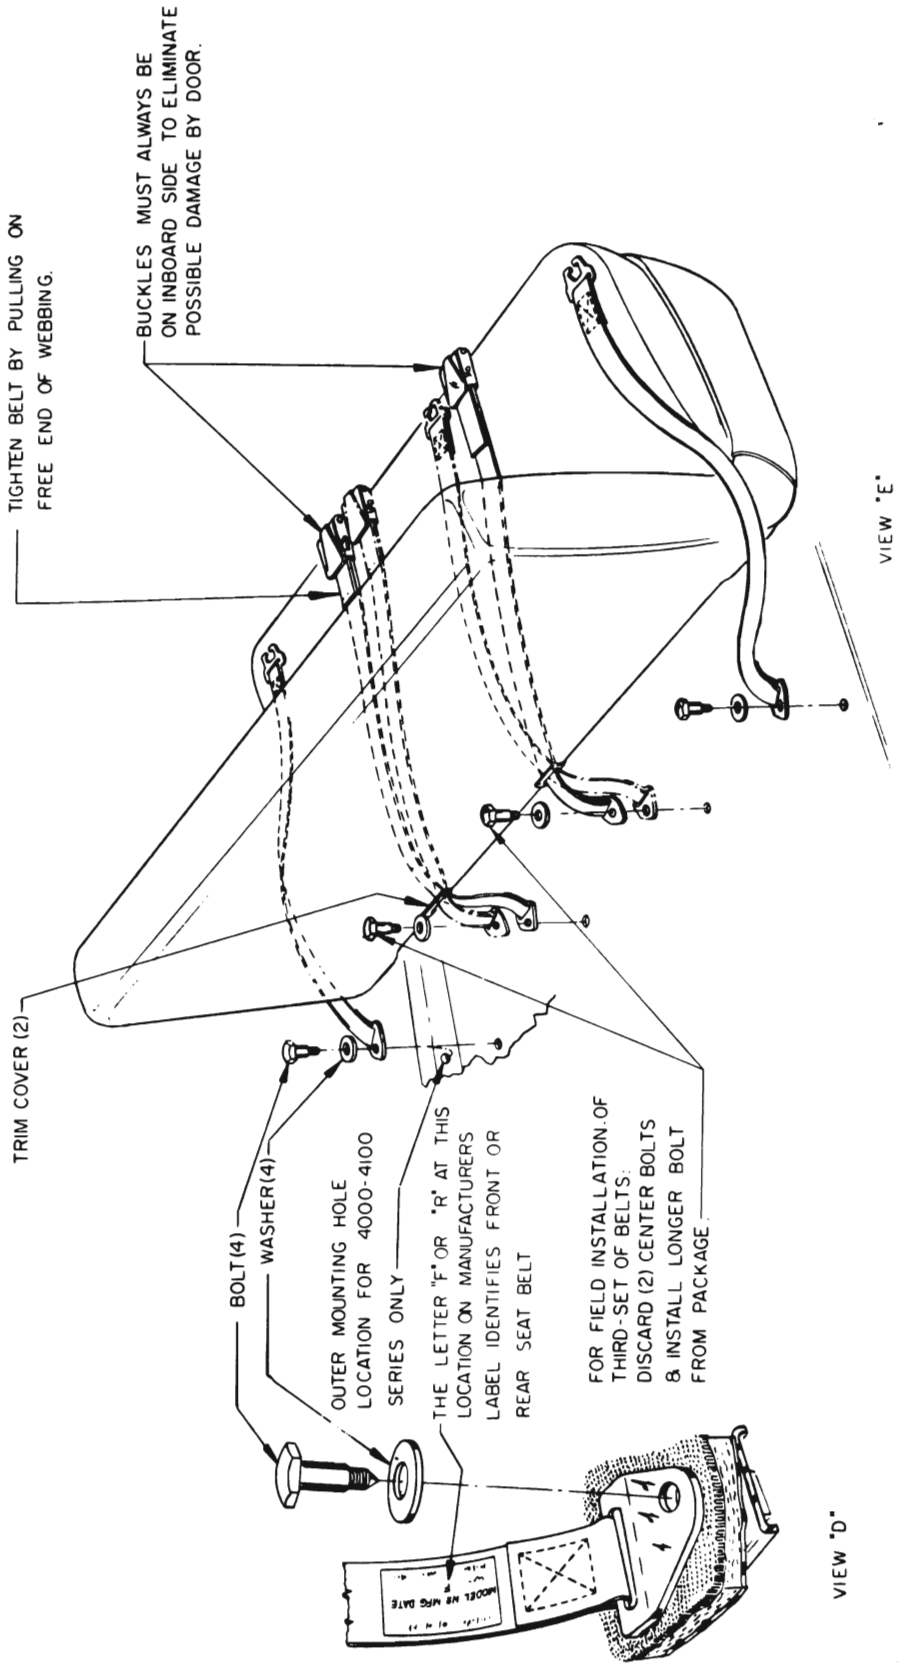


Figure 11-117—Seat Belt Installation - Illustration #2


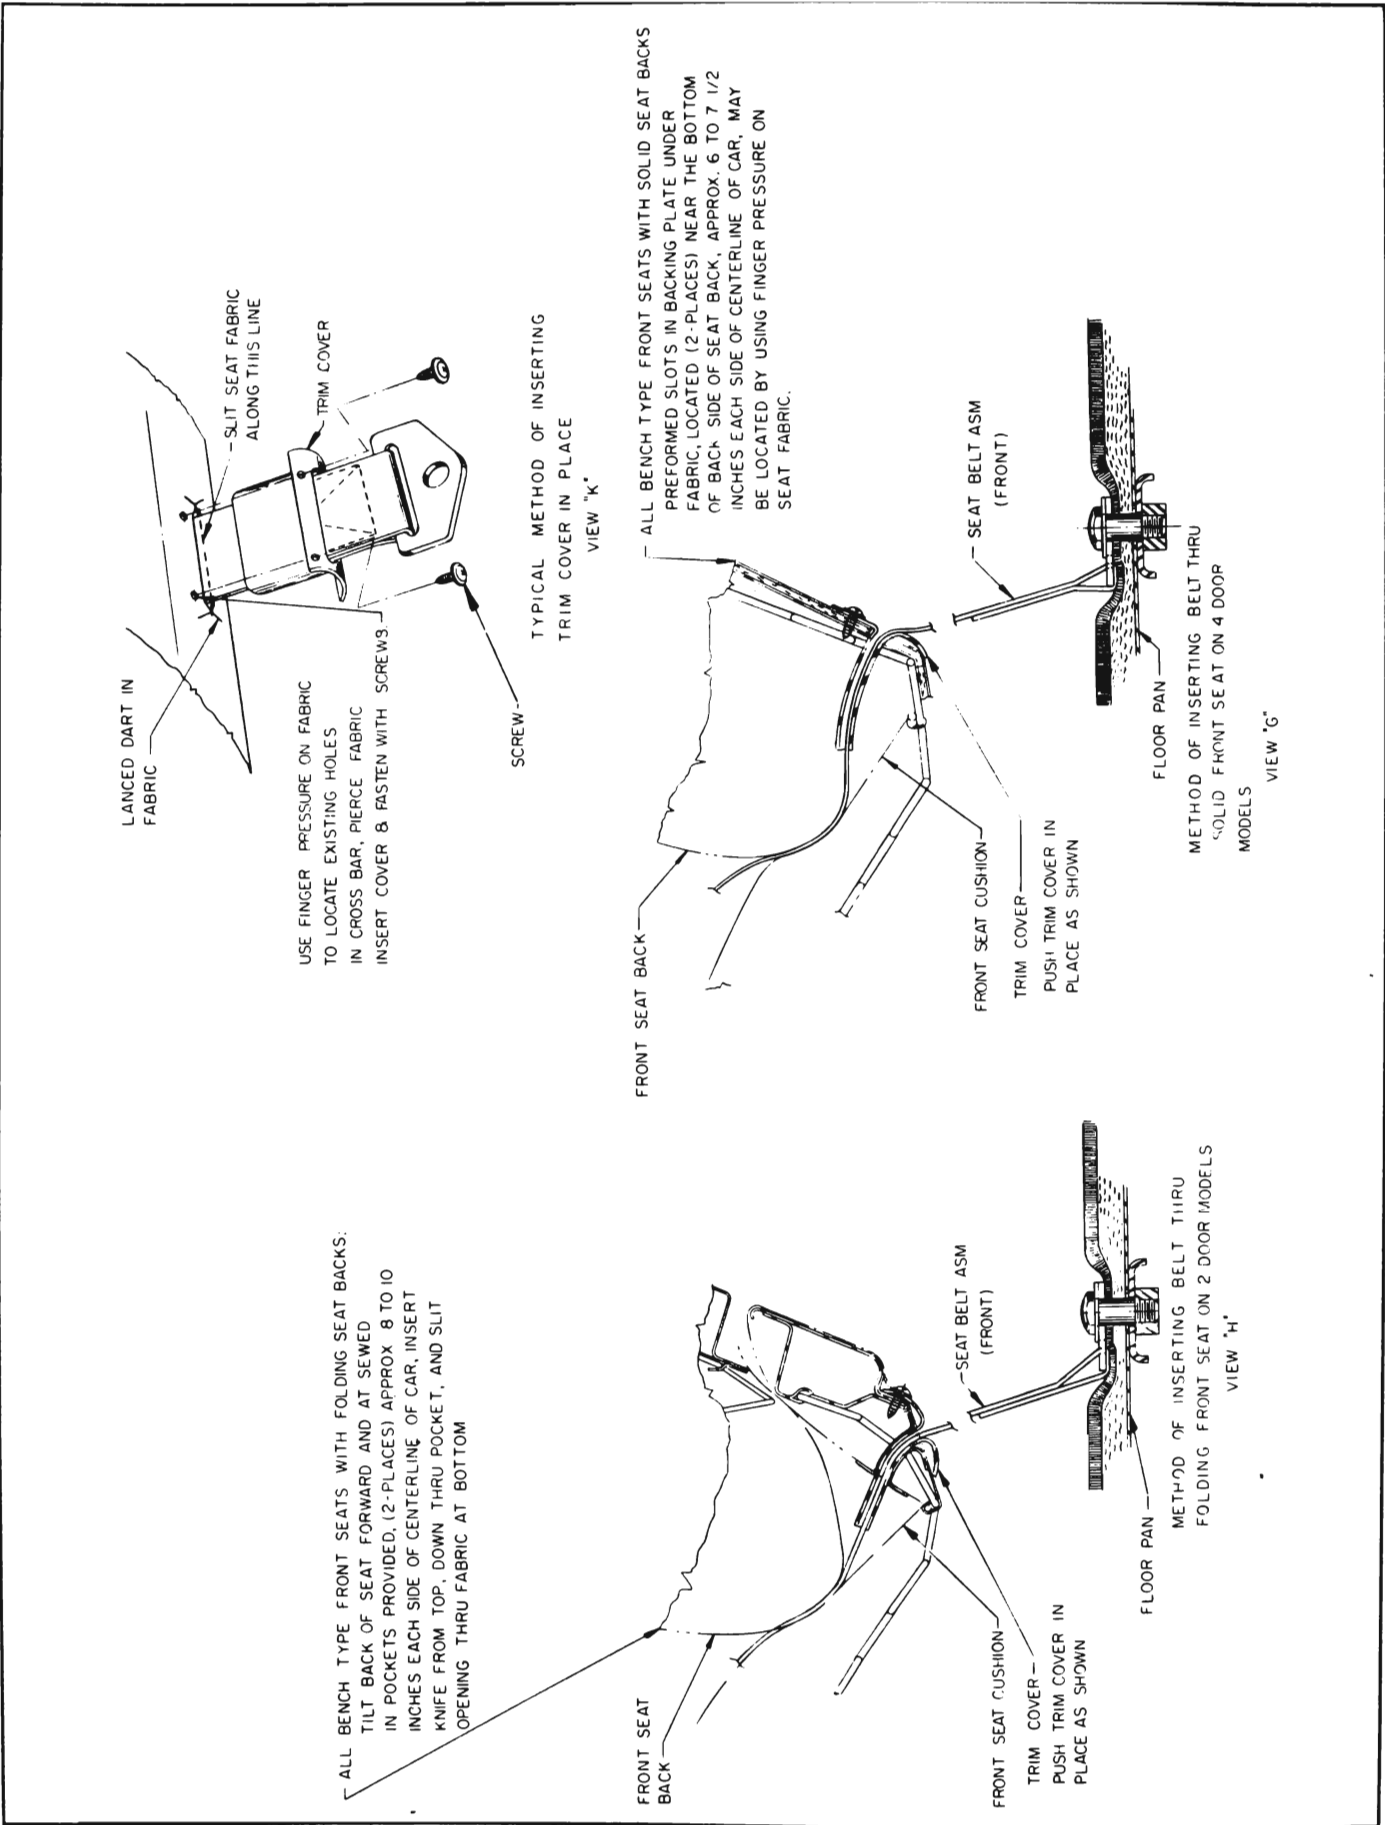



Figure 11-118—Seat Belt Installation - Illustration #3

REAR SEAT BELT INSTALLATION

- 1- REMOVE REAR CUSHION & SEAT BACK.
- 2- LOCATE DIMPLES PROVIDED & DRILL .500 DIA. 4- HOLES AS SHOWN
- 3- INSTALL BELT ASSEMBLIES BOLTS, SEALS, PLATE & NUT ASSEMBLIES. AS SHOWN TIGHTEN SECURELY.
- 4- REPLACE SEAT BACK & CUSHION AND ARRANGE BELTS AS SHOWN IN VIEW 'N'.

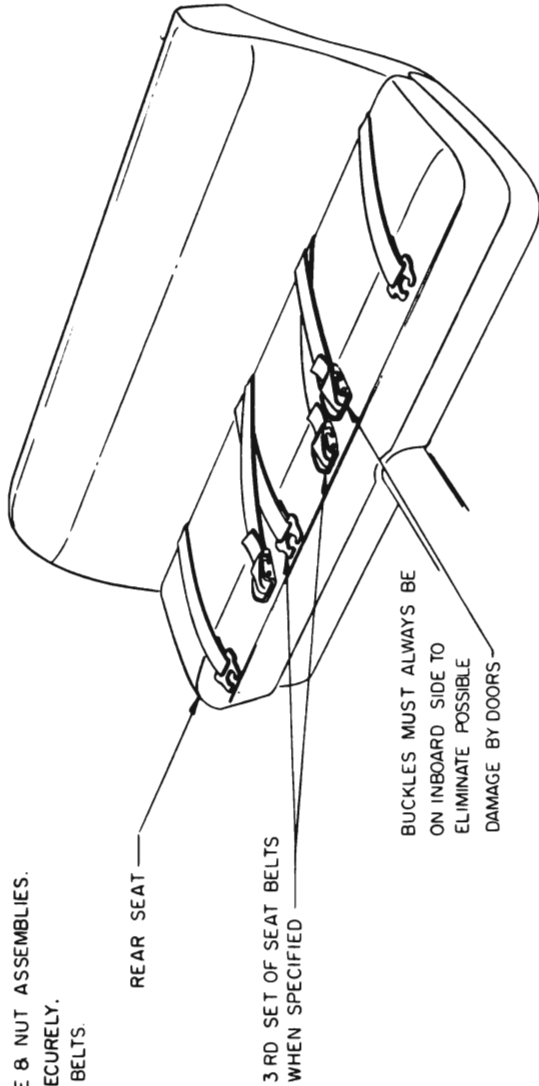

VIEW 'N'

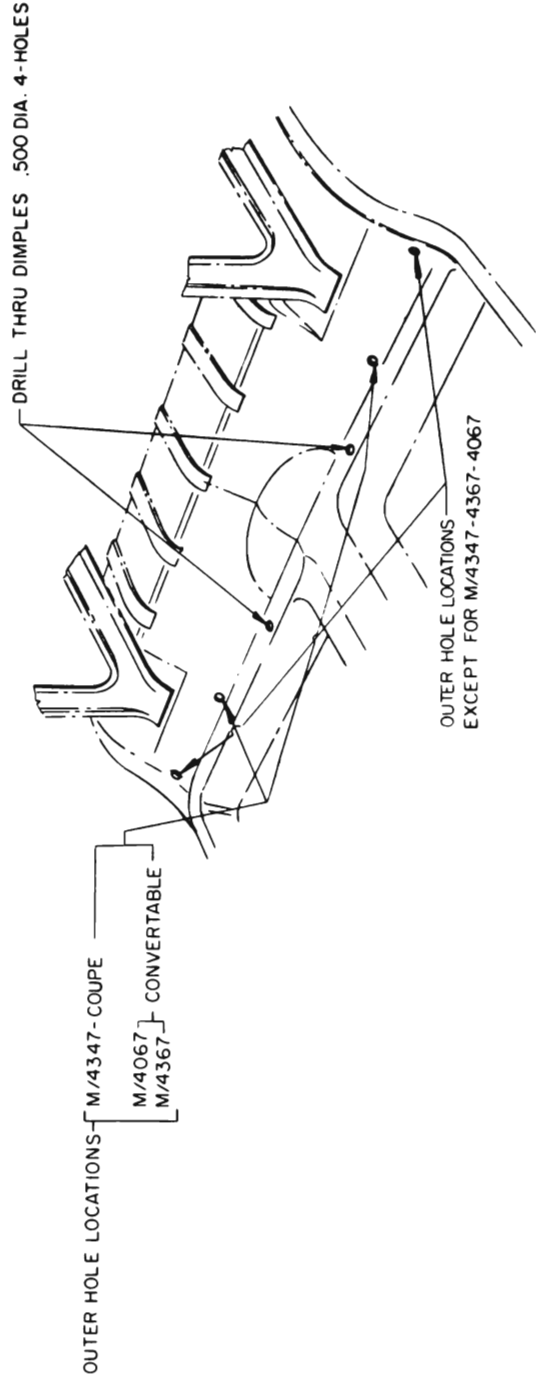


VIEW 'O'

4000-4100 & 4300 SERIES


Figure 11-119—Seat Belt Installation - Illustration #4

SEAT BELT INSTALLATION FOR 3RD SEAT.

- 1: TILT SEAT CUSHION REARWARD.
- 2: LOCATE DIMPLES PROVIDED & DRILL .500 DIA. HOLES AS REQUIRED SEE VIEW "R".
- 3: INSTALL BELT ASSEMBLIES WITH BOLTS, SEALS, PLATE & NUT ASSEMBLIES AS SHOWN IN VIEW "P" SHEET #5 TIGHTEN SECURELY.
- 4: REPLACE SEAT CUSHION AND ARRANGE BELTS AS SHOWN VIEW "T".

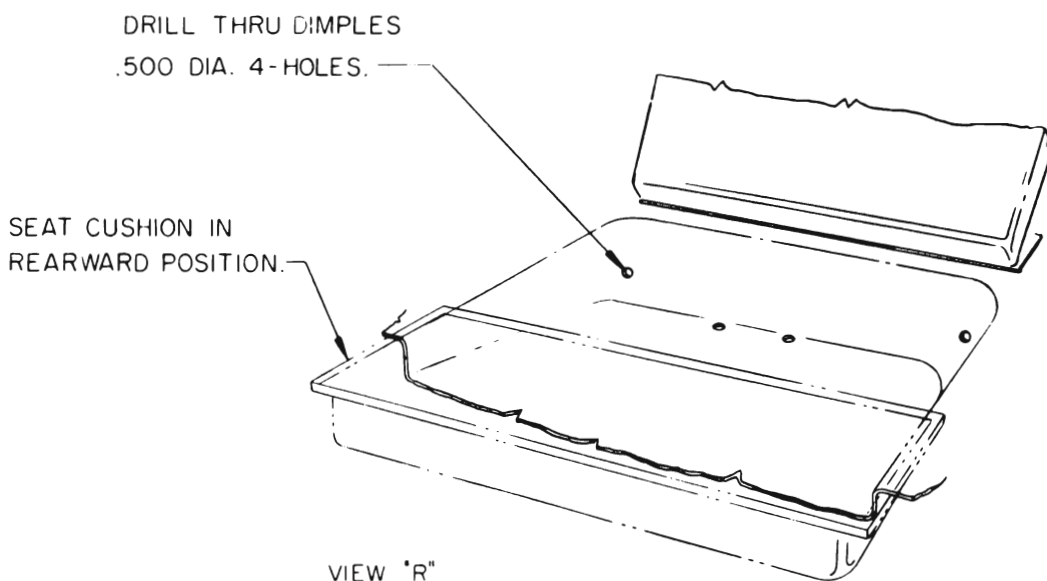

M/4045
(3RD SEAT)

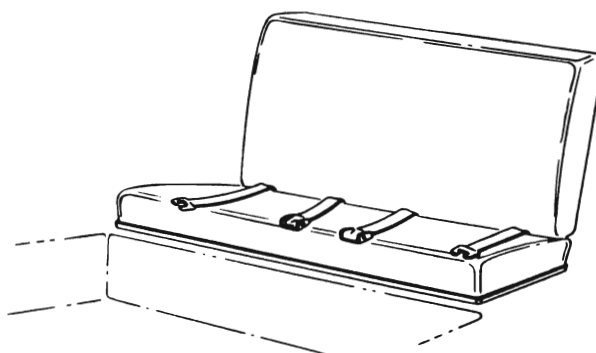

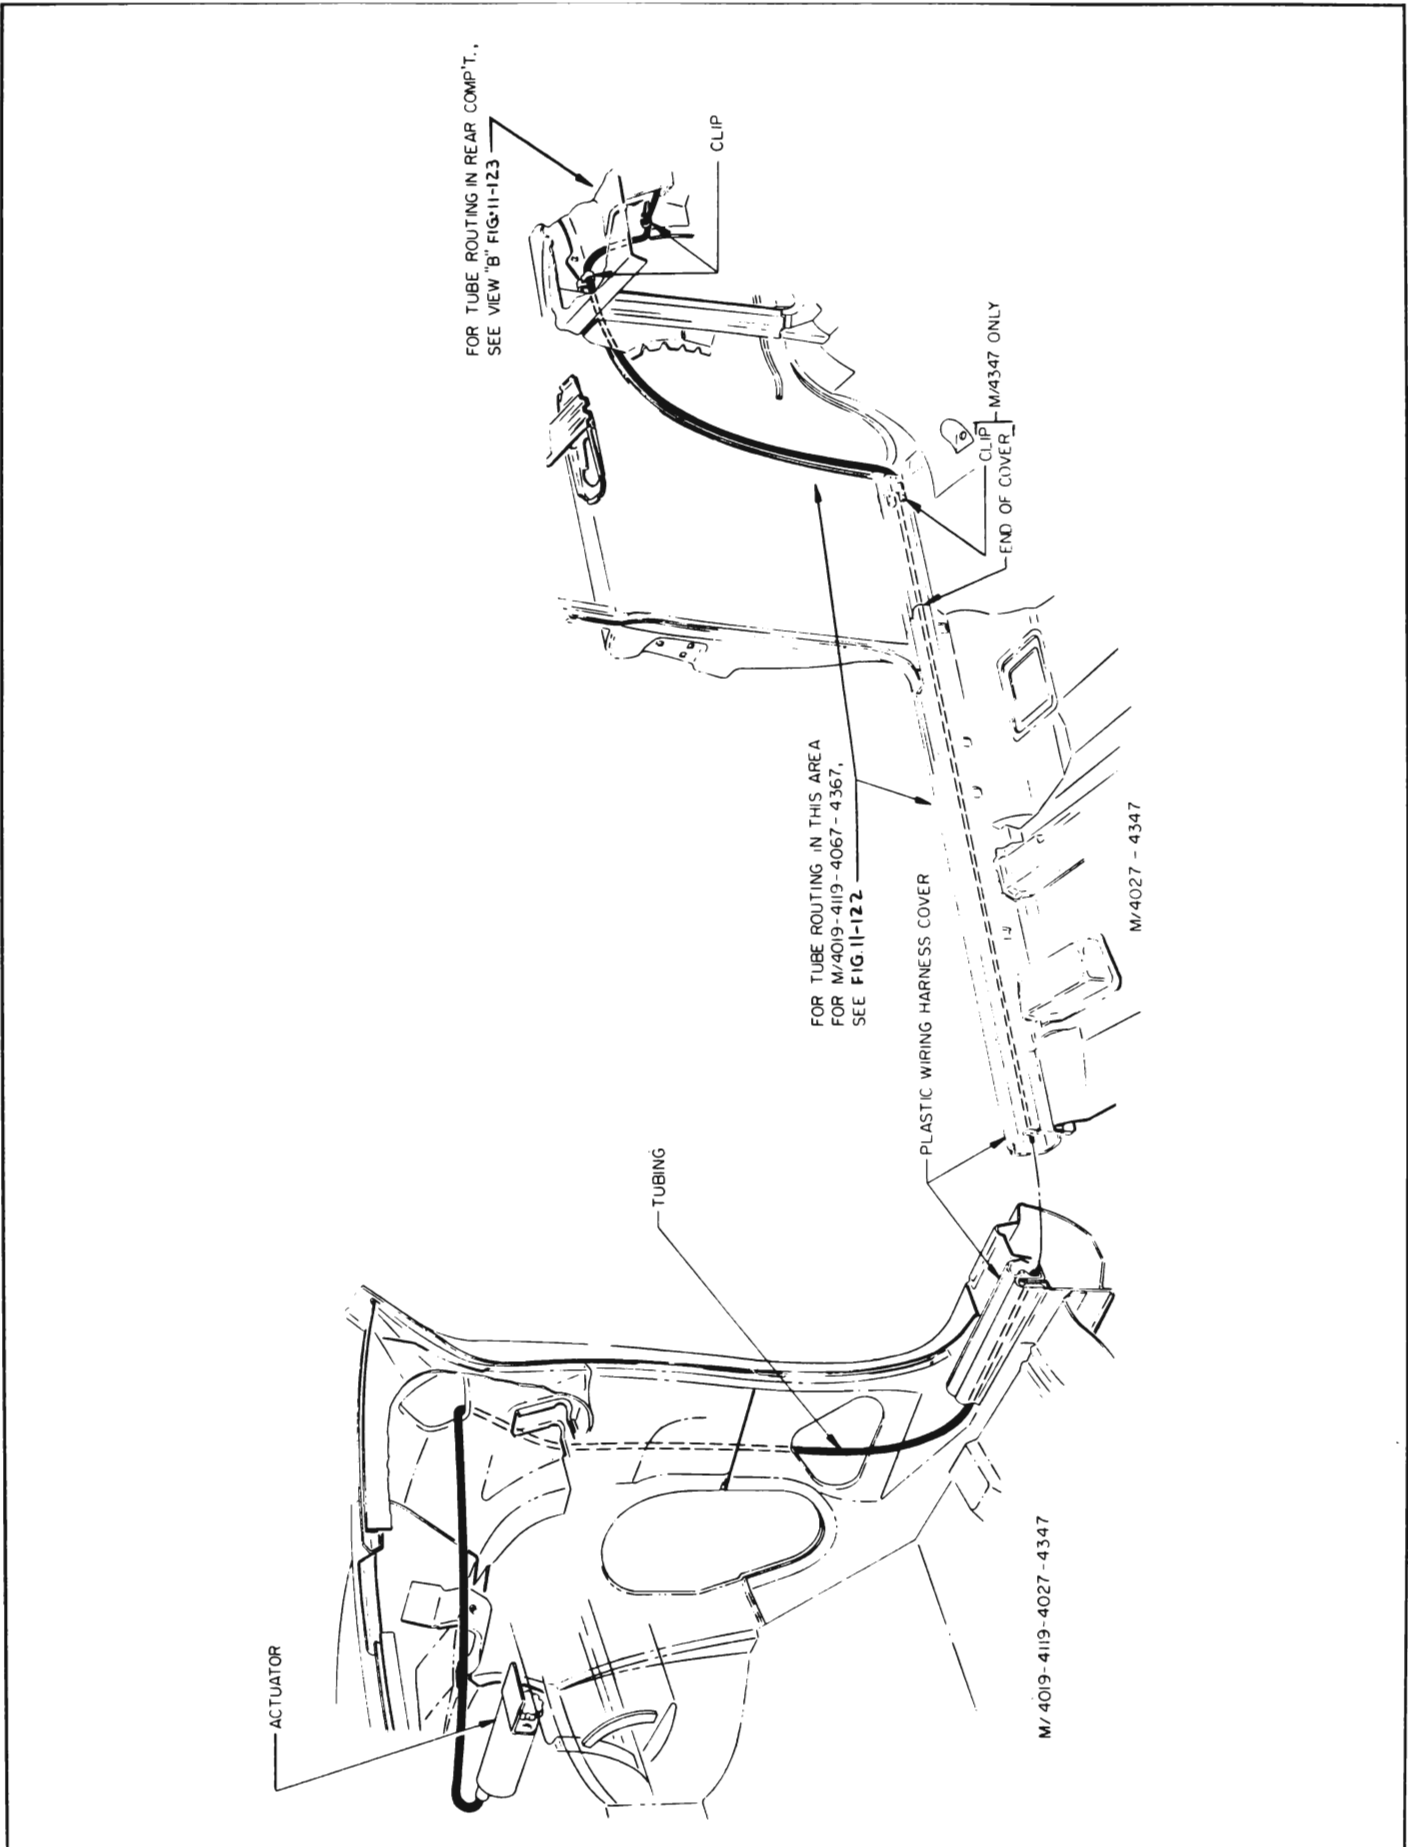


Figure 11-121—Vacuum Trunk Lid Release - View 1

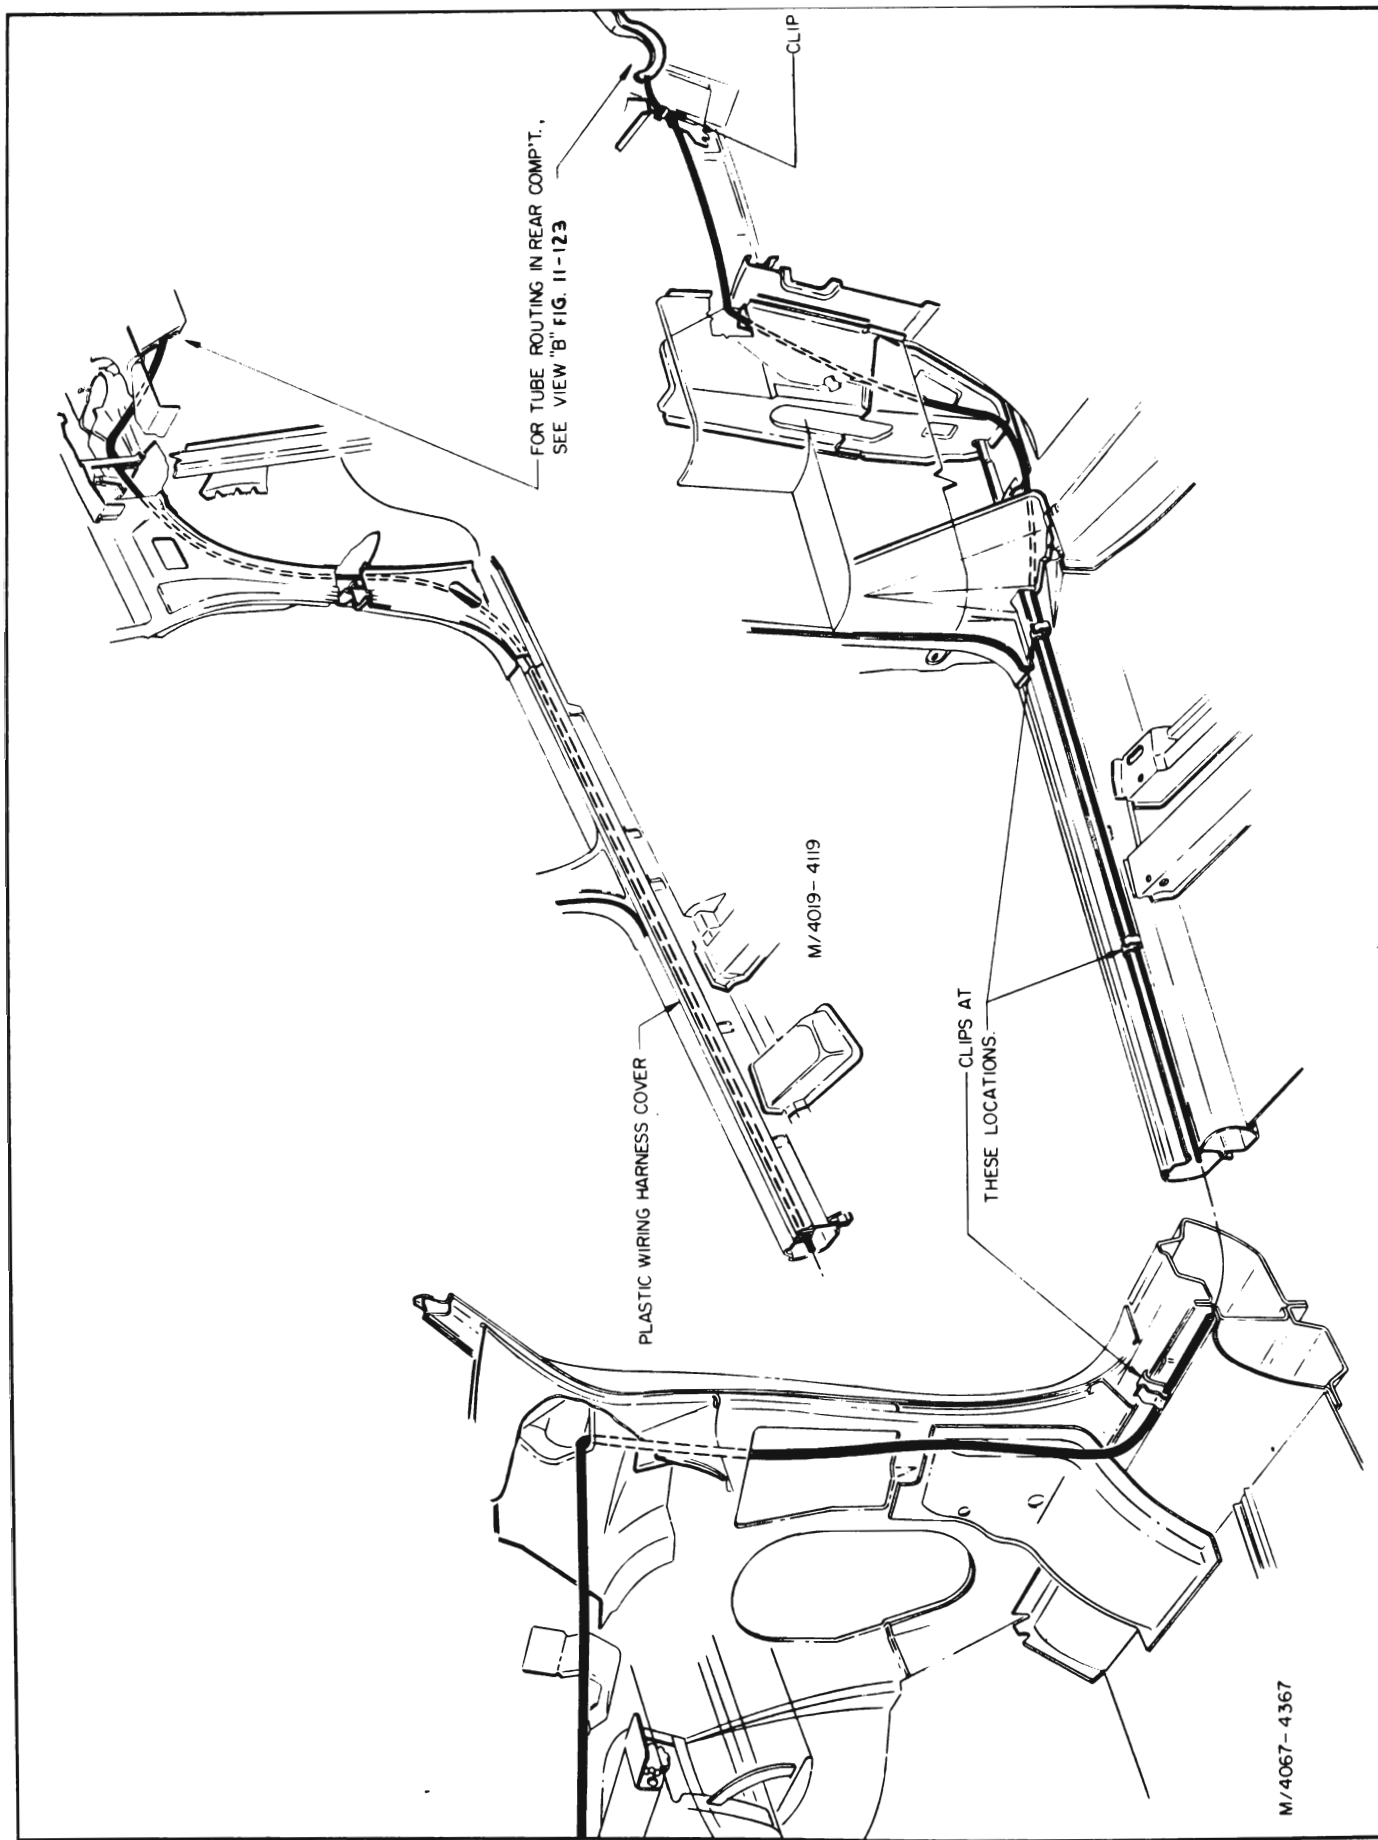


Figure 11-122—Vacuum Trunk Lid Release - View 2

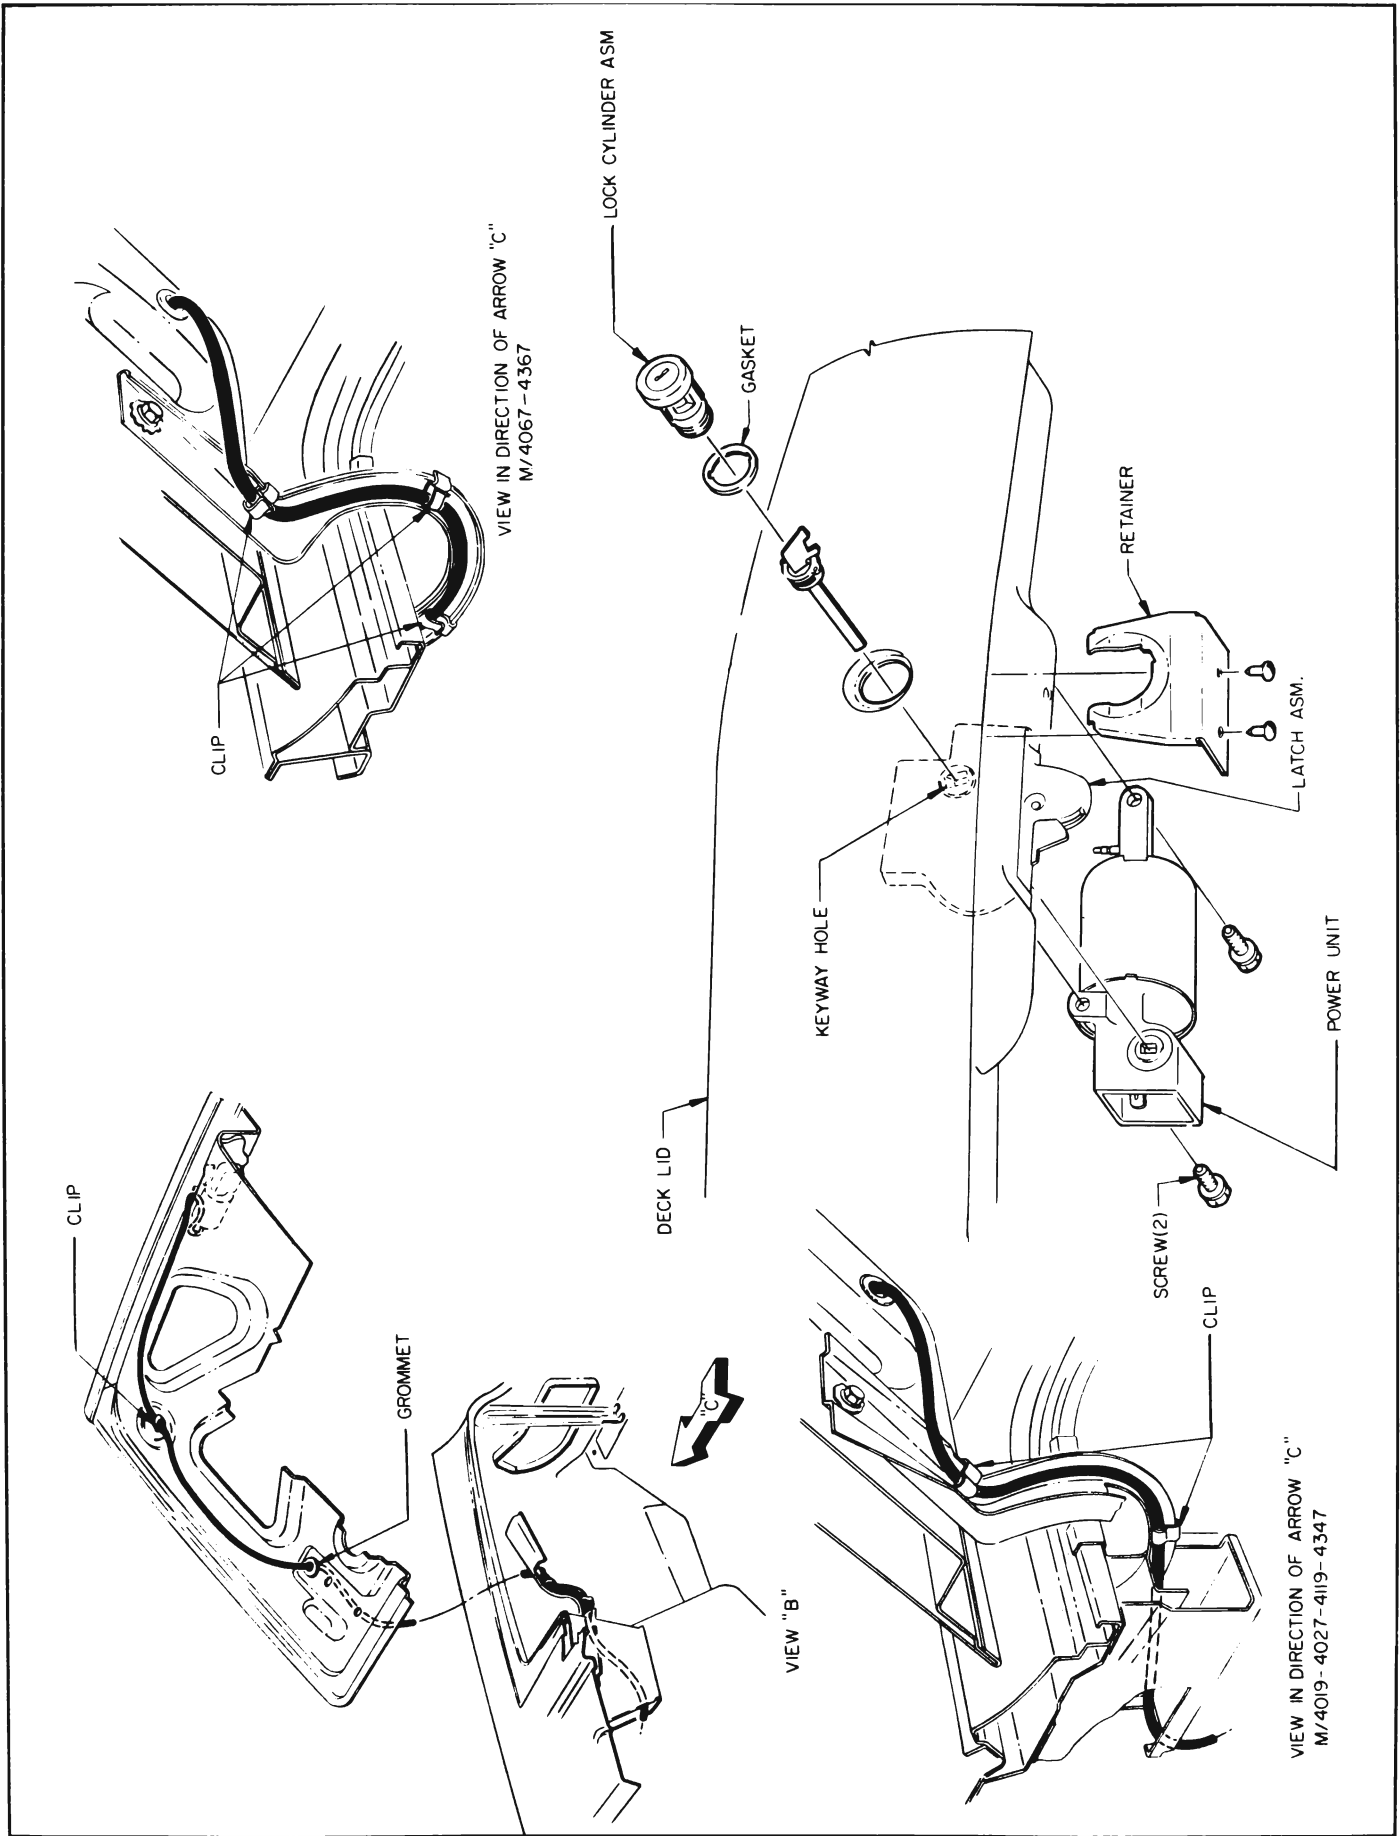


Figure 11-123—Vacuum Trunk Lid Release - View 3

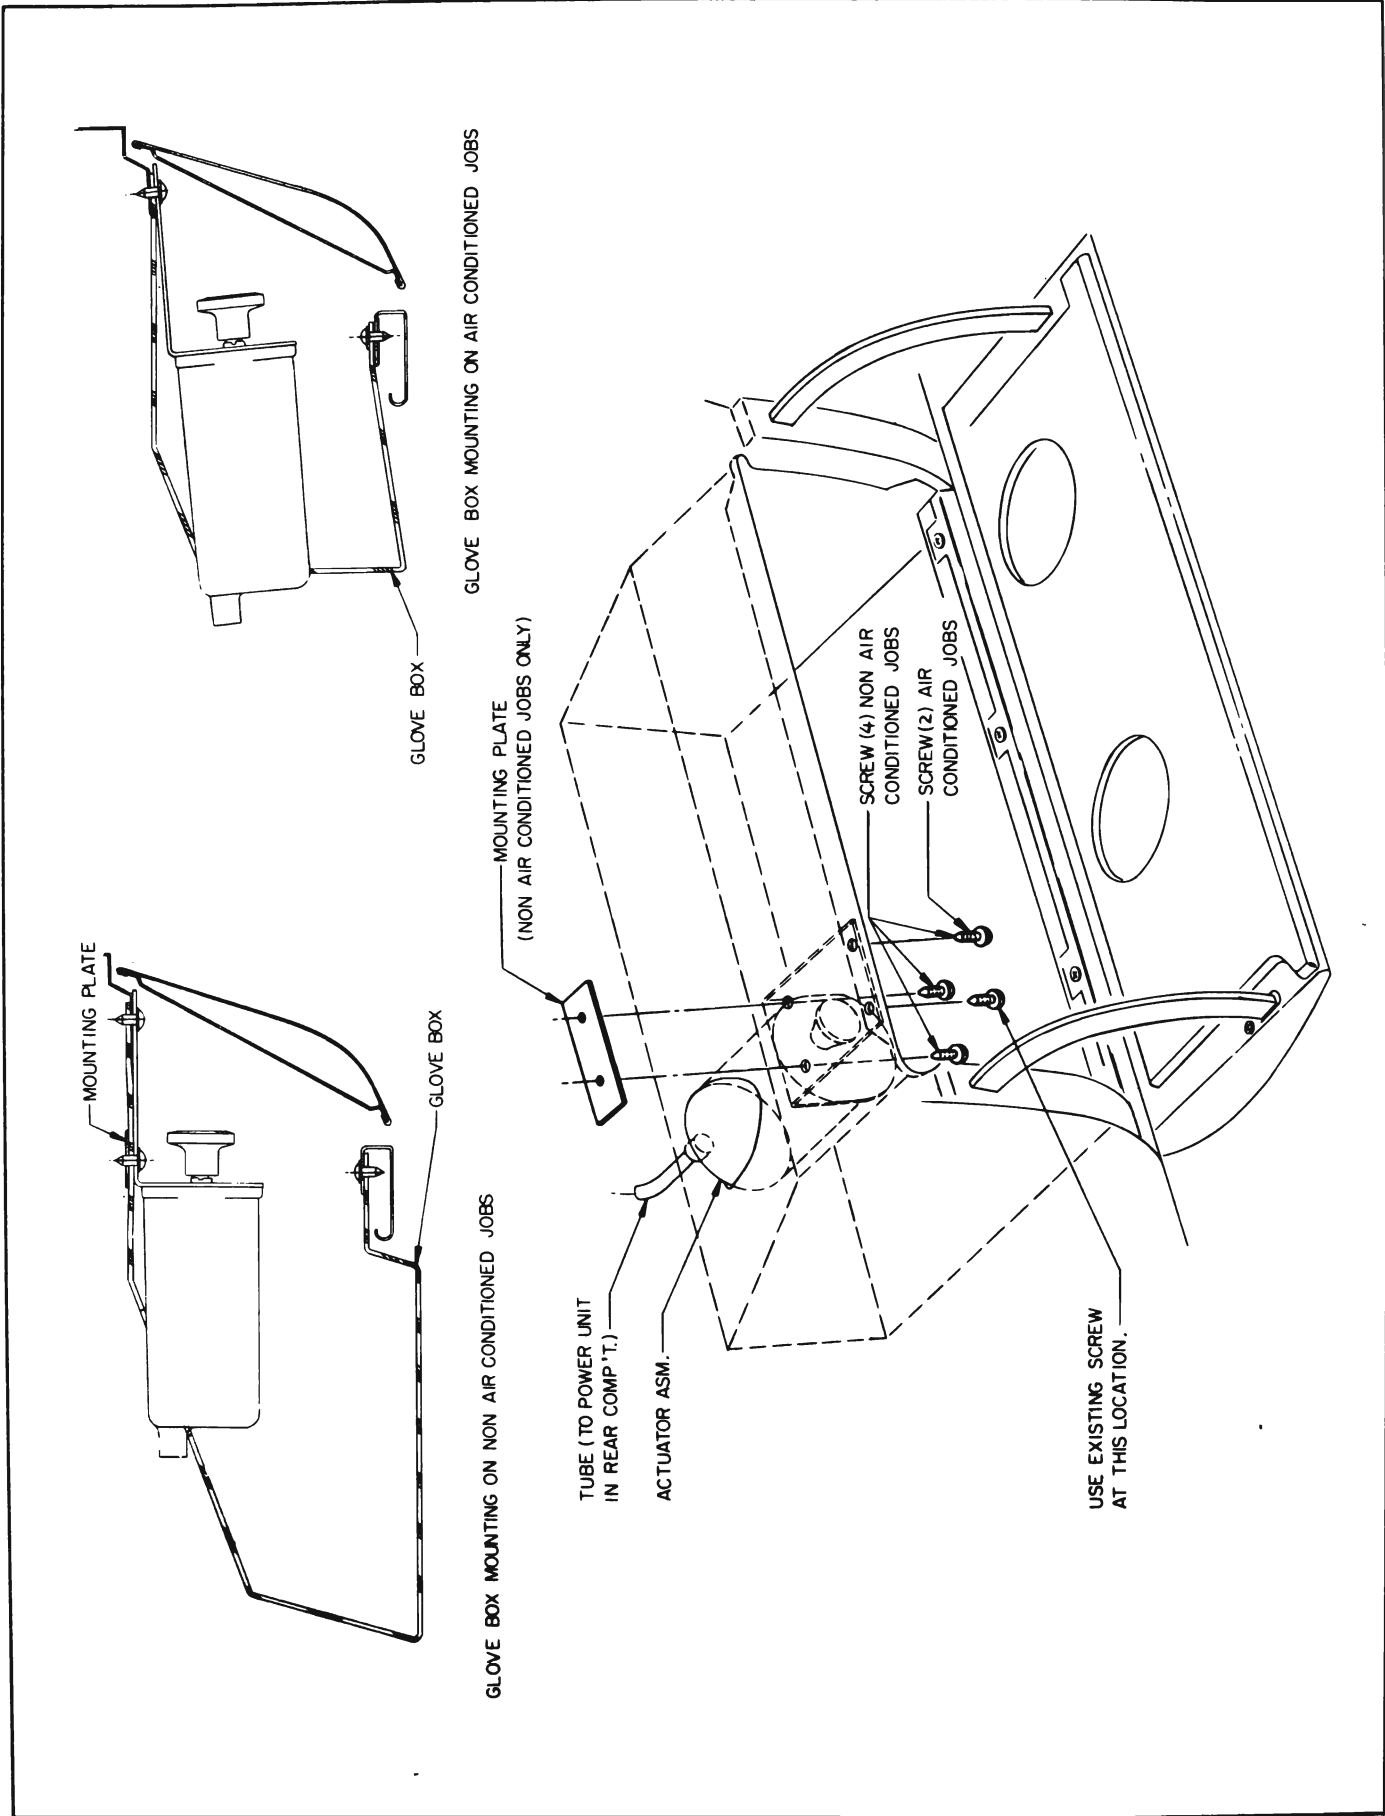


Figure 11-124—Vacuum Trunk Lid Release - View 4