

**GROUP 16****INDEX**

<b>Subject</b>	<b>Page No.</b>	<b>Subject</b>	<b>Page No.</b>
<b>A</b>		<b>B</b>	
Adding Oil to Air Conditioner . . . . .	13-34	Back-Up light Switch . . . . .	120-14
Air Cleaner . . . . .	00-18	Balance, Wheel and Tire . . . . .	100-6
Air Cleaner Description . . . . .	64-9	Ball Joint	
Air Conditioner - Heater Description . . . . .	13-7	43-44000 Series . . . . .	30-10
Air Conditioner - Heater Service		45 through 49000 Series . . . . .	30-26
Procedures . . . . .	13-33	Battery	
Air Conditioner - Heater Specifications . . . . .	13-3	Specifications . . . . .	120-2
Air Conditioner - Heater Trouble		Testing . . . . .	120-5
Diagnosis . . . . .	13-78 thru 13-84	Charging . . . . .	120-7
Air Conditioner Wiring Diagrams		Trouble Diagnosis . . . . .	120-8
43-44000 Series . . . . .	13-24 and 120-110	Battery Test - 401 . . . . .	120-5
45-46-48000 Series . . . . .	13-25 and 120-112	Belt Tensions	
49000 Series . . . . .	13-26 and 120-113	L-6 Engine . . . . .	60-32
Alignment		350, 400 & 430 Engines . . . . .	60-76
Front Wheel		Blower and Air Inlet Assy Removal	
43-44000 Series . . . . .	30-6	and Installation	
45 through 49000 Series . . . . .	30-21	43-44000 Series . . . . .	12-7
AM - FM Radio . . . . .	129-2	45-46-48000 Series . . . . .	12-13
Antenna Repair . . . . .	129-4	Blower and Heater Assembly Removal	
Antenna Trimmer		and Installation (49000 Series) . . . . .	12-19
Adjustment - Radio . . . . .	129-2	Body	
Assembly of Transmission from		Lubrication Points . . . . .	00-17
Major Units		Name Plate . . . . .	00-4
Super Turbine 300 . . . . .	74-51	Style Numbers . . . . .	00-2
Turbo Hydramatic 350 . . . . .	75-66	Bolt Torque Specifications	
Turbo Hydramatic 400 . . . . .	76-67	L-6 Engine . . . . .	60-2
Automatic Climate Control Specifica-		350, 400 & 430 Engines . . . . .	60-38
tions and Adjustments . . . . .	13-85	Super Turbine 300 . . . . .	74-5
Automatic Climate Control		Turbo Hydramatic 350 . . . . .	75-3
Service Procedures . . . . .	13-111	Turbo Hydramatic 400 . . . . .	76-3
Automatic Climate Control (ACC)		43-44-45000 Series	
Trouble Diagnosis . . . . .	13-137	3-Speed Manual . . . . .	72-2
Automatic Climate Control		Heavy Duty	
Wiring Diagrams		3-Speed Manual . . . . .	72-15
45-46-48000 Series . . . . .	13-108 and 120-114	44600 Series (G. S. 400), & G. S. 350	
49000 Series . . . . .	13-109 and 120-116	4-Speed Manual . . . . .	72-28
Automatic Level Control . . . . .	40-12	43-44-45000 Series Clutch . . . . .	71-2
Axle, Rear		Wheels and Tires . . . . .	100-2
43-44-45000 Series Std . . . . .	40-59	Brakes	
43-44-45000 Series P. T. . . . .	40-78	Brake Drums, Shoes, & Linings . . . . .	50-5
46-48-49000 Series Std . . . . .	40-80	Hydraulic Wheel Cylinder . . . . .	50-21
46-48-49000 Series P. T. . . . .	40-101	Hydraulic Master Cylinder . . . . .	50-21
43-44000 Series Type "C" . . . . .	40-110	Parking Brake Cables . . . . .	50-7
43-44000 Series Type "C" P. T. . . . .	40-119	Brake Pipes and Hoses . . . . .	50-10

Subject	Page No.	Subject	Page No.
Single Piston Disc Brake . . . . .	50-35	45 through 49000 Series . . . . .	30-28
Four Piston Disc Brake . . . . .	50-48	Controlled Combustion System . . . . .	67-2
Power Brake - Delco Moraine . . . . .	50-58	Center Support	
Power Brake - Bendix . . . . .	50-71	Turbo Hydramatic 400 . . . . .	76-63
Bumpers, Front and Rear		Converter Checking Procedure	
43-44000 Series . . . . .	140-2	Super Turbine 300 . . . . .	74-59
45-46-48000 Series . . . . .	140-8	Turbo Hydramatic 350 . . . . .	75-77
49000 Series . . . . .	140-14	Turbo Hydramatic 400 . . . . .	76-67
<b>C</b>			
Camshaft and Bearings		Coolant Flow	
L-6 Engine . . . . .	60-20	L-6 Engine . . . . .	60-29
350, 400 & 430 Engines . . . . .	60-67	350, 400 & 430 Engines . . . . .	60-72
Car Model Identification . . . . .	00-2	Counter Gear Assembly - 3 and 4	
Carburetor - See Rochester MV, 2GV or 4MV		Speed Manual Transmission	
Charging System		43-44-45000 Series . . . . .	72-9
Specifications . . . . .	68-2	Heavy Duty - 3-Speed Manual . . . . .	72-22
Operation . . . . .	68-7	44600 (G. S. 400) & G. S. 350 - 4-Speed Manual . . . . .	72-36
Trouble Diagnosis . . . . .	68-9	Crankcase Ventilator - See P. C. V.	
Testing . . . . .	68-10	Cranking System - See Starting System	
Wiring Diagram . . . . .	68-12	Crankshaft	
Charts - Lubrication . . . . . 00-11 and	00-12	L-6 Engine . . . . .	60-17
Chassis Sheet Metal		350, 400 & 430 Engines . . . . .	60-60
43-44000 Series . . . . .	110-2	Cruise Control (Cruise Master) . . . . .	65-2
45-46-48000 Series . . . . .	110-17	Operation . . . . .	65-2
49000 Series . . . . .	110-31	Wiring Diagram	
Chassis Springs, Front		43-44000 Series . . . . .	65-12
43-44000 Series . . . . .	30-13	45, 46, 48 & 49000 Series . . . . .	65-13
45 through 49000 Series . . . . .	30-29	Trouble Diagnosis Chart . . . . .	65-14
Clock . . . . .	120-58	Electric-Vacuum Diagram . . . . .	65-8
Closed P. C. V. System . . . . .	64-11	Cylinder Head	
Clutch Driven Plate Alignment . . . . .	71-9	L-6 Engine . . . . .	60-10
Clutch Lash Adjustment . . . . .	71-5	350, 400 & 430 Engines . . . . .	60-50
Clutch Start Switch . . . . .	120-15	<b>D</b>	
Compressor Clutch, Drive Plate, and Shaft Seal Disassembly and Reassembly . . . . .	13-45	Dash Pot Adjustment . . . . .	64-4
Compressor Disassembly and Reassembly . . . . .	13-48	Decimal Equivalent Chart	Follows Index
Compressor Pulley and Coil and Housing Assemblies - Disc - Disassembly and Reassembly . . . . .	13-47	Delcotron - See Generator	
Compressor Removal and Installation . . . . .	13-44	Description	
Condenser Removal and Installation . . . . .	13-56	Super Turbine 300 . . . . .	74-6
Connecting Rod and Bearings		Turbo Hydramatic 350 . . . . .	75-6
L-6 Engine . . . . .	60-16	Turbo Hydramatic 400 . . . . .	76-6
350, 400 & 430 Engines . . . . .	60-59	43-44-45000 Series - 3-Speed Manual . . . . .	72-2
Control Arm - Front		Heavy Duty 3-Speed Manual . . . . .	72-16
Upper		44600 (G. S. 400) & G. S. 350 4-Speed Manual . . . . .	72-29
43-44000 Series . . . . .	30-13	43-44-45-46000 Series Clutch . . . . .	71-5
45 through 49000 Series . . . . .	30-27	Detonation Complaints . . . . .	64-14
Lower		Differential	
43-44000 Series . . . . .	30-13	43-44-45000 Series Std . . . . .	40-59
		43-44-45000 Series P. T. . . . .	40-78
		46-48-49000 Series Std. . . . .	40-101
		43-44000 Series Type "C" . . . . .	40-110
		43-44000 Series Type "C" P. T. . . . .	40-119
		Direction Signal - See Turn Signal	

Subject	Page No.	Subject	Page No.
Disassembly of 3 and 4 Speed Manual Transmission		Information Drawings . . . . .	80-11
43-44-45000 Series . . . . .	72-5	Expansion Valve Removal and Installation . . . . .	13-58
Heavy Duty 3-Speed Manual . . . . .	72-18	External Oil Leaks - Transmission	
44600 Series (G.S. 400) & G.S. 350 4-Speed Manual . . . . .	72-29	Super Turbine 300 . . . . .	74-60
Discharging Air Conditioner . . . . .	13-33	Turbo Hydramatic 350 . . . . .	75-78
Distributor		Turbo Hydramatic 400 . . . . .	76-74
Specifications . . . . .	68-23		
Spark Advance Charts . . . . .	68-27	<b>F</b>	
Point Replacement . . . . .	68-27	Fan Clutch	
Dome and Panel Light Wiring Diagrams		L-6 Engine . . . . .	60-29
43-44000 . . . . .	120-17	350, 400 & 430 Engines . . . . .	60-72
45-46-48-49000 . . . . .	120-18	Fast Idle Adjustment . . . . .	64-3
Drill Size Chart . . . . .	Follows Index	Fender, Front	
<b>E</b>		43-44000 Series . . . . .	110-2
Electrically Heated Rear Window . . . . .	120-135	45-46-48000 Series . . . . .	110-17
Engine		49000 Series . . . . .	110-31
Cooling System		Filter - Engine Oil . . . . .	00-15
L-6 Engine . . . . .	60-36	Fluid Checking Procedure - Transmission	
350, 400 & 430 Engines . . . . .	60-72	Super Turbine 300 . . . . .	74-3
General Description		Turbo Hydramatic 350 . . . . .	75-4
L-6 Engine . . . . .	60-8	Turbo Hydramatic 400 . . . . .	76-4
350, 400 & 430 Engines . . . . .	60-43	Flushing Air Conditioner . . . . .	13-34
Identification		Forward Clutch	
350, 400 & 430 Engines . . . . .	60-43	Super Turbine 300 . . . . .	74-43
Lubrication System		Turbo Hydramatic 350 . . . . .	75-57
L-6 Engine . . . . .	60-25	Turbo Hydramatic 400 . . . . .	76-57
350, 400 & 430 Engines . . . . .	60-70	Frame	
Mountings		43-44000 Series . . . . .	20-4
L-6 Engine . . . . .	60-33	45-46-48000 Series . . . . .	20-12
350, 400 & 430 Engines . . . . .	60-76	49000 Series . . . . .	20-16
Oil Change Interval . . . . .	00-15	Front Servo	
Oil Pan - R. & R.		Turbo Hydramatic 400 . . . . .	76-71
350, 400 & 430 Engines . . . . .	60-58	Front Suspension	
Oil Viscosity Chart . . . . .	00-14	43-44000 Series . . . . .	30-3
Special Tools . . . . .	60-121 thru 60-125	45 through 49000 Series . . . . .	30-79
Specifications		Front Wheel Alignment	
L-6 Engine . . . . .	60-2	43-44000 Series . . . . .	30-6
350, 400 & 430 Engines . . . . .	60-38	45 through 49000 Series . . . . .	30-21
Torque Specifications		Front Wheel Bearing Adjustment	
V-6 Engine . . . . .	60-2	All Series . . . . .	100-7
350, 400 & 430 Engines . . . . .	60-38	Fuel Filter Description . . . . .	64-9
Tune Up . . . . .	69-2	Fuel Gauge	
Evacuate and Charge Air Conditioner . . . . .	13-64	Operation . . . . .	120-58
Evaporator Removal and Installation . . . . .	13-58	Information Drawing . . . . .	120-59
Exhaust Manifold Installation		Trouble Diagnosis . . . . .	120-61
L-6 Engine . . . . .	60-10	Fuel Pump Operation . . . . .	64-16
350, 400 & 430 Engines . . . . .	60-50	Fuel Pump Test . . . . .	64-19
Exhaust System		Fuel System	
Description . . . . .	80-9	Description . . . . .	80-2
Removal and Installation . . . . .	80-9	Information Drawings . . . . .	80-3
		Tank Removal . . . . .	80-8
		Tank Gauge Unit Removal . . . . .	80-8

Subject	Page No.	Subject	Page No.
Functions of Valves and Hydraulic Control Units		43-44000 Series . . . . .	12-7
Super Turbine 300 . . . . .	74-13	45-46-48000 Series . . . . .	12-12
Turbo Hydramatic 350 . . . . .	75-6	49000 Series . . . . .	12-18
Turbo Hydramatic 400 . . . . .	76-15	Heater Control Adjustment	
Fuse Chart . . . . .	120-11	43-44000 Series . . . . .	12-2
Fusible Link . . . . .	120-7	45-46-48000 Series . . . . .	12-9
		49000 Series . . . . .	12-15
		Heater Description	
<b>G</b>		43-44000 Series . . . . .	12-4
Gas Mileage Complaints . . . . .	64-14	45-46-48000 Series . . . . .	12-10
Gas Tank - See Fuel Tank		49000 Series . . . . .	12-15
General Specifications		Heater Specifications	
L-6 Engine . . . . .	60-2	43-44000 Series . . . . .	12-2
350, 400 & 430 Engines . . . . .	60-38	45-46-48000 Series . . . . .	12-9
Super Turbine 300 . . . . .	74-3	49000 Series . . . . .	12-15
Turbo Hydramatic 350 . . . . .	75-3	Heater System Trouble Diagnosis	
Turbo Hydramatic 400 . . . . .	76-3	43-44000 Series . . . . .	12-7
43-44-45000 Series		45-46-48000 Series . . . . .	12-14
3-Speed Manual . . . . .	72-2	49000 Series . . . . .	12-23
Heavy Duty 3-Speed Manual . . . . .	72-15	Heater Wiring Diagrams	
44600 Series (G.S. 400) &		43-44000 Series . . . . .	12-5 and 120-108
G.S. 350 4-Speed Manual . . . . .	72-28	45-46-48000 Series . . . . .	12-12
43-44-45-46000 Series Clutch . . . . .	71-2	49000 Series . . . . .	12-21 and 120-109
Generator		Horn	
Specifications . . . . .	68-2	Operation . . . . .	120-20
Description . . . . .	68-3	Adjustment . . . . .	120-23
Repair . . . . .	68-4	Hydraulic Operation	
Testing . . . . .	68-10	Super Turbine 300 . . . . .	74-16
Governor Driven Gear		Turbo Hydramatic 350 . . . . .	75-18
Super Turbine 300 . . . . .	74-46	Turbo Hydramatic 400 . . . . .	76-18
Turbo Hydramatic 400 . . . . .	74-126	Hydraulic Valve Lifter	
Grille, Radiator		L-6 Engine . . . . .	60-12
43-44000 Series . . . . .	130-2	350, 400 & 430 Engines . . . . .	60-55
45-46-48000 Series . . . . .	130-6		
49000 Series . . . . .	130-10	<b>I</b>	
		Identification Number Vehicle . . . . .	00-4
<b>H</b>		Idle Adjustment . . . . .	64-3
Hard Starting . . . . .	64-13	Detent Switch Adjustments	
Hazard Warning Flasher		Super Turbine 300 . . . . .	74-5
Description . . . . .	120-21	Turbo Hydramatic 400 . . . . .	76-6
Trouble Diagnosis . . . . .	120-23	Detent Cable Adjustment	
Wiring Diagram . . . . .	120-22	Turbo Hydramatic 350 . . . . .	75-5
Headlamp Aiming . . . . .	120-16	Inflation Pressures, Tires . . . . .	100-4
Headlamp Control Diagram - Riviera . . . . .	120-48	Ignition Coil	
Headlight Switch . . . . .	120-10	Specifications . . . . .	68-23
Heater Assembly Removal and Installation		Testing . . . . .	68-36
43-44000 Series . . . . .	12-7	Ignition, Starter & Generator	
45-46-48000 Series . . . . .	12-14	Wiring Diagram . . . . .	68-12
49000 Series . . . . .	12-19	Ignition System	
Heater Control Assembly Removal And Installation		Timing . . . . .	68-28
		Description . . . . .	68-24
		Trouble Diagnosis . . . . .	68-35
		Indicator Light Wiring Diagram . . . . .	120-27

Subject	Page No.	Subject	Page No.
<b>Indicator Light Trouble Diagnosis Chart</b>		<b>Exhaust</b>	
43-44000 . . . . .	120-28	L-6 Engine . . . . .	60-10
45-46-48000 . . . . .	120-38	350, 400 & 430 Engines . . . . .	60-50
<b>Instrument Panel Information Drawings</b>		<b>Manual Steering Gear Adjustment . . . . .</b>	<b>90-3</b>
43-44000 . . . . .	120-31	<b>Manual Steering Gear Disassembly</b>	
45-46-48000 . . . . .	120-41	and Reassembly . . . . .	90-6
49000 . . . . .	120-54	<b>Manual Steering Gear Removal</b>	
<b>Instrument Panel Parts Removal</b>		and Installation . . . . .	90-5
43-44000 Series . . . . .	120-26	<b>Manual Transmission</b>	
45-46-48000 Series . . . . .	120-37	Clutch Specifications . . . . .	71-2
49000 Series . . . . .	120-51	<b>Master Cylinder, Brake</b>	
<b>Intake Manifold</b>		Manual and Power . . . . .	50-21
L-6 Engine . . . . .	60-10	<b>Master Switch (ACC) Removal and</b>	
350, 400 & 430 Engines . . . . .	60-50	Installation . . . . .	13-136
<b>Intermediate Clutch</b>		<b>Model Designation (Body Style) . . . . .</b>	<b>00-2</b>
Turbo Hydramatic 350 . . . . .	75-41	<b>Model Designations - Transmission</b>	
Turbo Hydramatic 400 . . . . .	76-63	Super Turbine 300 . . . . .	74-3
<b>J</b>		Turbo Hydramatic 350 . . . . .	75-4
<b>Joint, Ball</b>		Turbo Hydramatic 400 . . . . .	76-4
43-44000 Series . . . . .	30-10	<b>Mountings, Body</b>	
45 through 49000 Series . . . . .	30-26	43-44000 Series . . . . .	20-4&7
<b>K</b>		45-46-48000 Series . . . . .	20-10
<b>Keys and Locks . . . . .</b>	<b>00-6</b>	& 11	
<b>Knuckle, Steering</b>		49000 Series . . . . .	20-16
43-44000 Series . . . . .	30-10	<b>Mountings - Engine</b>	
45 through 49000 Series . . . . .	30-26	L-6 Engine . . . . .	60-33
<b>L</b>		350, 400 & 430 Engines . . . . .	60-76
<b>Light Bulb Chart . . . . .</b>	<b>120-11</b>	<b>Mountings, Radiator</b>	
<b>Lighting System Specifications . . . . .</b>	<b>120-10</b>	43-44000 Series . . . . .	130-2
<b>Lock Cylinder, Ignition . . . . .</b>	<b>00-7</b>	45-46-48000 Series . . . . .	130-6
<b>Low Band Adjustment . . . . .</b>	<b>74-56</b>	49000 Series . . . . .	130-10
<b>Low Servo Cover . . . . .</b>	<b>74-28</b>	<b>Muffler Removal and Installation</b>	
<b>Lubrication</b>		(Air Cond.) . . . . .	13-56
Engine Oil Change Interval . . . . .	00-14	<b>N</b>	
Oil Viscosity Chart . . . . .	00-14	<b>Neutral Start Switch Adjustment . . . . .</b>	<b>120-14</b>
Fluid Capacities . . . . .	00-13	<b>O</b>	
Points, Body . . . . .	00-17	<b>Oil Filter, Engine . . . . .</b>	<b>00-15</b>
<b>Lubrication System</b>		<b>Oil Flow Circuits</b>	
L-6 Engine . . . . .	60-25	Super Turbine 300 . . . . .	74-16
350, 400 & 430 Engines . . . . .	60-70	Turbo Hydramatic 350 . . . . .	75-18
<b>M</b>		Turbo Hydramatic 400 . . . . .	76-18
<b>Mainshaft Assemble 3- and 4-Speed</b>		<b>Oil Pan, Engine - 350, 400 &amp; 430 . . . . .</b>	<b>60-58</b>
<b>Manual Trans.</b>		<b>Oil Pressure Checks</b>	
43-44-45000 Series . . . . .	72-6	Super Turbine 300 . . . . .	74-67
Heavy Duty 3-Speed . . . . .	72-20	Turbo Hydramatic 350 . . . . .	75-90
44600 (G. S. 400) G. S. 350 4-Speed . . . . .	72-33	Turbo Hydramatic 400 . . . . .	76-86
<b>Manifold</b>		<b>Oil Pump - Engine</b>	
<b>Intake</b>		L-6 Engine . . . . .	60-25
L-6 Engine . . . . .	60-10	350, 400 & 430 Engines . . . . .	60-70
350, 400 & 430 Engines . . . . .	60-50	<b>Oil Pump - Transmission</b>	
		Super Turbine 300 . . . . .	74-32
		Turbo Hydramatic 350 . . . . .	75-48

<b>Subject</b>	<b>Page No.</b>	<b>Subject</b>	<b>Page No.</b>
Turbo Hydramatic 400 . . . . .	76-53	Range Check and Adjustment (ACC) . . .	13-91
Oil Recommendations - Engine . . . . .	00-14	Rear Servo	
Oil Strainer - Transmission		Turbo Hydramatic 400 . . . . .	76-51
Super Turbine 300 . . . . .	74-28	Rear Window Defroster Wiring	
Turbo Hydramatic 350 . . . . .	75-38	Diagram . . . . .	120-124
<b>P</b>			
Parking Brake . . . . .	50-7	Receiver-Dehydrator Removal and	
P. C. V. System Description . . . . .	64-11	Installation . . . . .	13-56
P. C. V. System Test . . . . .	64-11	Reverse Clutch	
Piston, Pin, Rings		Super Turbine 300 . . . . .	74-36
L-6 Engine . . . . .	60-22	Rings, Piston	
350, 400 & 430 Engines . . . . .	60-62	L-6 Engine . . . . .	60-22
Planetary Gear Set - Super Turbine 300 . .	74-47	350, 400 and 430 Engines . . . . .	60-62
POA Valve Removal and Installation . . . .	13-64	Rochester MV	
Police Generator Information Drawing . . .	120-118	Specifications . . . . .	64-43
Power Flow - 3 and 4 Speed		Operation . . . . .	64-44
Manual Transmission		Adjustment . . . . .	64-50
43-44-45000 Series . . . . .	72-4	Rochester 2GV	
Heavy Duty 3-Speed . . . . .	72-17	Specifications . . . . .	64-22
44600 (G. S. 400) & G.S. 350 4-Speed	72-31	Operation . . . . .	64-23
Power Steering Gear Adjustment . . . . .	90-12	Adjustment . . . . .	64-29
Power Steering Gear Service		Rochester 4MV	
Procedures . . . . .	90-23	Specifications . . . . .	64-31
Power Steering Pump		Operation . . . . .	64-32
Service Procedures . . . . .	90-36	Adjustment . . . . .	64-39
Power Steering System Trouble		Rocker Arm Assembly	
Diagnosis . . . . .	90-40	L-6 Engine . . . . .	60-10
Power Unit - Brake		350, 400 & 430 Engines . . . . .	60-50
Delco Moraine . . . . .	50-58	<b>S</b>	
Bendix . . . . .	50-71	Selector Electrical Switch (ACC)	
Power Window Wiring Diagrams		Removal and Installation . . . . .	13-111
43-44000 . . . . .	120-122	Selector Vacuum Switch (ACC)	
45-46-48000 . . . . .	120-123	Removal and Installation . . . . .	13-111
49000 . . . . .	120-124	Sensor R. & R., C. C. S. . . . .	67-8
Program Vacuum Disc Switch (ACC)		Sequence for Transmission Diagnosis	
Removal and Installation . . . . .	13-136	Super Turbine 300 . . . . .	74-59
Propeller Shaft		Turbo Hydramatic 350 . . . . .	75-78
43-44-45-46-48000 Series . . . . .	40-23	Turbo Hydramatic 400 . . . . .	76-74
49000 Series . . . . .	40-43	Service Procedures - Clutch	
Pump, Oil - Engine		43-44-45000 Series . . . . .	71-5
L-6 Engine . . . . .	60-25	Shift Linkage Adjustments	
350, 400 & 430 Engines . . . . .	60-70	Super Turbine 300 (Column Shift)	
Push Button Adjustment Radio . . . . .	129-2	43-44000 Series . . . . .	73-3
<b>R</b>			
Radio		Super Turbine 300, Turbo Hydramatic	
Antenna Trimmer Adjustment . . . . .	129-2	350 & 400 (Console Shift)	
Push Button Adjustment . . . . .	129-2	43-44000 Series . . . . .	73-6
Removal and Installation . . . . .	129-3	Super Turbine 300	
Information Drawings . . . . .	129-5	45000 Series . . . . .	73-8
Noise Suppressors . . . . .	129-2	Turbo Hydramatic 350 & 400	
Trouble Diagnosis Chart . . . . .	129-21	45-46-48000 Series . . . . .	73-11
		Turbo Hydramatic 400	
		46000 Console . . . . .	73-14

Subject	Page No.	Subject	Page No.
Shift Linkage Adjustments (cont'd)		Trouble Diagnosis . . . . .	68-18
Turbo Hydramatic 400		Starting Technique . . . . .	64-13
49000 Series		Steering	
Console Shift . . . . .	73-15	Geometry (Turning Angle)	
3-Speed Manual Transmission		43-44000 Series . . . . .	30-10
43-44000 Series . . . . .	73-16	45 through 49000 Series . . . . .	30-26
3-Speed Manual Floor Shift		Knuckle	
Transmission G.S. 350 & G.S. 400 . . . . .	73-19	43-44000 Series . . . . .	30-12
3-Speed Manual Transmission		45 through 49000 Series . . . . .	30-27
45-46000 Series . . . . .	73-20	Steering Columns (Non Tilt)	
4-Speed Manual Transmission		Service Procedures . . . . .	90-50
44600 (G.S. 400) & G.S. 350 . . . . .	73-22	Steering Columns (Tilt)	
Shock Absorber, Rear		Service Procedures . . . . .	90-60
All Series . . . . .	40-3	Steering Linkage . . . . .	90-68
Side Cover Assembly		Stereo Tape Player . . . . .	129-24
3-Speed Manual Transmission		Suspension	
43-44-45000 Series . . . . .	72-9	Front	
44600 (G.S. 400) & G.S. 350		43-44000 Series . . . . .	30-3
4-Speed Manual . . . . .	72-37	45-through 49000 Series . . . . .	30-19
Signal System Specifications . . . . .	120-20	Rear . . . . .	40-2
Spark Knock Complaints . . . . .	64-14		
Spark Plug		<b>T</b>	
Specifications . . . . .	68-23	Tape Player, Stereo . . . . .	129-24
Clean & Adjust . . . . .	68-30	Thermostatic Vacuum Regulator (ACC)	
Installation . . . . .	68-31	Removal and Installation . . . . .	13-111
Wires . . . . .	68-30	Thermostatic Vacuum Valve (ACC)	
Specifications		Removal and Installation . . . . .	13-137
Engine		Thermo Vacuum Switch . . . . .	67-2
L-6 Engine . . . . .	60-2	Throttle Linkage Adjustment . . . . .	64-4
350, 400 & 430 Engines . . . . .	60-38	Throttle Linkage Description . . . . .	64-4
Front Wheel Alignment		Timing Chain Cover	
43-44000 Series . . . . .	30-6	L-6 Engine . . . . .	60-20
45 through 49000 Series . . . . .	30-21	350, 400 & 430 Engines . . . . .	60-67
Speedometer		Timing Chain and Sprocket	
Description . . . . .	120-61	L-6 Engine . . . . .	60-20
Buzzer Operation . . . . .	120-61	350, 400 & 430 Engines . . . . .	60-67
Trouble Diagnosis . . . . .	120-61	Tires	
Cable Installation . . . . .	120-65	Inflation . . . . .	100-4
Quick Connect . . . . .	120-64	Rotation . . . . .	100-5
Spring		Sizes . . . . .	100-3
Rear Suspension		Tools, Special	
All Series . . . . .	40-8	Fuel System . . . . .	64-54
Front Suspension		Electrical System . . . . .	120-146
43-44000 Series . . . . .	30-13	Transducer, Cruise Master . . . . .	65-3
45 through 49000 Series . . . . .	30-29	Transmission Oil Pan	
Track Bar		Super Turbine 300 . . . . .	74-28
49000 Series . . . . .	40-9	Turbo Hydramatic 350 & 400 . . . . .	74-110
Starting Motor		Transmission Reassembly -	
Specifications . . . . .	68-13	3-Speed Manual	
Repairs . . . . .	68-17	43-44-45000 Series . . . . .	72-10
Solenoid Test . . . . .	68-19	Heavy Duty 3-Speed . . . . .	72-22
Bench Test . . . . .	68-20	44600 (G.S. 400) & G.S. 350	
Operation . . . . .	68-14	4-Speed . . . . .	72-37
Wiring Diagrams . . . . .	68-16		

<b>Subject</b>	<b>Page No.</b>	<b>Subject</b>	<b>Page No.</b>
<b>Transmission Removal and Installation</b>		<b>Valve Body - Transmission</b>	
43-44-45000 Series		Super Turbine 300 . . . . .	74-38
3-Speed Manual . . . . .	72-3	Turbo Hydramatic 350 . . . . .	75-69
Heavy Duty (G. S. 400)		Turbo Hydramatic 400 . . . . .	76-54
3-Speed Manual . . . . .	72-16	<b>Valve Lifters</b>	
44600 Series (G. S. 400) & G. S. 350		L-6 Engine . . . . .	60-12
4-Speed Manual . . . . .	72-29	350, 400 & 430 Engines . . . . .	60-55
Super Turbine 300 . . . . .	74-28	<b>Valve and Seat Reconditioning - Engine</b>	
Turbo Hydramatic 350 . . . . .	75-17	L-6 Engine . . . . .	60-12
Turbo Hydramatic 400 . . . . .	76-36	350, 400 & 430 Engines . . . . .	60-53
<b>Trim Height</b>		<b>Vapor Return System . . . . .</b>	<b>64-4</b>
43-44000 Series . . . . .	40-11		
45 through 49000 Series . . . . .	40-11	<b>W</b>	
<b>Trouble Diagnosis</b>		<b>Water Pump - Engine</b>	
Manual Steering Gear . . . . .	90-9	L-6 Engine . . . . .	60-29
Super Turbine 300 . . . . .	74-59	350, 400 & 430 Engines . . . . .	60-72
Turbo Hydramatic 350 . . . . .	75-78	<b>Wheels . . . . .</b>	<b>100-3</b>
Turbo Hydramatic 400 . . . . .	76-74	<b>Wheel Alignment</b>	
43-44-45000 Series		43-44000 Series . . . . .	30-6
3-Speed Manual . . . . .	72-12	45 through 49000 Series . . . . .	30-21
Heavy Duty		<b>Wheel Bearing, Adjustment Front . . . . .</b>	<b>100-7</b>
3-Speed Manual . . . . .	72-25	<b>Windshield Wiper and Washer</b>	
44600 Series (G. S. 400) & G. S. 350		Description and Operation	
4-Speed Manual . . . . .	72-39	Depressed Park . . . . .	10-18
43-44-45-46000 Series Clutch . . . . .	71-10	Non-Depressed Park . . . . .	10-3
<b>Tune Up Procedure . . . . .</b>	<b>69-4</b>	<b>Windshield Wiper and Washer</b>	
<b>Turn Signal</b>		Service Procedures	
Operation . . . . .	120-21	Depressed Park . . . . .	10-23
Trouble Diagnosis . . . . .	120-23	Non-Depressed Park . . . . .	10-6
Wiring Diagram . . . . .	120-22	<b>Windshield Wiper and Washer</b>	
<b>Twilight Sentinel . . . . .</b>	<b>120-142</b>	Specifications	
<b>U</b>		Depressed Park . . . . .	10-18
<b>Universal Joints</b>		Non-Depressed Park . . . . .	10-2
43-44-45-46-48000 Series . . . . .	40-32	<b>Windshield Wiper and Washer</b>	
49000 Series . . . . .	40-45	Trouble Diagnosis	
<b>V</b>		Depressed Park . . . . .	10-28
<b>Vacuum Modulator</b>		Non-Depressed Park . . . . .	10-13
Super Turbine 300 . . . . .	74-65	<b>Wiper &amp; Transmission Down Shift</b>	
Turbo Hydramatic 350 . . . . .	75-88	Wiring Diagrams	
Turbo Hydramatic 400 . . . . .	76-84	43-44000 . . . . .	120-137
<b>Vacuum Motor Service, C. C. S. . . . .</b>	<b>67-8</b>	45-46-48-49000 Series . . . . .	120-138
		<b>Wiring Diagrams - Complete Colored</b>	
		43-44000 . . . . .	120-147
		45-46-48000 . . . . .	120-148
		49000 . . . . .	120-149