

SECTION A

SHIFT LINK ADJUSTMENTS

ALL SERIES

CONTENTS

Division	Subject	Paragraph
I	SPECIFICATIONS AND ADJUSTMENTS: Super Turbine 300 Transmission Shift Linkage Adjustment (Column Shift) 43-44000 Series Super Turbine 300, Turbo Hydra-Matic 350 & 400 Transmission Shift Linkage Adjustment (Console Shift) 43-44000 Series..... Super Turbine 300 Transmission Shift Linkage Adjustment (Column Shift) 45000 Series Turbo Hydra-Matic 400 Transmission Shift Linkage Adjustment (Column Shift) 45-46-48-49000 Series..... Turbo Hydra-Matic 400 Transmission Shift Linkage Adjustment (Console Shift) 46000 Series..... Turbo Hydra-Matic 400 Transmission Shift Linkage Adjustment (Console Shift) 49000 Series..... 3-Speed Manual Transmission Shift Linkage Adjustment 43-44000 Series.. 3-Speed Manual Transmission Floor Shift Linkage Adjustment (G.S. 350) (G.S. 400) 3-Speed Manual Transmission Shift Linkage Adjustment 45000 Series..... 4-Speed Manual Transmission Floor Shift Linkage Adjustment (G.S. 350) (G.S. 400)	73-1 73-2 73-3 73-4 73-5 73-6 73-7 73-8 73-9 73-10
II	DESCRIPTION AND OPERATION: Not Applicable	
III	SERVICE PROCEDURES: Not Applicable	
IV	TROUBLE DIAGNOSIS: Not Applicable	

DIVISION I SPECIFICATIONS AND ADJUSTMENTS

73-1 SUPER TURBINE 300 TRANSMISSION LINKAGE ADJUSTMENT (Column Shift) 43-44000 SERIES

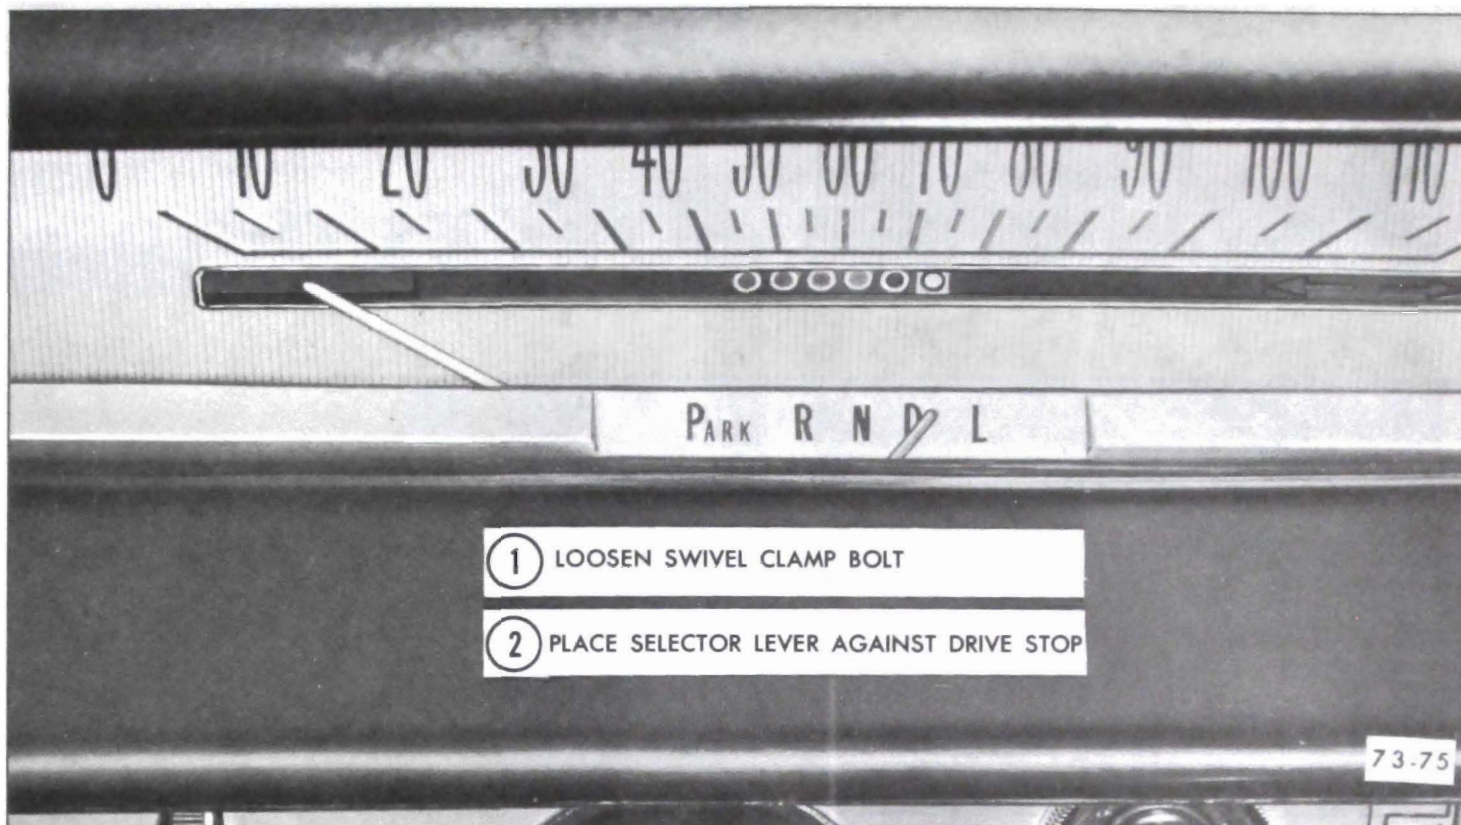


Figure 73-1

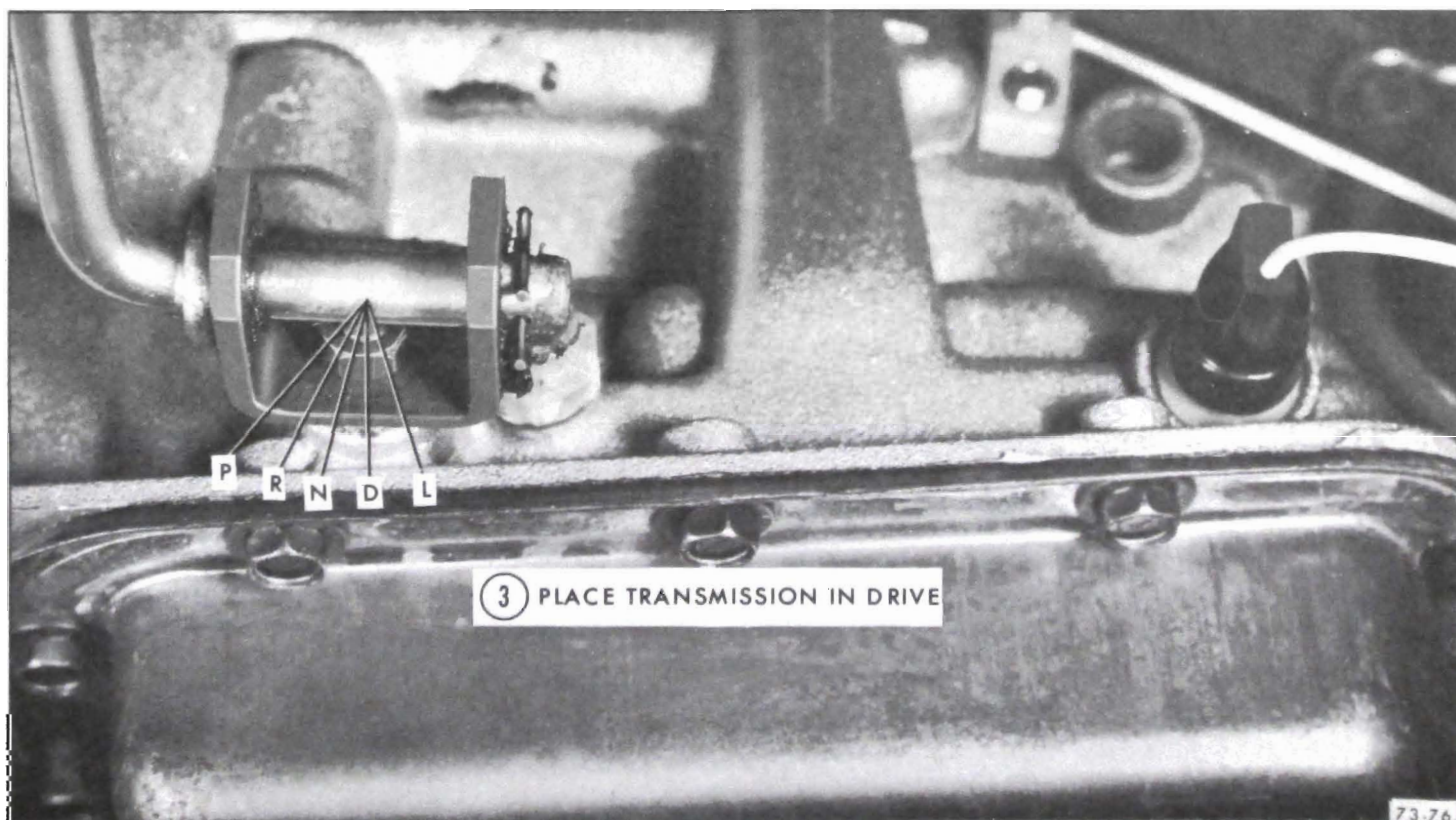


Figure 73-2

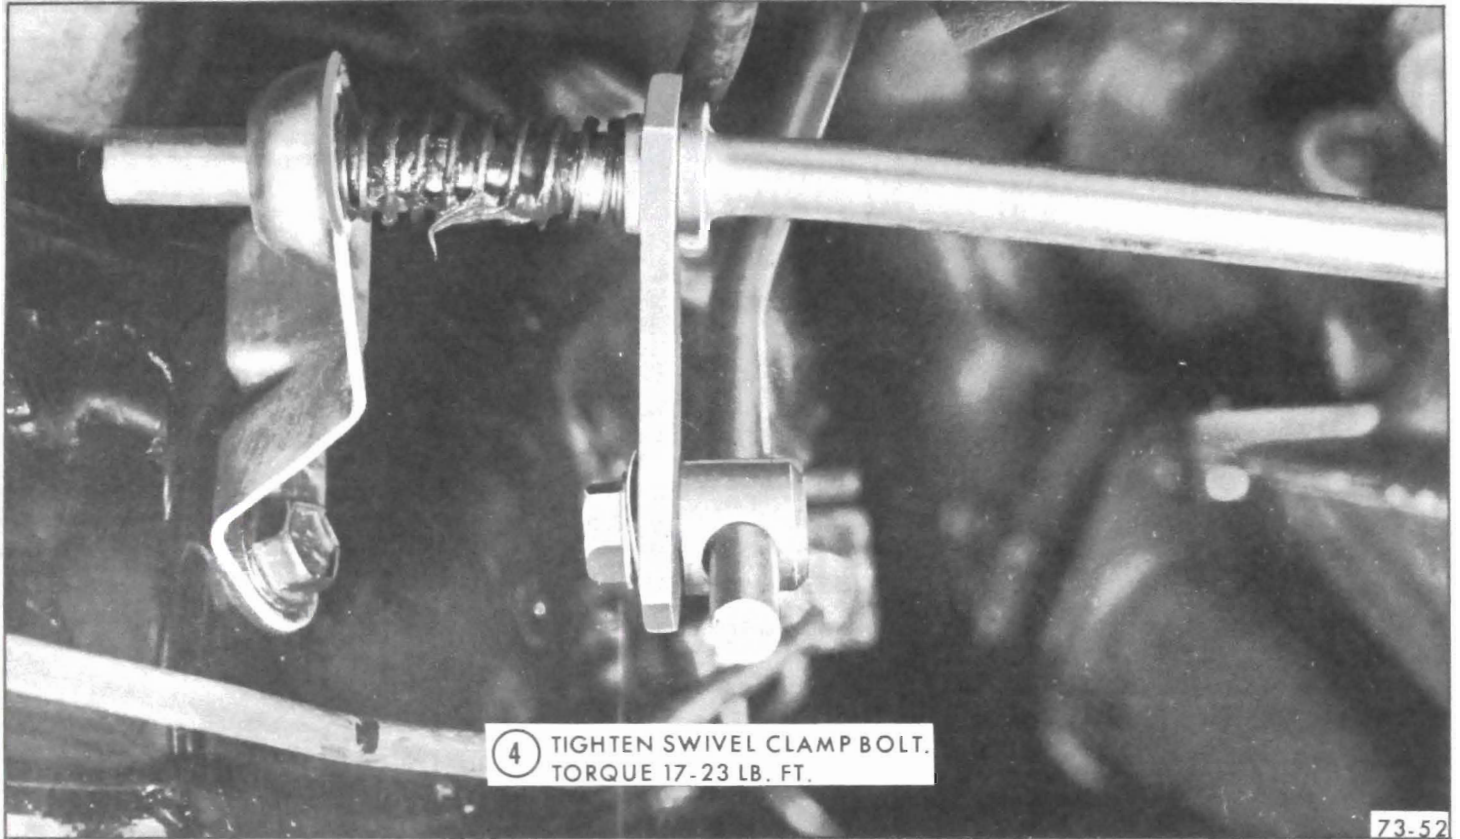


Figure 73-3

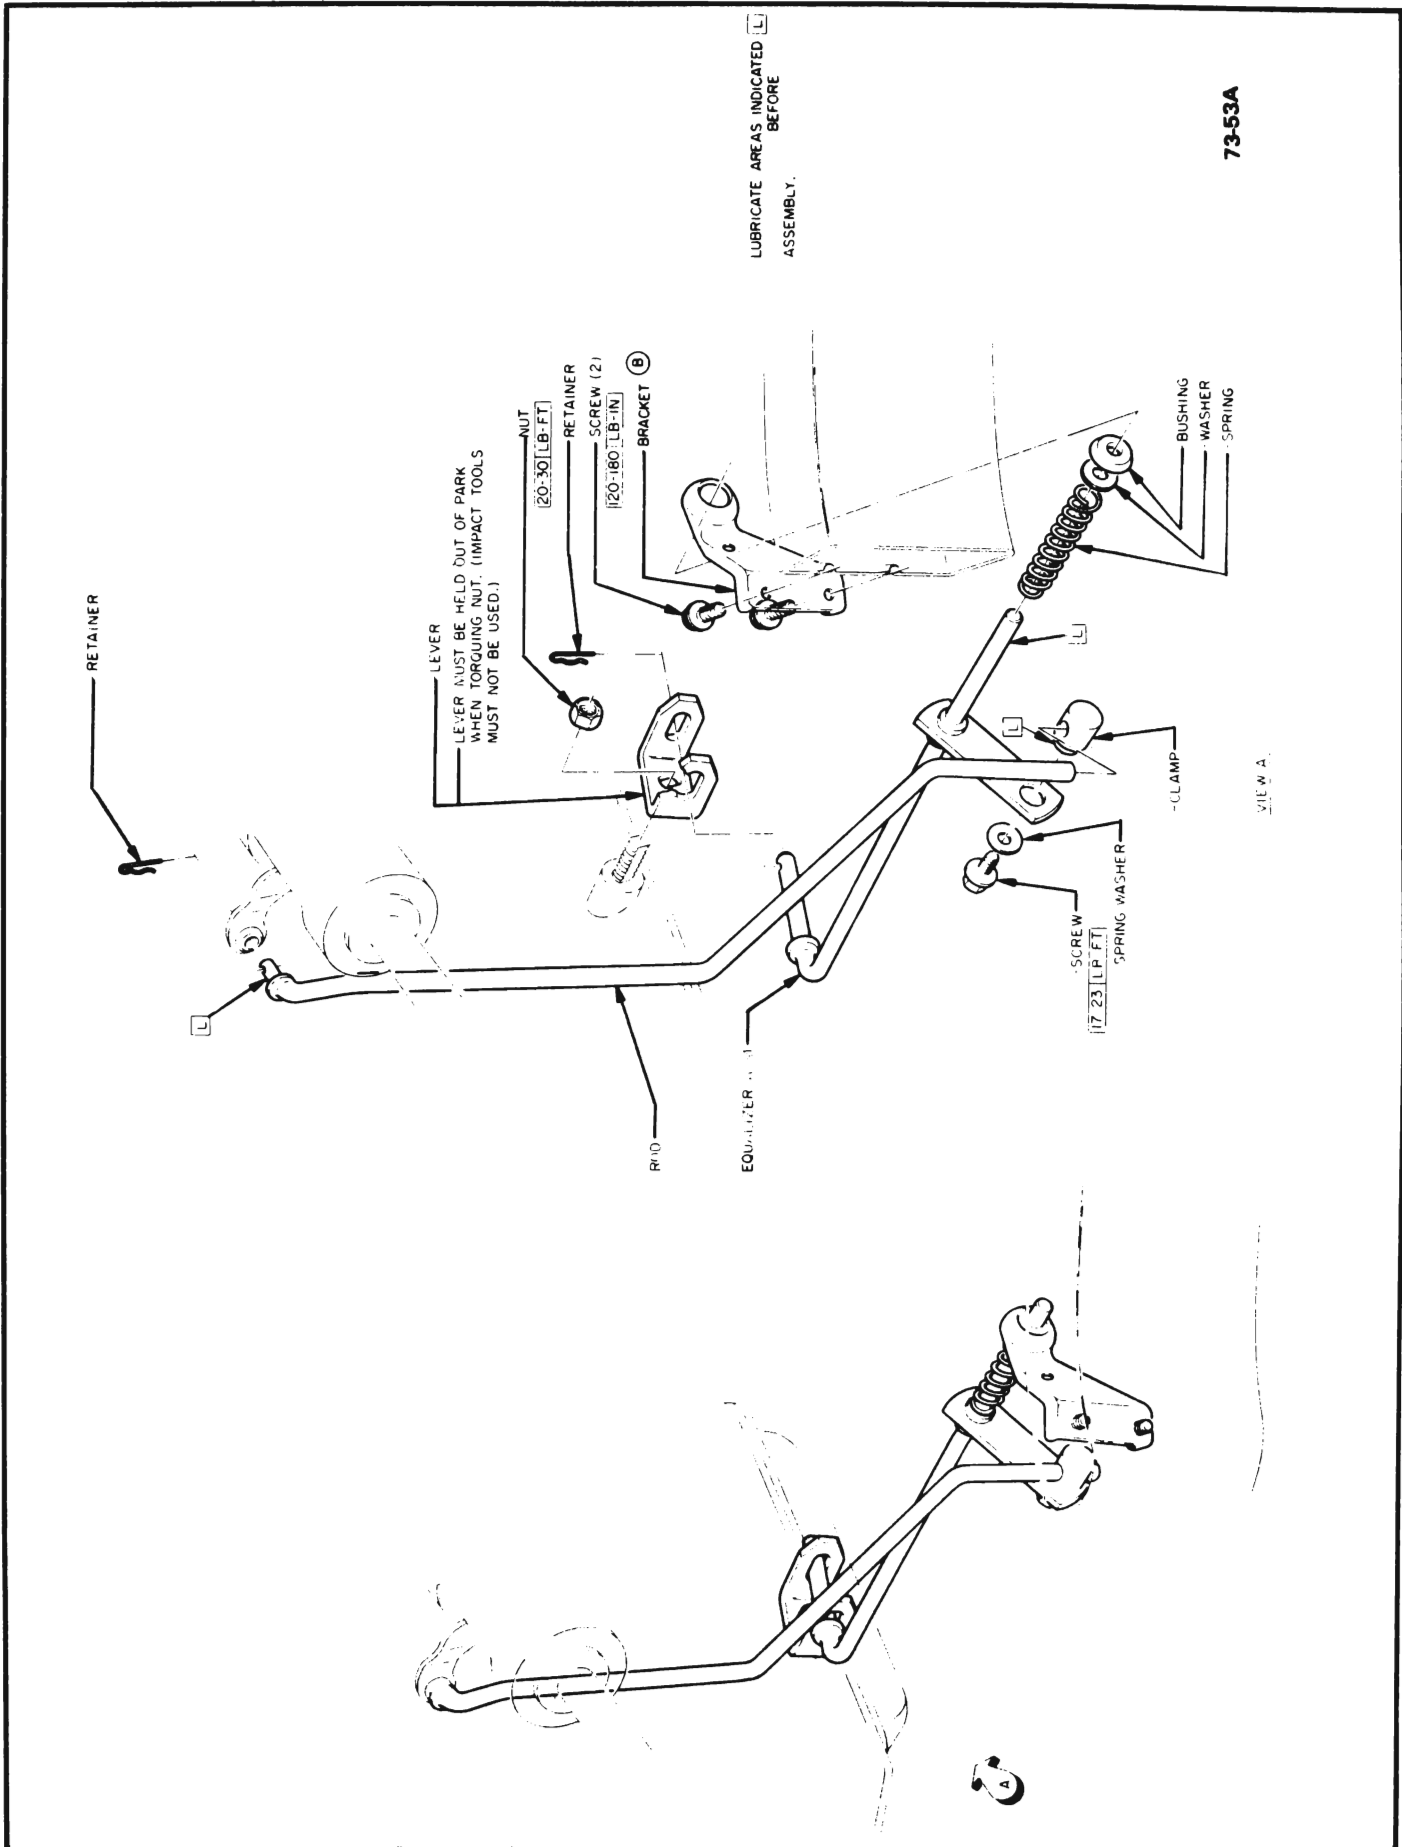


Figure 73-4

73-2 SUPER TURBINE 300, TURBO HYDRA-MATIC 350 & 400 TRANSMISSION LINKAGE ADJUSTMENT (Console Shift) 43-44000 SERIES

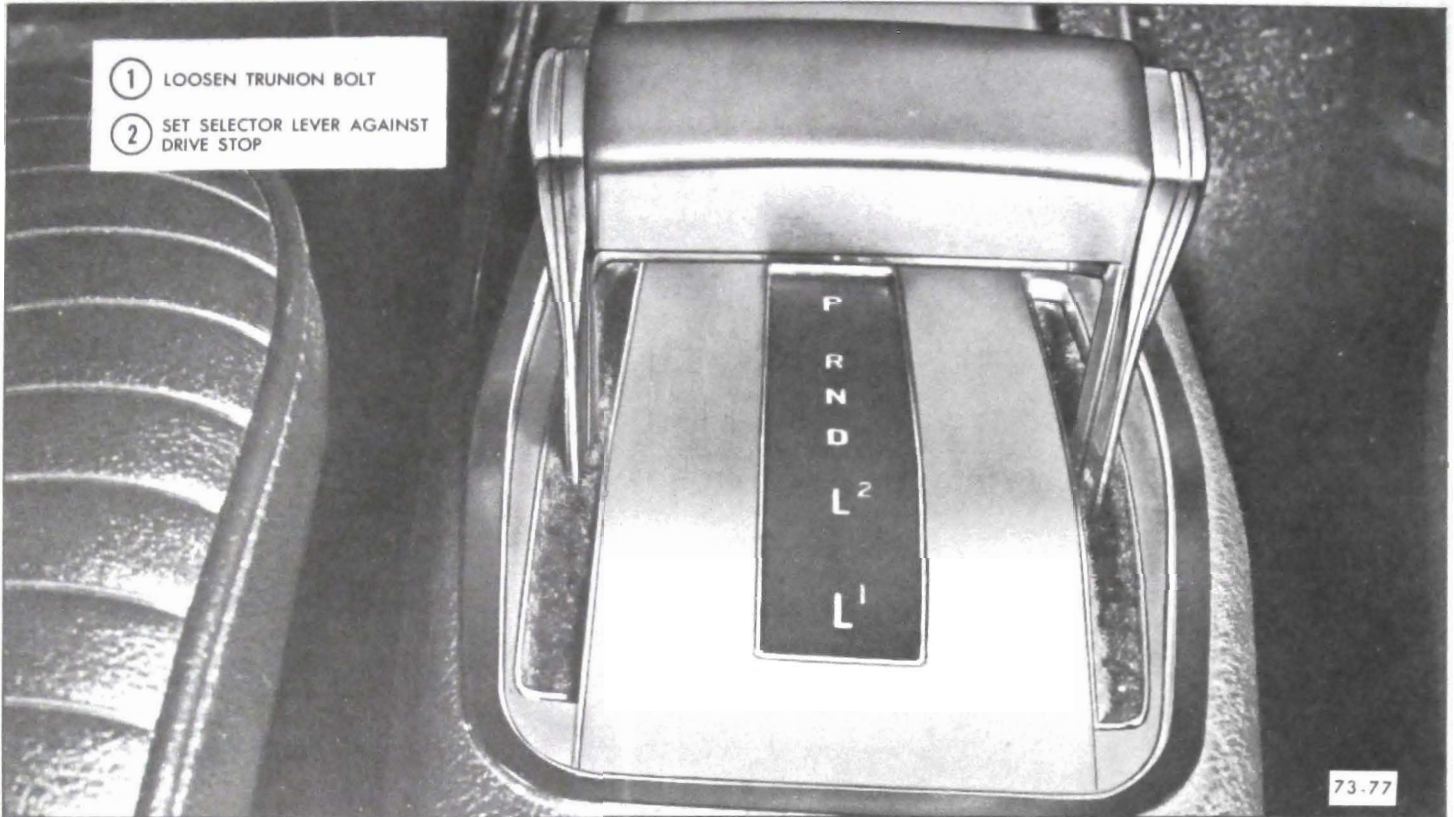


Figure 73-5


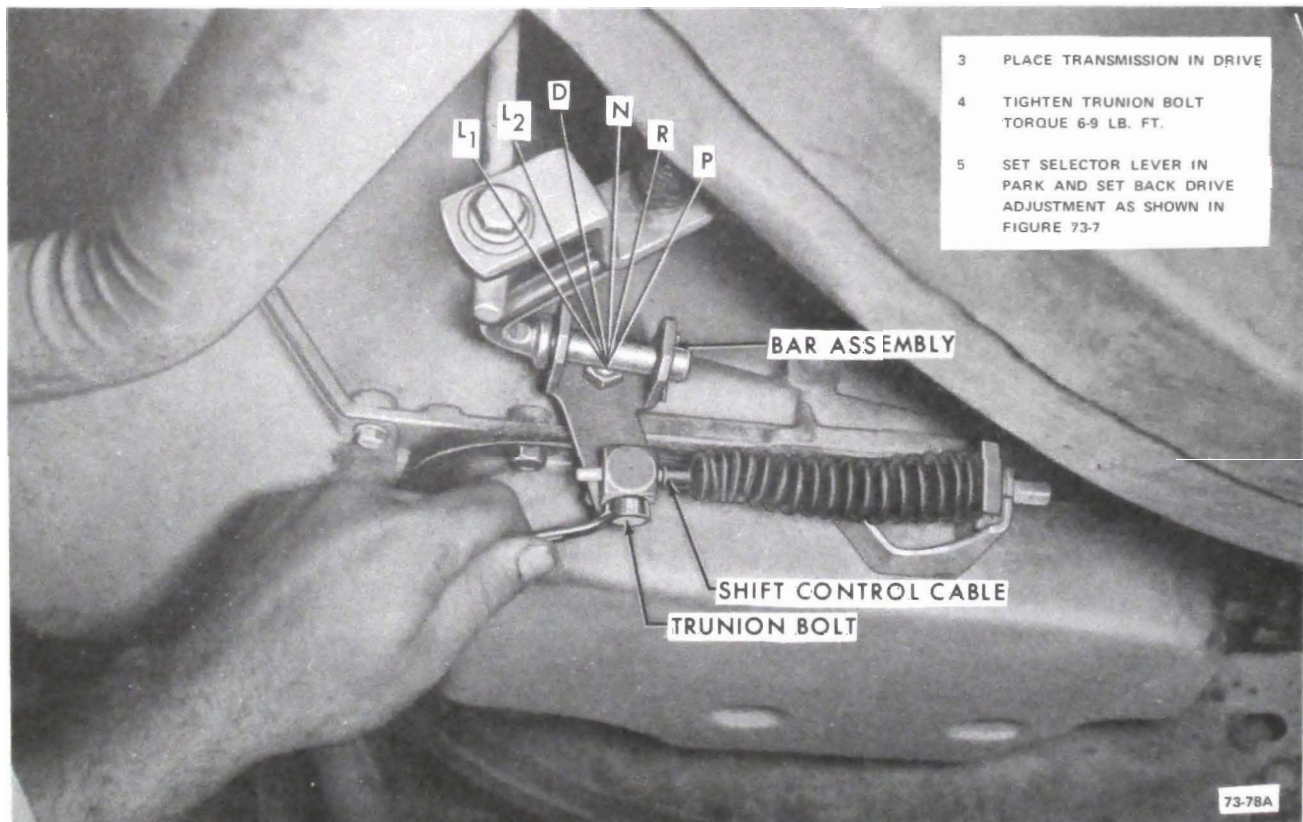


Figure 73-6

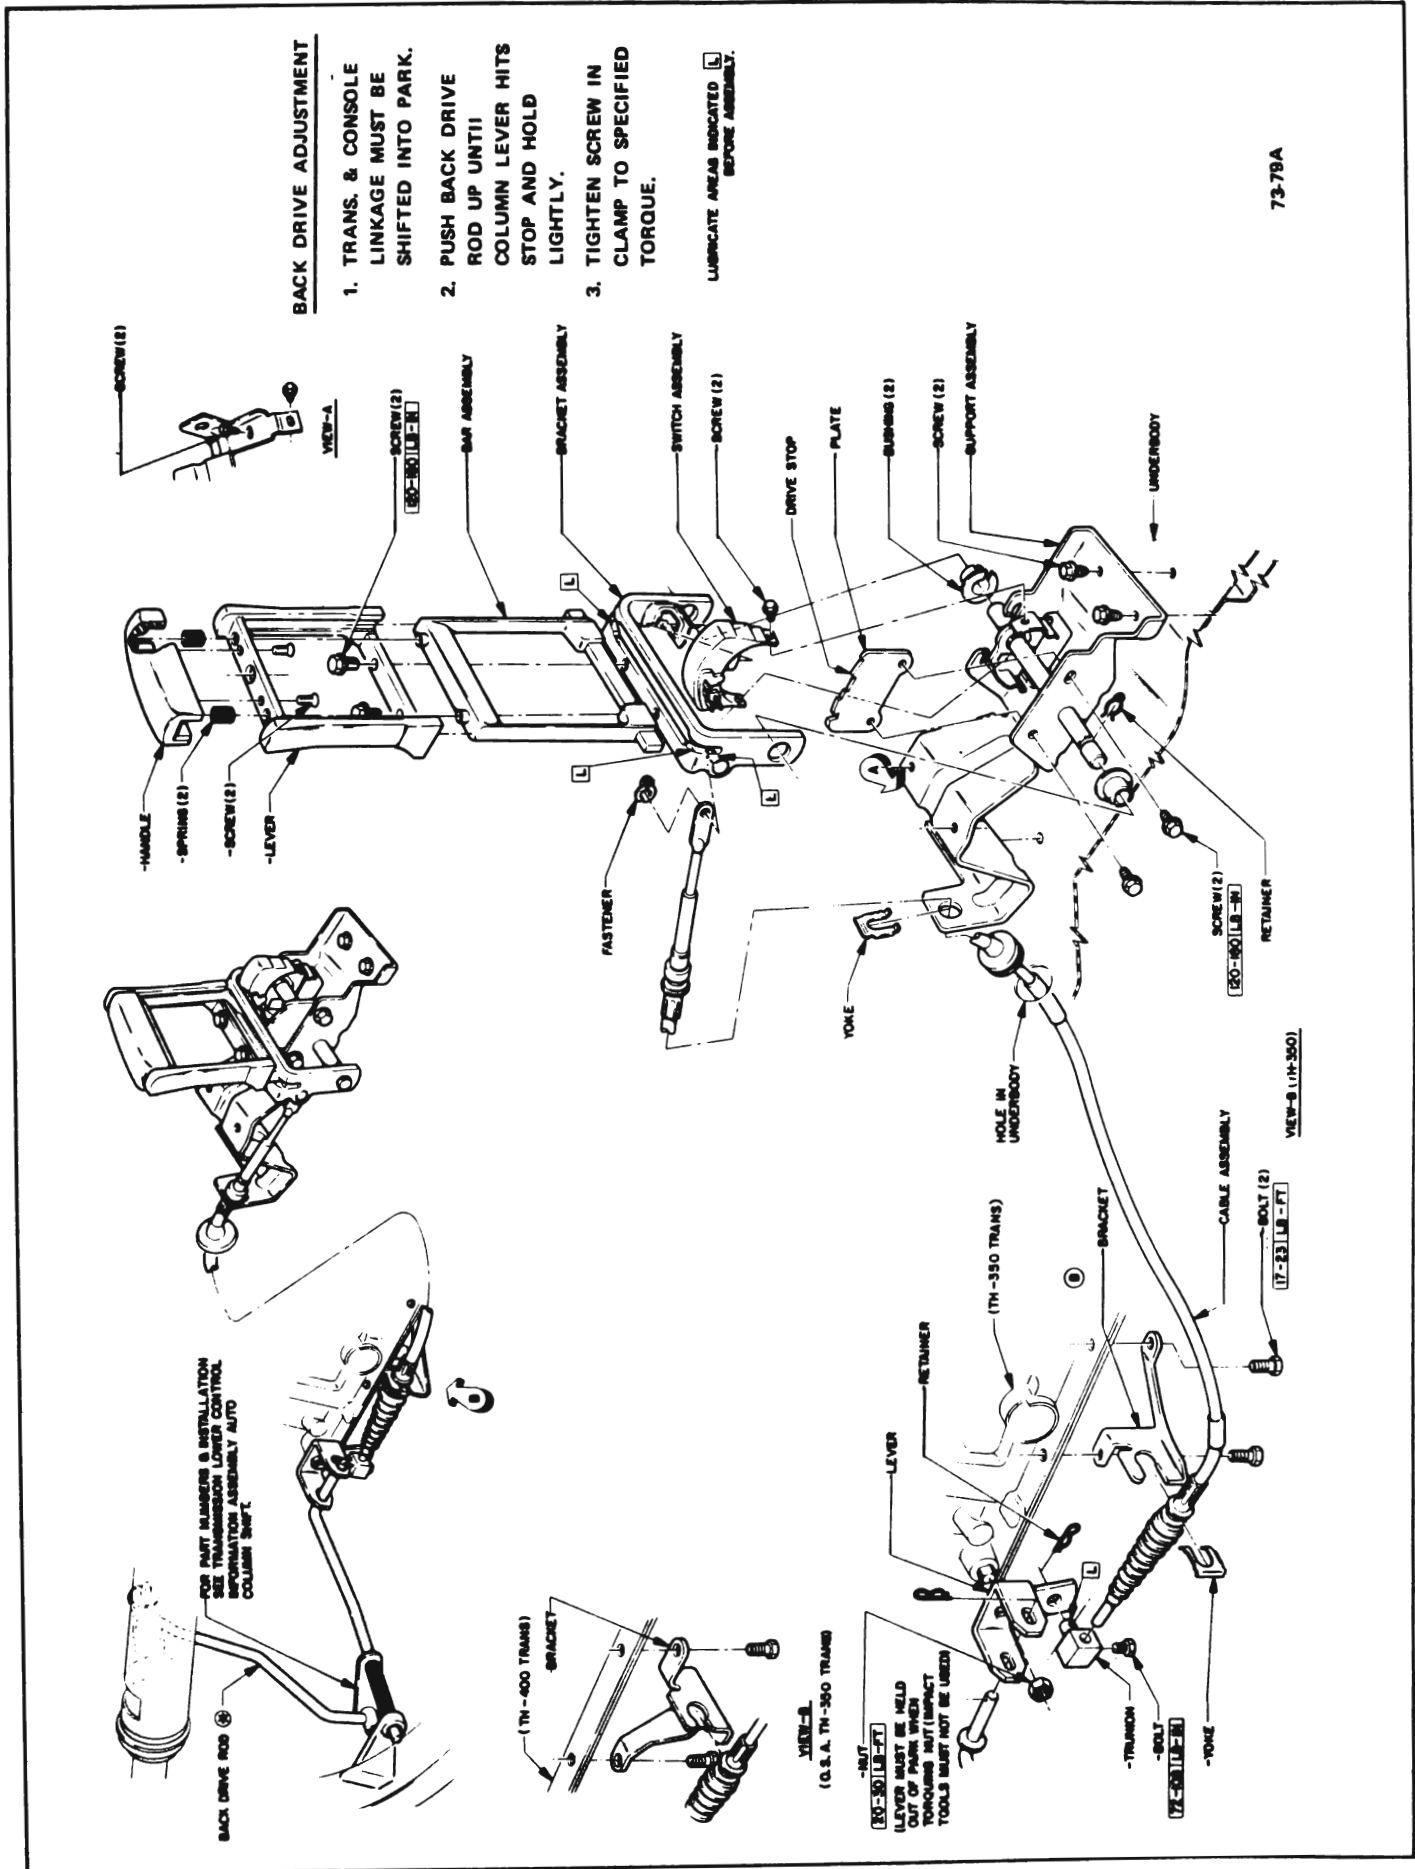

73-79A

Figure 73-7

73-3 SUPER TURBINE 300 TRANSMISSION LINKAGE ADJUSTMENT (Column Shift) 45000 SERIES

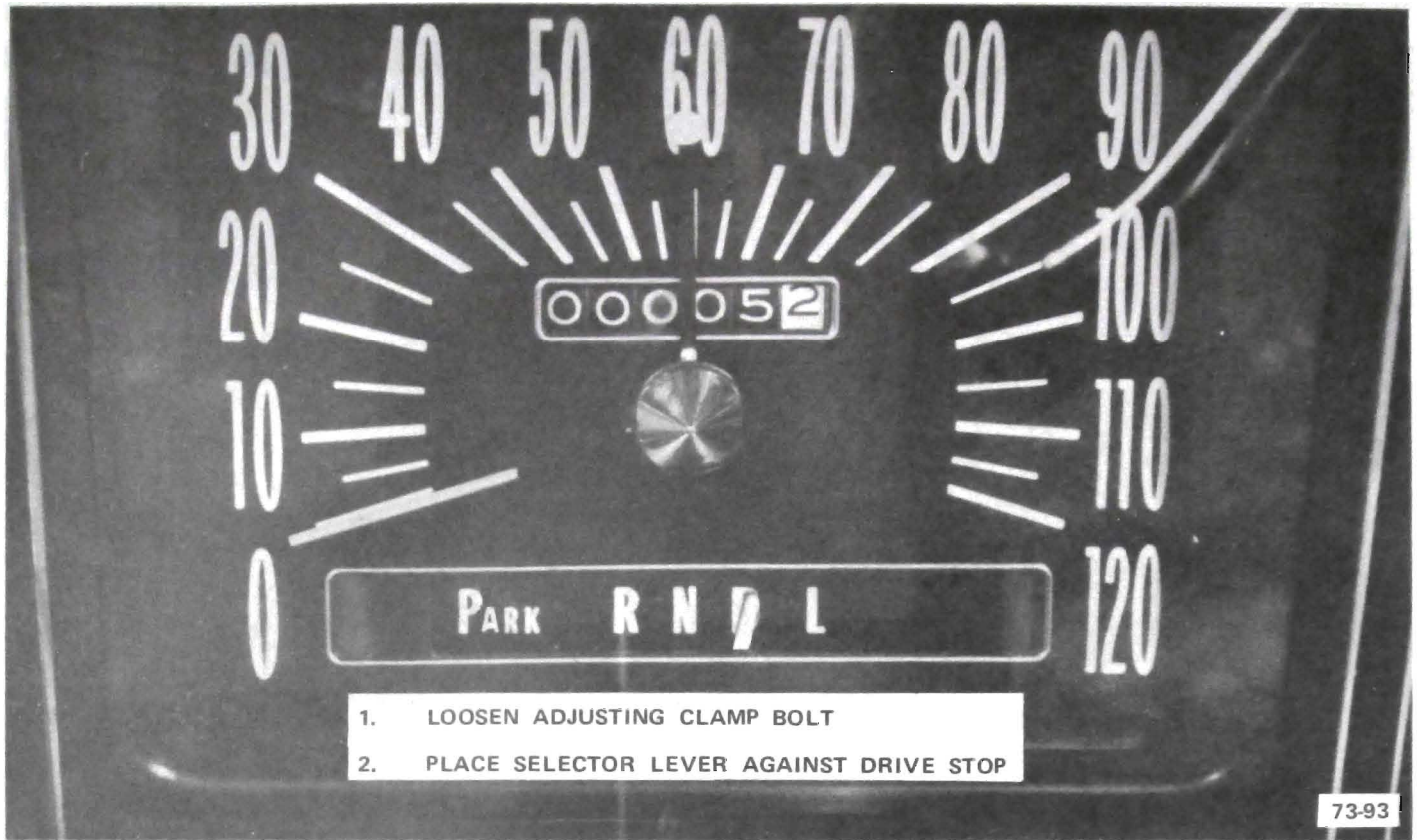


Figure 73-8

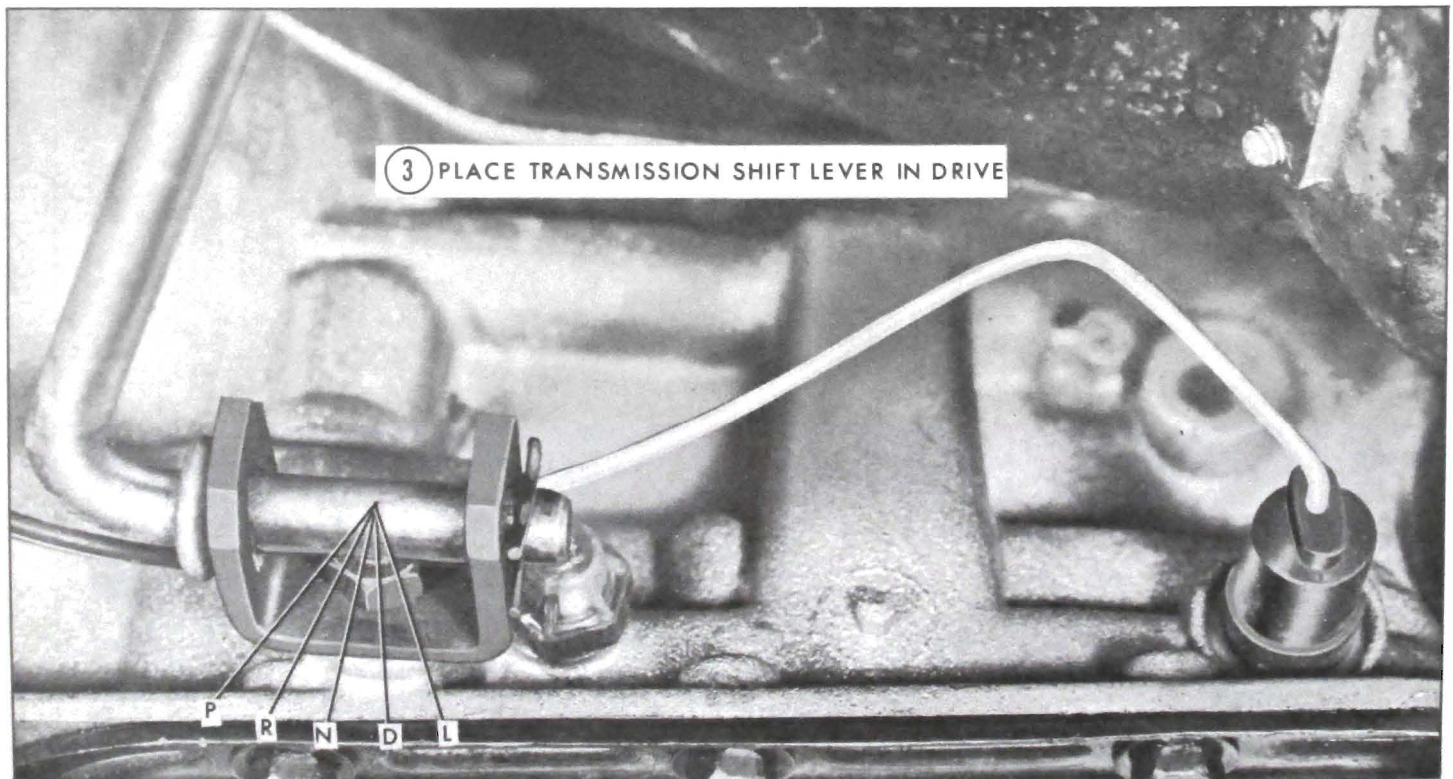


Figure 73-9

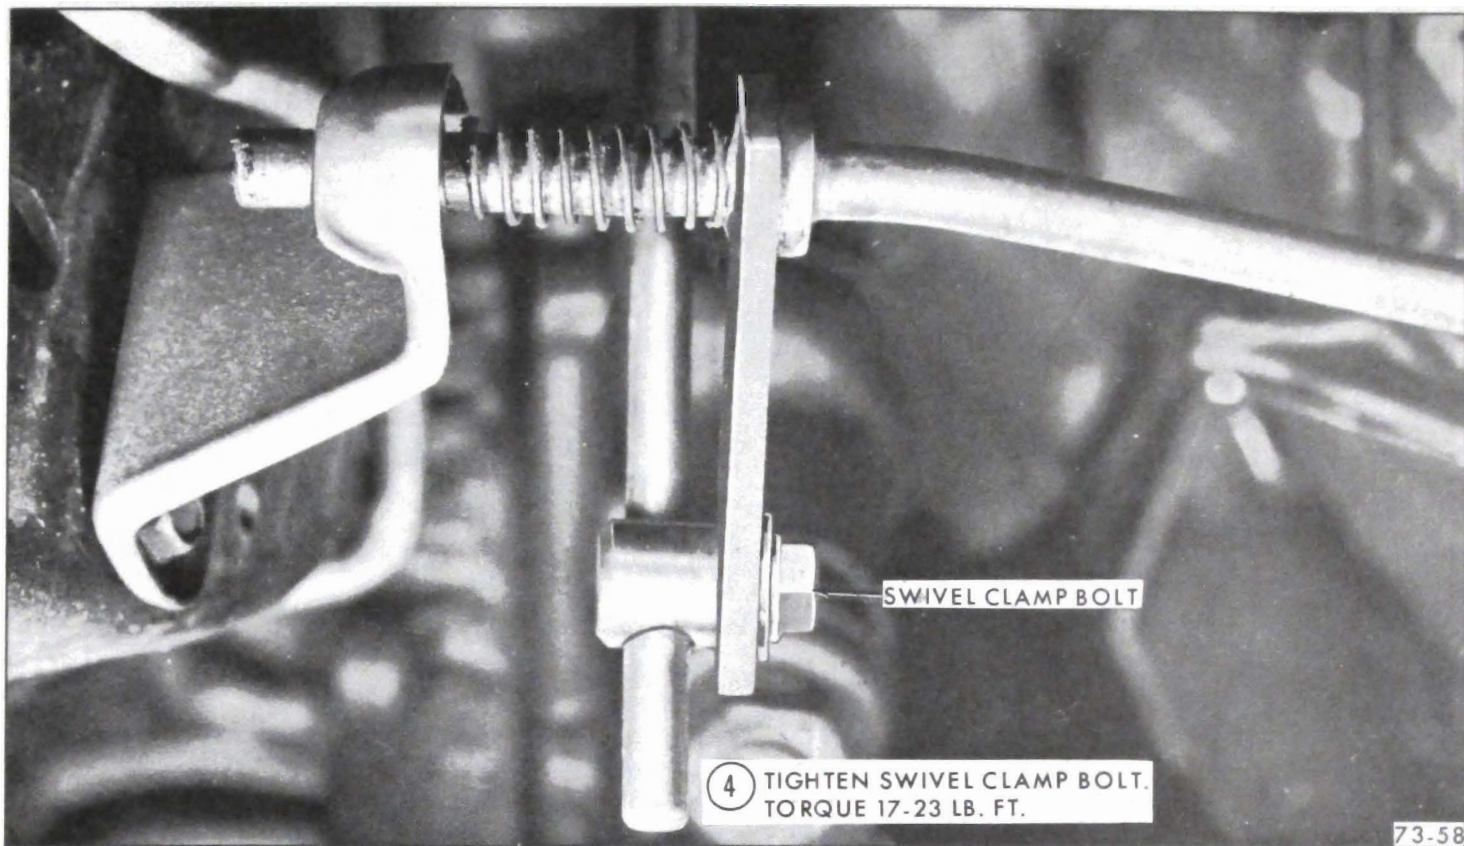


Figure 73-10

73-4 TURBO HYDRA-MATIC 400 TRANSMISSION LINKAGE ADJUSTMENT (Column Shift) 45, 46, 48 & 49000 SERIES

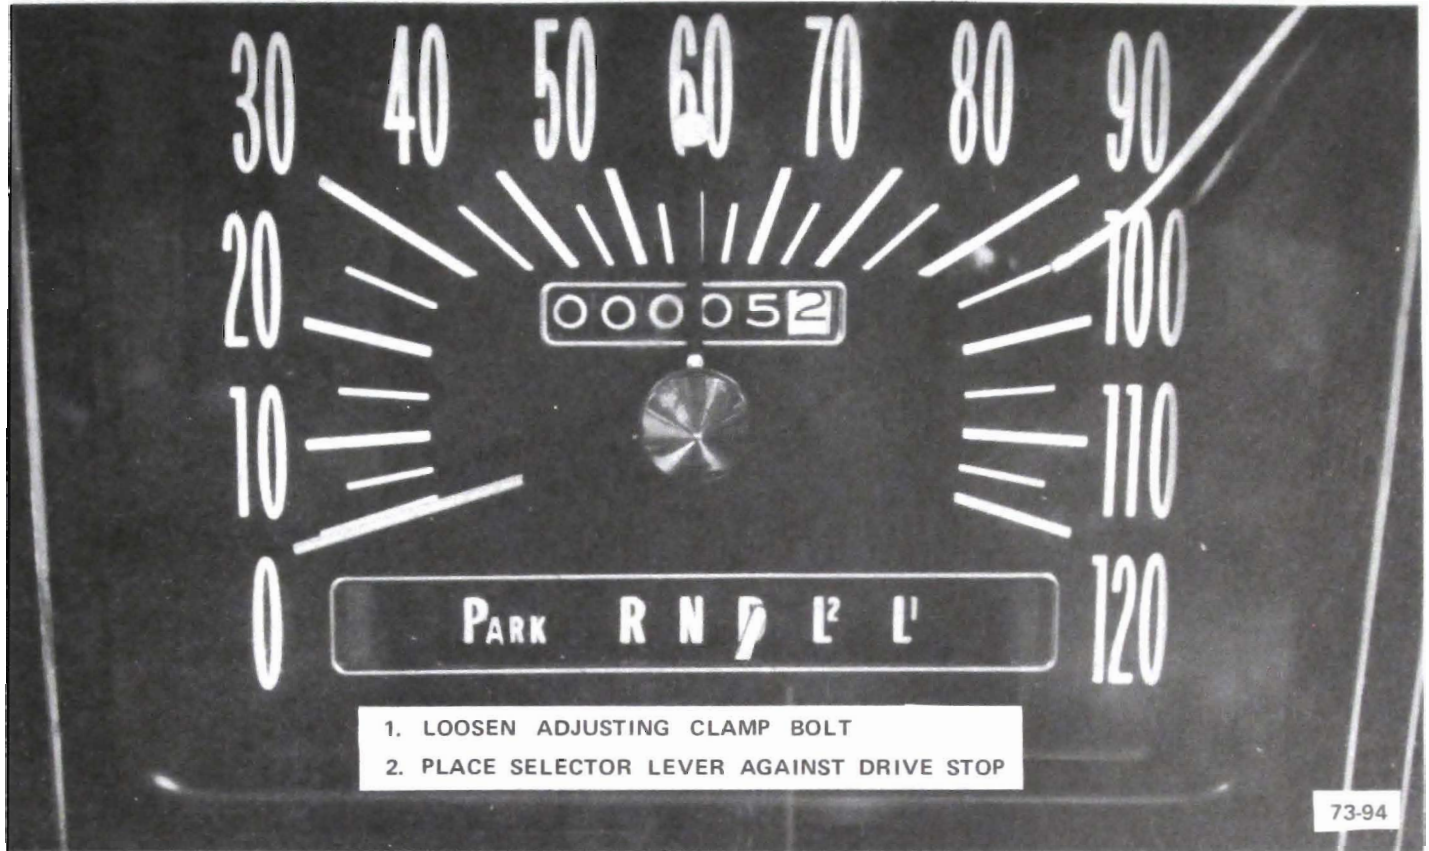


Figure 73-12

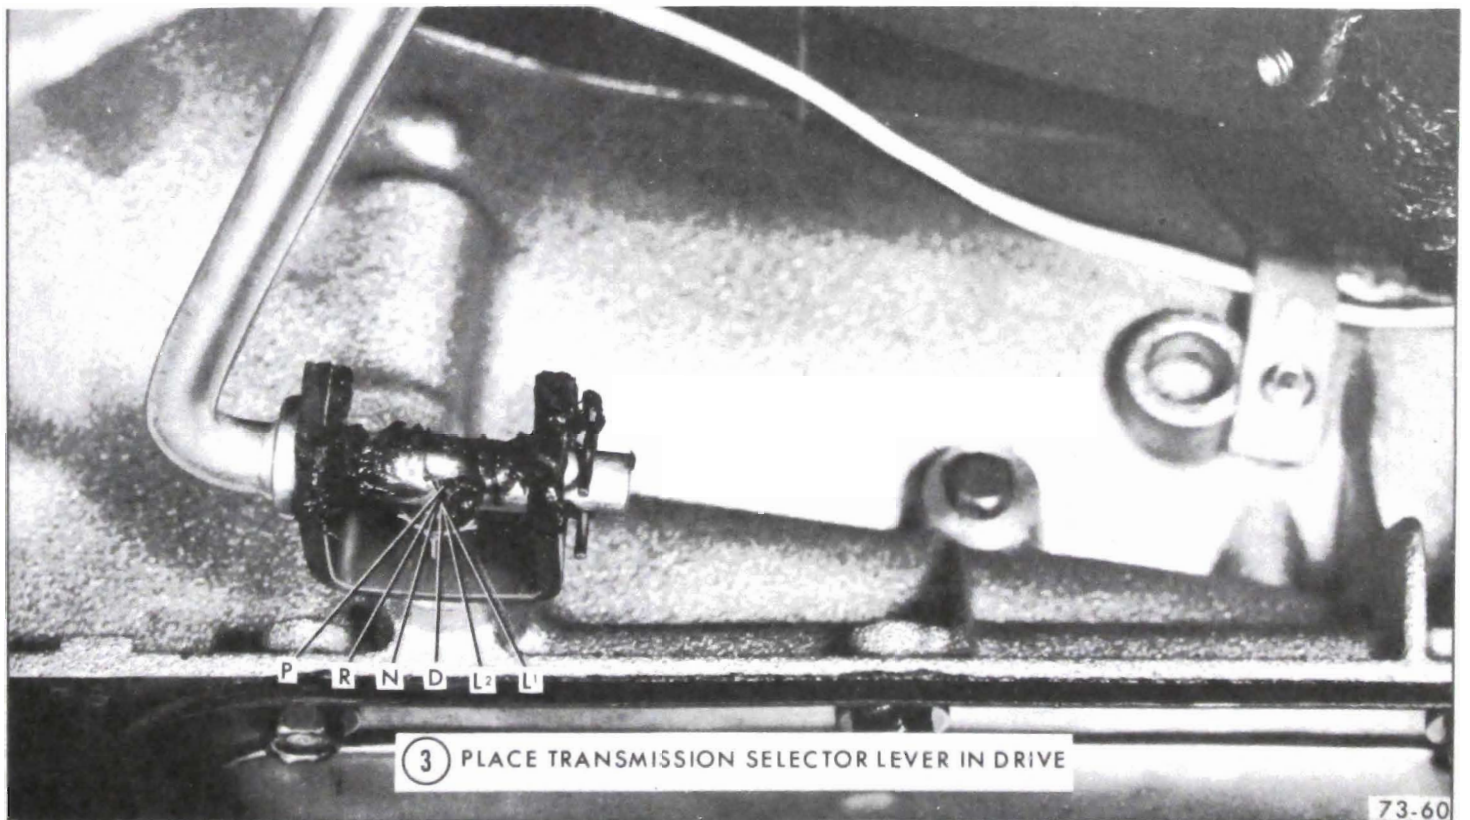


Figure 73-13

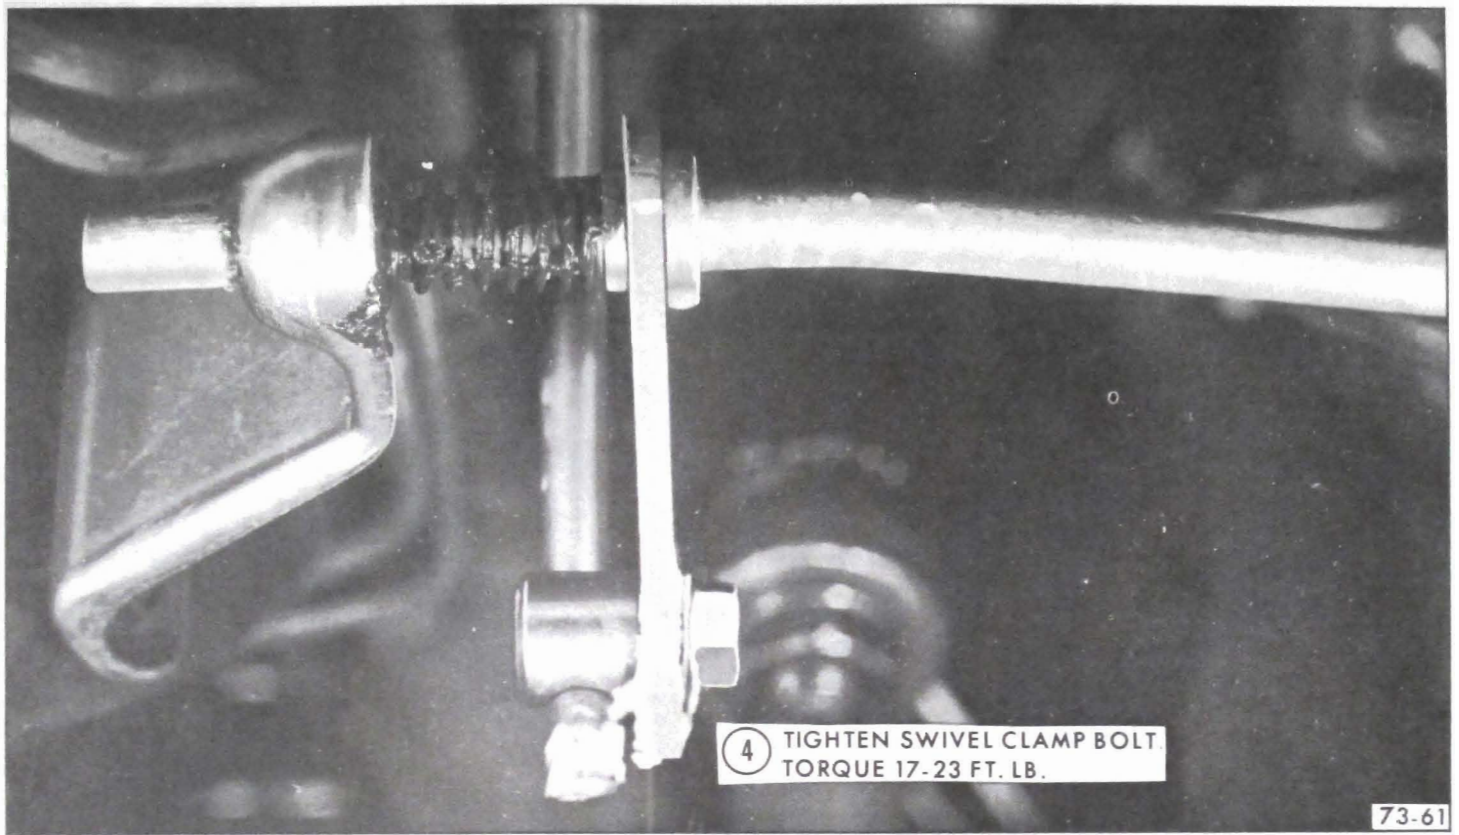


Figure 73-14

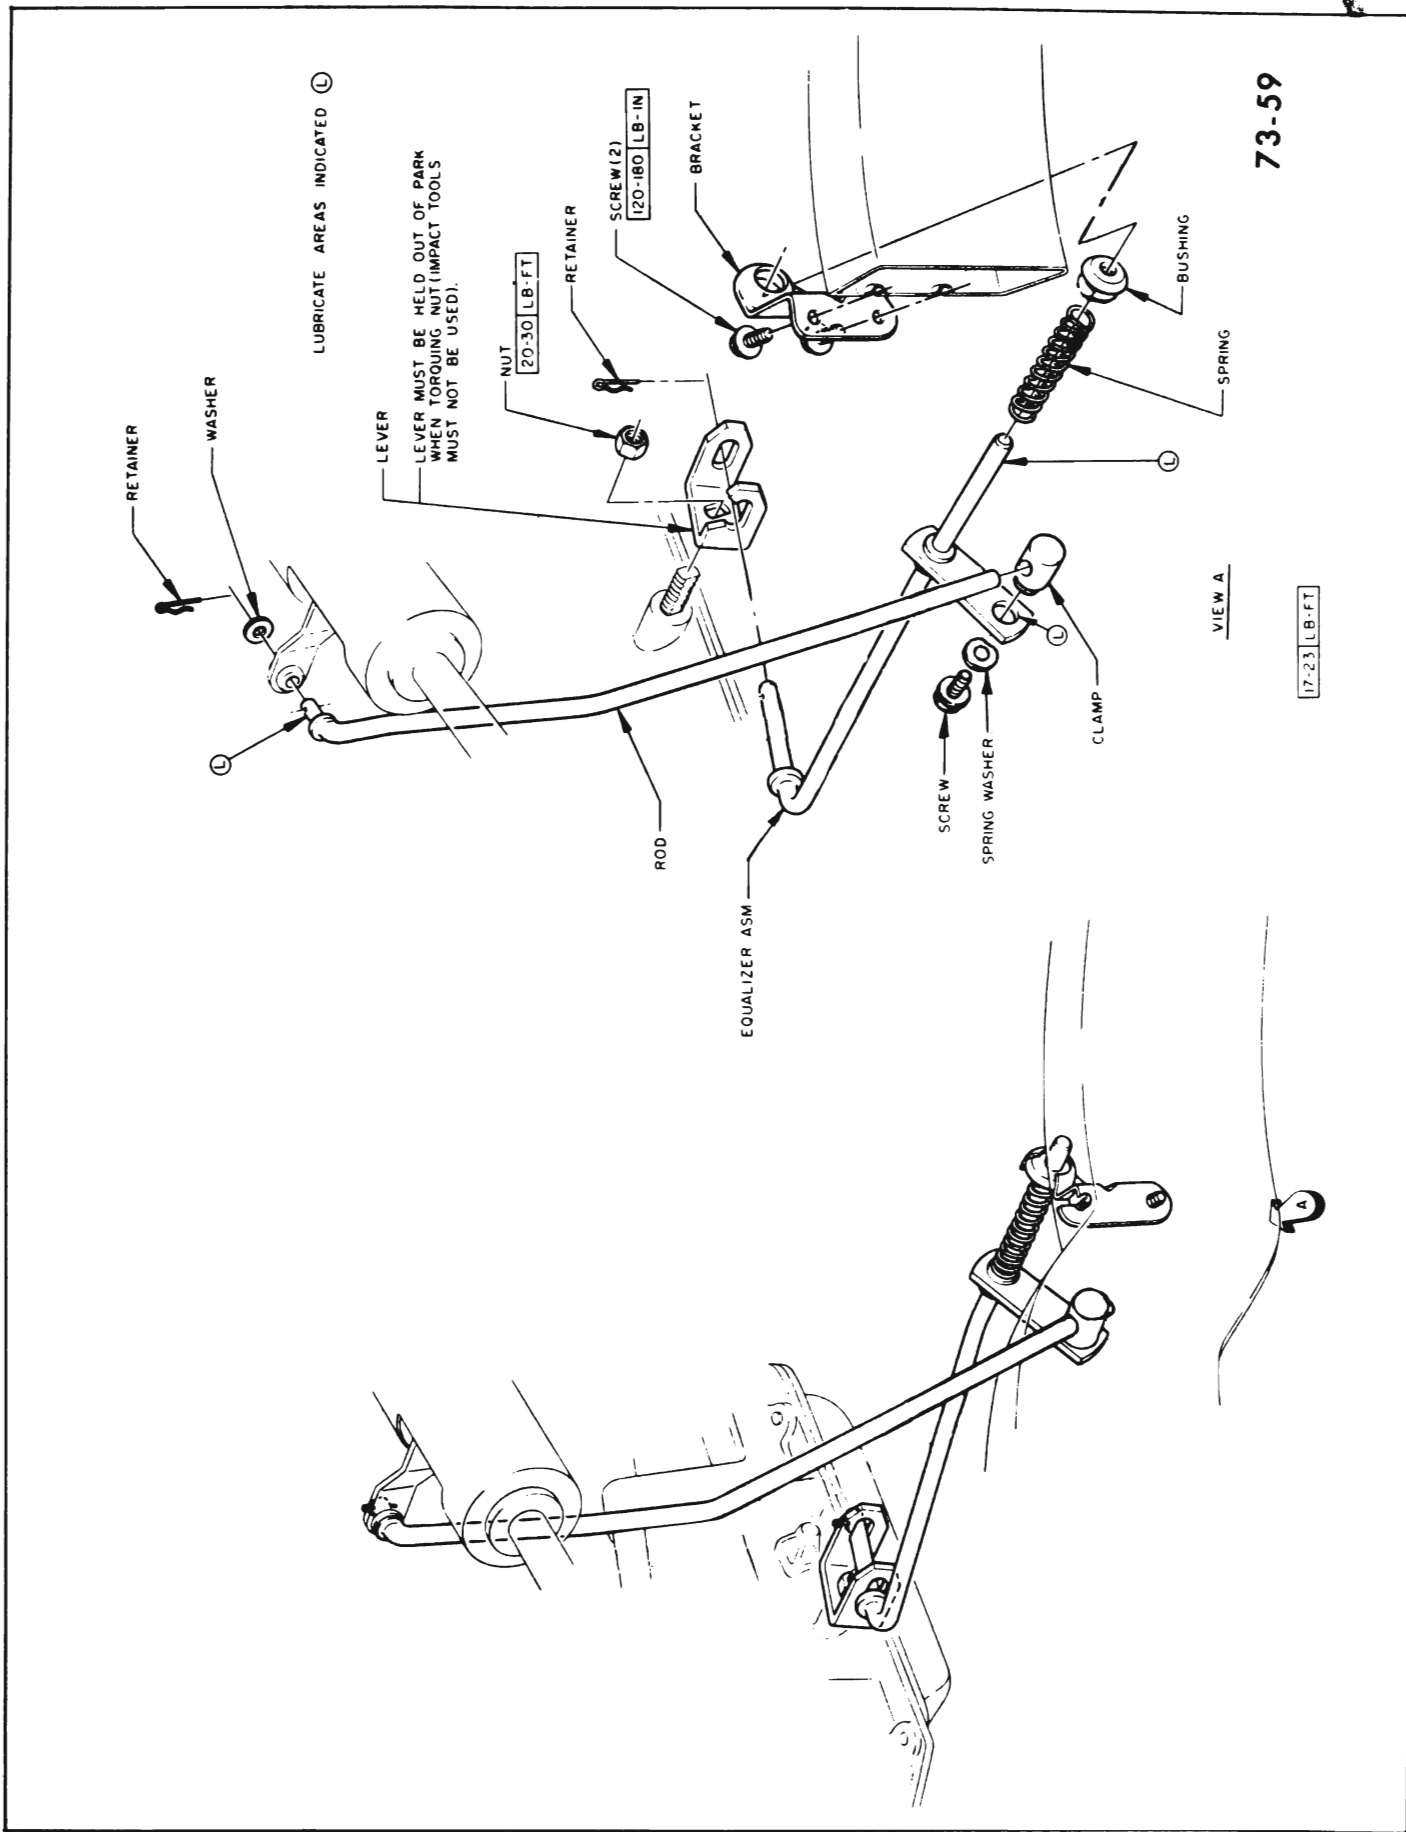


Figure 73-15

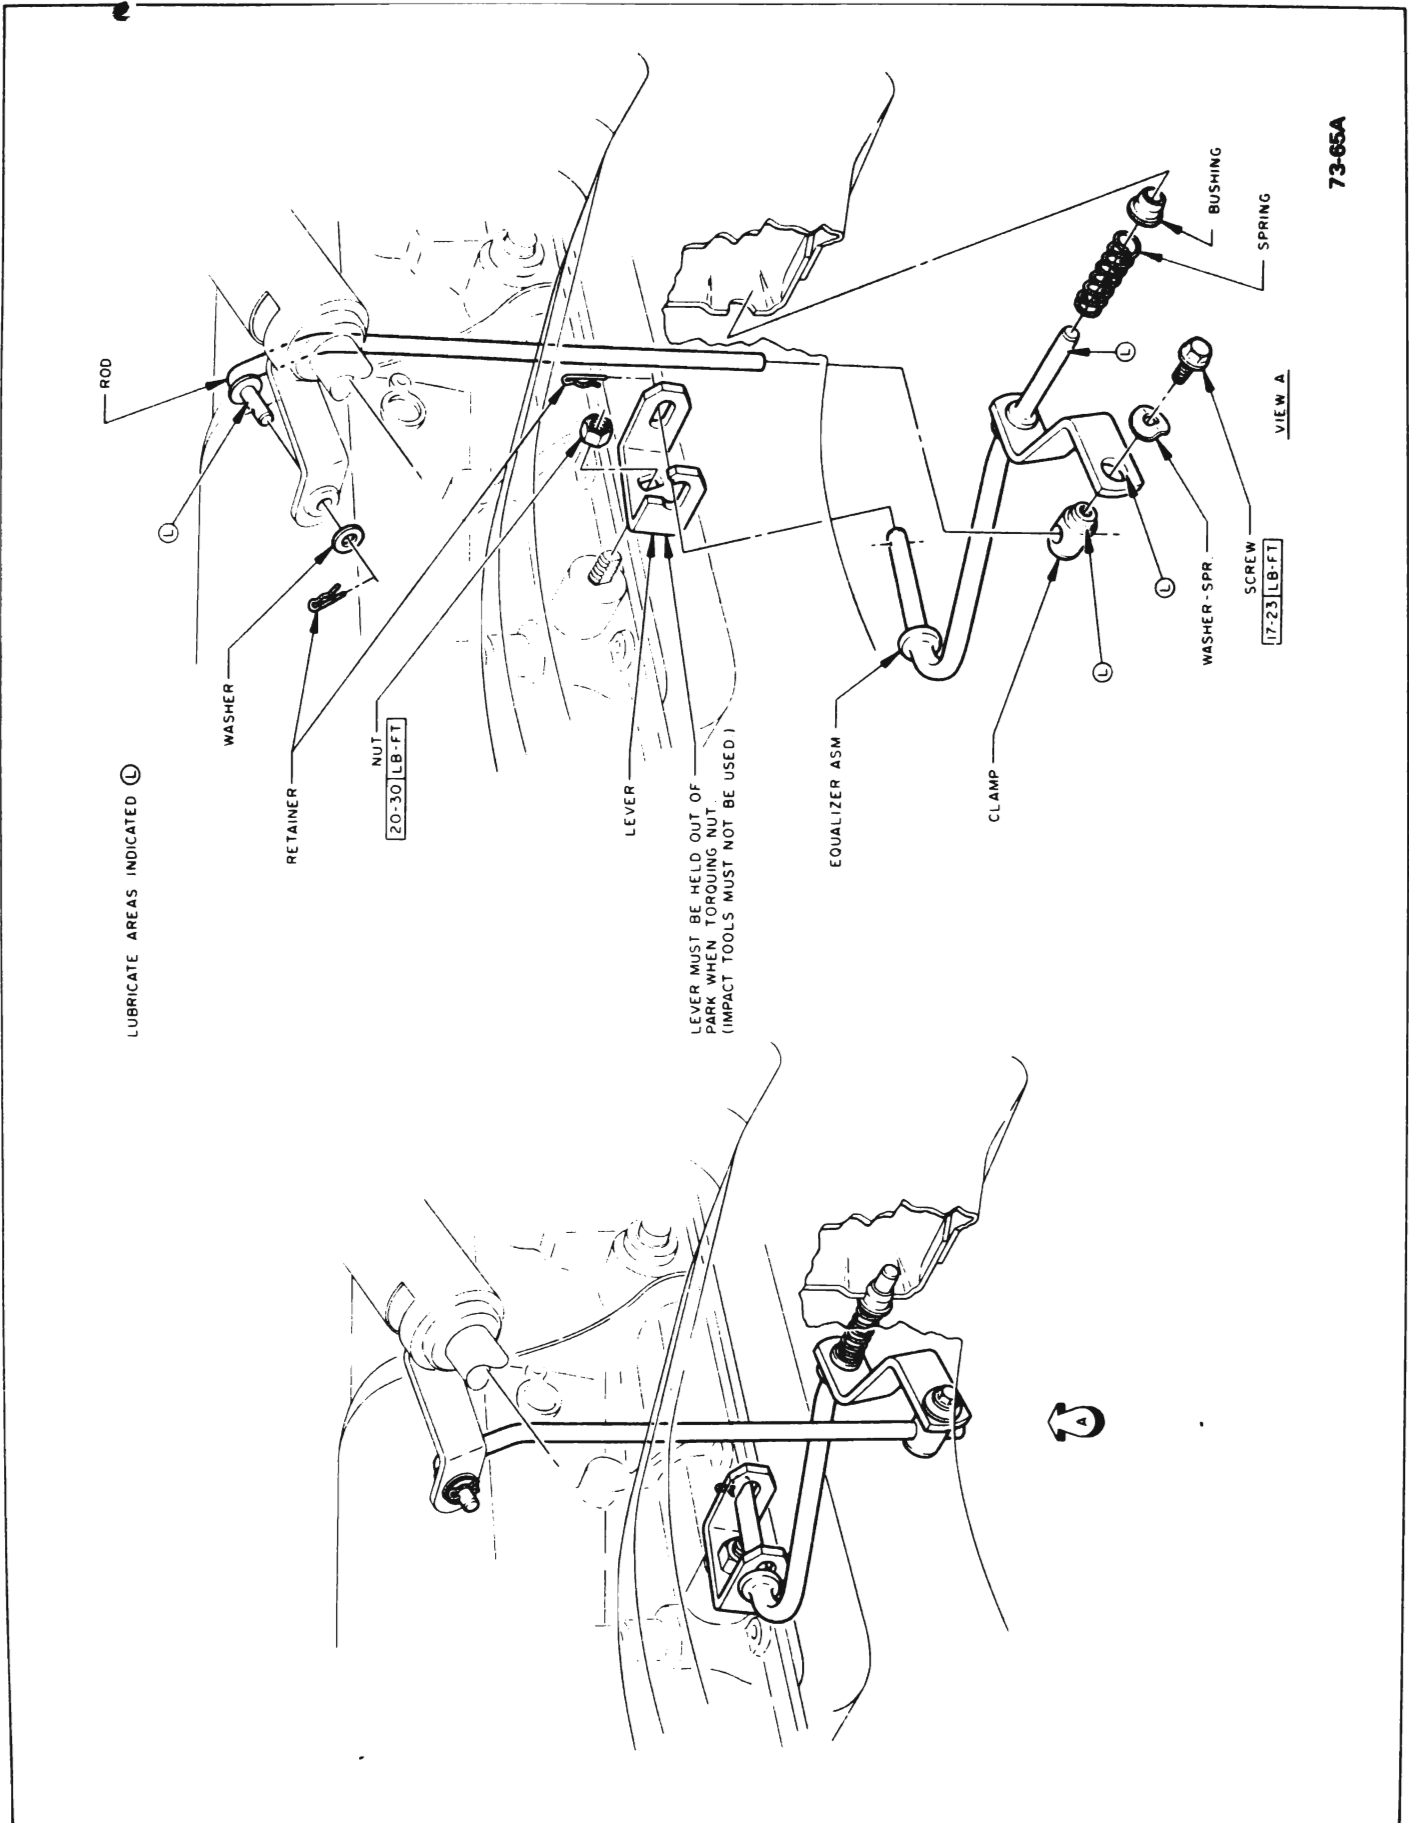


Figure 73-16

73-7 3-SPEED MANUAL TRANSMISSION LINKAGE ADJUSTMENT 43-44000 SERIES

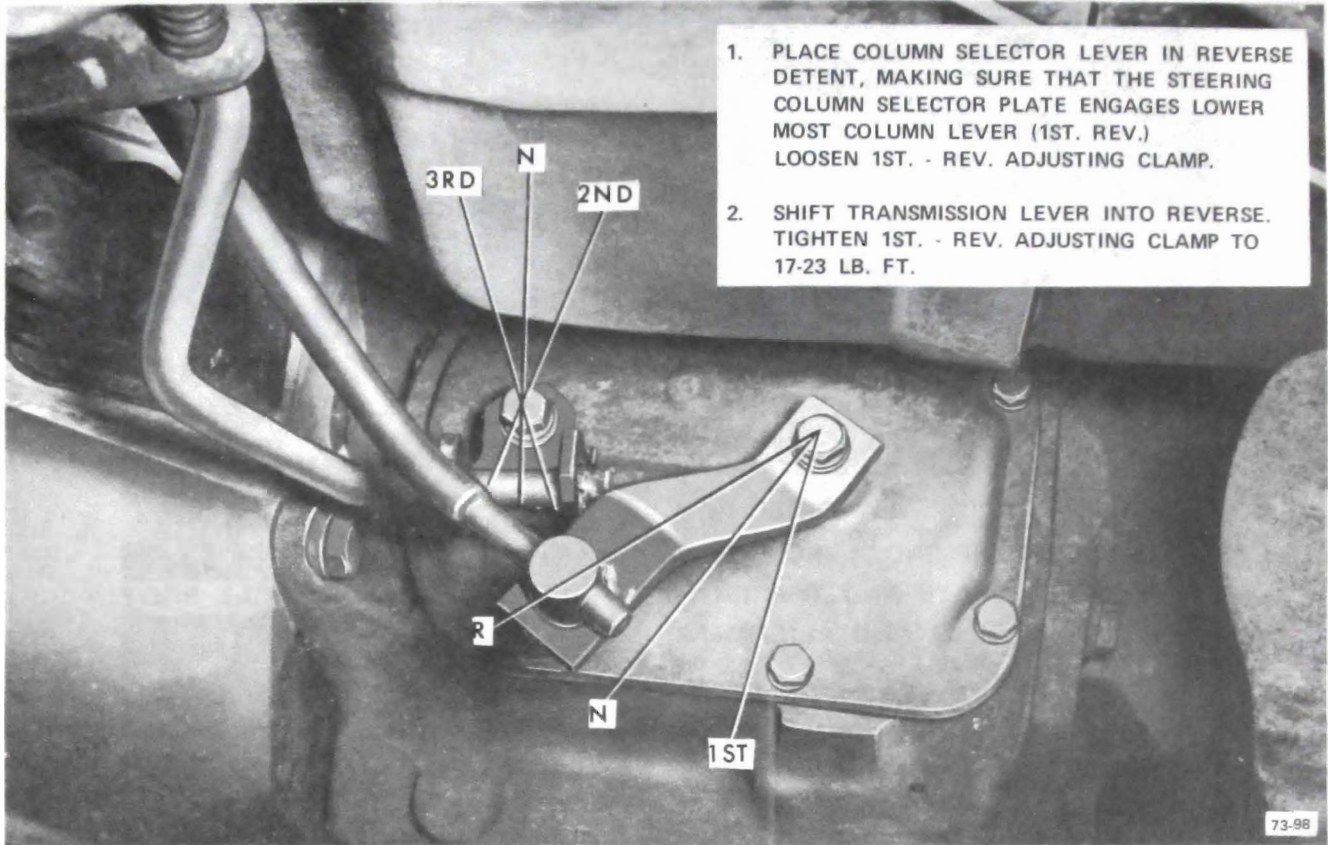


Figure 73-19

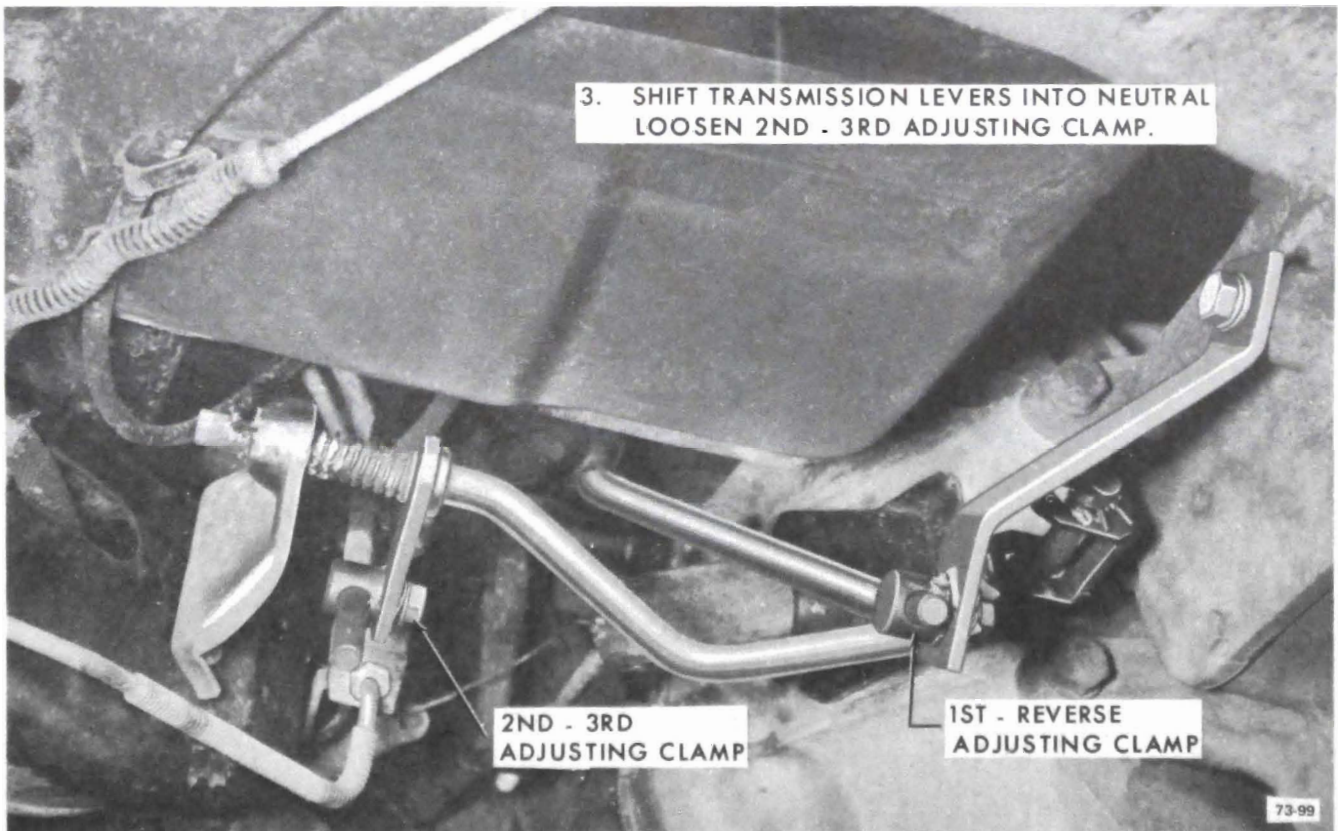


Figure 73-20

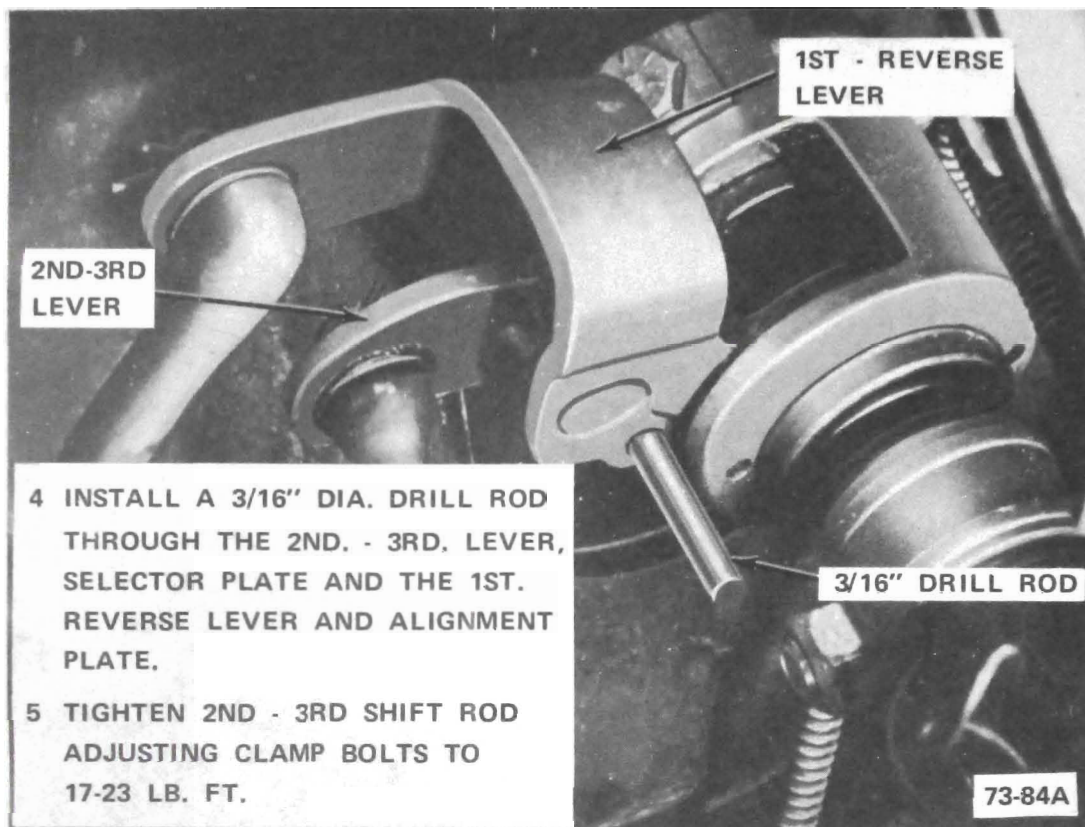


Figure 73-21

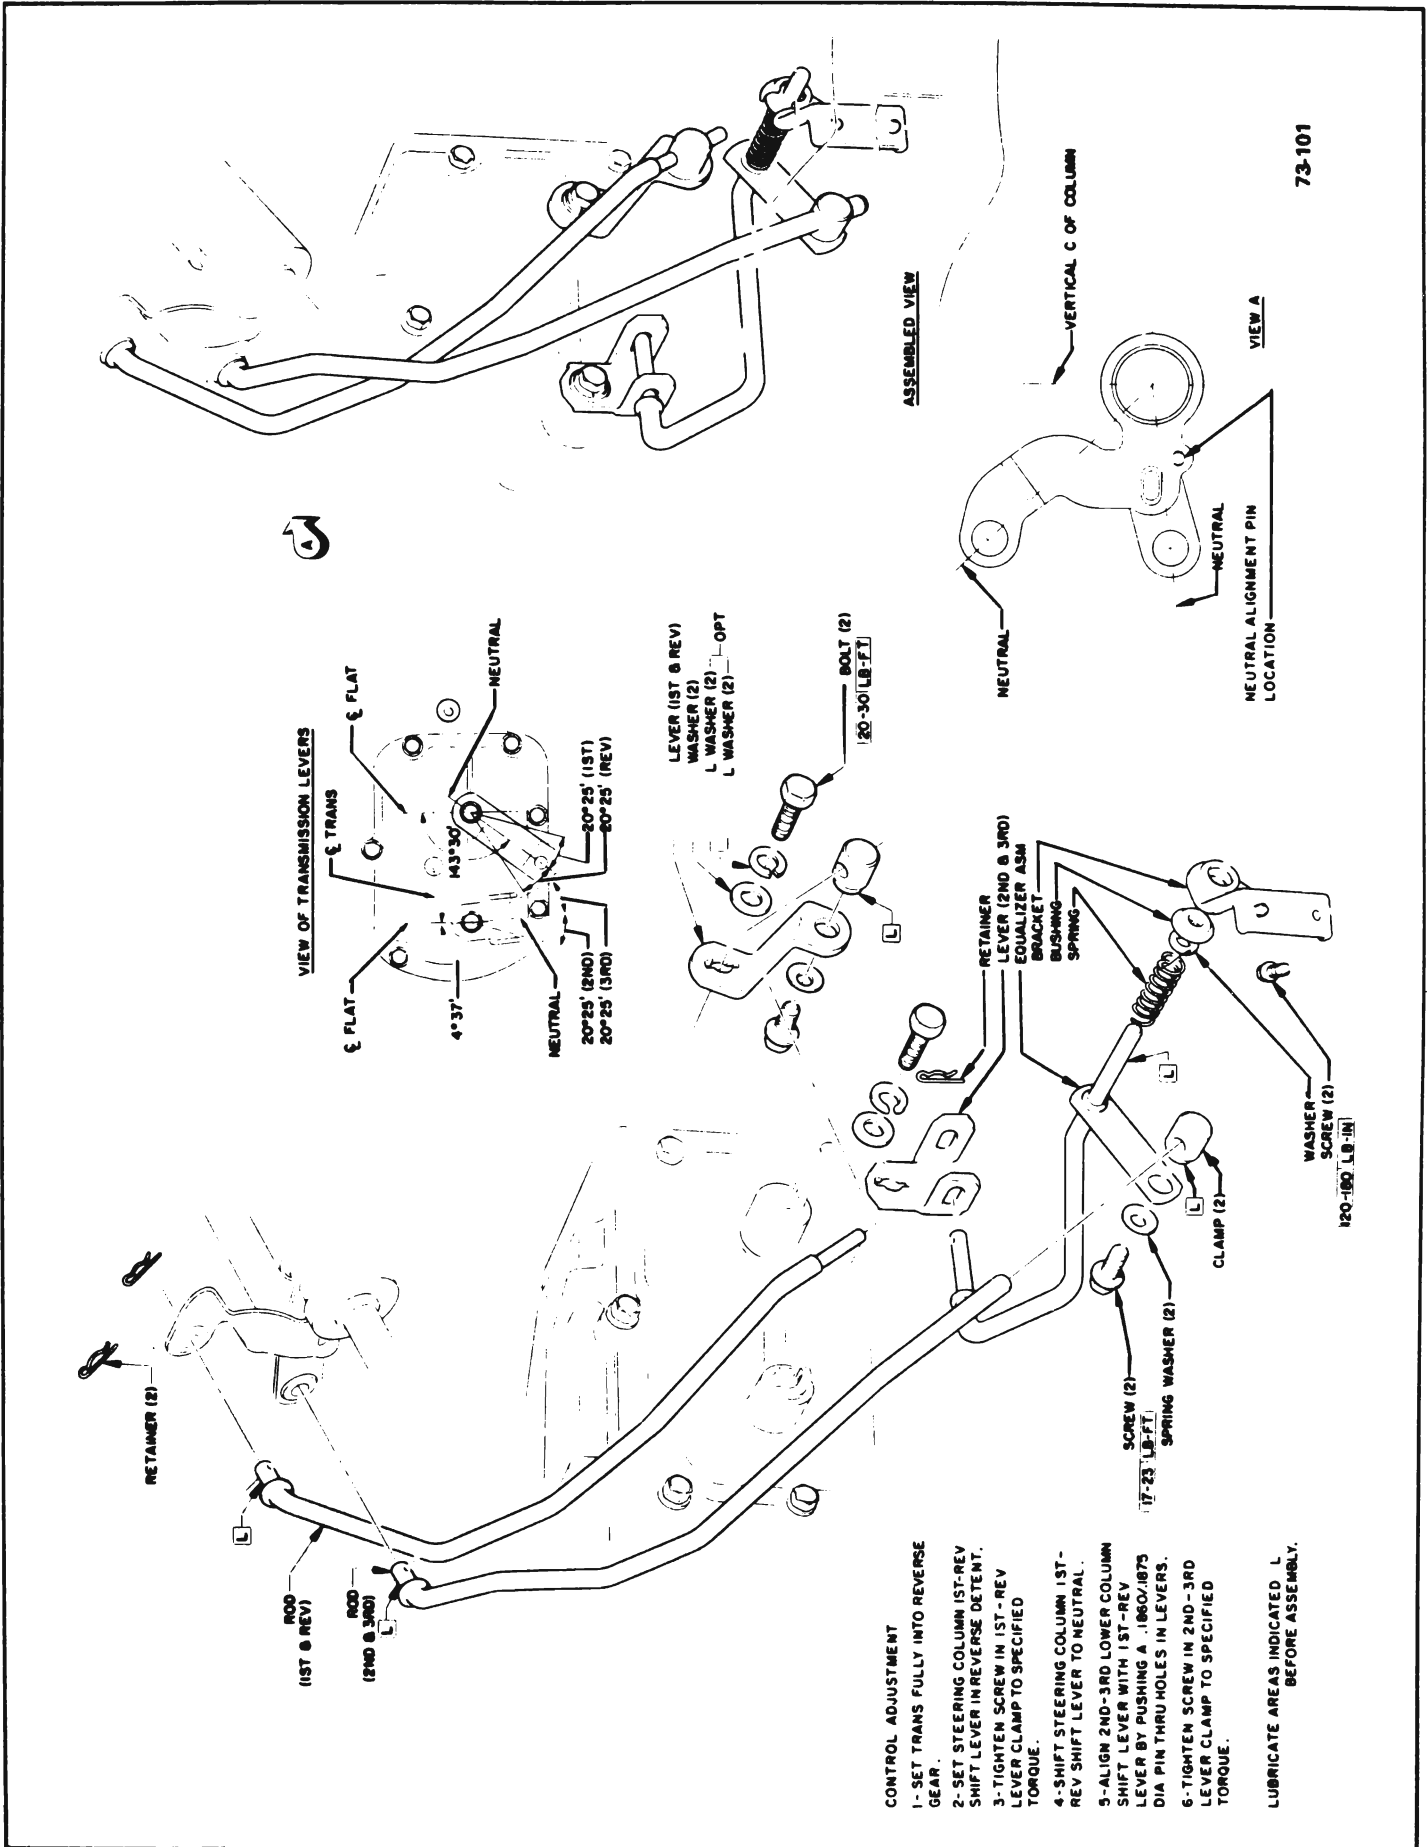


Figure 73:22

73-9 3-SPEED MANUAL TRANSMISSION LINKAGE ADJUSTMENT 45000 SERIES

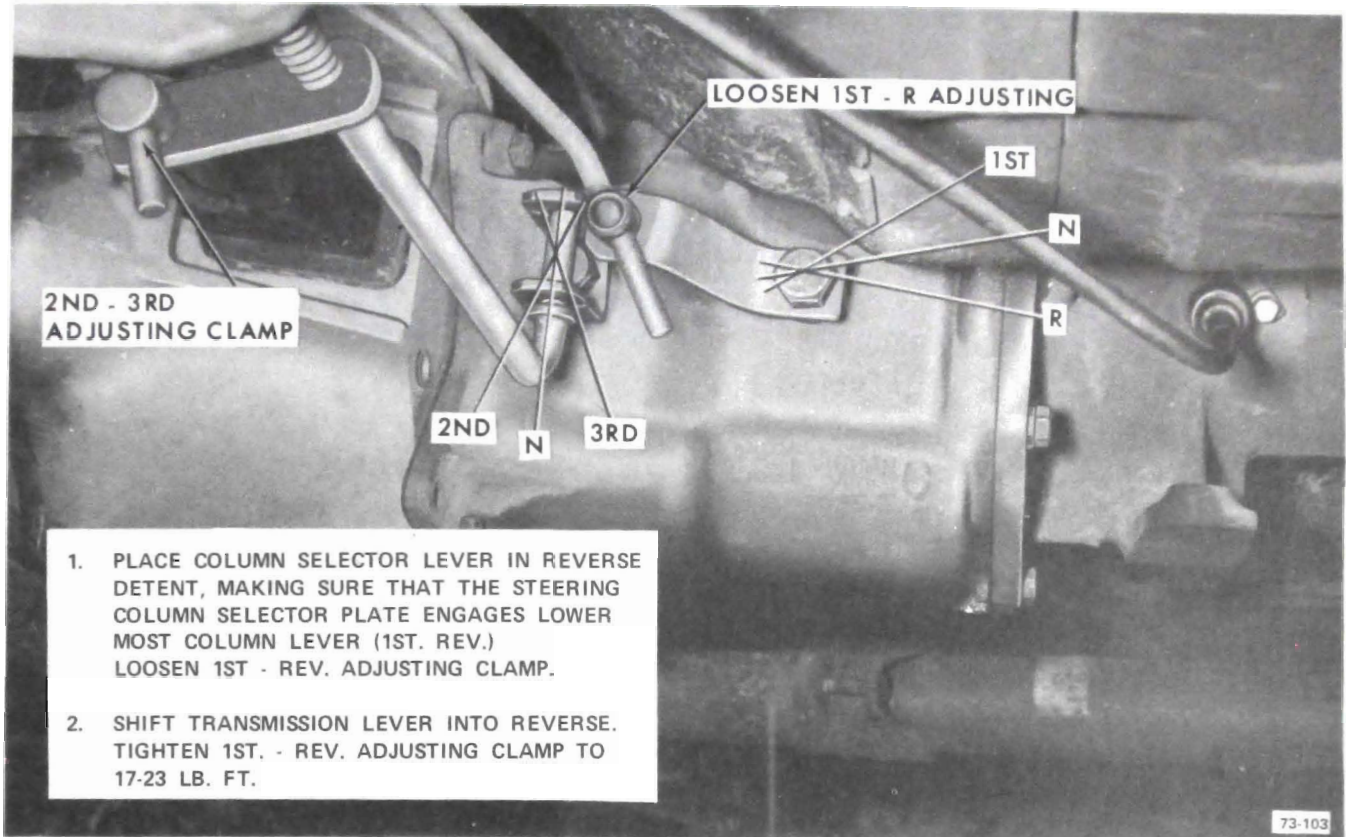


Figure 73-25


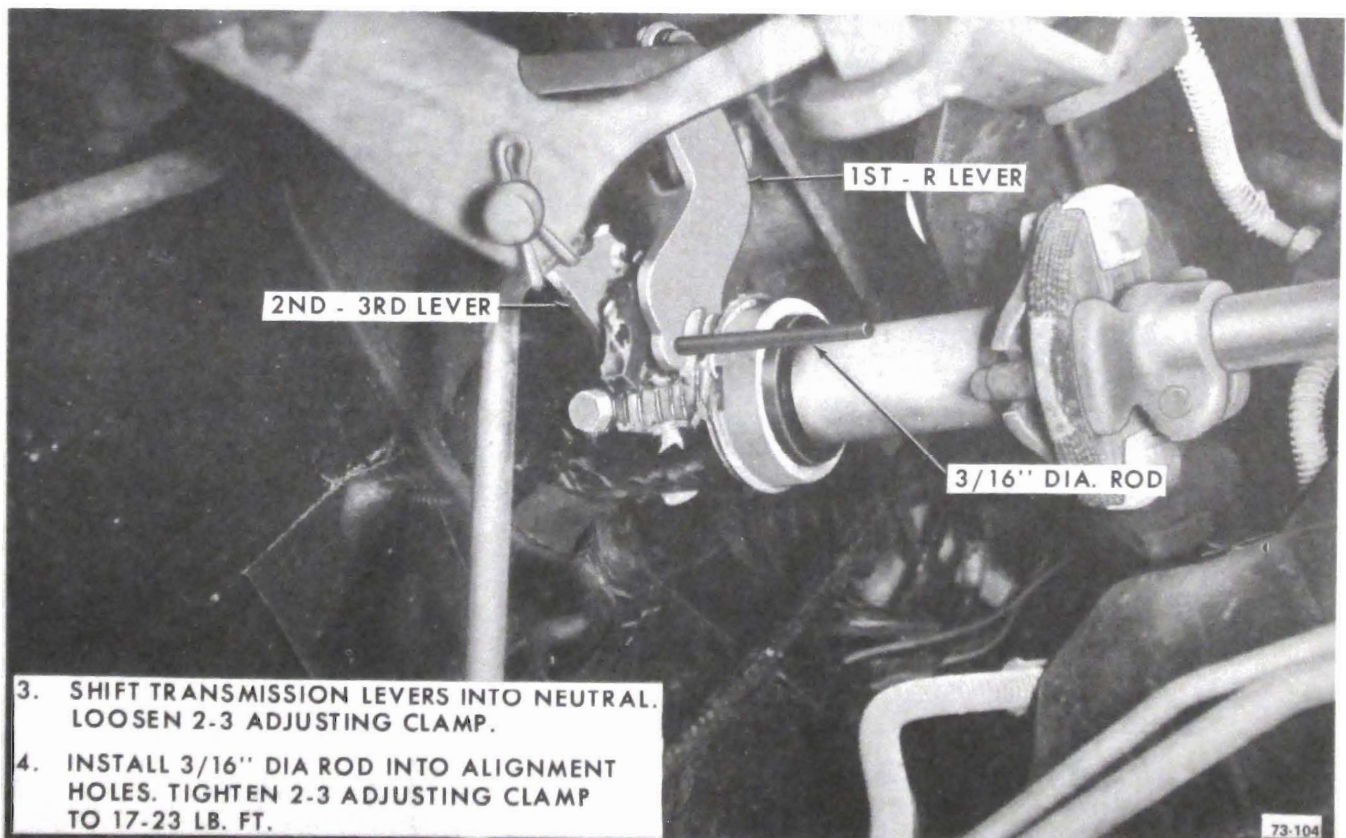


Figure 73-26

73-10 4-SPEED MANUAL TRANSMISSION FLOOR SHIFT LINKAGE ADJUSTMENT (G.S. 350 & 400)

INSERT .250/249 DIA ROD WITH ALL TRANS & CONTROL LEVERS IN NEUTRAL POSITION. TIGHTEN NUTS TO SPECIFIED TORQUE AND TIGHTEN NUTS TO SPECIFIED TORQUE.

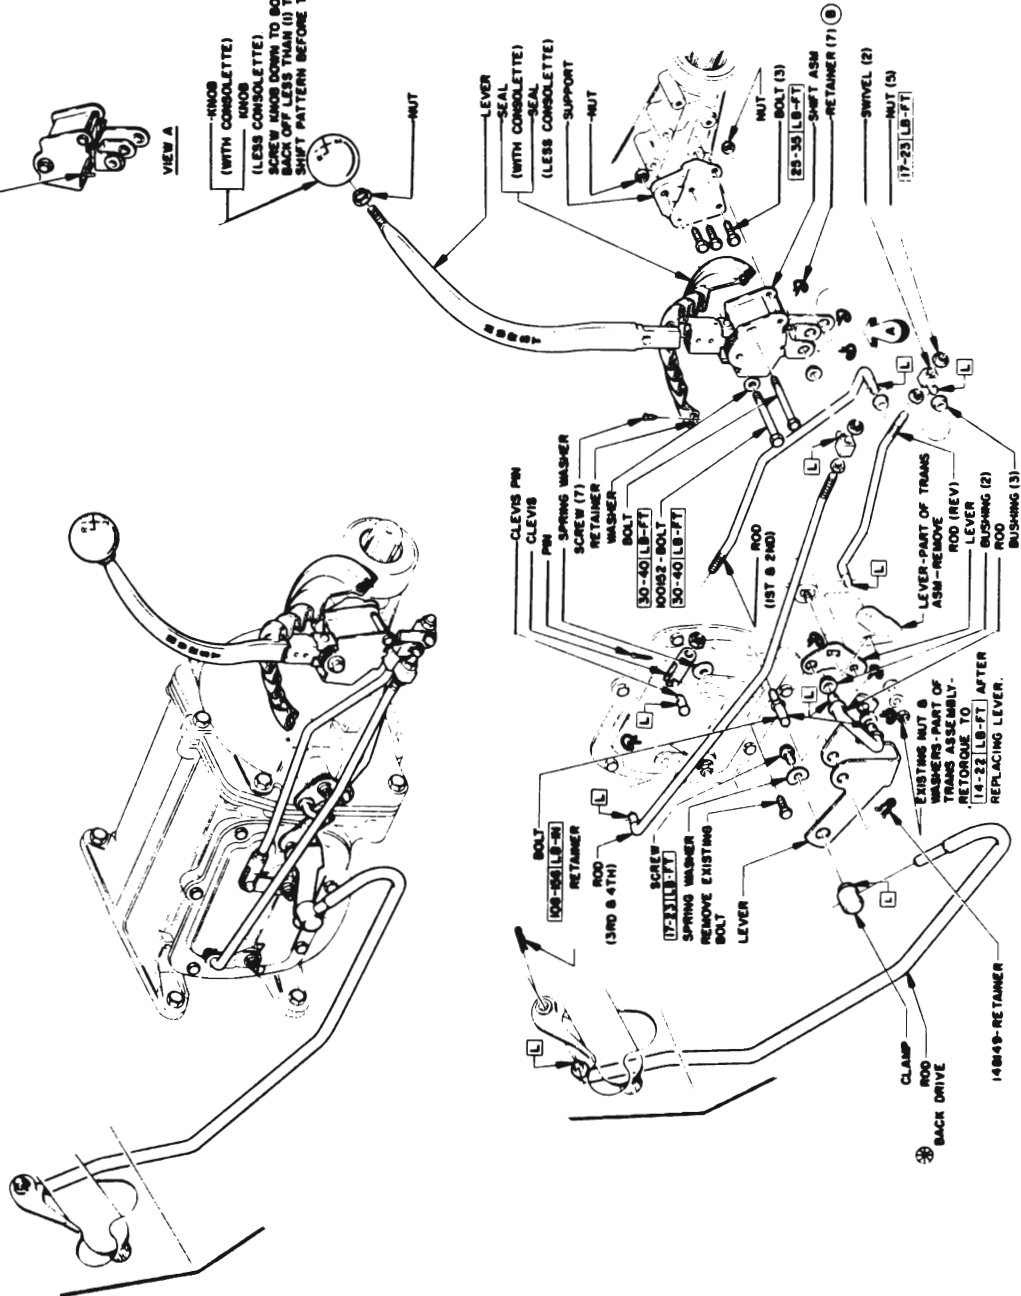

SHIFT LINKAGE ADJUSTMENT

SEE VIEW A

BACK DRIVE ADJUSTMENT

1. SHIFT TRANS. FULLY INTO REVERSE. NOTE: TRANS. MUST BE SHIFTED INTO REVERSE WITH LEVER & KNOB FROM INSIDE THE CAR.
2. PUSH "BACK DRIVE" ROD UP AGAINST STOP IN THE STEERING COLUMN.
3. TIGHTEN SCREW IN CLAMP TO SPECIFIC TORQUE

LUBRICATE AREAS INDICATED BEFORE ASSEMBLY.

73-108

Figure 73-28