

INDEX

Subject	Page No.	Subject	Page No.
A		Battery	
Accessories—All Series	150-2	Specifications	120-2
Adding Oil to Air Conditioner	13-32	Testing	120-5
Air Cleaner	00-19	Charging	120-7
Air Cleaner Description	64-8	Trouble Diagnosis	120-8
Air Conditioner—Description	13-7	Battery Test—421	120-5
Air Conditioner—Service Procedures	13-31	Belt Tensions	
Air Conditioner—Specifications	13-3	L-6 Engine	60-33
Air Conditioner—Trouble		350, 455 Engines	60-78
Diagnosis 13-82 thru	13-86	Blower and Air Inlet Assy Removal	
Air Conditioner Wiring Diagrams		and Installation	
43-44000 Series 13-24 and	120-108	43-44000 Series	12-8
45-46-48000 Series 13-25 and	120-110	45-46-48000 Series	12-16
49000 Series 13-26 and	120-112	Blower and Heater Assembly Removal	
Alignment		and Installation (49000 Series)	12-24
Front Wheel		Body	
43-44000 Series	30-5	Lubrication Points	00-17
45 through 49000 Series	30-22	Name Plate	00-4
AM—FM Radio	129-3	Style Numbers	00-2
Antenna Trimmer		Bolt Torque Specifications	
Adjustment—Radio	129-2	L-6 Engine	60-2
Assembly of Transmission from Major Units		350, 455 Engines	60-39
Turbo Hydramatic 350	75-66	Turbo Hydramatic 350	75-3
Turbo Hydramatic 400	76-70	Turbo Hydramatic 400	76-3
Automatic Climate Control Specifications		43-44-45000 Series 3-Speed Manual	72-3
and Adjustments	13-87	Heavy Duty	
Automatic Climate Control Service		3-Speed Manual	72-15
Procedures	13-114	3-Speed (Muncie)	72-45
Automatic Climate Control (ACC)		G.S. & G.S. 455	
Trouble Diagnosis 13-141 thru	13-149	4-Speed Manual	72-28
Automatic Climate Control		43-44-45000 Series Clutch	71-2
Wiring Diagrams		Wheels and Tires	100-2
45-46-48000 Series 13-111 and	120-114	Brakes	
49000 Series 13-112 and	120-116	Brake Drums, Shoes, & Linings	50-5
Automatic Level Control	40-13	Hydraulic Wheel Cylinder	50-23
Axle, Rear		Hydraulic Master Cylinder	50-23
43-44-45000 Series Std.	40-58	Parking Brake Cables	50-7
43-44-45000 Series P.T.	40-72	Brake Pipes and Hoses	50-10
46-48-49000 Series Std.	40-74	Single Piston Disc. Brake	50-37
46-48-49000 Series P.T.	40-96	Tandem Power Brake Unit	50-50
43-44000 Series Type “C”	40-106	Power Brake—Delco Moraine	50-68
43-44000 Series Type “C” P.T.	40-115	Power Brake—Bendix	50-81
B		Bumpers, Front and Rear	
Back—Up light Switch	120-15	43-44000 Series	140-2
Balance, Wheel and Tire	100-6	45-46-48000 Series	140-8
Ball Joint		49000 Series	140-17
43-44000 Series	30-11	C	
45 through 49000 Series	30-28	Camshaft and Bearings	
		L-6 Engine	60-22
		350, 455 Engines	60-71

Subject	Page No.	Subject	Page No.
Dome and Panel Light Wiring Diagrams		Fast Idle Adjustment	64-3
43-44000	120-19	Fender, Front	
45-46-48-49000	120-20	43-44000 Series	110-2
Drill Size Chart.	Precedes Index	45-46-48000 Series	110-15
		49000 Series	110-29
E		Filter—Engine Oil	00-15
Electrically Heated Rear Window	120-126	Fluid Checking Procedure—Transmission	
Engine		Turbo Hydramatic 350	75-4
Cooling System		Turbo Hydramatic 400	76-4
L-6 Engine	60-30	Flushing Air Conditioner	13-34
350, 455 Engines	60-75	Forward Clutch	
General Description		Turbo Hydramatic 350	75-57
L-6 Engine	60-8	Turbo Hydramatic 400	76-59
350, 455 Engines	60-49	Frame	
Lubrication System		43-44000 Series	20-5
L-6 Engine	60-27	45-46-48000 Series	20-12
350, 455 Engines	60-72	49000 Series	20-19
Mountings		Front Servo	
L-6 Engine	60-34	Turbo Hydramatic 400	76-74
350, 455 Engines	60-81	Front Suspension	
Oil Change Interval	00-15	43-44000 Series	30-3
Oil Pan—R. & R.		45 through 49000 Series	30-21
350, 455 Engines	60-58	Front Wheel Alignment	
Oil Viscosity Chart	00-14	43-44000 Series	30-5
Special Tools	60-87 thru 60-90	45 through 49000 Series	30-22
Specifications		Front Wheel Bearing Adjustment	
L-6 Engine	60-3	All Series	100-7
350, 455 Engines	60-40	Fuel Filter Description	64-11
Torque Specifications		Fuel Gauge	
L-6 Engine	60-2	Operation	120-60
350, 455 Engines	60-39	Wiring Drawing	120-61
Tune Up	69-2	Trouble Diagnosis	120-63
Evacuate and Charge Air Conditioner	13-64	Fuel Pump Operation	64-16
Evaporative Control System	80-3	Fuel Pump Test	64-19
Evaporator Removal and Installation	13-59	Fuel System	
Exhaust Manifold Installation		Description	80-2
L-6 Engine	60-10	Information Drawings	80-5
350, 455 Engines	60-51	Tank Removal	80-3
Exhaust System		Tank Gauge Unit Removal	80-3
Description	80-17	Functions of Valves and Hydraulic	
Removal and Installation	80-17	Control Units	
Information Drawings	80-19	Turbo Hydramatic 350	75-15
Expansion Valve Removal and Installation	13-58	Turbo Hydramatic 400	76-15
External Oil Leaks—Transmission		Fuse Chart	120-12
Turbo Hydramatic 350	75-80	Fusible Link	120-7
Turbo Hydramatic 400	76-78		
F		G	
Fan Clutch		Gas Mileage Complaints	64-14
L-6 Engine	60-30	Gas Tank—See Fuel Tank	
350, 455 Engines	60-75	General Specifications	
		L-6 Engine	60-3

Subject	Page No.	Subject	Page No.
350, 455 Engines	60-40	45-46-48000 Series	12-10
Turbo Hydramatic 350	75-3	49000 Series	12-18
Turbo Hydramatic 400	76-3	Heater System Trouble Diagnosis	
43-44-45000 Series		43-44000 Series	12-9
3-Speed Manual	72-3	45-46-48000 Series	12-17
Heavy Duty 3-Speed Manual	72-15	49000 Series	12-25
3-Speed (Muncie)	72-44	Heater Wiring Diagrams	
G.S. & G.S. 455 4-Speed Manual	72-28	43-44000 Series	12-5 and 120-106
43-44-45-46000 Series Clutch	71-3	45-46-48000 Series	12-13
Generator		49000 Series	12-22 and 120-107
Specifications	68-2	Horn	
Description	68-3	Operation	120-22
Repair	68-4	Adjustment	120-25
Testing	68-11	Hydraulic Operation	
Governor Bore Bushing Installation		Turbo Hydramatic 350	75-18
Turbo Hydramatic 350	75-	Turbo Hydramatic 400	76-18
Turbo Hydramatic 400	76-	Hydraulic Valve Lifter	
Governor Driven Gear		L-6 Engine	60-10
Turbo Hydramatic 400	74-126	350, 455 Engines	60-51
Grille, Radiator			
43-44000 Series	130-2		
45-46-48000 Series	130-7		
49000 Series	130-12		
H			
Hard Starting	64-12	Identification Number Vehicle	00-4
Hazard Warning Flasher		Idle Adjustment	64-3
Description	120-23	Detent Switch Adjustments	
Trouble Diagnosis	120-26	Turbo Hydramatic 400	76-6
Wiring Diagram	120-24	Detent Cable Adjustment	
Headlamp Aiming	120-18	Turbo Hydramatic 350	75-6
Headlight Switch	120-11	Inflation Pressures, Tires	100-4
Heater Assembly Removal and Installation		Ignition Coil	
43-44000 Series	12-8	Specifications	68-26
45-46-48000 Series	12-16	Testing	68-38
49000 Series	12-24	Ignition, Starter & Generator	
Heater Control Assembly Removal		Wiring Diagram	68-14
And Installation		Ignition System	
43-44000 Series	12-8	Timing	68-32
45-46-48000 Series	12-16	Description	68-27
49000 Series	12-22	Trouble Diagnosis	68-38
Heater Control Adjustment		Indicator Light Wiring Diagram	120-28
43-44000 Series	12-2	Indicator Light Trouble Diagnosis Chart	
45-46-48000 Series	12-10	43-44000	120-32
49000 Series	12-18	45-46-48000	120-42
Heater Description		Instrument Panel Information Drawings	
43-44000 Series	12-4	43-44000	120-35
45-46-48000 Series	12-13	45-46-48000	120-45
49000 Series	12-18	49000	120-56
Heater Specifications		Instrument Panel Parts Removal	
43-44000 Series	12-2	43-44000 Series	120-31
		45-46-48000 Series	120-41
		49000 Series	120-53
		Intake Manifold	
		L-6 Engine	60-10
		350, 455 Engines	60-51

Subject	Page No.	Subject	Page No.
Intermediate Clutch		Manual Steering Gear Disassembly	
Turbo Hydramatic 350	75-41	and Reassembly	90-4
Turbo Hydramatic 400	76-66	Manual Steering Gear Removal	
		and Installation	90-3
J		Manual Transmission	
		Clutch Specifications	71-2
Joint, Ball		Master Cylinder, Brake	
43-44000 Series	30-11	Manual and Power	50-23
45 through 49000 Series	30-28	Master Switch (ACC) Removal and	
		Installation	13-139
K		Model Designation (Body Style)	00-2
		Model Designations—Transmission	
Keys and Locks	00-6	Turbo Hydramatic 350	75-3
Knuckle, Steering		Turbo Hydramatic 400	76-4
43-44000 Series	30-11	Mountings, Body	
45 through 49000 Series	30-28	43-44000 Series	20-4&7
		45-46-48000 Series	20-10-11-14-15
L		49000 Series	20-18&21
		Mountings—Engine	
Light Bulb Chart	120-12	L-6 Engine	60-34
Lighting System Specifications	120-11	350, 455 Engines	60-81
Lock Cylinder, Ignition	00-7	Mountings, Radiator	
Lubrication		43-44000 Series	130-2
Engine Oil Change Interval	00-14	45-46-48000 Series	130-7
Oil Viscosity Chart	00-14	49000 Series	130-12
Fluid Capacities	00-13	Muffler Removal and Installation	
Points, Body	00-17	(Air Cond.)	13-56
Emission Control	00-15	N	
Lubrication System			
L-6 Engine	60-27	Neutral Start Switch Adjustment	120-15
350, 455 Engines	60-72		
M		O	
Mainshaft Assembly 3-and 4-Speed		Oil Filter, Engine	00-15
Manual Trans.		Oil Flow Circuits	
43-44-45000 Series	72-6	Turbo Hydramatic 350	75-18
Heavy Duty 3-Speed	72-20	Turbo Hydramatic 400	76-18
3-Speed (Muncie)	72-47	Oil Pan, Engine—350, 455	60-58
44600 (G. S. 455 G. S. 4-Speed)	72-33	Oil Pressure Checks	
Manifold		Turbo Hydramatic 350	75-92
Intake		Turbo Hydramatic 400	76-90
L-6 Engine	60-10	Oil Pump—Engine	
350, 455 Engines	60-51	L-6 Engine	60-27
Exhaust		350, 455 Engines	60-72
L-6 Engine	60-10	Oil Pump—Transmission	
350, 455 Engines	60-51	Turbo Hydramatic 350	75-48
Manual Steering Gear Adjustment	90-7	Turbo Hydramatic 400	76-55

Subject	Page No.	Subject	Page No.
Oil Recommendations—Engine	00-14	Receiver—Dehydrator Removal and Installation	13-58
Oil Strainer—Transmission		Rings, Piston	
Turbo Hydramatic 350	75-39	L-6 Engine	60-26
		350, 455 Engines	60-65
P		Rochester MV	
		Specifications	64-53
Parking Brake	50-7	Operation	64-54
P.C.V. System Description	64-11	Adjustment	64-60
P.C.V. System Test	64-11	Rochester 2GV	
Piston, Pin, Rings		Specifications	64-23
L-6 Engine	60-23	Operation	64-24
350, 455 Engines	60-63	Adjustment	64-45
POA Valve Removal and Installation	13-64	Rochester 4MV	
Police Generator Information Drawing	120-118	Specifications	64-36
Power Flow—3 and 4 Speed		Operation	64-37
Manual Transmission		Adjustment	64-45
43-44-45000 Series	72-5	Rocker Arm Assembly	
Heavy Duty 3-Speed	72-17	L-6 Engine	60-10
446000 (G. S. 455 & G. S. 4-Speed)	72-31	350, 455 Engines	60-50
Power Steering Gear Adjustment	90-38		
Power Steering Gear Service Procedures	90-21	S	
Power Steering Pump Service Procedures	90-36		
Power Steering System Trouble Diagnosis	90-39		
Power Unit—Brake			
Delco Moraine	50-68	Selector Electrical Switch (ACC)	
Bendix	50-80	Removal and Installation	13-114
Tandem (Delco Moraine)	50-50	Selector Vacuum Switch (ACC)	
Program Vacuum Disc Switch (ACC)		Removal and Installation	13-114
Removal and Installation	13-139	Sensor R. & R., C.C.S.	67-5
Propeller Shaft		Sequence for Transmission Diagnosis	
43-44-45-46-48000 Series	40-33	Turbo Hydramatic 350	75-79
49000 Series	40-44	Turbo Hydramatic 400	76-78
Pump, Oil—Engine		Service Procedures—Clutch	
L-6 Engine	60-27	43-44-45000 Series	71-3
350, 455 Engines	60-72	Shift Linkage Adjustments	
Push Button Adjustment Radio	129-2	(Column Shift)	
		43-44000 Series	73-6
R		Turbo Hydramatic 350 & 400	
		(Console Shift)	
Radio		43-44000 Series	73-3
Antenna Trimmer Adjustment	129-2	Turbo Hydramatic 350 & 400	
Push Button Adjustment	129-2	45-46-48000 Series	73-6
Removal and Installation	129-3	Turbo Hydramatic 400	
Information Drawings	129-5	46000 Console	73-3
Noise Suppressors	129-2	Turbo Hydramatic 400	
Trouble Diagnosis Chart	129-12	49000 Series Console Shift	73-3
Range Check and Adjustment (ACC)	13-94	3-Speed Manual Transmission	
Rear Servo		43-44000 Series	73-11
Turbo Hydramatic 400	76-53	3-Speed Manual Floor Shift	
Rear Window Defroster Wiring		Transmission G.S. & G.S. 455	73-16
Diagram	120-125		

