

LANDAU ROOF

CONTENTS

| Subject | Page No. |
|--|----------|
| DESCRIPTION AND OPERATION: (Not Applicable) | |
| DIAGNOSIS: (Not Applicable) | |
| MAINTENANCE AND ADJUSTMENTS: (Not Applicable) | |
| MAJOR REPAIR: | |
| Rear Window Removal and Installation..... | 8F-66 |
| Landau Roof Crown Molding C Series | |
| 2 Door Hardtop | 8F-66 |
| SPECIFICATIONS: (Not Applicable) | |

MAJOR REPAIR

REAR WINDOW REMOVAL AND INSTALLATION

Removal

1. Cut silastic sealant from around rear window with a sharp instrument.
2. Remove outer perimeter moldings. (When applicable).
3. Pull covering from under rear window reveal moldings. (Note: on some A series roof will not cover reveal moldings.)
4. Remove reveal moldings. (Note: E series lower reveal moldings are retained by screws.)
5. Roll back the covering and tape to surrounding area.
6. Cut and strip a 2" wide area of foam pad from around the entire perimeter of the rear window.
7. Remove the rear window per Body Service Manual.

Installation

1. After rear window installation, install the foam pad around the perimeter using vinyl roof adhesive.
2. Wrap vinyl over foam pad and adhere to glass.

3. Install perimeter moldings and clips. (When applicable.)

LANDAU ROOF CROWN MOLDING C SERIES 2 DOOR HARDTOP

The removal and installation of landau roofs are basically the same for all models as outlined in the Body Service Manual, except for early model C series 2 door hardtops with a bolted crown molding at both quarter glasses.

Removal

1. Brake welds that hold regulator stationary.
2. Move quarter glass rearward to remove retainers holding molding.
3. Pry center of molding from retaining clips.

Installation

1. Reverse the removal procedure.
2. Reweld the regulator (taking care to protect the upholstery) or use on alternate method that will sufficiently hold the quarter glass in a stationary position.