

INDEX

Subject	Page No.	Subject	Page No.
A		Body	
Accessories — All Series	9A-1	Lubrication Points	0C-20
Adding Oil to Air Conditioner System	9B-50	Name Plate	0A-7
Air Cleaner Maintenance	0C-19	Style Numbers	0A-6
Air Cleaner Description	6C-65	Bolt Torque Specifications	
Air Conditioning:		350, 455 Engines	6A-36
Refrigerant Components Trouble Diagnosis	9B-38	Turbo Hydramatic 350 & 375 B	7C-156
Description and Operation	9B-26	Turbo Hydramatic 400	7D-275
Maintenance and Adjustments	9B-44	3-Speed Manual	7B-26
Removal and Installation	9B-53	4-Speed Manual	7B-41
Major Repair	9B-53	Clutch	7A-12
Specifications	9B-82	Brakes	
Heater Air Conditioning System:		Drum Brake, Parking Brake and	
All Series		Wheel Cylinder	
Trouble Diagnosis	9B-110	Trouble Diagnosis	5D-56
Description and Operation	9B-107	Description of Brake Mechanism	5D-54
Maintenance and Adjustments	9B-110	Operation of Brake Mechanism	5D-54
Removal and Installation	9B-111	Maintenance and Adjustments	5D-56
Automatic Climate Control Heater		Major Repair	5D-58
Air-Conditioner System:		Specifications	5D-65
B-C-E Series:		Single Piston Disc Brake — All Series	
Trouble Diagnosis	9B-154	Trouble Diagnosis	5B-33
Description and Operation	9B-146	Description	5B-30
Maintenance and Adjustments	9B-161	Operation	5B-31
Air Conditioner Wiring Diagram	9B-217	Adjustments	5B-36
Air Injector Reactor System (AIR)	6F-154	Major Repair	5B-41
Alignment, Front Wheel		Tandem Power Brake Unit (Delco Moraine)	
All Series	3D-38	Trouble Diagnosis	5A-6
AM-FM Radio	9C-225	Description	5A-2
Antenna Trimmer Adjustment — Radio	9C-230	Operation	5A-3
Assembly of Transmission from Major Units		Removal and Installation	5A-8
Turbo Hydramatic 350 & 375B	7C-133	Major Repair	5A-7
Turbo Hydramatic 400	7D-263	Specifications	5A-29
Automatic Level Control	9F-288	Delco Moraine Power Brake Unit	
Axle, Rear — All Series		Trouble Diagnosis	5A-6
Trouble Diagnosis	4B-26	Description	5A-2
Description and Operation	4B-23	Operation	5A-3
Removal and Installation	4B-32	Removal and Installation	5A-7
Major Repair	4B-32	Major Repair	5A-22
Specifications	4B-46	Specifications	5A-29
B		Tandem Power Brake Unit (Bendix)	
Back-Up Light Switch	1F-82	Trouble Diagnosis	5A-6
Balance, Wheel and Tire	3I-151	Description	5A-2
Ball Joint	3B-13	Operation	5A-3
Battery		Removal and Installation	5A-7
Specifications	1A-12	Major Repair	5A-16
Testing	1A-3	Specifications	5A-29
Charging	1A-6	Bumpers, Front and Rear	2B-17
Trouble Diagnosis	1A-3	C	
Belt Tensions — 350,455 Engines	6A-9	Camshaft and Bearings — 350, 455 Engines	6A-29
		Car Model Identification	0A-6
		Carburetor — See Rochester MV, 2GV or 4MV	

Subject	Page No.
Fuel System	
Description	6C-62
Information Drawings	6C-67
Tank Removal	6C-65
Tank Gauge Unit Removal	6C-65
Functions of Valves and Hydraulic Control Units	
Turbo Hydramatic 350 - 375 B	7C-48
Turbo Hydramatic 400	7D-162
Fuse Block	1E-54
Fuse Chart	1E-54
Fusible Link	1A-9

G

Gas Tank — See Fuel Tank	
General Specifications	
350, 455 Engines	6A-37
Turbo Hydramatic 350 - 375 B	7C-156
Turbo Hydramatic 400	7D-275
3-Speed Manual	7B-26
4-Speed Manual	7B-41
Clutch	7A-12
Generator	
Specifications	1D-44
Description	1D-35
Repair	1D-39
Testing	1D-42
Governor Driven Gear, Turbo Hydramatic 400 ..	7D-211
Grille	8C-41
Guide-Matic	9H-335

H

Hard Starting	6E-106
Hazard Warning Flasher	
Description	1F-81
Trouble Diagnosis	1F-82
Wiring Diagram	1I-146
Headlamp Aiming	1E-51
Headlight Switch	1E-52
Heater Assembly Removal and Installation	
All Series	9A-7
Heater Control Assembly Removal	
and Installation	9A-5
Heater Control Adjustment	9A-5
Heater Description	9A-2
Heater Specifications	9A-7
Heater System Trouble Diagnosis	9A-4
Horn	
Operation	1F-80
Adjustment	1F-86
Hydraulic Operation	
Turbo Hydramatic 350 - 375 B	7C-54
Turbo Hydramatic 400	7D-162
Hydraulic Valve Lifter — 350, 455 Engines	6A-9

Subject	Page No.
I	
Identification Number Vehicle	0A-6
Detent Switch Adjustments	
Turbo Hydramatic 400	7D-209
Detent Cable Adjustment	
Turbo Hydramatic 350 - 375 B	7C-93
Inflation Pressures, Tires	3I-161
Ignition Coil	
Specifications	1C-32
Ignition, Starter Wiring Diagram	1I-146
Ignition System	
Timing	1C-27
Description	1C-22
Trouble Diagnosis	1C-24
Indicator Light Wiring Diagram	1I-146
Indicator Light Trouble Diagnosis Chart	1D-37
Instrument Panel Information Drawings	1G-96
Instrument Panel Parts Removal	
A Series	1G-94
B-C-E Series	1G-95
Intake Manifold — 350, 455 Engines	6A-9
Intermediate Clutch	
Turbo Hydramatic 350 - 375 B	7C-105
Turbo Hydramatic 400	7D-221

J

Joint, Ball	3B-13
-------------------	-------

K

Keys and Locks	0A-2
Knuckle, Steering	3B-13

L

Light Bulb Charts	1E-55
Lighting System Specifications	1E-53
Lock Cylinder, Ignition	0A-2
Lubrication	
Engine Oil Change Interval	0C-11
Oil Viscosity Chart	0C-12
Fluid Capacities	0C-21
Points, Body	0C-10
Emission Control	0C-18
Lubrication System — 350, 455 Engines	6A-4

M

Mainshaft Assembly Manual Transmission	
3-Speed	7B-18
4-Speed	7B-34
Manifold	
Intake — 350, 455 Engines	6A-9
Exhaust — 350, 455 Engines	6A-9

Subject	Page No.
Fuel System	
Description	6C-62
Information Drawings	6C-67
Tank Removal	6C-65
Tank Gauge Unit Removal	6C-65
Functions of Valves and Hydraulic Control Units	
Turbo Hydramatic 350 - 375 B	7C-48
Turbo Hydramatic 400	7D-162
Fuse Block	1E-54
Fuse Chart	1E-54
Fusible Link	1A-9

G

Gas Tank — See Fuel Tank	
General Specifications	
350, 455 Engines	6A-37
Turbo Hydramatic 350 - 375 B	7C-156
Turbo Hydramatic 400	7D-275
3-Speed Manual	7B-26
4-Speed Manual	7B-41
Clutch	7A-12
Generator	
Specifications	1D-44
Description	1D-35
Repair	1D-39
Testing	1D-42
Governor Driven Gear, Turbo Hydramatic 400	7D-211
Grille	8C-41
Guide-Matic	9H-335

H

Hard Starting	6E-106
Hazard Warning Flasher	
Description	1F-81
Trouble Diagnosis	1F-82
Wiring Diagram	1I-146
Headlamp Aiming	1E-51
Headlight Switch	1E-52
Heater Assembly Removal and Installation	
All Series	9A-7
Heater Control Assembly Removal and Installation	9A-5
Heater Control Adjustment	9A-5
Heater Description	9A-2
Heater Specifications	9A-7
Heater System Trouble Diagnosis	9A-4
Horn	
Operation	1F-80
Adjustment	1F-86
Hydraulic Operation	
Turbo Hydramatic 350 - 375 B	7C-54
Turbo Hydramatic 400	7D-162
Hydraulic Valve Lifter — 350, 455 Engines	6A-9

Subject	Page No.
I	
Identification Number Vehicle	0A-6
Detent Switch Adjustments	
Turbo Hydramatic 400	7D-209
Detent Cable Adjustment	
Turbo Hydramatic 350 - 375 B	7C-93
Inflation Pressures, Tires	3I-161
Ignition Coil	
Specifications	1C-32
Ignition, Starter Wiring Diagram	1I-146
Ignition System	
Timing	1C-27
Description	1C-22
Trouble Diagnosis	1C-24
Indicator Light Wiring Diagram	1I-146
Indicator Light Trouble Diagnosis Chart	1D-37
Instrument Panel Information Drawings	1G-96
Instrument Panel Parts Removal	
A Series	1G-94
B-C-E Series	1G-95
Intake Manifold — 350, 455 Engines	6A-9
Intermediate Clutch	
Turbo Hydramatic 350 - 375 B	7C-105
Turbo Hydramatic 400	7D-221

J

Joint, Ball	3B-13
-------------------	-------

K

Keys and Locks	0A-2
Knuckle, Steering	3B-13

L

Light Bulb Charts	1E-55
Lighting System Specifications	1E-53
Lock Cylinder, Ignition	0A-2
Lubrication	
Engine Oil Change Interval	0C-11
Oil Viscosity Chart	0C-12
Fluid Capacities	0C-21
Points, Body	0C-10
Emission Control	0C-18
Lubrication System — 350, 455 Engines	6A-4

M

Mainshaft Assembly Manual Transmission	
3-Speed	7B-18
4-Speed	7B-34
Manifold	
Intake — 350, 455 Engines	6A-9
Exhaust — 350, 455 Engines	6A-9

Subject	Page No.
Manual Steering Gear Diagnosis	3E-49
Manual Steering Gear Adjustment	3E-49
Manual Steering Gear Disassembly and Reassembly	3E-50
Manual Steering Gear Removal and Installation	3E-50
Manual Transmission Clutch Specifications	7A-12
Master Cylinder	5C-46
Max-Trac	9D-258
Model Designation (Body Style)	0A-6
Model Designations — Transmission	
Turbo Hydramatic 350 - 375 B	7C-156
Turbo Hydramatic 400	7D-275
Mountings, Body	2A-2
Mountings, Engine — 350, 455 Engines	6A-34
Muffler Removal and Installation (Air Conditioning)	9B-61

N

Neutral Start Switch Adjustment	1C-29
---------------------------------------	-------

O

Oil Filter, Engine	0C-12
Oil Flow Circuits	
Turbo Hydramatic 350 - 375 B	7C-60
Turbo Hydramatic 400	7D-174
Oil Pan, Engine — 350, 455 Engines	6A-9
Oil Pressure Checks	
Turbo Hydramatic 350 - 375 B	7C-86
Turbo Hydramatic 400	7D-192
Oil Pump — Engine — 350, 455 Engines	6A-33
Oil Pump — Transmission	
Turbo Hydramatic 350 - 375 B	7C-114
Turbo Hydramatic 400	7D-221
Oil Recommendations — Engine	0C-12
Oil Strainer — Transmission	
Turbo Hydramatic 350 - 375 B	7C-96

P

Paint Color Code Chart	0A-7
Parking Brake	5D-56
P.C.V. System Test	6F-158
Piston — Pin, Rings — 350, 455 Engines	6A-23
POA Valve Removal and Installation	9B-63
Power Flow — Manual Transmission	
4-Speed	7B-43
3-Speed	7B-27
Power Steering Gear Adjustment	3F-73
Power Steering Gear Service Procedures	3F-75
Power Steering Pump Service Procedures	3F-76
Power Steering System Trouble Diagnosis	3F-63
Propeller Shaft — All Series	4A-2
Pump, Oil — Engine — 350, 455 Engines	6A-33
Push Button Adjustment Radio	9C-231

Subject	Page No.
R	
Radiator	6B-56
Radio	
Antenna Trimmer Adjustment	9C-20
Push Button Adjustment	9C-231
Removal and Installation	9C-231
Information Drawings	9C-237
Noise Suppressors	9C-226
Trouble Diagnosis	9C-227
Rear Servo — Turbo Hydramatic 400	7D-238
Rear Window Defroster Wiring Diagram	1I-146
Receiver — Dehydrator Removal and Installation	9B-62
Rings, Piston — 350, 455 Engines	6A-23
Rochester 2GV	
Specifications	6E-119
Operation	6E-100
Adjustment	6E-115
Rochester 4MV	
Specifications	6E-141
Operation	6E-121
Adjustment	6E-130
Rocker Arm Assembly — 350, 455 Engines	6A-13

S

Sensor R. & R., C.C.S.	6F-159
Sequence for Transmission Diagnosis	
Turbo Hydramatic 350 - 375 B	7C-77
Turbo Hydramatic 400	7D-166
Shock Absorber, Rear — All Series	3H-133
Side Cover Assembly	
3-Speed Manual	7B-23
4-Speed Manual	7B-38
Signal System Specifications	1F-90
Spark Plug	
Specifications	1C-32
Clean & Adjust	1C-28
Installation	1C-29
Wires	1C-29
Specifications	
Engine — 350, 455 Engines	6A-37
Front Wheel Alignment	
4D-4F-4G-4H Series	3D-38
Speedometer	
Description	1H-126
Buzzer Operation	1H-126
Trouble Diagnosis	1H-130
Cable Installation	1H-133
Spring	
Rear Suspension — All Series	3H-132
Front Suspension	3B-6
Starting Motor	
Specifications	1B-21
Repairs	1B-17
Solenoid Test	1B-17
Bench Test	1B-18
Operation	1B-14
Wiring Diagrams	1I-146
Trouble Diagnosis	1B-14

Subject	Page No.
Steering	
Geometry (Turning Angle)	3D-45
Knuckle	3B-13
Steering Columns — All Series	3G-97
Steering Linkage	3C-31
Stereo Tape Player — All Series	9C-226
Sun Roof - Electric	8E-54
Suspension	
Front	3B-6
Rear	3H-132

T

Tape Player, Stereo — All Series	9C-226
Thermo Vacuum Switch	6F-152
Throttle Linkage Adjustment	6E-145
Timing chain Cover — 350, 455 Engines	6A-29
Timing Chain and Sprocket — 350, 455 Engines	6A-29
Tires	
Inflation	3I-161
Rotation	3I-153
Sizes	3I-161
Transducer, Cruise Master	9E-272
Transmission Controlled Vacuum	
Advance System	6F-152
Transmission Reassembly — 3-Speed Manual ...	7B-24
4-Speed Manual	7B-39
Transmission Removal and Installation	
3-Speed Manual	7B-15
4-Speed Manual	7B-32
Turbo Hydramatic 350 - 375 B	7C-97
Turbo Hydramatic 400	7D-212
Trim Height — All Series	3H-136
Trouble Diagnosis	
Manual Steering Gear	3E-49
Turbo Hydramatic 350 - 375 B	7C-77
Turbo Hydramatic 400	7D-166
3-Speed Manual	7B-14
4-Speed Manual	7B-29
Clutch	7A-2
Tune Up Procedure	6G-176

Subject	Page No.
Turn Signal	
Operation	1F-81
Trouble Diagnosis	1F-82
Wiring Diagram	1I-146
Twilight Sentinel	9G-330

U

Universal Joints — All Series	4A-7
-------------------------------------	------

V

Vacuum Modulator	
Turbo Hydramatic 350 - 375 B	7C-99
Turbo Hydramatic 400	7D-211
Vacuum Motor Service, C.C.S.	6F-156
Valve Body — Transmission	
Turbo Hydramatic 350 - 375 B	7C-96
Turbo Hydramatic 400	7D-212
Valves In Receiver (V.I.R.)	9B-25
Valve Lifters — 350, 455 Engines	6A-7
Valve and Seat Reconditioning — Engine	
350, 455 Engines	6A-11
Vinyl Top Color Code Chart	0A-7

W

Water Pump — Engine — 350, 455 Engines	6B-55
Wheels and Tires	3I-150
Wheel Alignment	3D-38
Wheel Bearing, Adjustment — Front	3B-11
Windshield Wiper Switch	1H-135
Service Procedures (R & R)	
Refer to 1972 Fisher Body Manual for:	
Diagnosis	
Description and Operation	
Repair Procedures	
Specifications	
Wiper & Transmission Down Shift	
Wiring Diagrams	1I-146
Wiring Diagrams — Complete Colored	1I-174