

LANDAU ROOF

CONTENTS

DESCRIPTION AND OPERATION: (Not Applicable)

DIAGNOSIS: (Not Applicable)

MAINTENANCE AND ADJUSTMENTS: (Not Applicable)

MAJOR REPAIR:

Back Window Removal and Installation 8F-1

SPECIFICATIONS: (Not Applicable)

MAJOR REPAIR

BACK WINDOW REMOVAL AND INSTALLATION

Removal

1. Cut silastic sealant from around rear window with a sharp instrument. Remove the bead of sealant.
2. Pull covering from under rear window reveal moldings. On Riviera, remove the lower back molding.
3. Cut the bond between the padding and the reveal moldings.

4. Remove reveal moldings. (E series lower reveal moldings are retained by screws.)

5. Roll back the covering and tape to surrounding area.

6. Remove the rear window per Body Service Manual.

Installation

1. After rear window installation, install the foam pad around the perimeter using vinyl roof adhesive.

2. Tuck covering under moldings and reseal with silastic. (Install lower moldings on Riviera.)