

## SECTION 5-C

### TRANSMISSION REMOVAL AND INSTALLATION

#### DISASSEMBLY AND ASSEMBLY

##### CONTENTS OF SECTION 5-C

Paragraph	Subject	Page	Paragraph	Subject	Page
5-13	Removal and Installation of Transmission.....	5-36	5-18	Disassembly, Inspection, Assembly of Reaction Shaft Flange and Oil Pumps.....	5-51
5-14	Disassembly of Transmission to Remove Major Parts and Units.....	5-37	5-19	Disassembly, Inspection, Assembly of Accumulators....	5-53
5-15	Disassembly, Inspection, Assembly of Torque Converter Units.....	5-41	5-20	Disassembly, Inspection, Assembly of Clutch.....	5-54
5-16	Alignment of Converter Pump and Housing.....	5-48	5-21	Disassembly, Inspection, Assembly of Rear Bearing Retainer, Torque Ball and U. Joint....	5-57
5-17	Disassembly, Inspection, Assembly of Valve and Servo Bodies.....	5-49	5-22	Disassembly, Inspection, Assembly of Planetary Gear Set and Transmission Case.....	5-58
			5-23	Assembly of Transmission from Major Parts and Units.....	5-60

### 5-13 REMOVAL AND INSTALLATION OF TRANSMISSION

#### a. Removal of Transmission

1. Hoist front and rear of car and rest it solidly on stands placed under frame. Frame side rail should be at least 20" above floor.
2. Disconnect rear shock absorbers at axle end, track bar at axle end, brake cable at equalizer and brake pipe at torque tube bracket.
3. Remove rear exhaust pipes.
4. Disconnect torque tube from torque ball and move rear axle back to disengage propeller shaft from universal joint.
5. Remove converter housing cover.
6. Turn flywheel until one converter drain plug can be loosened sufficiently to provide an air vent, then turn flywheel until opposite drain plug is straight down. Remove this plug and allow oil to drain from converter.
7. Remove filler pipe from oil pan to drain oil from transmission.
8. Remove bolts to disconnect converter from flywheel.
9. Disconnect speedometer cable, disconnect shift rod from shift lever, and disconnect stator operating control rod from lever on high accumulator.
10. Place transmission jack or hoist in position and adjust it to securely support the transmission in accordance with instructions for the equipment being used.
11. Carefully mark transmission support and frame at each end of support so support may be reinstalled in same fore and aft position. This step is necessary to insure against any

shear strain being imposed on the engine mountings when support is reinstalled.

12. Remove bolts attaching mounting pad to rear bearing retainer. See figure 2-4.

13. Raise engine and transmission just enough to relieve load on transmission support, remove bolts attaching each end of support to frame, then remove support and pad as an assembly. *NOTE: Shims may or may not be used to fill space between the transmission support and frame. If shims are present note the number and location of shims so that they can be reinstalled in their original position.*

14. Place suitable jack under rear end of engine lower crankcase so that engine will be safely supported while transmission is removed. *CAUTION: Do not use bar with hooks placed over frame side rails because brake pipes on top of left side rail will be damaged.*

15. Lower transmission slightly and disconnect cooler pipes.

16. Lower the transmission just enough so that converter housing bolts can be reached. With engine and transmission supported by the separate jacks, disconnect the converter housing from engine crankcase.

17. Move transmission rearward to disengage hub of converter pump cover from crankshaft, lower transmission and remove it from under car.

#### b. Installation of Transmission

1. Turn flywheel so that one hole for converter attaching bolt is straight up and wide flange is straight down.

2. Raise transmission into place with same equipment as used for removal. Align converter attaching bolt holes with holes in flywheel before moving transmission forward against cylinder crankcase. See step 17 under Section i. of paragraph 5-23 for proper alignment.

3. Adjust lifting equipment so that converter housing meets the engine crankcase squarely and engages the two dowels. Then install all converter housing bolts with lockwashers. Tighten all bolts uniformly to 45-55 ft. lbs. torque. Connect cooler pipes.

4. Raise transmission just enough to install transmission support and pad, installing shims in their original location between support and frame.

*NOTE: Support must be located fore and aft in its original position before tightening attaching bolts.*

Attach mounting pad to rear bearing retainer with original bolts. Refer to paragraph 2-25 for mount adjustment.

5. Install three flywheel to ring gear bolts and lockwashers.

6. Remove transmission hoist and engine support or jack.

7. Check converter drain plugs for tightness, then install converter housing cover.

8. Attach oil filler pipe to oil pan.

9. Line up blind spline of propeller shaft with blank spline in universal joint and move axle forward to engage propeller shaft and universal joint splines.

10. Connect torque tube to torque ball with bolts and lockwashers.

11. Reassemble exhaust system making sure that pipes are centered in the frame member holes and that the system is free from binds.

12. Connect speedometer cable to driven gear sleeve and connect shift rod to shift lever on transmission. Connect stator operating control rod to lever on high accumulator.

13. Connect rear shock absorbers, track bar, brake cable at equalizer and brake pipe at torque tube bracket.

14. Wipe all oil from outside of transmission then lower car to floor.

15. Bleed rear brakes.

16. Tighten torque ball bolts (see par. 4-12).

17. Fill transmission to proper level as described in paragraph 1-4.

18. Check adjustment of control linkage (par. 5-12). Check adjustment of stator operating controls and throttle linkage (par. 3-9).

19. Road test car for approximately 20 miles

with frequent stops and starts as might be encountered in heavy traffic. A thorough road warm-up is desired.

20. Place car on hoist and carefully examine the transmission and all connections for oil leaks. Recheck oil level.

## 5-14 DISASSEMBLY OF TRANSMISSION TO REMOVE MAJOR PARTS AND UNITS

### a. Preliminary Instructions

1. Before starting disassembly of the transmission it should be thoroughly cleaned externally to avoid getting dirt inside.

2. Place transmission on a CLEAN work bench and use CLEAN tools during disassembly and assembly. Provide CLEAN storage space for parts and units removed from transmission.

3. The transmission contains parts which are ground and highly polished, therefore, parts should be kept separated to avoid nicking and burring surfaces.

4. When disassembling transmission carefully inspect all gaskets at times of removal. The imprint of parts on both sides of an old gasket will show whether a good seal was obtained. A poor imprint indicates a possible source of oil leakage due to gasket condition, looseness of bolts, or uneven surfaces of parts.

5. None of the parts require forcing when disassembling or assembling transmission. Use a rawhide or similar soft mallet to separate tight fitting cases—*do not use a hard hammer.*

6. It is good practice to reassemble parts in the same relative position as they were originally assembled, however, parts must not be prick punched or filed for assembly identification. The wear pattern of the parts will usually indicate their original assembly positions.

### b. Removal of Converter and Housing

*NOTE: This operation not required for removal of valve and servo body, universal joint, or rear bearing retainer.*

1. Remove both drain plugs from converter pump cover to drain any oil remaining in converter.

2. Remove all bolts and lock washers attaching cover to converter pump, then remove cover. Check the cover seal for damage or evidence of oil leakage before removing it from cover.

3. Remove reverse band adjustment cover and gasket, using Removing Tool J 2655. Shift into "Parking" and pry up on reverse band operating lever with screwdriver to lock input

shaft while removing the bolt, lockwasher, retaining washer and thrust washer from front end of input shaft. See figure 5-28. Remove bronze thrust washer from first turbine support hub.

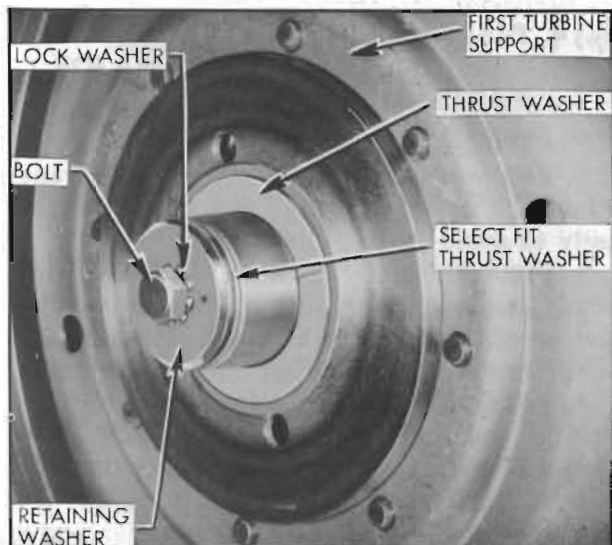


Figure 5-28—Turbine Retaining Washer and Thrust Washer

4. Insert screwdriver in first turbine support hole and slide turbine assembly off input shaft.

5. Install tool J-5806 over input shaft with beveled end outward. Pull stator forward on reaction shaft, grasp spacer and needle bearing



Figure 5-29—Removing Stator Assembly

race behind stator to retain all free wheeling parts of the stator, then slide the assembly forward upon the tool and remove from input shaft. See Figure 5-29.

6. Pull the converter pump forward from the reaction shaft and immediately check for evidence of oil leakage. Radial streaks of fresh oil on back of pump and fresh oil streaks on face of front oil pump body indicate leakage past the oil pump seal.

7. Before removing the converter housing check to see whether all attaching bolts are tight. Loose bolts may be the cause of oil leakage at this point.

8. Place transmission so housing is over edge of bench and remove it. Examine the rubber oil seal located around the front oil pump to see whether it has been uniformly compressed by the housing; if not, check for any obstacle that may be around the oil pump or opening in housing that would prevent uniform compression of the seal.

9. See paragraph 5-15 for overhaul of converter units and paragraph 5-23 (i) for installation of converter housing and converter.

#### c. Removal of Oil Pan, Valve and Servo Body Assembly

**NOTE:** For removal of only the valve and servo body assembly the converter and converter housing (subpar. b) need not be removed. The following procedure also may be used with transmission in car.

1. Remove shift lever to avoid damage to valve operating linkage. Hold lever forward while removing the retaining nut and lockwasher so that linkage will not be strained, then remove lever from cross shaft.

2. Remove both band adjustment covers and gaskets, using Removing Tool J 2655.

3. Turn transmission bottom side up.

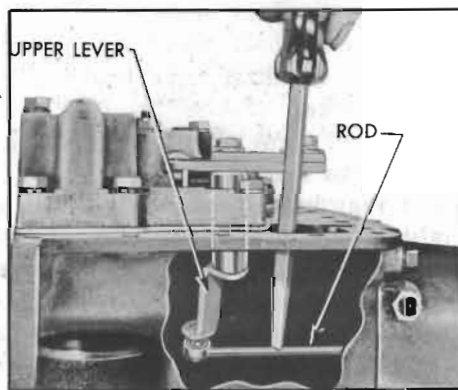


Figure 5-30—Disconnecting Valve Operating Rod from Upper Lever

4. Remove the oil pan and gasket.
5. Remove six screws holding oil screen and remove screen.
6. Disconnect valve operating rod from valve operating lever (upper) by placing screwdriver on rod close to lever and exerting slight pressure. A spring loaded socket on rod engages a ball stud on lever. See figure 5-30.
7. Slightly loosen all valve and servo body attaching bolts, then remove bolts and lock-washers. *Do not loosen or remove the slotted safety nuts on valve-to-servo body studs.*
8. Lightly pry upward on the assembly to free the gasket between servo body and transmission case. Push shift control valve and lower operating lever inward to align the lower lever with opening in transmission case, then remove the assembly. See figure 5-31. CAUTION: *Do*

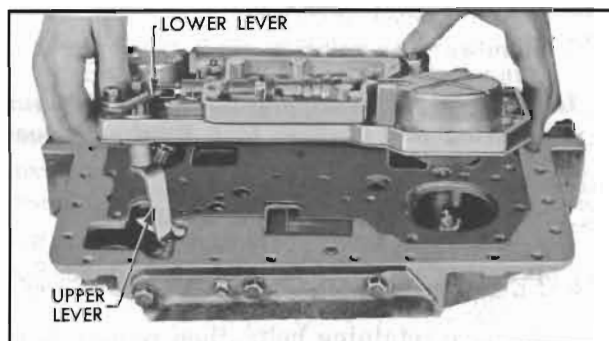


Figure 5-31—Removing Valve and Servo Body Assembly

*not grasp slotted end of control valve because sharp edges may cut hand.* Remove gasket and check for indication of oil leakage.

9. Remove the reverse band operating strut

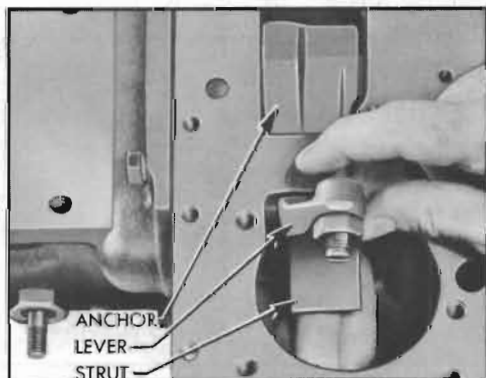


Figure 5-32—Removing Reverse Band Operating Strut

by extending fingers through the adjustment hole to prevent strut from falling into transmission case then release the strut by raising the

operating lever. See figure 5-32.

10. See paragraph 5-17 for overhaul of valve and servo bodies and oil pan, and paragraph 5-23 (g) for installation of these units.

#### d. Removal of Reaction Shaft Flange, Oil Pump, Accumulators, and Clutch

NOTE: *The converter and converter housing (subpar. b) must be removed.*

1. Remove retaining ring from groove in input shaft.
2. Loosen; but do not remove caps on both accumulators.

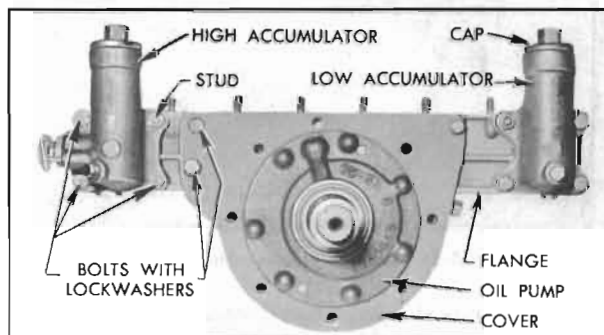


Figure 5-33—Accumulator Body and Reaction Shaft Flange Attaching Screws

3. Remove the bolts which attach the accumulators and the oil pump cover but do not remove the stud nuts which attach these parts. See figure 5-33.

4. Tap very lightly on rear of accumulator bodies with fiber mallet to loosen reaction shaft flange, then remove the assembly and gasket. Leave input shaft in place in transmission.

5. Check reaction flange gasket for good imprint and freedom from damage which would cause an oil leak at this point.

6. Pull the input shaft and clutch hub front thrust washer from the clutch assembly, then

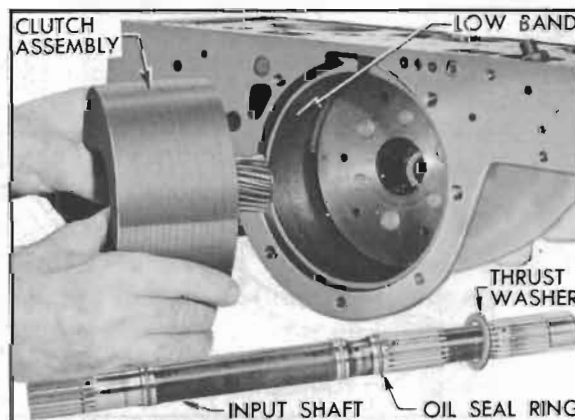


Figure 5-34—Removal of Clutch Assembly

remove the clutch assembly. See figure 5-34.

7. Compress the low band with the operating lever while applying Band Clip J 2595 across the strut flanges of the band. Release the lever and remove low band, then remove the struts which will drop into case. See figure 5-35.

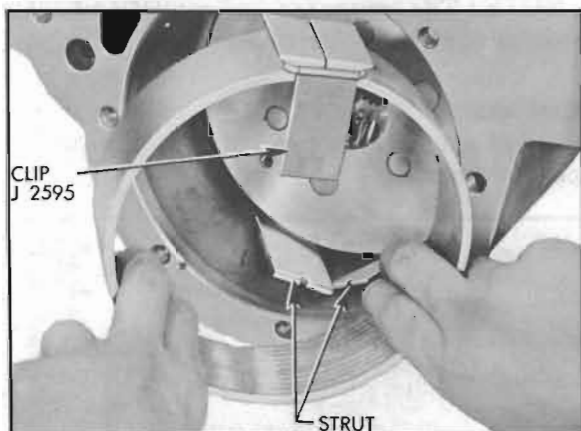


Figure 5-35—Removing Band with Clip J 2595

8. Remove the low band operating lever by threading a  $\frac{1}{4}$ "-20 cap screw into the lever shaft and pulling shaft out of case.

9. See paragraph 5-18 for overhaul of front oil pump and reaction flange, paragraph 5-19 for overhaul of accumulators, paragraph 5-20 for overhaul of clutch, and paragraph 5-23 (e, f) for installation of these units.

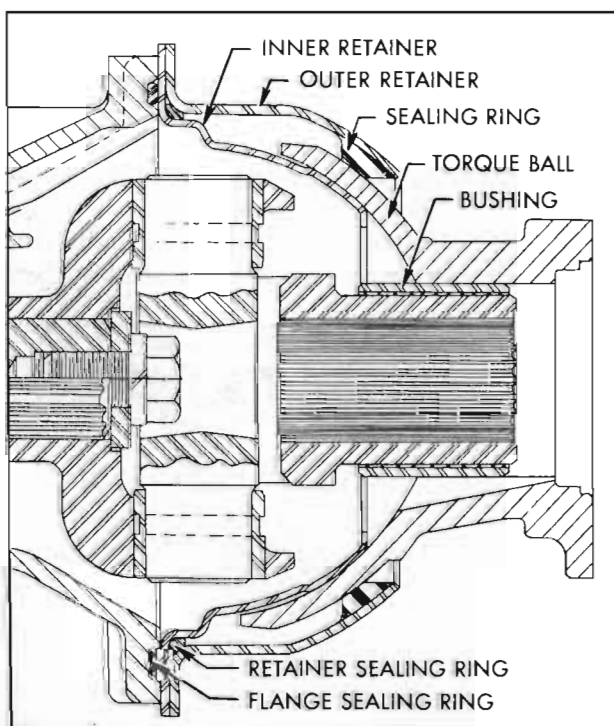


Figure 5-36—Universal Joint and Torque Ball

#### e. Removal of Torque Ball and Universal Joint

**NOTE:** None of the preceding operations are required for removal of torque ball and universal joint.

1. Remove attaching bolts, then remove torque ball, inner and outer retainers reinforcement and gaskets.

2. Remove speedometer driven gear and sleeve assembly.

3. Place transmission shift lever on cross shaft and push lever forward while turning universal joint until the locking pawl engages the parking lock ratchet wheel.

4. Remove universal joint bolt, lockwasher and flat washer, using a  $\frac{3}{4}$ " socket wrench and extension.

5. Pull universal joint from output shaft, using Universal Joint Puller J 682-A if joint cannot be removed by hand.

6. Remove transmission shift lever.

#### f. Removal of Rear Bearing Retainer, Rear Bearing and Parking Lock Ratchet Wheel

**NOTE:** Only the torque ball and universal joint (subpar. f) and oil pan need be removed.

1. Disconnect valve operating rod from upper operating lever if not previously done. See figure 5-30.

2. Remove retaining bolts, then remove rear bearing retainer and gaskets. Check gaskets for evidence of oil leakage.

3. Remove rear bearing horseshoe washer from output shaft, using hammer and large screwdriver.

4. Remove snap ring from rear of rear bearing. Tap out bearing.

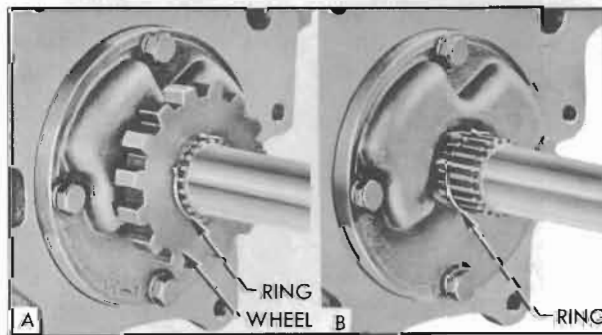


Figure 5-37—Removing Ratchet Wheel Retaining Ring

5. Using snap ring pliers, remove ratchet wheel outer retaining ring, slide wheel from output shaft, and remove inner retaining ring. See figure 5-37.



6. See paragraph 5-21 for overhaul of rear bearing retainer and paragraph 5-23 (d) for installation.

**g. Removal of Rear Oil Pump and Lubrication Oil Pressure Regulator Valve**

NOTE: *Rear bearing retainer (subpar. f) must be removed.*

1. Remove retaining bolts then remove pump body, which contains the pump gears.

2. Remove the drive key, then use pointed tool to remove the rubber cushion which is located under drive key in the output shaft.

3. Remove the rear pump plate and gasket if they can be removed from the case without prying. If plate is stuck, it can be tapped out after removal of the planetary gear set. Check gasket for indication of oil leakage.

4. Remove the lubrication oil pressure regulator valve seat from transmission case, using  $\frac{3}{8}$ " Allen wrench. Remove valve and spring.

5. See paragraph 5-18 for inspection of rear oil pump and paragraph 5-23 (c) for installation.

**h. Removal of Planetary Gear Set, Reverse Ring Gear and Reverse Band**

NOTE: *All of the preceding operations must be performed before removal of planetary gear set.*

1. Remove planetary gear set through front of case. See figure 5-38.

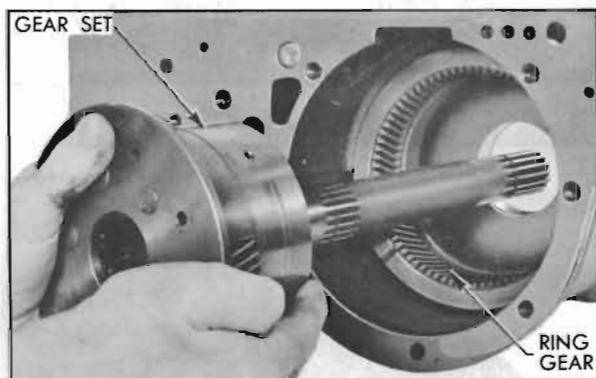


Figure 5-38—Removing Planetary Gear Set

2. Remove the reverse ring gear.

3. If rear oil pump plate and gasket were not previously removed, tap them out with hammer handle from front side of case.

4. Thread a  $\frac{1}{4}$ "-20 bolt into the reverse band anchor shaft to pull it from transmission case; then remove the operating lever. Rotate the reverse band until the anchor can be disengaged, then remove this part. See figure 5-39.

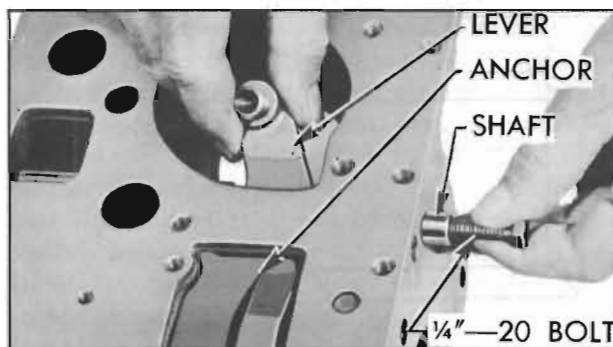


Figure 5-39—Removing Reverse Band Operating Lever and Shaft

5. Compress ends of reverse band and apply Band Installing Clip J 2595 across the strut flanges, then remove band.

6. Remove the reverse ring gear thrust washer from case.

7. See paragraph 5-22 for overhaul of planetary gear set and paragraph 5-23 (b) for installation.

**5-15 DISASSEMBLY, INSPECTION, ASSEMBLY OF TORQUE CONVERTER UNIT**

**a. Disassembly of Twin Turbine**

1. Drive the three roll pins holding the first turbine blades to the turbine support "in" approximately  $\frac{1}{4}$ " using a  $\frac{1}{8}$ " punch. It is not necessary to remove the pins. See Figure 5-40.

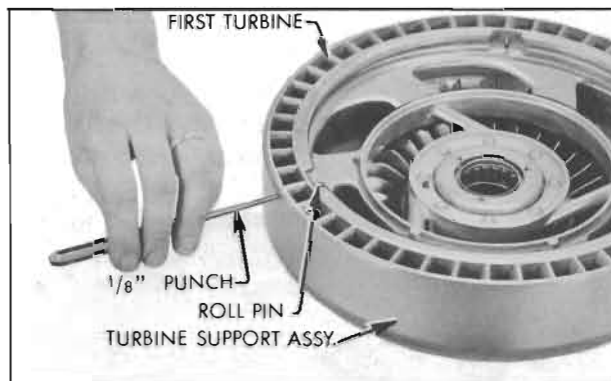


Figure 5-40—Driving in First Turbine Support Pins

2. Attach a bar  $1\frac{1}{2}$ " x  $\frac{1}{4}$ " x 1" (See Figure 5-41) to a J-7004 slide hammer. Place the edge of the remover under the edge of the first turbine. Hammer sharply on first one side then the other to move the first turbine straight up out of the turbine support.

3. Lift the first stator assembly out of the first turbine support.

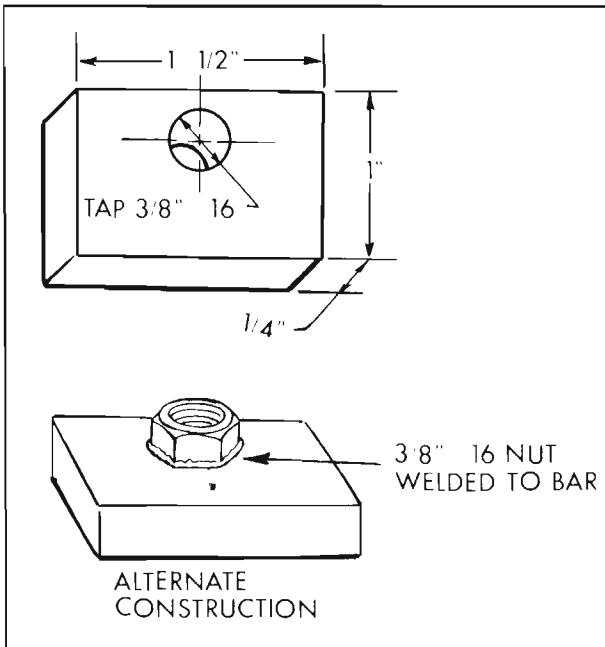


Figure 5-41—Turbine Removing Tool

4. Pry off the cupped thrust washers and remove the first stator bearings and sprag assembly. See Figure 5-43.

5. Lift the sun gear assembly out of the second turbine carrier.

6. Remove bearing and sprag assembly from the sun gear. See Figure 5-44.

7. Lift the second turbine assembly out of the first turbine support.

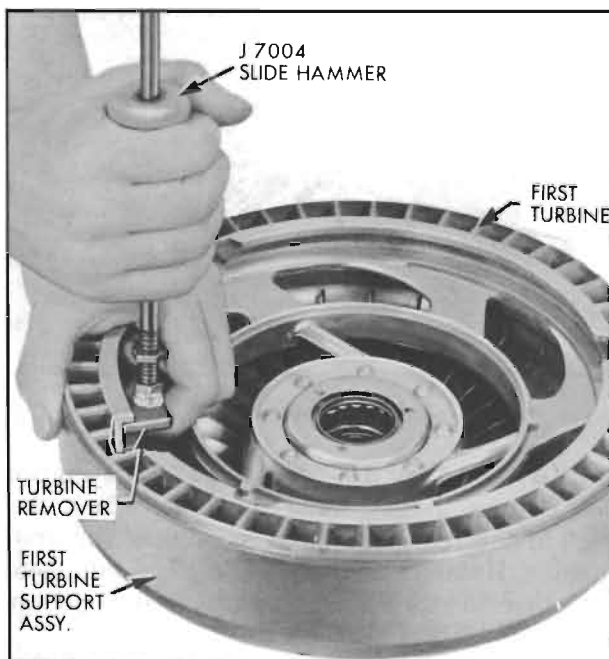


Figure 5-42—Removing First Turbine From Support

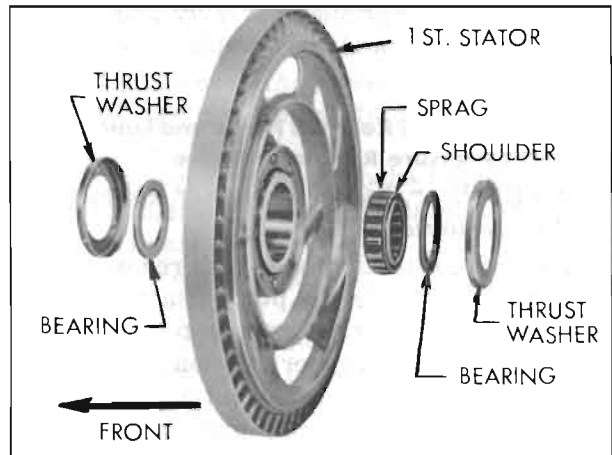


Figure 5-43—First Stator Parts

### b. Disassembly of Two Position Stator

1. Remove stator thrust washer and selective spacers from rear side of stator, remove Tool J 5806, then remove free wheel rollers and springs from the cam.

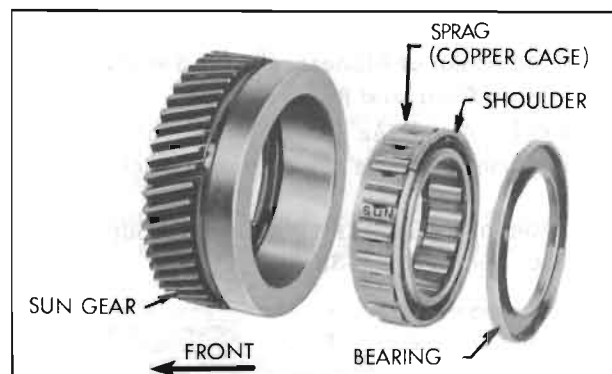


Figure 5-44—Sun Gear Parts

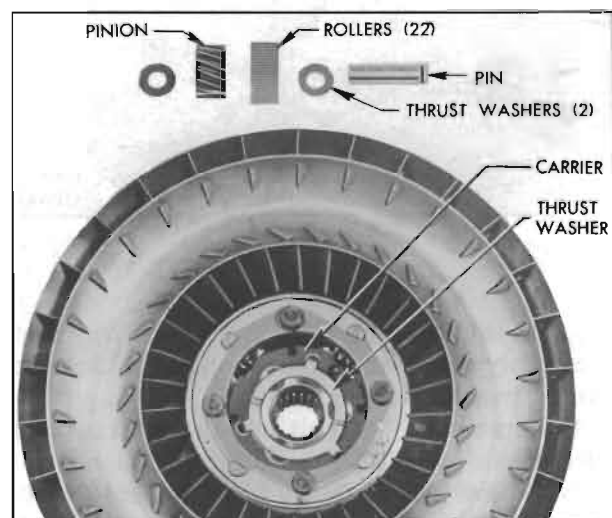


Figure 5-45—Second Turbine Parts

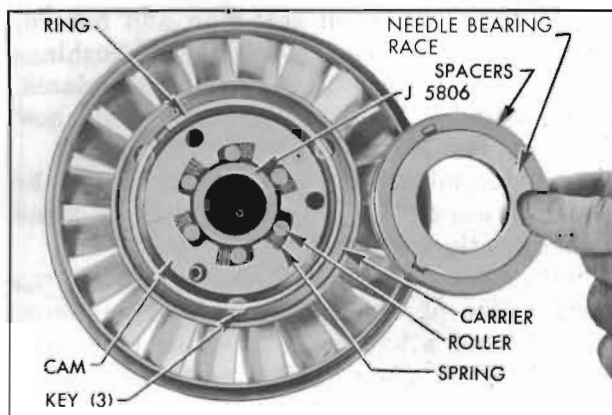


Figure 5-46—Parts in Rear Side of Stator

2. Pry the retaining ring from groove in stator blade rear carrier, and remove free wheel cam and three driving keys. See Figure 5-46.

3. Use Screwdriver J 5826 to remove the stator blade front carrier screws and lock-washers, then remove front carrier which is also held to rear carrier by two dowels. See Figure 5-47.

4. Tilt three or four blades toward the low angle position and slide the crank pin ends clockwise around the stator piston groove. The next blade and all succeeding blades will then have enough clearance to be removed.

### c. Inspection of Torque Converter Parts

1. Wash all parts in clean solvent and dry thoroughly.

2. Inspect converter pump hub for scores

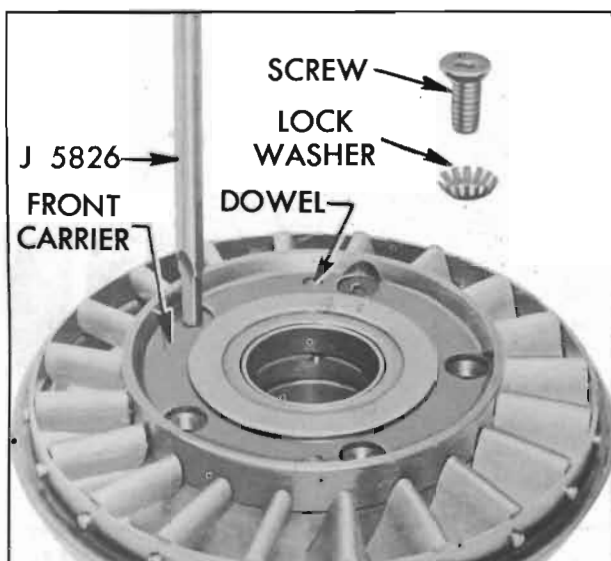


Figure 5-47—Removing Front Carrier Screws

and for wear caused by the front pump seal. If pump is suspected of leaking oil it may be tested as described in subparagraph d, below.

3. Inspect converter pump and turbines for cracked or distorted vanes. Inspect turbine carrier, planetary gear teeth, thrust washers, bushings and related bearing surfaces for excessive wear, scoring or other damage. Examine stator needle thrust bearing staked in converter pump. See Figure 5-49. If bearing is damaged or worn excessively, carefully drive back the outer staking and remove the bearing. A new bearing assembly should be staked in very lightly, only enough to keep the bearing from falling out.

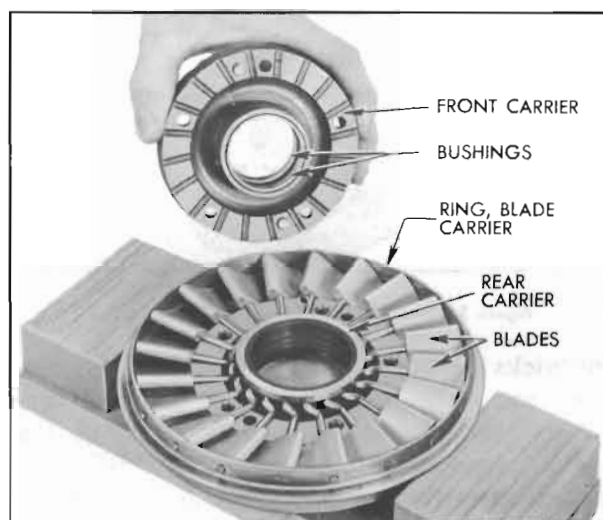


Figure 5-48—Front of Stator Assembly

4. Inspect sprag bores in first stator and sun gear also O.D. of reaction shaft for brinelling, wear or burrs. Inspect sprags and sprag cages

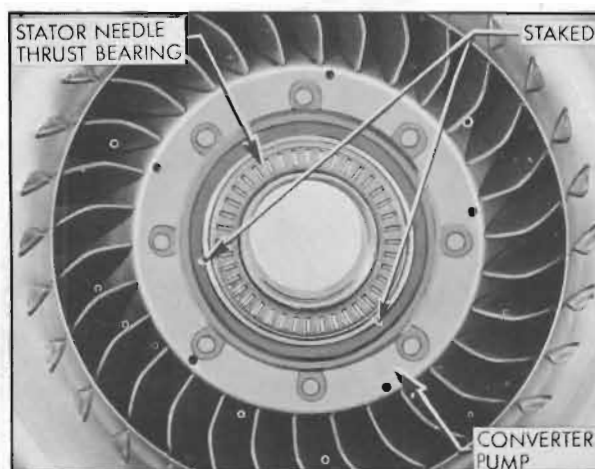


Figure 5-49—Stator Needle Thrust Bearing



for distortion or excessive wear. Replace sprag if cage is distorted.

**NOTE:** *If sprag clutches are dropped or handled in any manner which dislocates a sprag or distorts either cage, the assembly must be replaced.*

5. Inspect stator free wheel rollers and cam

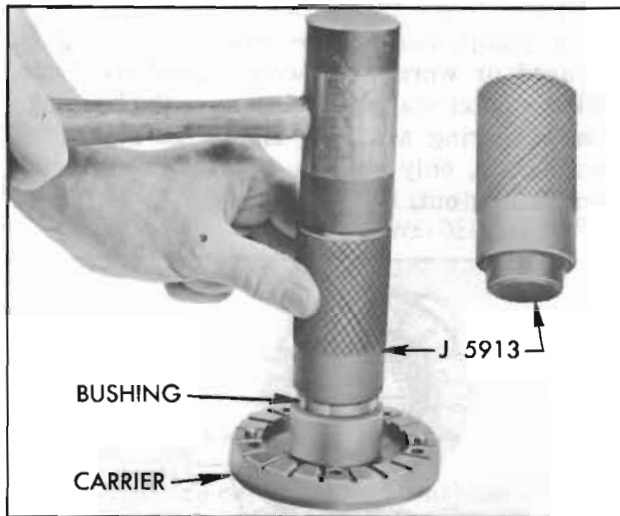


Figure 5-50—Installing Bushing in Blade Carrier

for nicks or burrs, which should be removed with an Arkansas stone and polished with crocus cloth. Discard any roller springs that are damaged or distorted.

6. Inspect stator blades for distortion, cracks, loose on cranks, or other damage.

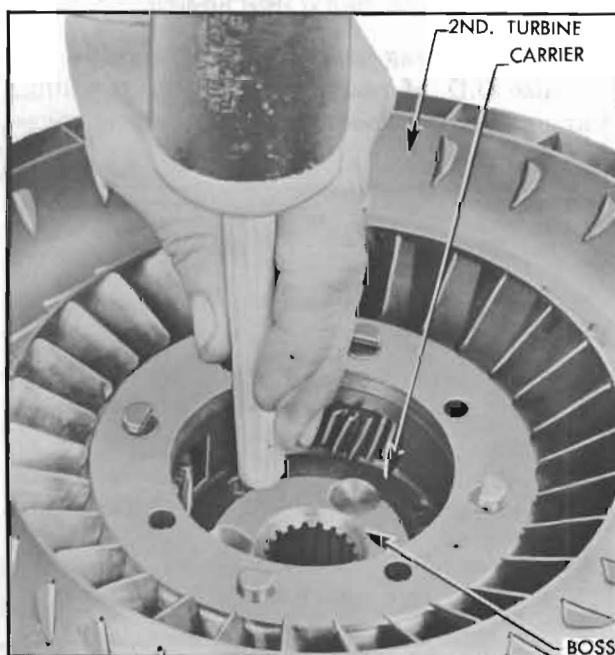


Figure 5-51—Removing Second Turbine Carrier

7. Inspect piston oil seal ring and bore of blade carrier for scoring or wear. If bushings in carrier are worn they should be replaced, using Installer J 5913 to properly locate new bushings. See Figure 5-50.

8. If second turbine or the carrier must be replaced, use care in separating them to avoid damage to the good part.

With second turbine suitably supported, tap carrier free of counterbore in turbine, using hammer and a hardwood dowel or other soft punch. *Do not drive against surface of thrust boss in carrier.* See Figure 5-51.

#### d. Testing Converter Pump for Oil Leakage

1. Prepare a plate with rubber washer to close the opening in converter pump hub, as shown in Figure 5-52. The bolt head should be

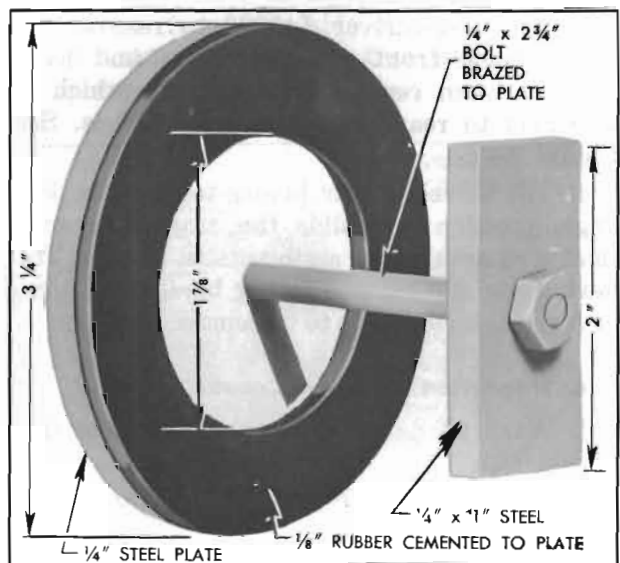


Figure 5-52—Plate and Washer for Pump Test

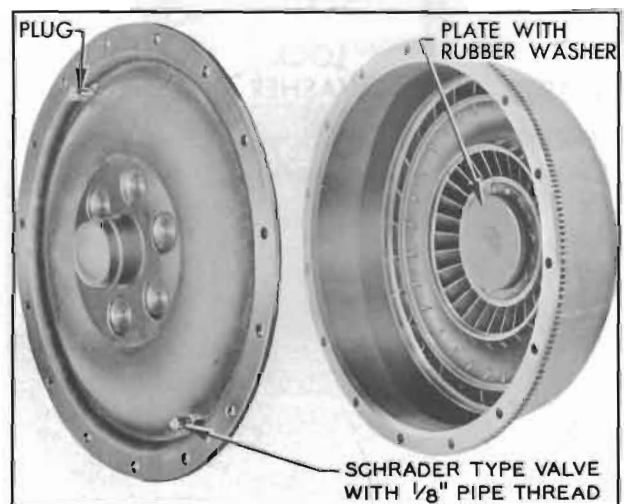


Figure 5-53—Plate and Plugs Installed in Pump and Cover

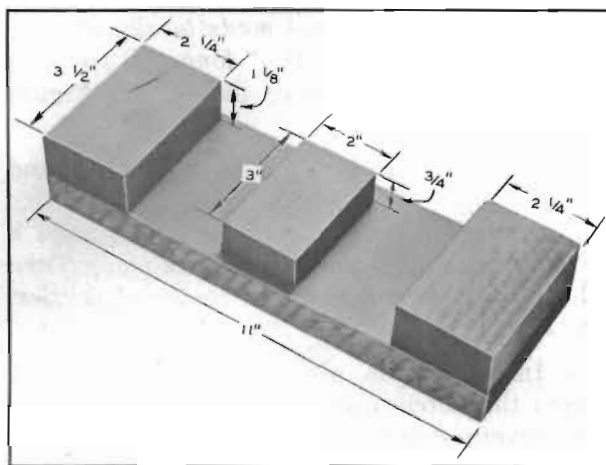


Figure 5-54—Two Position Stator Assembling Fixture

brazed to the plate to seal the bolt hole, and the  $\frac{1}{8}$ " thick rubber washer should be cemented to the plate.

2. Install plate with washer over inside surface of pump hub (Figure 5-53), then install pump cover with seal and tighten all bolts to 25-30 ft. lbs. torque in sequence shown in Figure 5-115.

3. Install one drain plug, and install a Schrader type valve with  $\frac{1}{8}$ " pipe thread in other drain hole. Tighten parts securely. See Figure 5-53.

4. Attach air hose to valve fitting, fill pump with compressed air at 80 to 100 lbs./sq. in. and submerge pump in water tank. Air bubbles will appear at any point where oil leakage exists.



Figure 5-55—Inserting Stator Blades in Carrier

**CAUTION:** After a pump cover seal is used in this test it should not be used when rebuilding transmission.

#### e. Assembly of Two Position Stator

1. Insert stator piston and oil seal ring in the rear carrier and push to extreme forward position.

2. Place the rear carrier and piston on center block of fixture to hold the piston in position. See suggested fixture shown in Figure 5-54.

3. Place the stator outer ring on 2 outer blocks of fixture with crank pin holes up. See Figure 5-55.

4. Holding the blade in the approximate "low pitch" position insert the crank pin in the outer ring. Then rotate the blade to bring the crank throw into the piston groove. Hold the piston, blades, and outer ring together as shown in Figure 5-55.

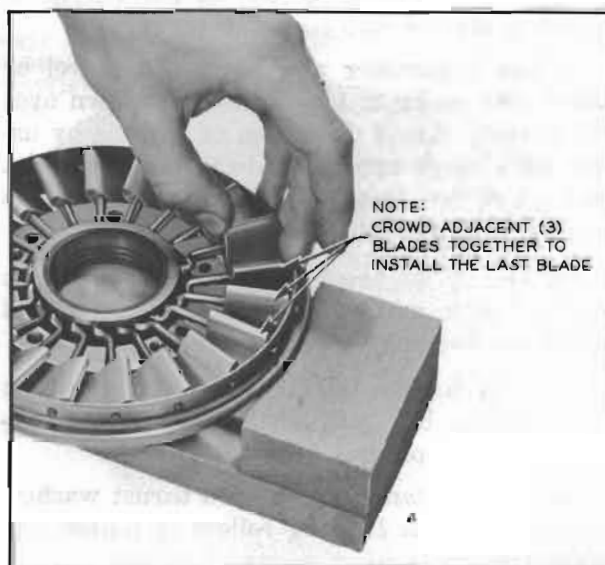


Figure 5-56—Inserting Last Blade

5. Install the remainder of the blades, working in a clockwise direction.

6. To insert the last blade it will be necessary to tilt the adjacent 3 blades. See Figure 5-56.

7. Install the front carrier and bolt in place. Be sure the blades operate freely in the carrier.

#### f. Assembly of Sun Gear and Twin Turbine

**NOTE:** If second turbine carrier was not separated from second turbine, steps 1 through 5 are not necessary.

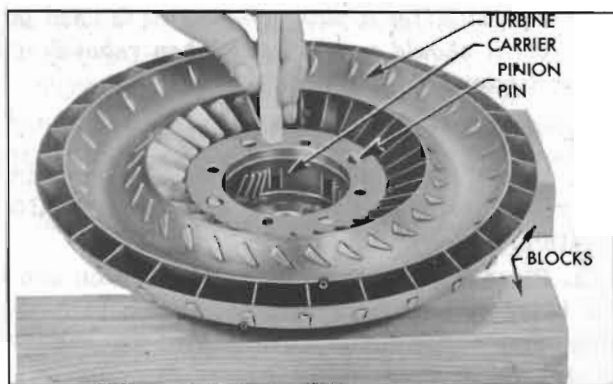


Figure 5-57—Installing Turbine on Carrier

1. If second turbine was separated from the carrier, make certain that counterbored recess in turbine and mating surfaces of carrier are clean and free of burrs, and apply a film of oil to these surfaces.

2. Support the carrier on suitable blocks, install several pinion pins to serve as pilots, then place turbine in position so that carrier is squarely started into recess in turbine.

3. Use a hammer and hardwood dowel or other soft punch to tap the turbine down over the carrier. Avoid distortion of turbine by using light blows applied midway between holes and alternated from side to side to keep parts square with each other. See Figure 5-57.

**NOTE:** If turbine cannot be assembled on carrier with moderate force, remove it and check for burrs in counterbored recess.

4. With turbine and carrier supported on wood blocks, hub side down, assemble and install the four pinions as follows:

(a) Place planet pinion on a thrust washer, install 22 needle bearing rollers in pinion and place a thrust washer on top of pinion.

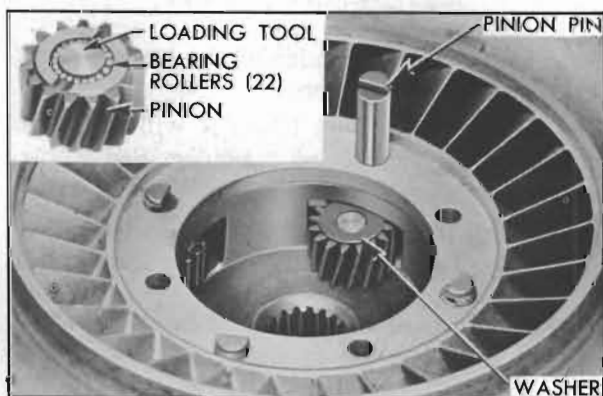


Figure 5-58—Installing Pinion in Carrier

**NOTE:** A loading tool made locally of steel rod  $\frac{3}{8}$ " in diameter by  $1\frac{1}{16}$ " long will simplify loading and installation of pinion. See Figure 5-58.

(b) Place assembled pinion in carrier and install a pinion pin with notched end up. After loading tool is pushed out of carrier, slide a block under pinion pin to hold it in place. Turn all pins so that notches face center of carrier. See Figure 5-58.

5. Install pinion pin lock plate so that it enters the notches of all pins, then install the four turbine-to-carrier bolts with lockwashers. See Figure 5-45.

6. Install sprag in bore of sun gear with shoulder out then carefully press bearing in place. See Figure 5-44.

**NOTE:** The sprag for the sun gear has a copper colored cage while the first stator sprag has a plain steel cage. The two sprags must not be interchanged.

7. Check operation of sun gear sprag clutch by sliding sun gear assembly on reaction shaft with gear end toward front of transmission. When viewed from front of transmission sun gear must rotate freely clockwise and lock in a counterclockwise direction. See Figure 5-59.

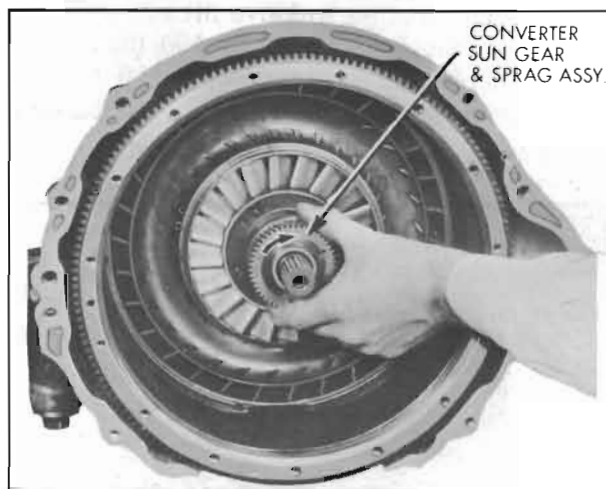


Figure 5-59—Checking Sun Gear Sprag Operation

8. Place tanged thrust washer in second turbine carrier and install sun gear in second turbine assembly. See Figure 5-45.

9. Place tanged thrust washer on forward face of second turbine carrier. Hold in place with chassis lube if necessary. See Figure 5-60.

10. Lower second turbine assembly into first

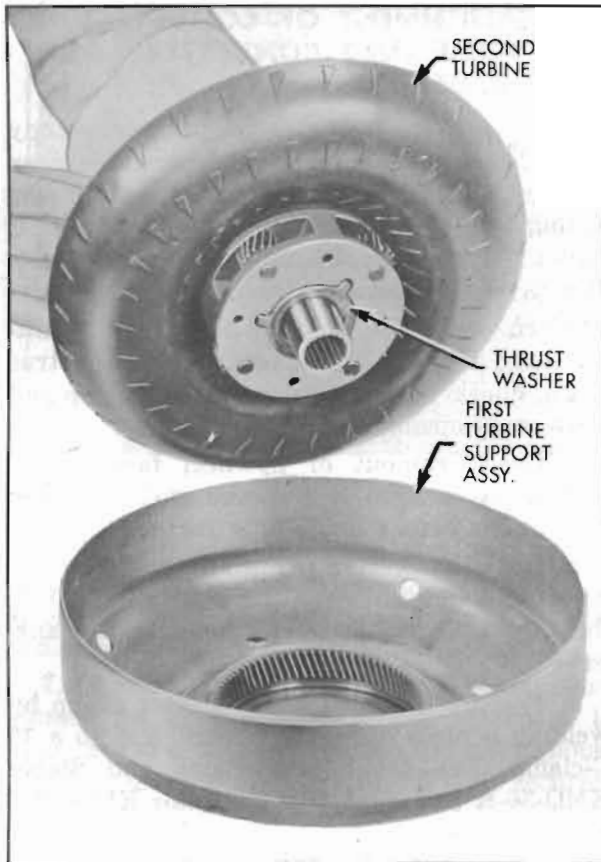


Figure 5-60—Installing Second Turbine in First Turbine Support

turbine support and ring gear assembly. See Figure 5-60.

11. Lay first stator on bench with thick edge of blades up. Refer to Figure 5-43, then place first stator sprag in hub of first stator with shoulder up. Install one bronze bearing and one cupped thrust washer on each side of sprag.

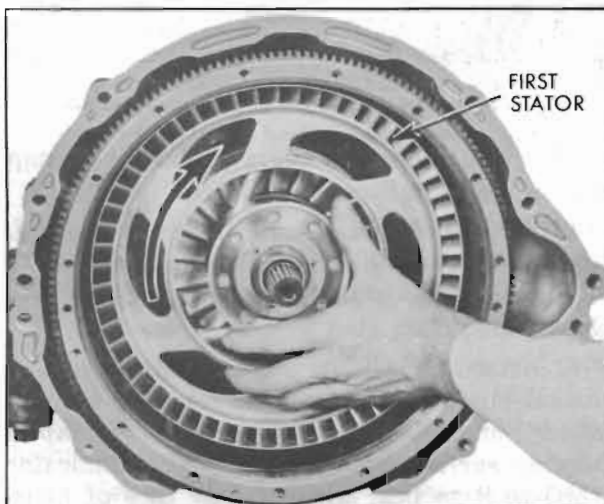


Figure 5-61—Checking First Stator Sprag Clutch

**NOTE:** The sprag for the first stator has a plain steel cage while the sun gear sprag has a copper colored cage. The two sprags must not be interchanged.

12. Check operation of first stator sprag clutch by sliding the first stator on the reaction shaft with thin edge of blades toward front of transmission. The first stator must turn freely clockwise and lock in a counterclockwise direction when viewed from front of transmission. See Figure 5-61.

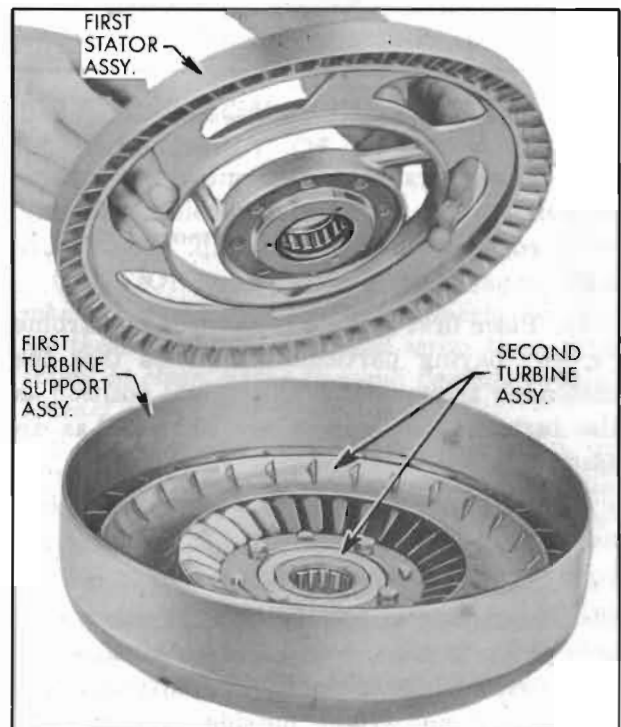


Figure 5-62—Installing First Stator Assy.

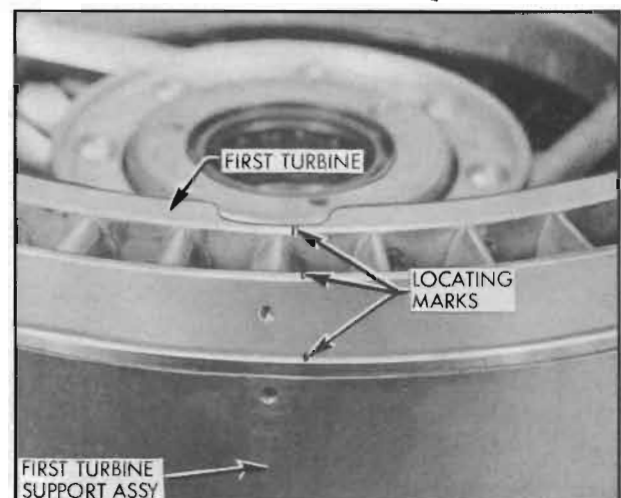


Figure 5-63—Positioning First Turbine on First Turbine Support



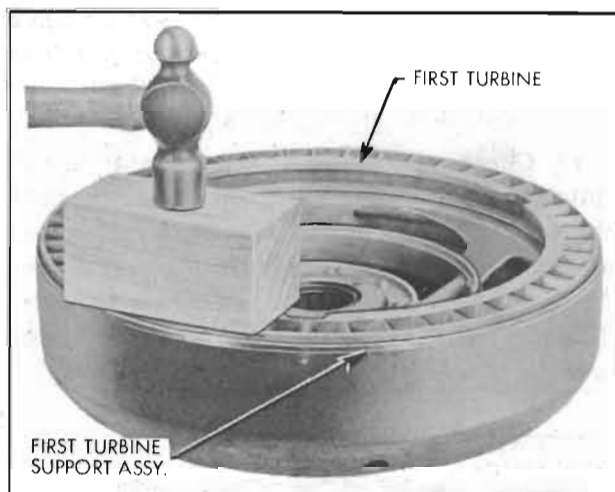


Figure 5-64—Driving First Turbine Into Support

13. Lower first stator assembly into turbine support on top of second turbine assembly. Wide edge of stator blades "up." See Figure 5-62.

14. Place first turbine in position on turbine support paying particular attention that the turbine is assembled in its original position as the turbine and support are balanced as an assembly. See Figure 5-63.

15. Carefully drive turbine down into position by tapping with a wood block. Roll pin holes must line up. See Figure 5-64.

16. Use a pair of channel lock or other suitable pliers to force roll pins into engagement with first turbine support roll pin holes. Roll pins should not extend outside support more than  $\frac{1}{32}$ ". See Figure 5-65.

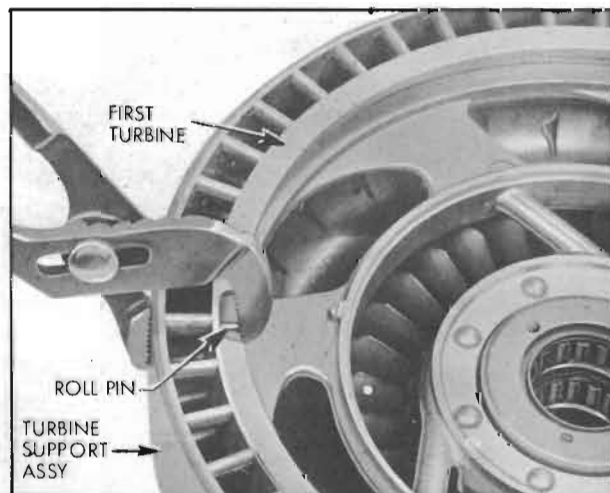


Figure 5-65—Positioning Turbine Roll Pins

## 5-16 ALIGNMENT OF CONVERTER PUMP AND CONVERTER HOUSING

Converter oil leaks, front oil pump body leaks, front oil pump noise, and excessive wear of front oil pump bushing and oil seal may be caused by: (1) Excessive run-out of flywheel face (2) Excessive run-out of converter pump hub (3) Misalignment of converter housing.

When any of these conditions are encountered and there is any doubt as to their true cause, check the flywheel, converter pump and converter housing as follows:

1. Check run-out of flywheel face as described in paragraph 2-26 and make required corrections before proceeding further.

2. Install converter pump and cover on flywheel and tighten mounting bolts to 25-30 ft. lbs. torque. Install converter housing on crankcase.

3. Prepare a special dial indicator clamp by welding a piece of  $\frac{5}{16}$ " x 3" drill rod to a 1" C-clamp. Use the special clamp and Sleeve KMO-30-K to mount Dial Indicator KMO-30-B

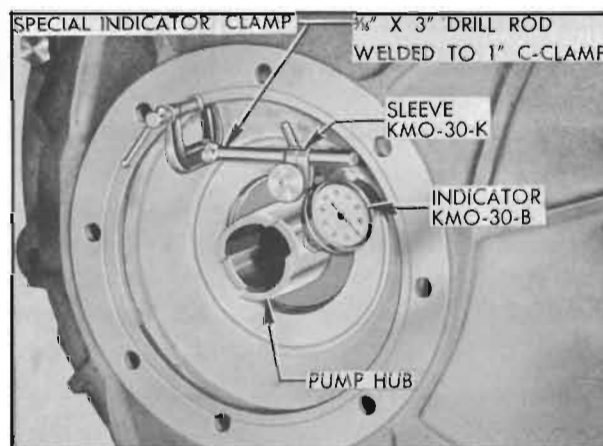


Figure 5-66—Checking Run-Out of Converter Pump Hub

so that indicator stem bears against the pump hub as shown in Figure 5-66.

4. Turn flywheel and note indicator reading. Run-out of pump hub should not exceed .012". If run-out exceeds .012", replace pump and re-check run-out.

5. Attach the special dial indicator clamp to the oil pump driving lug on rear end of converter pump hub. **CAUTION: Do not clamp to bearing surface on hub.** Mount Dial Indicator KMO-30-B to bear against rear face of housing at a radius of  $3\frac{3}{4}$ ". See Figure 5-67.



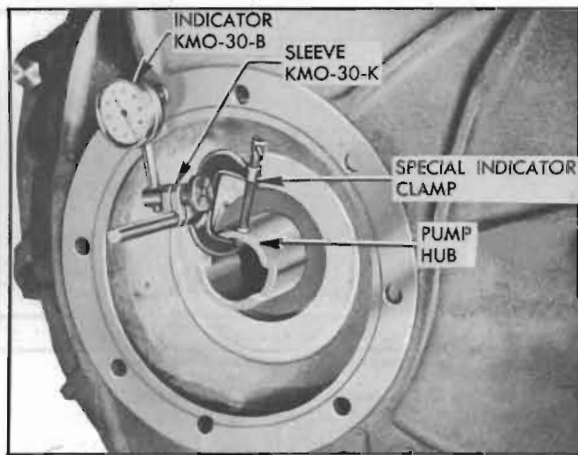


Figure 5-67—Checking Run-Out of Rear Face of Bell Housing

6. Turn flywheel, making sure that crankshaft end thrust is held in one direction, and note run-out of housing face as shown by dial indicator. Run-out should not exceed .005".

7. If run-out of housing face exceeds .005", cement paper shims of proper thickness to rear face of crankcase to bring run-out of housing face to .005" or less, with all bolts securely tightened.

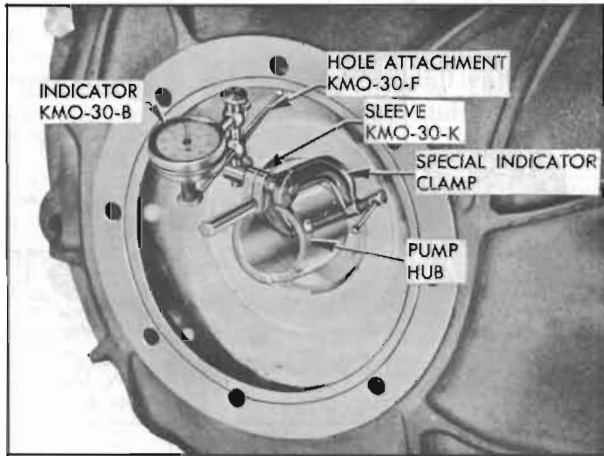


Figure 5-68—Checking Run-Out of Bell Housing Pilot Hole

8. Mount dial indicator and Hole Attachment KMO-30-F to bear against inner edge of pilot hole in housing. See figure 5-60. Run-out of pilot hole should not exceed .004".

9. If run-out of pilot hole exceeds .004", remove housing, remove the two dowels, and reinstall housing, leaving bolts just loose enough to permit shifting housing by tapping with a lead hammer.

10. Set up dial indicator as shown in figure 5-68 and bring pilot hole of housing within

.004" run-out by tapping in required direction with lead hammer. If it is not possible to move housing far enough, remove housing and drill bolt holes with 1/2" drill. When housing is placed so that pilot hole run-out is .004" or less, tighten all bolts securely.

11. Ream the two dowel holes through housing and crankcase, using Ratchet J 808-6 with tapered Reamer J 2548-3 (1 1/32") until this reamer bottoms in hole, then finish with bottoming Reamer J 4710-6 to provide full size to bottom of hole.

12. Remove converter housing and install oversize dowels J 808-5 in crankcase.

## 5-17 DISASSEMBLY, INSPECTION, ASSEMBLY OF VALVE AND SERVO BODIES

### a. Disassembly of Valve Body

**CAUTION:** The valves have sharp edges which can cut fingers if improperly handled. As these parts are removed wrap them separately in clean cloths to avoid damage through contact with other parts.

1. Remove nut and lockwasher which attaches the lower valve operating lever and linkage adjusting lever to the upper lever shaft and remove levers.

2. Remove safety nuts and washers from studs, then lift the valve body and gasket from servo body. Remove shift control valve from valve body. Check gasket for evidence of oil leakage.

3. Remove the rear pump delivery check valve and spring from servo body to avoid losing these nuts.

4. Remove the large pressure regulator valve plug from valve body, using care because of the heavy spring pressure behind the plug. Remove the two springs and spring seat. See figure 5-72.

5. Remove the small valve plug and remove the pressure regulator valve from body.

6. Remove valve body plate and gasket, then remove the front pump delivery check valve and spring. Check gasket for evidence of oil leakage.

### b. Disassembly of Servo Body

1. Remove servo body spacer plate attaching screw at reverse servo which is in line with the

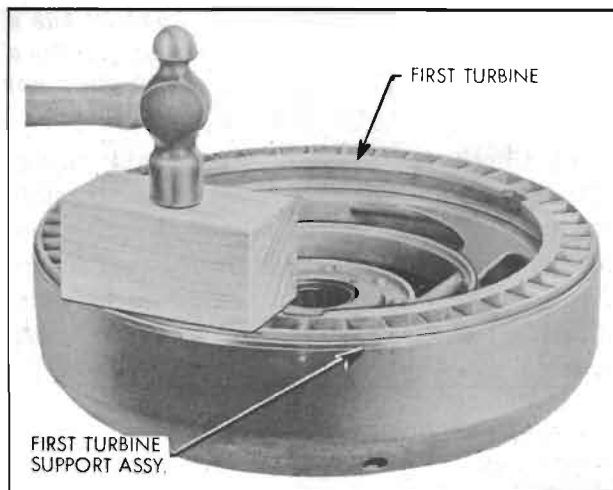


Figure 5-64—Driving First Turbine Into Support

13. Lower first stator assembly into turbine support on top of second turbine assembly. Wide edge of stator blades "up." See Figure 5-62.

14. Place first turbine in position on turbine support paying particular attention that the turbine is assembled in its original position as the turbine and support are balanced as an assembly. See Figure 5-63.

15. Carefully drive turbine down into position by tapping with a wood block. Roll pin holes must line up. See Figure 5-64.

16. Use a pair of channel lock or other suitable pliers to force roll pins into engagement with first turbine support roll pin holes. Roll pins should not extend outside support more than  $\frac{1}{32}$ ". See Figure 5-65.

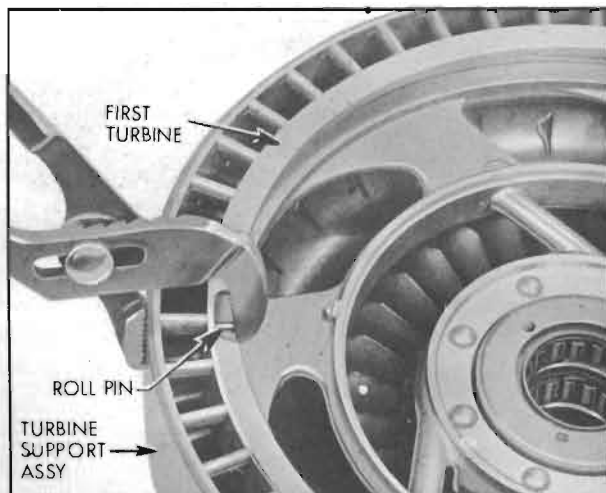


Figure 5-65—Positioning Turbine Roll Pins

## 5-16 ALIGNMENT OF CONVERTER PUMP AND CONVERTER HOUSING

Converter oil leaks, front oil pump body leaks, front oil pump noise, and excessive wear of front oil pump bushing and oil seal may be caused by: (1) Excessive run-out of flywheel face (2) Excessive run-out of converter pump hub (3) Misalignment of converter housing.

When any of these conditions are encountered and there is any doubt as to their true cause, check the flywheel, converter pump and converter housing as follows:

1. Check run-out of flywheel face as described in paragraph 2-26 and make required corrections before proceeding further.

2. Install converter pump and cover on flywheel and tighten mounting bolts to 25-30 ft. lbs. torque. Install converter housing on crankcase.

3. Prepare a special dial indicator clamp by welding a piece of  $\frac{5}{16}$ " x 3" drill rod to a 1" C-clamp. Use the special clamp and Sleeve KMO-30-K to mount Dial Indicator KMO-30-B

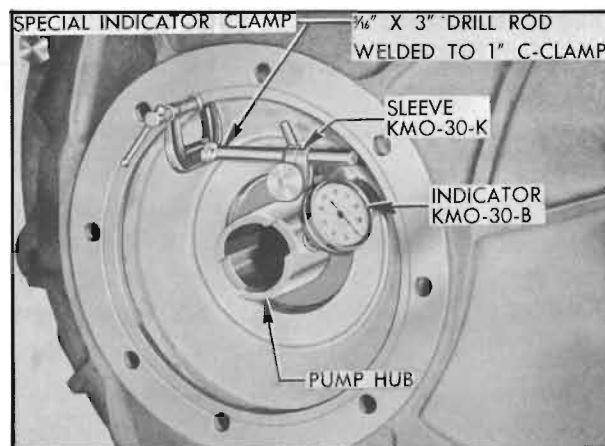


Figure 5-66—Checking Run-Out of Converter Pump Hub

so that indicator stem bears against the pump hub as shown in Figure 5-66.

4. Turn flywheel and note indicator reading. Run-out of pump hub should not exceed .012". If run-out exceeds .012", replace pump and re-check run-out.

5. Attach the special dial indicator clamp to the oil pump driving lug on rear end of converter pump hub. **CAUTION: Do not clamp to bearing surface on hub.** Mount Dial Indicator KMO-30-B to bear against rear face of housing at a radius of  $3\frac{3}{4}$ ". See Figure 5-67.

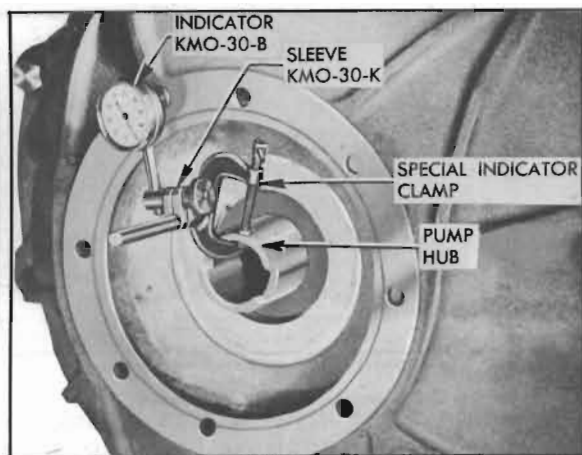


Figure 5-67—Checking Run-Out of Rear Face of Bell Housing

6. Turn flywheel, making sure that crankshaft end thrust is held in one direction, and note run-out of housing face as shown by dial indicator. Run-out should not exceed .005".

7. If run-out of housing face exceeds .005", cement paper shims of proper thickness to rear face of crankcase to bring run-out of housing face to .005" or less, with all bolts securely tightened.

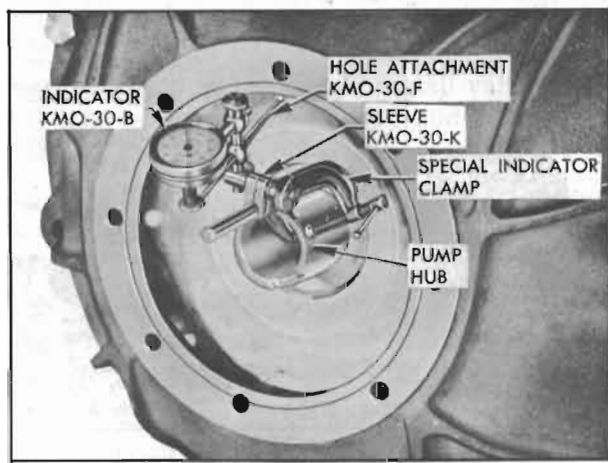


Figure 5-68—Checking Run-Out of Bell Housing Pilot Hole

8. Mount dial indicator and Hole Attachment KMO-30-F to bear against inner edge of pilot hole in housing. See figure 5-60. Run-out of pilot hole should not exceed .004".

9. If run-out of pilot hole exceeds .004", remove housing, remove the two dowels, and reinstall housing, leaving bolts just loose enough to permit shifting housing by tapping with a lead hammer.

10. Set up dial indicator as shown in figure 5-68 and bring pilot hole of housing within

.004" run-out by tapping in required direction with lead hammer. If it is not possible to move housing far enough, remove housing and drill bolt holes with 1/2" drill. When housing is placed so that pilot hole run-out is .004" or less, tighten all bolts securely.

11. Ream the two dowel holes through housing and crankcase, using Ratchet J 808-6 with tapered Reamer J 2548-3 (1 1/32") until this reamer bottoms in hole, then finish with bottoming Reamer J 4710-6 to provide full size to bottom of hole.

12. Remove converter housing and install oversize dowels J 808-5 in crankcase.

## 5-17 DISASSEMBLY, INSPECTION, ASSEMBLY OF VALVE AND SERVO BODIES

### a. Disassembly of Valve Body

**CAUTION:** The valves have sharp edges which can cut fingers if improperly handled. As these parts are removed wrap them separately in clean cloths to avoid damage through contact with other parts.

1. Remove nut and lockwasher which attaches the lower valve operating lever and linkage adjusting lever to the upper lever shaft and remove levers.

2. Remove safety nuts and washers from studs, then lift the valve body and gasket from servo body. Remove shift control valve from valve body. Check gasket for evidence of oil leakage.

3. Remove the rear pump delivery check valve and spring from servo body to avoid losing these nuts.

4. Remove the large pressure regulator valve plug from valve body, using care because of the heavy spring pressure behind the plug. Remove the two springs and spring seat. See figure 5-72.

5. Remove the small valve plug and remove the pressure regulator valve from body.

6. Remove valve body plate and gasket, then remove the front pump delivery check valve and spring. Check gasket for evidence of oil leakage.

### b. Disassembly of Servo Body

1. Remove servo body spacer plate attaching screw at reverse servo which is in line with the

low servo then place a 1"x1"x13" wooden block across the low and reverse servo spring seats. See Figure 5-69.

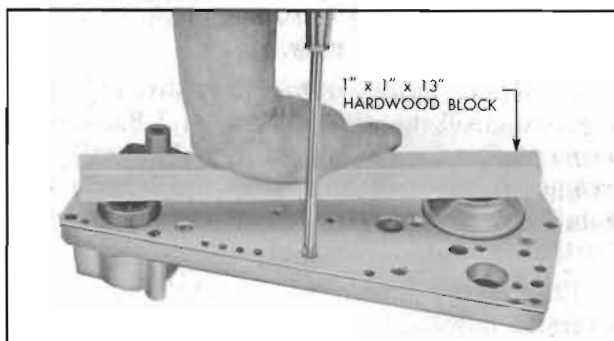


Figure 5-69—Removing Servo Body Spacer Plate

2. Hold the block down firmly while removing the remaining spacer plate attaching screws, then carefully release pressure on block to allow servo springs to expand. This operation must be done carefully to avoid springing the spacer plate or letting the servo springs fly out. Remove spacer plate and gasket. Check gasket for indication of oil leakage.

3. Remove reverse and low servo piston spring seats, springs and pistons. Remove check ball from reverse servo feed channel. See figure 5-63.

#### c. Cleaning and Inspection of Valve and Servo Parts

1. Thoroughly wash valve and servo bodies with clean solvent, dry and blow out all passages with air. Wash other parts and dry thoroughly.

2. Carefully inspect bodies for cracks, damage to gasket surfaces, scores in piston and valve cylinders, or other damage which would render these parts unfit for use.

3. Inspect surfaces and shoulders of shift control valve and pressure regulator valve. Surfaces must be free of nicks, scores, or deep scratches. A valve must be replaced if the sharp edges of shoulders are marred or rounded because such conditions will permit fine particles of foreign matter to work in between the part and the body and cause sticking. Check valves on surface plate and replace if bent.

4. Worn or damaged piston seals should be replaced. When a new seal is installed on a piston make sure that the lip fits over the smaller diameter land. See Figure 5-70.

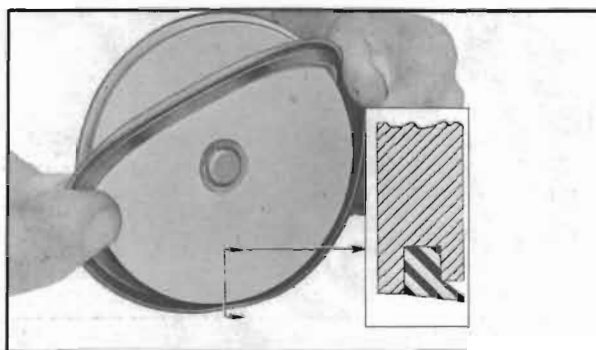


Figure 5-70—Installation of Servo Piston Seal

5. Thoroughly clean oil screen and check for any cracks or holes which would allow dirt to pass through.

#### d. Assembly of Servo Body

1. Oil and install the low and reverse servo piston assemblies in servo body. To avoid curling or damaging edge of piston seal, start each piston into cylinder at an angle then turn piston slightly as it is straightened and pushed into cylinder. See Figure 5-71. Check pistons for free movement in cylinders.

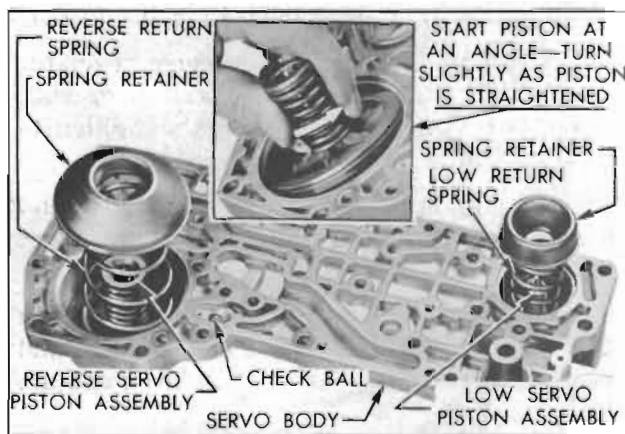


Figure 5-71—Parts Installed in Servo Body

2. Install the small return spring against the low servo piston. Install the large return spring with the large end against the reverse servo piston. Place spring seats on upper ends of both springs. See Figure 5-71.

3. Place check ball in reverse servo feed channel. See Figure 5-71.

4. Install a new spacer plate gasket and place spacer plate in position over spring seats. Place a 1"x1"x13" wooden block across spring seats to compress the springs while installing the spacer plate screws (fig. 5-69). Tighten screws



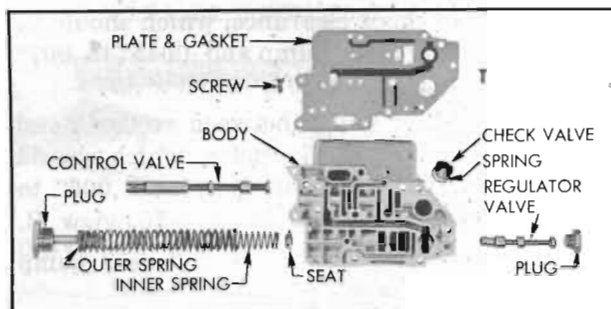


Figure 5-72—Valve Body Disassembled

uniformly to avoid distorting spacer plate.

#### e. Assembly of Valve Body

1. Place front pump delivery check valve spring in body with large end down and place check valve on spring with ridged side up. See Figure 5-72.

2. Install valve body plate and a *new* gasket, making sure that check valve is seated against plate and is not caught under gasket.

3. Place the pressure regulator spring seat on the inner spring, then install spring seat, inner and outer springs and the large plug in valve body. Tighten plug to 20-25 ft. lbs. torque.

4. See that oil orifice in pressure regulator valve end land is clear, then install valve with this land outward. Install plug and tighten to 20-25 ft. lbs. torque.

5. Install shift control valve with slotted end on same end of valve body as the large pressure regulator plug.

6. Install rear pump delivery check valve in its seat in servo body, ridged face inward, and place valve spring on valve with large end up.

7. Install a *new* gasket and the valve body on servo body, using care to keep pump delivery check valve spring below the gasket, then install plain washers and safety nuts on two studs adjacent to the control valve. Tighten stud nuts evenly to 11-15 ft. lbs. torque.

8. Insert valve operating upper lever shaft through bearing in servo body. With upper lever pointing toward the reverse servo, place lower lever with linkage adjusting lever on shaft so that forked end of lower lever engages shift valve pin, then install lockwasher and nut.

9. See paragraph 5-23 (g) for installation of valve and servo bodies.

## 5-18 DISASSEMBLY, INSPECTION, ASSEMBLY OF REACTION SHAFT FLANGE AND OIL PUMPS

### a. Disassembly of Front Oil Pump and Reaction Shaft Flange

1. Remove high and low accumulators from reaction shaft flange, using care to prevent the retaining pin and check ball from dropping out of high accumulator and being lost. Check gas-kets for indication of oil leakage.

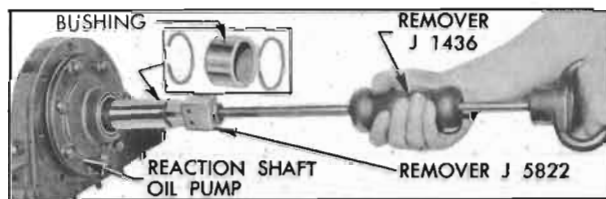


Figure 5-73—Removing Input Shaft Bearing

2. Inspect the input shaft bushing in front end of reaction shaft. If bushing is damaged or excessively worn, remove outer retaining ring and then remove the bushing, using Remover J 5822 installed on Remover J 1436. See Figure 5-73. Oil pump must be in place to support the reaction flange during bushing removal.

If inner retaining ring remained in place in shaft make sure it is firmly seated in its groove; otherwise replace it.

3. Check front oil pump bolts to make sure they are tight. Loose bolts would be the cause of oil leakage around the pump. Remove front oil pump body and gears, tapping body lightly with mallet to free it, if necessary.

4. Remove front oil pump cover and gasket from reaction shaft flange, and check gasket for evidence of oil leakage.

5. If the check ball located in clutch feed passage of reaction shaft flange is free to drop out, remove ball to avoid loss in handling parts. Do not remove if securely retained by peened edge of hole.

### b. Cleaning and Inspection of Front and Rear Oil Pumps

1. Wash pump parts in clean solvent and dry thoroughly.

2. Check mounting faces of pump bodies, gears, front pump cover and rear pump cover plate for excessive wear.

3. Inspect front oil pump bushing. If bushing



is loose or excessively worn replace the pump assembly.

4. If front oil pump bushing is loose or excessively worn, or pump was noisy always check for flywheel run-out, converter pump hub run-out, and misalignment of converter housing as described in paragraph 5-16.

5. Inspect the front pump oil seal but replace it only if there is definite evidence of leakage or damage. Drive out defective seal with a punch. Lightly coat outside of new seal with No. 3 Permatex, start seal squarely into pump body with deep groove in seal retainer outward and tap into place with hardwood block and mallet. Wipe off excess Permatex.

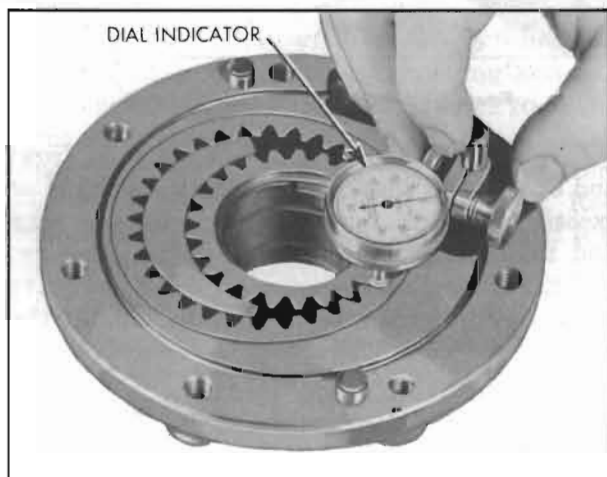


Figure 5-74—Checking End Clearance of Gears in Pump Body

6. Check pump gear end clearance by mounting dial indicator on support, J-1013. Place indicator support on pump body so that the indicator button bears on body and set indicator at zero. Then rotate the support and indicator, keeping the support on the pump body and indicate each pump gear. The indicator readings for the front pump should be .001 to .0025 and rear pump .001 to .002. See Figure 5-74.

7. Insert feeler gauge between crescent and

driven gear to check clearance, which should be .005" to .009" on front pump and .0045" to .007" on rear pump. See Figure 5-75, view A.

8. Insert feeler gauge between crescent and driving gear to check clearance, which should be .010" to .016" on front pump and .006" to .012" on rear pump. See figure 5-75, view B.

9. Check front pump cover and rear pump cover plate for depth of wear caused by the gears. Replace the part if depth of wear exceeds .001" or surface is scored.

#### c. Cleaning and Inspection of Reaction Shaft Flange

1. Wash flange in clean solvent, dry thoroughly and blow out all passages with air.

2. Inspect surfaces of reaction shaft flange and transmission case for nicks or burrs and remove with mill file.

3. Inspect race for clutch drum roller bearing on rear end of reaction shaft. If this bearing surface is worn excessively or scored, replace reaction shaft flange.

**NOTE:** If reaction shaft flange is replaced, stamp transmission identification number in lower edge of new part in same place as on original flange. See figure 5-1.

4. Check all studs for tightness and replace any with damaged threads. If stud threads are stripped in reaction shaft flange, it will be necessary to tap out the hole for installation of step studs which are available. The  $\frac{5}{16}$ "-18 step studs have a  $\frac{3}{8}$ "-16 thread on the flange end, while the  $\frac{3}{8}$ "-16 step studs have a  $\frac{7}{16}$ "-14 thread on the flange end.

5. Inspect the oil sealing rings on hub of reaction shaft flange and replace if damaged in any way.

#### d. Assembly of Front Oil Pump and Reaction Shaft Flange

1. If old input shaft bushing was removed, first make sure that inner retaining ring is firmly seated in groove in reaction shaft, then install a new bushing using Installer J 5816. Support shaft on wooden block to avoid damage and drive bushing into place with light hammer until shoulder of tool contacts reaction shaft. See figure 5-76. Install outer retaining ring.

2. Install check ball in clutch feed passage if ball was removed, then install a new gasket and

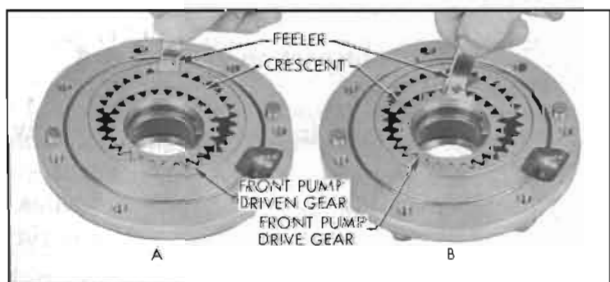


Figure 5-75—Checking Clearance Between Crescent and Gears

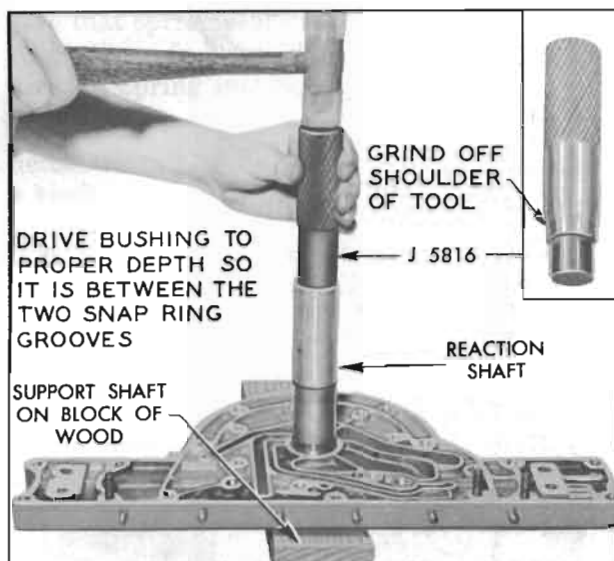


Figure 5-76—Installing Input Shaft Bushing

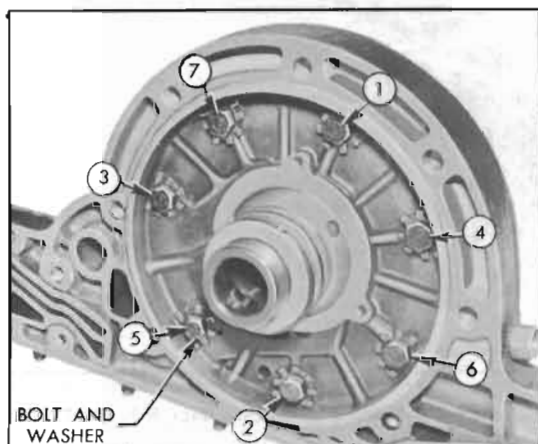


Figure 5-77—Front Oil Pump Tightening Sequence

the pump cover on reaction shaft flange.

3. Lubricate and install gears in front pump body. The driving gear must be installed with the beveled side outward so that this side will be against the cover when pump is installed. See figure 5-75. *Reversing this gear in pump body will result in severe damage to the transmission.*

4. Install oil pump on cover so that the two dowel pins and the bolt holes match holes in cover, then install bolts with lockwashers. Tighten bolts to approximately 5 ft. lbs. torque in the sequence shown in figure 5-77 and then tighten in same sequence to 25-30 ft. lbs. Bend a tang of each lockwasher up against flat of bolt head. Tighten cover attaching stud nut to 25-30 ft. lbs. torque.

5. See paragraph 5-23 (f) for installation of front pump and reaction shaft flange assembly.

### 5-19 DISASSEMBLY, INSPECTION, ASSEMBLY OF ACCUMULATORS

1. Remove retaining pin and check ball from high accumulator body. The low accumulator does not have the check ball.

2. Remove the pipe plug, cap, gasket, spring (2 in low) and piston from accumulator body. Keep parts separated so that same parts will be reinstalled in same body. See figure 5-78.

3. *On high accumulator only*, remove clamp bolt, lever, bearing with seal, gasket, thrust washer and control valve crank from accumulator body, then remove valve stop with gasket, control valve and spring. See figure 5-78.

4. Wash accumulator parts in clean solvent, dry thoroughly, and blow out all passages with air. Examine all parts of each accumulator for excessive wear, scoring, or other damage.

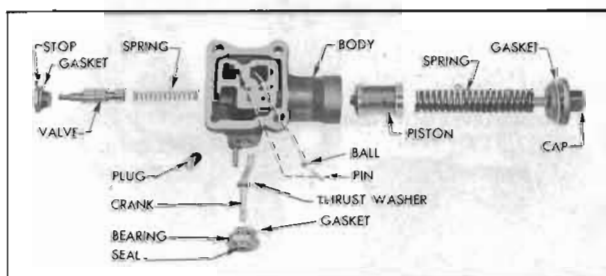


Figure 5-78—High Accumulator—Disassembled

5. Remove any nicks or burrs from pistons or valve with an Arkansas stone; however, *do not round the sharp edges of lands on pistons and valves*. If the sharp edges are marred or rounded foreign particles may wedge between the part and the body and cause sticking.

6. With parts clean and dry, install pistons and check for free sliding as body is tipped back and forth.

7. Check mounting surface of body with a straight edge. If surface is uneven it may be trued up by moving body in a circular motion over emery cloth placed on a surface plate. Thoroughly wash body to remove all traces of emery.

8. If the body or piston is worn or damaged, or piston does not slide freely in body after all burrs are removed, replace accumulator assembly. The body and piston are not furnished separately for service replacement.

9. Lubricate each piston and install it in the accumulator body from which it was removed.

**5-54 DISASSEMBLY OF UNITS****TWIN TURBINE TRANSMISSION**

Start piston squarely into body; *do not tap or force it into body.*

10. Install proper piston springs in each body. The high accumulator uses one heavy spring approximately  $4\frac{5}{16}$ " long. The low accumulator uses one shorter heavy spring and one inner spring. Install caps with new gaskets but these will be tightened later—*do not clamp accumulator in vise to tighten cap.*

11. *On high accumulator only*, install spring, control valve and stop, then install crank with thrust washer, bearing with new gasket and seal (grooved side inward), operating lever and clamp bolt. See figure 5-78.

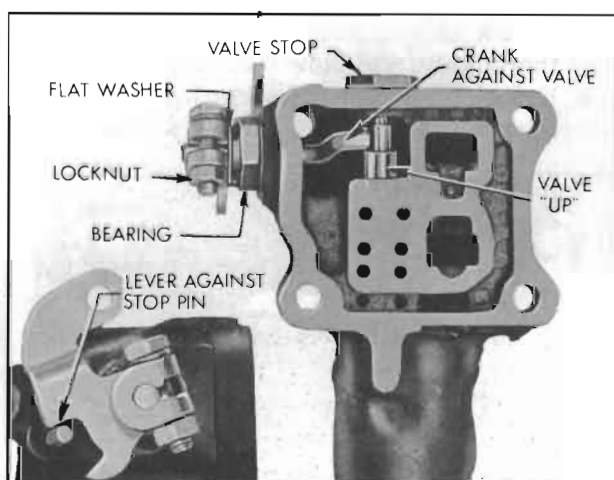


Figure 5-79—Valve Operating Lever Adjustment

12. Adjust operating lever on crank so that lever contacts its stop and the crank contacts the valve with valve in extreme upper position, then tighten the clamp bolt. See figure 5-79.

13. Install pipe plugs in both accumulator bodies and install check ball and retaining pin in the high accumulator body. See figure 5-78.

14. See paragraph 5-23 (f) for installation of accumulators.

## **5-20 DISASSEMBLY, INSPECTION, ASSEMBLY OF CLUTCH**

### **a. Disassembly of Clutch**

1. Remove reaction gear flange retainer ring with screwdriver and remove the 6 flange driving keys with pointed tool. See figure 5-80.

2. Remove the low range reaction gear, thrust washer, clutch hub, and 12 clutch plates from drum. See figure 5-80.

3. Install Clutch Spring Compressor J 2590

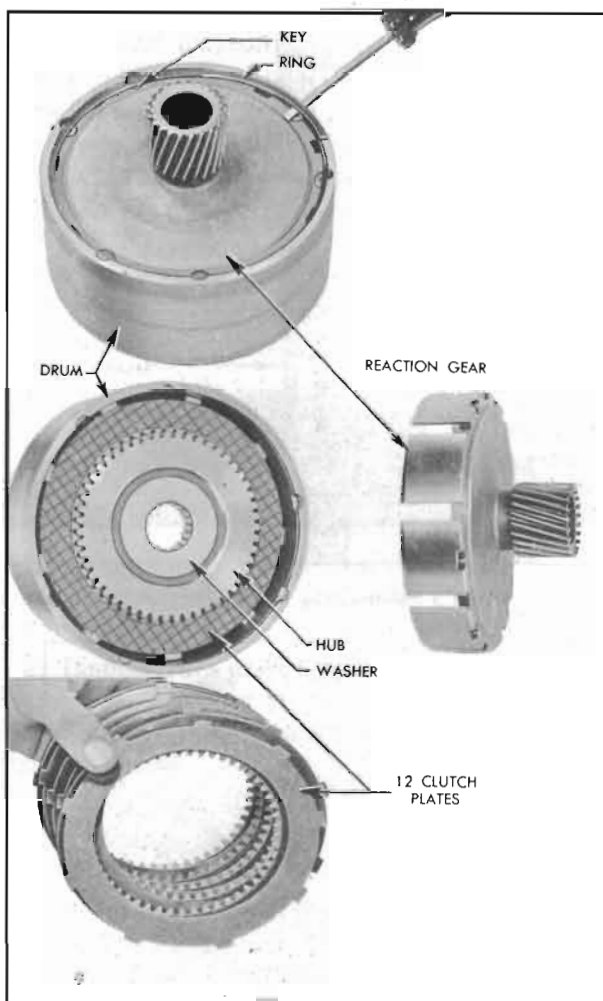


Figure 5-80—Removal of Reaction Gear, Hub, and Plates

in assembled drum, placing the slot in compressor ring over the ends of spring seat retaining ring. Compress clutch spring sufficiently to remove the retaining ring. See figure 5-81.

4. Release pressure on clutch spring, making

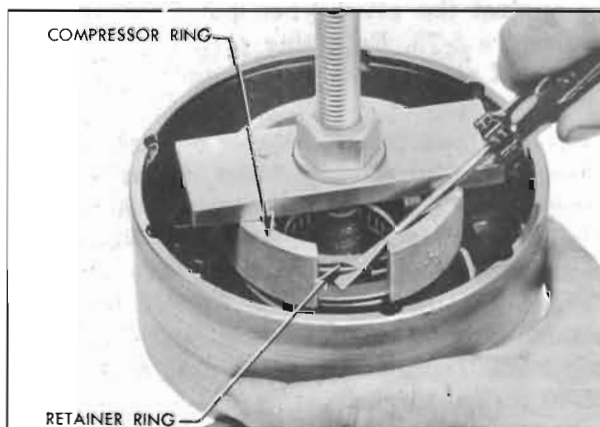


Figure 5-81—Using Clutch Spring Compressor J 2590

sure that spring seat does not engage retaining ring groove in drum, then remove spring compressor, spring seat and spring.

5. Remove piston from drum. It may be necessary to rap the open end of drum against a block of wood to remove the piston.

#### b. Cleaning and Inspection of Clutch and Input Shaft

1. Wash all parts in clean solvent and dry thoroughly. Use only gasoline or kerosene to clean clutch plates and bands—DO NOT use any chemical degreasers or other commercial solvents.

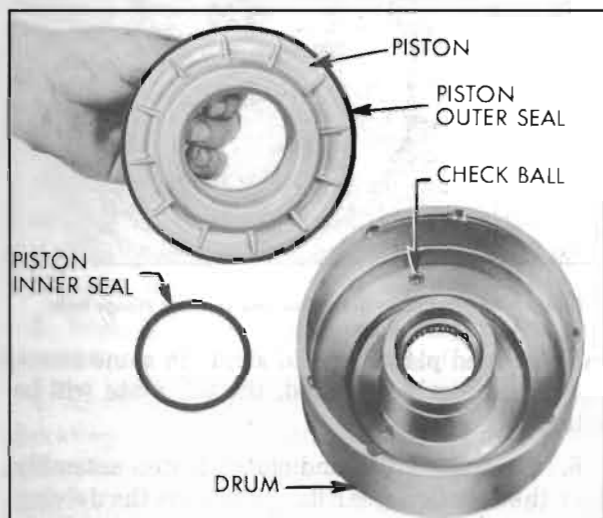


Figure 5-82—Removal of Clutch Piston and Oil Seal

2. Inspect all clutch plates and replace any that are scored, burned, warped or worn excessively. Check fit of any new internally splined plates on clutch hub to make certain that they slide freely on hub. Tight plates will prevent full disengagement of the clutch.

3. Inspect drum for cracks or scores. Inspect oil seal on hub of drum and replace it if damaged.

4. Inspect clutch piston outer seal and replace if hardened, broken, or has turned edges. Install new seal with lip extending over the smaller diameter land of piston. See figure 5-83.

5. Make sure that small bleed hole in drum is open and that check ball is staked in place but free to move in recess. If needle bearing in drum is excessively worn or scored carefully remove it and install a new one, using Installer J 5191. This tool will locate bearing flush with shoulder in drum. Place numbered end of bear-

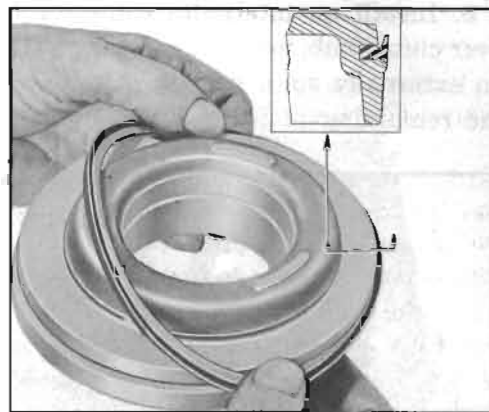


Figure 5-83—Replacement of Clutch Piston Outer Seal

ing, which is hardened, toward shoulder of tool to avoid distortion of cage.

6. Inspect the low band. If band lining is worn smooth so that the grooves are gone replace the band.

7. Inspect input shaft splines, bearing surfaces and oil seal rings. Replace either part if excessively worn or damaged.

#### c. Assembly of Clutch

1. Apply light oil to the piston outer seal and the inside of drum, then install piston carefully to avoid distorting or turning the lip of seal. When piston is fully installed in drum, the top of piston will be approximately flush with the shoulder on inside of drum.

2. Place clutch spring in piston and place spring seat and seat retaining ring on spring. Install Clutch Spring Compressor J 2590 (fig. 5-73) and compress spring until the retaining ring can be snapped into the groove in hub of drum, then remove the spring compressor.

3. Place reaction gear on bench with flange upward, then install clutch hub thrust washer and clutch hub over the hub of reaction gear, with open end of clutch hub facing up. See Figure 5-84.

4. Separate the internally splined (faced) clutch plates from the externally splined (plain steel) clutch plates. Internally splined plates are flat and may be installed in either direction. Externally splined plates are "dished" and all these plates must be installed with the "dish" in the same direction; however, the "dish" may be either up or down. Check each plate for "dish" with a straight edge, Figure 5-85, and stack plates so that all are "dished" in same direction.

5. Install an internally splined clutch plate over clutch hub, next to gear flange, then install an externally splined plate. Alternately install the remaining plates, making sure that exter-

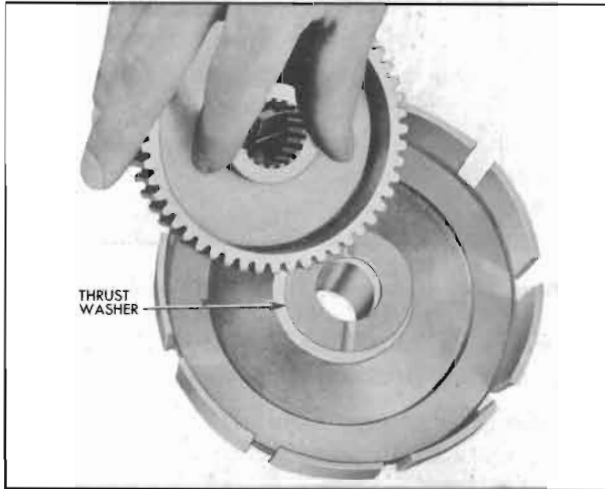


Figure 5-84—Installing Thrust Washer and Clutch Hub in Reaction Gear

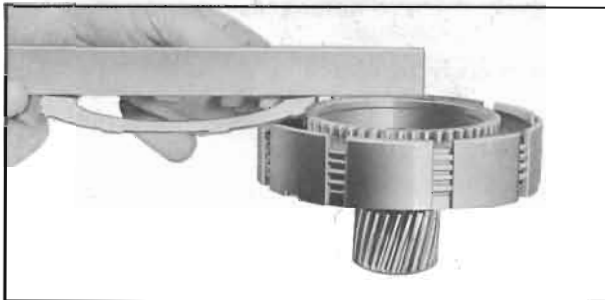


Figure 5-85—Checking "Dished" Side of Externally Splined Clutch Plate

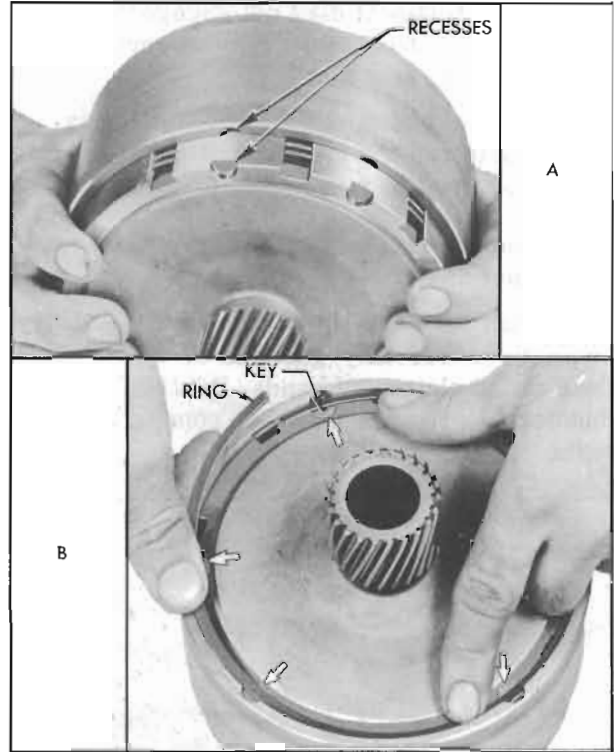


Figure 5-86—Installing Drum Over the Reaction Flange Gear

nally splined plates are "dished" in same direction. If properly installed, the top plate will be externally splined.

6. Place the drum and clutch piston assembly over the reaction gear flange so that the driving key recesses in drum and flange are approximately aligned. See Figure 5-86, view A. Press the drum evenly into place over the reaction gear flange.

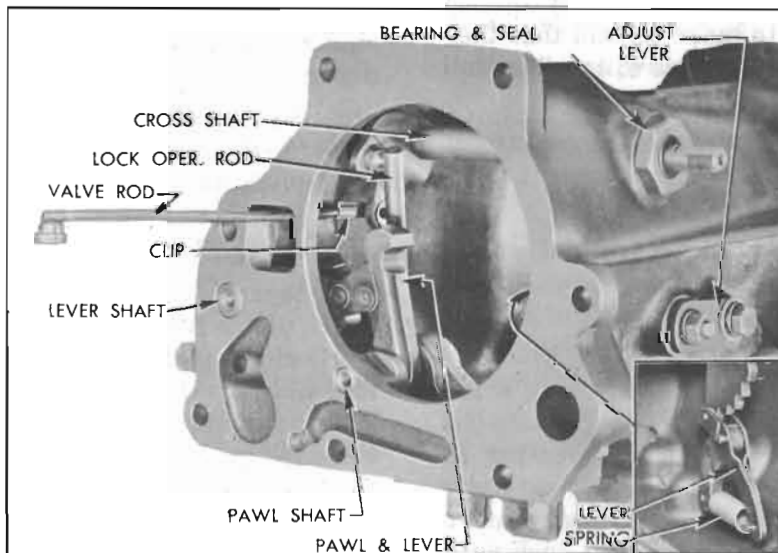


Figure 5-87—Parts in Rear Bearing Retainer



7. Complete the alignment of driving key recesses by tapping the reaction gear flange, then install the 6 driving keys and the reaction gear flange retainer ring. See Figure 5-86, view B.

8. See paragraph 5-23 (e) for installation of clutch and input shaft.

## 5-21 DISASSEMBLY, INSPECTION, ASSEMBLY OF REAR BEARING RETAINER, TORQUE BALL, AND UNIVERSAL JOINT

### a. Disassembly of Rear Bearing Retainer

1. Remove spring from detent roller lever and support inside the rear bearing retainer, remove adjusting lever on outside of retainer, then remove lever and support assembly. See Figure 5-87.

2. Disconnect the parking lock operating rod from the cross shaft by unscrewing the rod end from cross shaft lever. The rod end is provided with a lockwasher. See Figure 5-87.

3. Push clip from valve operating rod to remove clip and rod from cross shaft.

4. Screw a  $\frac{1}{4}$ "-20 bolt into the parking lock operating lever shaft and the lock pawl shaft and pull these parts from bearing retainer, then remove the lock pawl and lever assembly. See Figure 5-87.

5. Remove cross shaft bearing, using a box wrench; *a socket which does not fully engage bearing, or an end wrench will distort the bearing*. Remove the cross shaft.

### b. Cleaning and Inspection of Rear Bearing Retainer Parts

1. Wash all parts in clean solvent and dry thoroughly.

2. Inspect valve operating cross shaft and bearing for excessive wear. Remove the rubber seal from bearing and discard it.

3. Inspect the rear bearing for roughness or excessive wear.

4. Inspect the parking lock pawl and ratchet wheel for cracks and worn teeth that would prevent positive locking.

5. If any parking lock parts need to be replaced, remove the retainer and separate the parts. When reassembled, the parts must be located as shown in Figure 5-88.

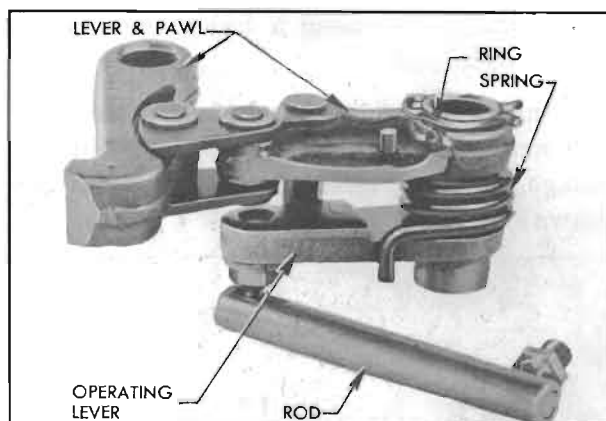


Figure 5-88—Parking Lock Pawl and Lever Assembly

### c. Inspection and Repair of Universal Joint and Torque Ball Parts

1. Inspect universal joint for wear and play between spider pins and the bushings. Allowable play is .002" to .004".

2. Check fit of universal joint yokes on the output and propeller shafts. Allowable backlash of rear yoke on propeller shaft splines is .0005" to .0045". The front yoke must be a tight fit, rotatively, on output shaft to prevent "snap" when alternating car movement between forward and reverse.

3. Inspect rear yoke of universal joint. Rear yoke and bushing in torque ball must be free of scores and not worn excessively; clearance between these parts should be .004" to .006".

4. Clean and inspect spherical surfaces of both retainers and rubber on torque ball. If these are scored, pitted or torn the parts should be replaced. See paragraph 4-12 for procedure for removing and installing torque ball.

### d. Assembly of Rear Bearing Retainer

1. Install the valve operating cross shaft, and cross shaft bearing. Install a *new* seal in the bearing, with grooved side facing inward.

2. Install parking lock pawl and lever assembly in rear bearing retainer, then install the lock pawl shaft and operating lever shaft with tapped ends outward. See Figure 5-87.

3. Attach valve operating rod with retainer clip to cross shaft lever and snap clip into place over the rod.

4. Connect parking lock operating rod to

**5-58 ASSEMBLY OF TRANSMISSION****TWIN TURBINE TRANSMISSION**

cross shaft lever, using a lockwasher on the threaded rod end.

5. Install detent lever and support assembly with *new* seal in groove of shaft, then install linkage adjusting lever on shaft with nut and lockwasher.

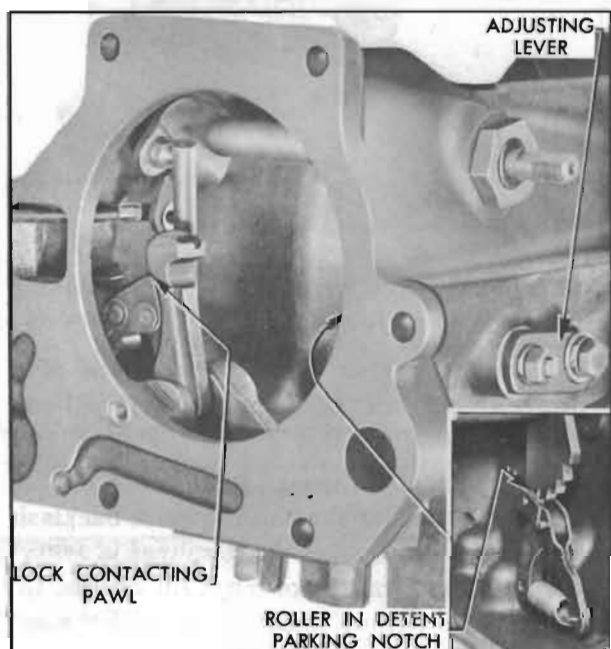


Figure 5-89—Shift Detent Adjustment

6. Attach adjusting lever to bearing retainer with bolt, plain washer and lockwasher, but do not tighten until the following detent adjustment is made.

7. Temporarily install shift lever on cross shaft and shift parking pawl into Parking position. See Figure 5-89.

8. Shift the linkage adjusting lever at slotted end until the pawl lock contacts the parking pawl, then tighten adjusting lever lock bolt, being certain to maintain contact between lock and pawl. See Figure 5-89.

9. Move shift lever back and forth to check detent adjustment. Parking lock must contact parking pawl when detent roller is in deepest portion of parking notch of detent lever and should break contact at same instant that detent roller starts to move toward neutral position.

10. See paragraph 5-23 (d) for installation of rear bearing retainer.

## **5-22 DISASSEMBLY, INSPECTION ASSEMBLY OF PLANETARY GEAR SET AND TRANSMISSION CASE**

### **a. Disassembly of Planetary Gear Set**

1. Remove three planet carrier screws and special lockwashers, using a  $\frac{7}{32}$ " hexagon (Allen) wrench. See Figure 5-90. A used universal joint front yoke may be placed on output shaft and held with a bar while loosening the screws.



Figure 5-90—Removing Planet Carrier Screws

2. Separate the front and rear ends of planet carrier by carefully tapping around the front flange while holding the unit clear of bench.

3. Remove the sun gear rear thrust washer, which may be either on sun gear or stuck in rear end of carrier. Remove reverse sun gear. See Figure 5-91.

4. Remove needle thrust bearing.

5. Remove the 3 low planet pinion assemblies, each consisting of a pinion, shaft, and bearing rollers retained at each end of pinion by steel thrust washers. See Figure 5-91. A retaining ring snapped into a groove in shaft will hold the lower thrust washer in place as shaft is tapped out of carrier. The shaft is prevented from turning in carrier by a  $\frac{3}{32}$ " steel ball imbedded in end of shaft. Do not lose the steel ball.

6. Remove the 3 reverse planet pinion assemblies which are similar to the low planet pinion assemblies and are removed in the same manner.

7. Remove the thrust washers and shafts from pinions, then remove the bearing rollers.

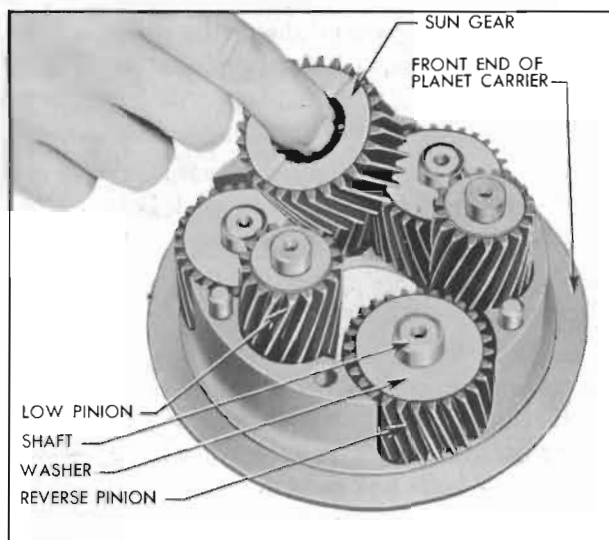


Figure 5-91—Removal of Sun Gear and Planet Pinions

Note that the reverse planet pinions have a single set of rollers and the low planet pinions have two sets of rollers separated by a spacer. See Figure 5-92.

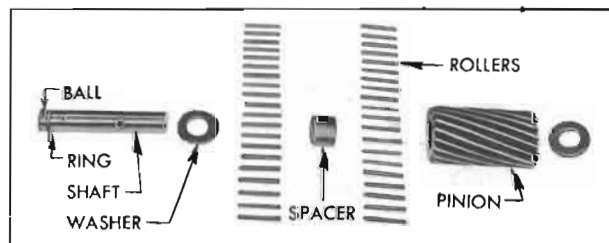


Figure 5-92—Low Planet Pinion, Disassembled

#### b. Cleaning and Inspection of Planetary Gear Set

1. Wash all parts in clean solvent and dry thoroughly.

2. Carefully inspect shaft and rollers for excessive wear. Replace if worn.

3. Inspect reverse ring gear, sun gear, and pinions for wear; remove any nicks or burrs with Arkansas stone.

4. Inspect bushing in rear end of planet carrier, and replace it if worn or scored. The bushing may be removed with Bushing Remover J 3197 and new bushing may be installed, either end first, by using Bushing Replacer J 2996. See Figure 5-93. Reaming to size is not required.

5. Inspect reverse band and replace it if cracked or lining is worn so that grooves are gone. Inspect reverse band anchor for cracks.

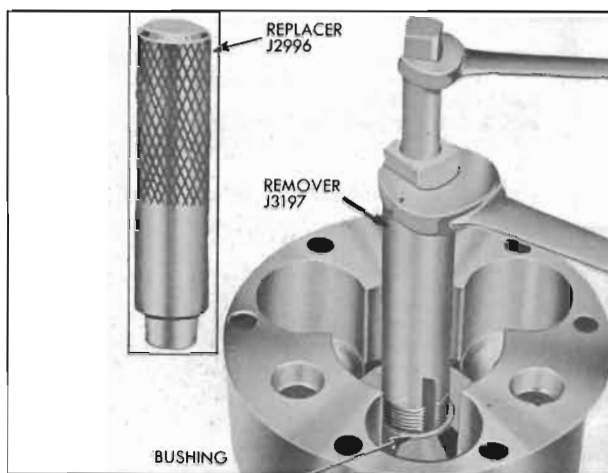


Figure 5-93—Replacing Planet Carrier Bushing

#### c. Cleaning and Inspection of Transmission Case

1. Wash case thoroughly and blow out all passages.

2. Carefully inspect case for cracks, breaks, and stripped threads in bolt holes.

3. Inspect all machined surfaces for nicks or burrs and smooth off with a mill file.

4. Inspect the bushing for wear and scoring. Insert planet carrier into bushing and check clearance with feeler gauge. If clearance is excessive due to wear of bushing, replace the bushing.

5. To remove old bushing, place case over an opening with rear end down and drive bushing from case with Remover J 3175-1. To install new bushing place J 3175-2 in rear oil pump recess of case to serve as a pilot, slip bushing over J 3175-1 and drive bushing into case from front side until bushing is flush with front surface of wall which supports the bushing. Bushing must be installed with the wide deep ends of oil grooves toward rear side of case. See Figure 5-94.

#### d. Assembly of Planetary Gear Set

1. Re-assemble planet pinions and shafts with bearing rollers and thrust washers. The bottom thrust washer goes between retaining ring on shaft and the end of pinion. Each reverse planet pinion contains 24 rollers. Each low planet pinion contains 20 rollers at each end separated by a spacer. See Figure 5-92. Place a thrust washer on upper end of each assembly to hold rollers in place.

2. Make sure that steel ball is embedded in

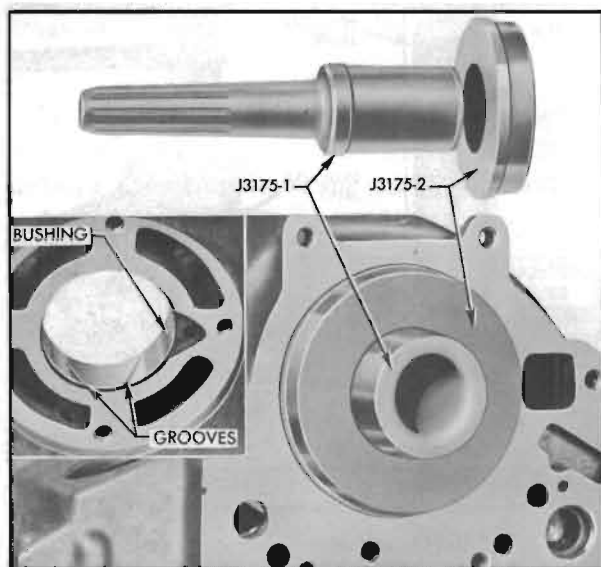


Figure 5-94—Transmission Case Bushing Remover and Replacer J 3175

each shaft to prevent turning in carrier, then install planet pinion assemblies in front end of planet carrier, using care to engage the steel balls in the notches in carrier. See Figure 5-91.

3. Install reverse sun gear and place bronze thrust washer on top of gear and needle thrust bearing on bottom of gear. (Toward Front of Transmission).

4. Install rear end of planet carrier on the assembled front end, making sure that the assembly marks on both parts are in alignment. These marks are numbers which are placed over the parting line during production of the carrier.

5. Install the 3 screws with special lockwashers and tighten to 25-30 ft. lbs. torque with a  $\frac{1}{2}$ " hexagon (Allen) wrench.

6. Install reverse ring gear on planetary gear set.

7. See paragraph 5-23 (b) for installation of planetary gear set.

### 5-23 ASSEMBLY OF TRANSMISSION FROM MAJOR PARTS AND UNITS

#### a. General Instructions

1. Before starting to assemble the transmission make certain that all parts are absolutely clean. Keep hands and tools clean to avoid getting dirt into assembly. If work is stopped before assembly is completed cover all openings with clean cloths.

2. All moving parts should be given a light coating of 10-W oil before installation. Thrust washers may be held in place with vaseline or chassis lubricant, sparingly applied.

3. *Do not take a chance on used gaskets and seals—use new ones to avoid oil leaks.*

4. Use care to avoid making nicks or burrs on parts, particularly at bearing surfaces and surfaces where gaskets are used.

5. It is extremely important to tighten all parts evenly and in proper sequence, to avoid distortion of parts and leakage at gaskets and other joints. *Use a reliable torque wrench to tighten all bolts and nuts to specified torque and in the specified sequence.*

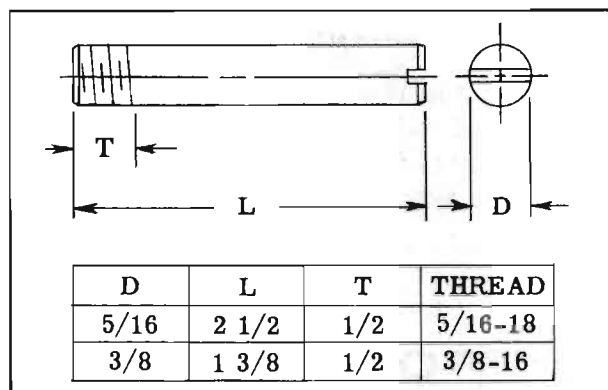


Figure 5-95—Guide Pins

6. Prepare two  $\frac{5}{16}$ "x2 $\frac{1}{2}$ " guide pins and two  $\frac{3}{8}$ "x1 $\frac{3}{8}$ " guide pins with screwdriver slot in plain end, as shown in Figure 5-95. These will be used for alignment of parts during assembly.

#### b. Installation of Planetary Gear Set

1. Install reverse ring gear rear thrust washer in transmission case.

2. Compress ends of reverse band with band installing clip, J-2595 and install in case. When installing band make certain that the heavy side of the band is in the correct position so that it will attach to the reverse anchor and not to the strut. See Figure 5-96. Remove the clip.

NOTE: Reverse band does not have strut locating pins in ends—low band has pins.

3. Rotate the reverse band toward servo opening, insert anchor through opening and engage with hooked end of band, then rotate band and anchor back to normal position.

4. Hold band operating lever (with offset end) in place with strut shoulder toward inside

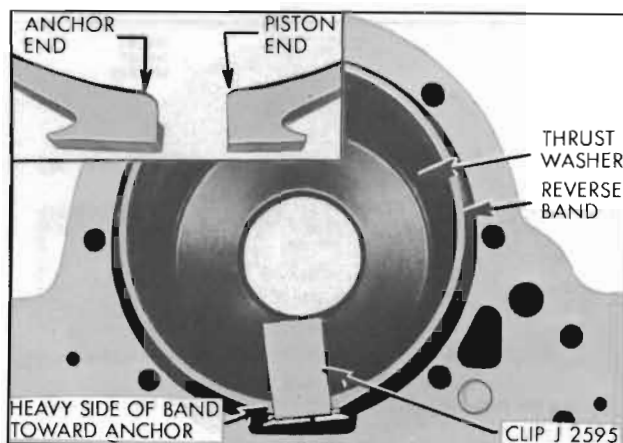


Figure 5-96—Ring Gear Thrust Washer and Reverse Band Installed

of case, and insert anchor shaft through case, anchor, and lever. *Tapped end of shaft must be outward.* If adjustment screw is not centered in servo opening, the low band operating lever has been installed by mistake. See figure 5-97.

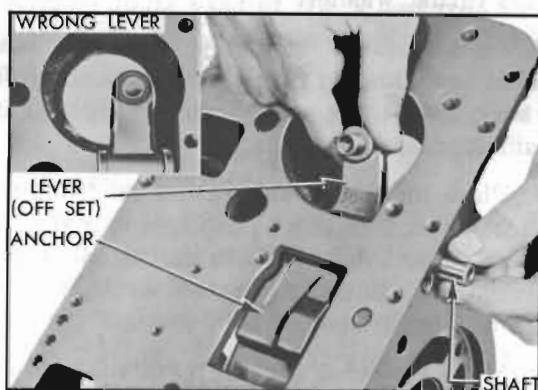


Figure 5-97—Installing Reverse Band Operating Lever and Shaft

5. Install assembled planetary gear set in transmission case.

#### c. Installation of Rear Oil Pump and Lubrication Oil Pressure Regulator Valve

1. Place gasket and rear oil pump plate in recess in transmission case and align the bolt holes, which are not equally spaced.

2. Install oil pump drive key cushion (rubber) and drive key in output shaft, then install driving gear to engage the key. Install old gear in same position as before removal—install a new gear either way. See Figure 5-98.

3. Lubricate both pump gears and pump body, then install driven gear and body over the driving gear and align bolt holes.

4. Install pump bolts with lockwashers, tighten evenly to 5 ft. lbs. torque in sequence

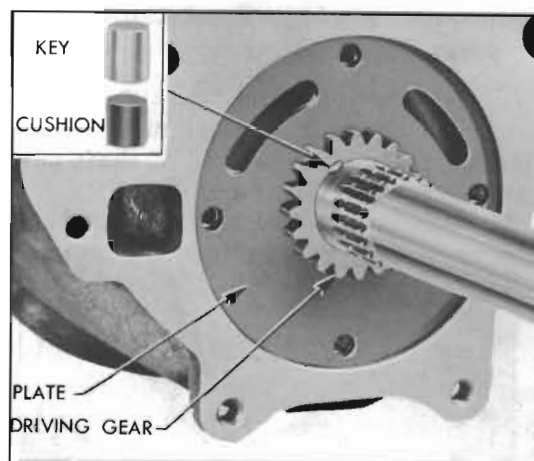


Figure 5-98—Oil Pump Driving Gear and Key Installed

shown in figure 5-99 (A), then tighten in same sequence to 25-30 ft. lbs. torque.

5. Turn output shaft to make sure pump operates freely.

6. Install the lubrication oil pressure regulator valve spring, valve and valve seat in transmission case.

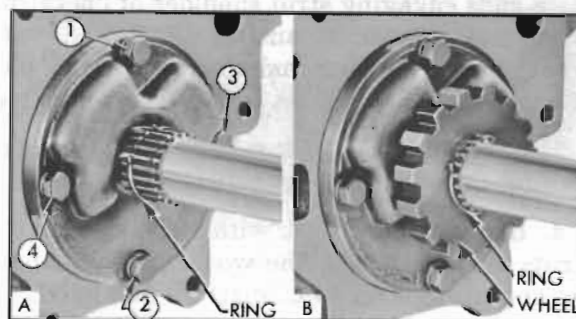


Figure 5-99—Pump Bolt Tightening Sequence—Installation of Ratchet Wheel

#### d. Installation of Parking Lock Ratchet Wheel and Rear Bearing Retainer

1. Install a retaining ring in the forward groove in output shaft, install ratchet wheel, then install retaining ring in rearward groove in output shaft. See Figure 5-99.

2. Install rear bearing horseshoe washer on output shaft.

3. Install rear bearing and rear bearing snap ring in retainer.

4. Install rear bearing retainer and gasket on transmission case. Use lock washers on attaching bolts and tighten bolts evenly to 35-40 ft. lbs. torque.



### e. Installation of Low Band, Clutch, and Input Shaft

1. Install the low band operating lever and shaft. Strut shoulder of lever must be toward inside of case and tapped end of shaft must be outward. See Figure 5-100.

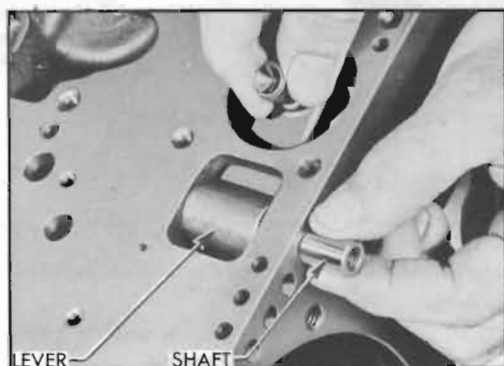


Figure 5-100—Installing Low Band Operating Lever and Shaft

2. With the assembly standing on end of rear bearing retainer, install a wooden block (1"x2"x3½") as shown in figure 5-101. Set both low band struts in position on block, with plain ends engaging strut shoulder of operating lever and groove in anchor shaft and with notched ends together and about ⅜" from wall of case. Spread struts as far apart as possible.

3. Compress ends of low band with Band Installing Clip J 2595 (fig. 5-101).

4. Install band in case with ends between the struts and resting on the wooden block. Apply the operating lever to hold struts and band, remove clips and block, then press band down until the locating pins engage the notches in both struts.

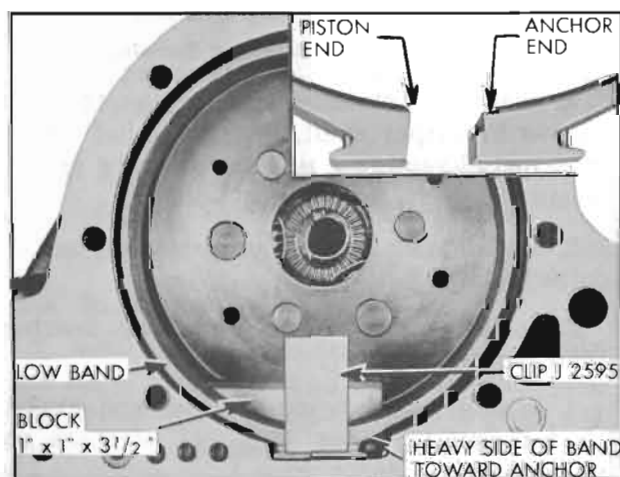


Figure 5-101—Installation of Low Band and Struts

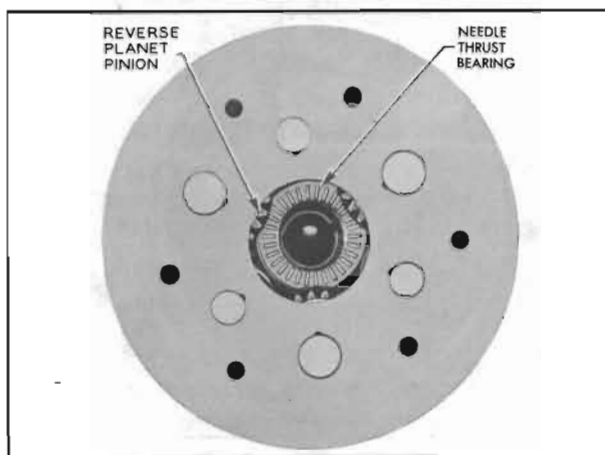


Figure 5-102—Reaction Gear Thrust Washer in Place

5. Reaction gear selective thrust washers (steel) of four thicknesses are furnished under Group 4.161. Select one that measures between .114" and .117" and install it against the needle thrust washer.

6. Install clutch assembly. If drum binds against low band so that clutch does not go all the way down, use a hooked wire to lift the band on side opposite struts.

7. Place bronze thrust washer on front face of clutch hub, then use a flashlight to make sure that all four thrust washers and needle thrust bearing are centrally located so that input shaft can be inserted.

8. Make sure that ends of input shaft oil seal ring are properly locked, then install input shaft. It may be necessary to wiggle the shaft to get it through all four thrust washers and needle thrust bearing.

### f. Installation of Reaction Shaft Flange, Front Oil Pump, and Accumulators

1. Install a ⅝" guide pin (fig. 5-95) in accumulator bolt hole at each end of flange on transmission case. See Figure 5-103.

2. Place reaction shaft flange gasket in position on case so that all holes in gasket and case are aligned. *Gasket can be incorrectly installed.*

3. Install tanged bronze high clutch thrust washer on reaction flange, using chassis lube to hold it in position.

4. Make certain that oil seal rings are on flange hub, then install flange assembly on case using care to avoid damaging oil seal rings. See Figure 5-103.

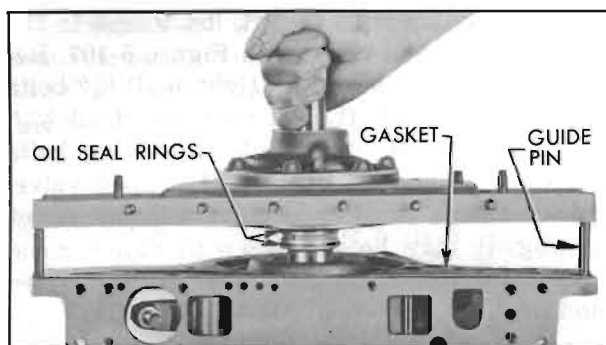


Figure 5-103—Installing Reaction Shaft Flange and Gasket

5. Install 3 special bolts ( $\frac{3}{8}$ "-16x2") with plain washers in positions marked 2, 3, 4 in Figure 5-105. These bolts are for assembly purposes only. Install regular pump cover bolts and lockwashers at positions marked 1, 5, 6. Coat threads of bolts No. 5 and 6 with Permatex No. 3.

NOTE: Bolts used at No. 5 and No. 6 locations are special bolts with captive sealing lock washers.

6. Tighten bolts marked 1 through 4 to 35-40 ft. lbs. and bolts 5 and 6 to 20-25 ft. lbs. in numerical sequence.

7. Thread End Play Gauge J 5804 into rear end of the output shaft and thread Extension Rod J 5808 into a bolt hole in rear bearing retainer. Tighten both tools firmly.

8. Use Clamp KMO-30-G and Sleeve KMO-30-K to mount Dial Indicator KMO-30-B and Extension J 5339 so that the extension bears squarely against the end of Gauge J 5804. See Figure 5-104.

9. Push Gauge J 5804 as far forward as

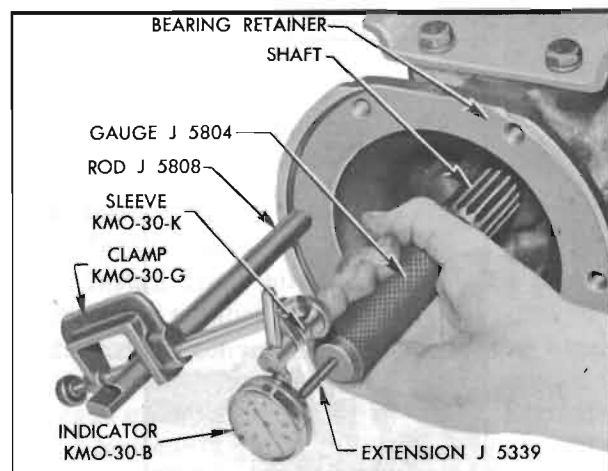


Figure 5-104—Checking Output Shaft End Play

possible, set dial indicator at zero, then pull gauge rearward toward indicator with sufficient force to remove all end play from output shaft. Note indicator reading, which will be between .020" and .040" if output shaft end play is within proper limits.

10. If end play is not within the specified limits, remove reaction shaft flange, clutch assembly, and the thrust washer located between the reaction gear and the reverse sun gear. See Figure 5-102.

11. Measure the thickness of removed thrust washer and substitute another one of proper thickness to bring output shaft end play within specified limits. If end play was *less* than .020" select a *thinner* thrust washer; if end play was *more* than .040" select a *thicker* thrust washer. Reinstall parts and check for specified end play.

12. Place accumulator gaskets in position so that holes match the holes in reaction shaft flange. Install low accumulator on same side as low band operating lever and install high accumulator on opposite side of flange, first

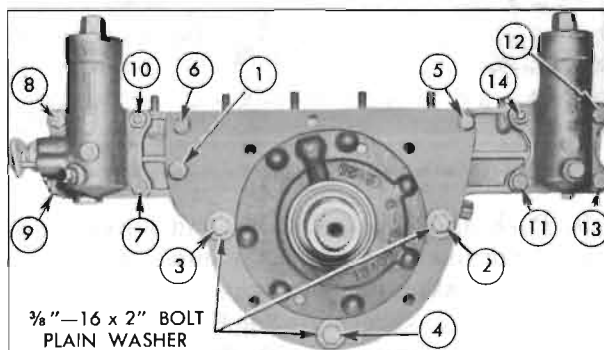


Figure 5-105—Reaction Shaft Flange and Accumulator Bolt Tightening Sequence

making sure that check ball and retaining pin are in place in high accumulator body.

13. Coat accumulator bolt threads with Permatex No. 3 (non-hardening) and install bolts and stud nuts with lockwasher, but do not tighten.

NOTE: "O" ring used under flat washer at No. 9 location.

14. Referring to Figure 5-105, tighten all bolts and nuts (1 through 14) to 5 ft. lbs. torque in the numerical sequence shown. Following the same sequence again, tighten bolts 1 through 4 to 35-40 ft. lbs. and the remaining bolts and nuts to 20-25 ft. lbs.

15. Remove the three special bolts (2, 3, 4)

and tighten accumulator body caps to 40-50 ft. lbs. torque.

16. If edge of flange gaskets projects beyond bottom surface of transmission case, carefully trim it flush, using a sharp knife.

### g. Installation of Valve and Servo Body Assembly, and Oil Pan

1. With transmission laying bottom side up, raise the reverse band operating lever and insert the strut between shoulders on lever and end of band—rounded ends must be against lever and band. **CAUTION:** *Do not lift the lever during the following steps because strut will fall into transmission case.*

2. Install two  $\frac{5}{16}$ " guide pins (fig. 5-95) in transmission case to guide each end of servo body, and install servo body spacer plate gasket over guide pins.

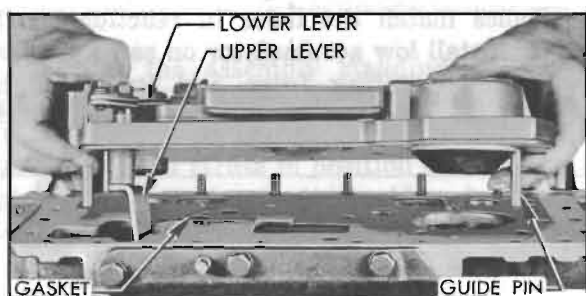


Figure 5-106—Installing Valve and Servo Body Assembly

3. Push shift control valve and lower operating lever inward to align the upper lever with opening in case and install the valve and servo body on transmission case. See Figure 5-106.

4. Install various length bolts with lock-washers according to depth of holes through valve and servo bodies. *Use copper washer on bolt indicated in Figure 5-107.*

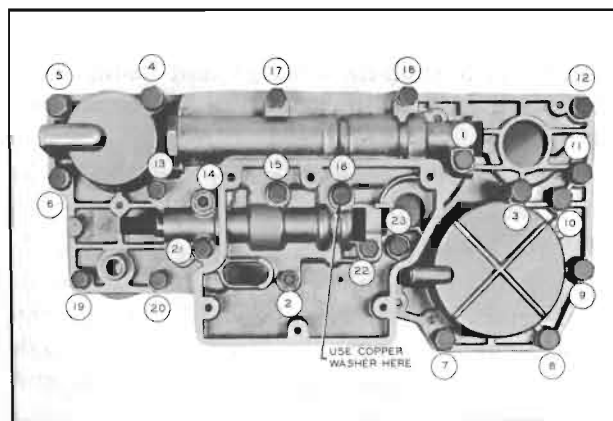


Figure 5-107—Valve and Servo Body Bolt Tightening Sequence

5. Tighten all bolts to 5 ft. lbs. torque in the numerical sequence shown in Figure 5-107. Repeating the same sequence, tighten all  $\frac{1}{4}$ " bolts and nuts to 11-15 ft. lbs. torque and all  $\frac{5}{16}$ " bolts to 15-20 ft. lbs. While tightening bolts and nuts adjacent to the shift control valve, operate the valve to make certain that it is not binding—it may be necessary to adjust some bolts to low limit on torque to prevent valve binding.

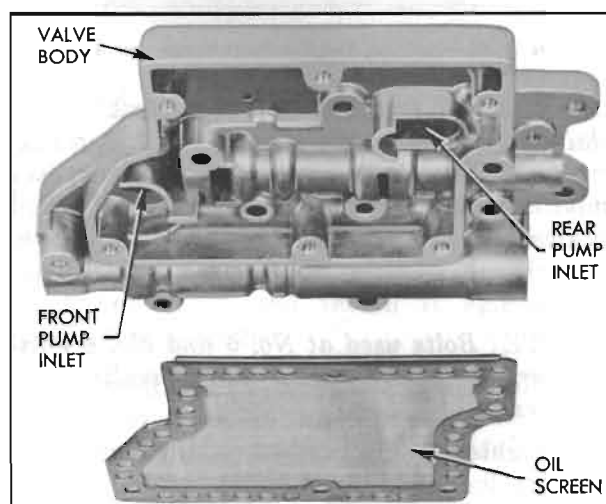


Figure 5-108—Oil Pump Suction Passages

6. Using Linkage Hook-Up Finger J 2591, position the socket of valve operating rod under the ball of valve upper operating lever and pull upward until ball snaps into the socket. See Figure 5-109.

7. Temporarily install the shift lever on cross shaft and operate the valve linkage to make sure it works freely. Move lever toward front of transmission to engage parking lock pawl in the ratchet wheel. Turn output shaft to make certain it is locked.



Figure 5-109—Connecting Valve Operating Rod to Upper Lever

8. Move shift lever to Direct Drive position and note position of control valve. The groove in the first land of the valve should be flush with the boss on the valve body. See Figure 5-110.

9. If valve is not properly positioned in

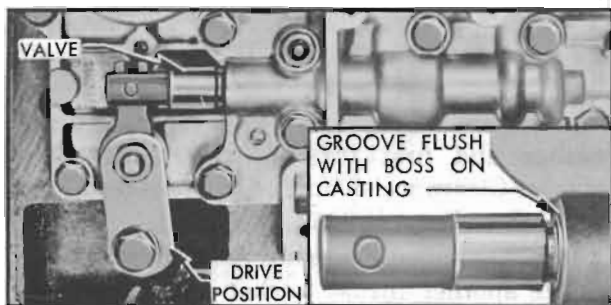


Figure 5-110—Position of Control Valve in Direct Drive Range

valve body, slightly loosen bolts attaching valve body to servo body and shift as required. Bolt holes permit some movement of valve body. Tighten bolts as specified in Step 5.

10. Spread a thin coat of Permatex No. 3 on transmission case only in the area where the case is cut away under the oil pan gasket. This is adjacent to the valve operating lever.

11. Install a  $\frac{5}{16}$ " guide pin (fig. 5-95) at each end of transmission case and install a new oil pan gasket over guide pins. Install oil screen.

12. Install oil pan with bolts and stud nuts provided with lockwashers. Evenly tighten all bolts and nuts to 15-18 ft. lbs. torque.

#### h. Installation of Universal Joint, Torque Ball, and Speedometer Driven Gear

1. Install speedometer driven gear.

2. Install universal joint.

3. Move shift lever to park position and install universal joint bolt, flat washer and lock washer, then torque to 50-55 ft. lbs. **CAUTION:** Be certain that oil hole in bolt is clear.

4. See Par. 4-12 for procedure in installing and tightening torque ball.

#### i. Installation of Converter Housing and Torque Converter

1. Install front oil pump seal ring around pump body against pump cover.

2. Install converter housing, using lockwashers on bolts and stud. Sparingly coat threads of lower right side bolt with Permatex No. 3 because the bolt hole opens into transmission case. Tighten bolts and stud nut evenly to 35-40 ft. lbs. torque.

3. Support converter pump firmly on blocks and carefully place two position stator in proper position, with original spacers and the bearing race between stator and pump hub. *Do not use grease to hold spacers in place.*

4. Carefully lower twin turbine assembly into place.

5. Install Converter Clearance Gauge J 5899 on converter pump flange, making sure that indicator post does not contact the turbine support. Loosen wing screw, firmly press gauge plunger down against first turbine hub and tighten wing screw. See Figure 5-111.

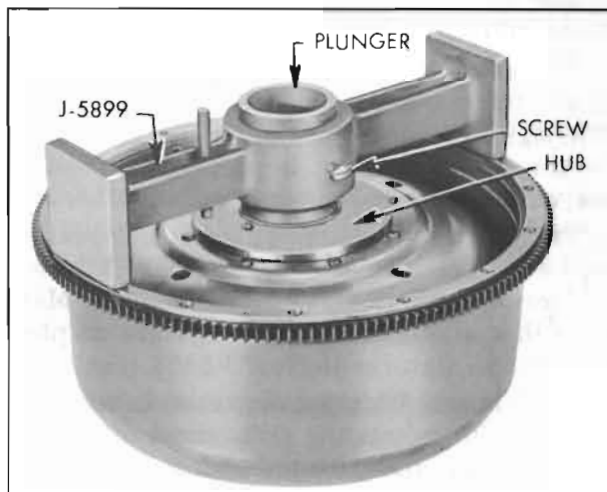


Figure 5-111—Gauge J 5899 on Pump and Turbine

6. Support the converter pump cover firmly on blocks with inner side up and place the bronze thrust washer in its recess. Remove Gauge J 5899 from pump, *invert it*, and center it on the cover so that it rests squarely on the gasket surface. See Figure 5-112.

7. Use Sleeve KMO-30-K to mount Dial Indicator KMO-30-B on the adjustable post of clearance gauge so that indicator button bears

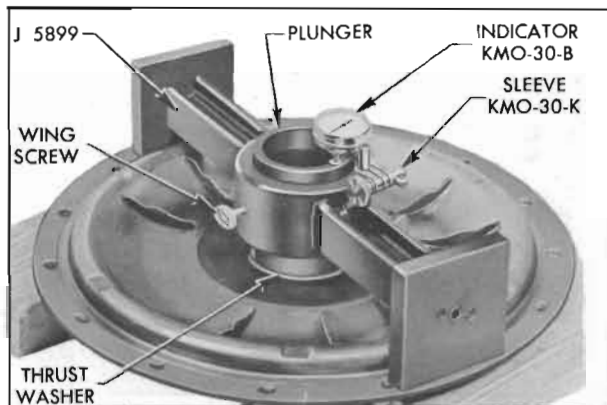


Figure 5-112—Gauge J 5899 on Pump Cover

squarely against the upper end of clearance gauge plunger. Set dial at zero. See Figure 5-112.

8. Loosen plunger wing screw, firmly press gauge plunger down against the thrust washer and note the dial reading. The dial reading is the clearance that will exist between the turbine and pump cover when parts are installed, and should be .004" to .017".

9. If dial reading is not within specified limits, change the total thickness of selective spacers located under the stator. *Increasing* the spacer thickness will *decrease* clearance at cover and decreasing spacer thickness will increase the clearance. Spacers are available in three different thicknesses under Group 4.117.

10. Install the converter pump on reaction shaft, turning it until slots on pump hub enter the lugs in front oil pump driving gear. Make certain that ring gear is properly aligned on roll pins and against pump flange.

11. Coat the selective spacers and bearing race with petroleum jelly so that they will adhere to the stator during installation. Make sure that all rollers and springs are in place and held in stator with Tool J 5806 (fig. 5-46).

12. While holding bearing race and spacers to rear side of stator, slide stator off of installing tool upon the reaction shaft. Make certain that bearing race and spacers remain in place as stator is pushed back against converter pump.

13. Make sure that retaining ring is seated in groove of input shaft, then install the twin

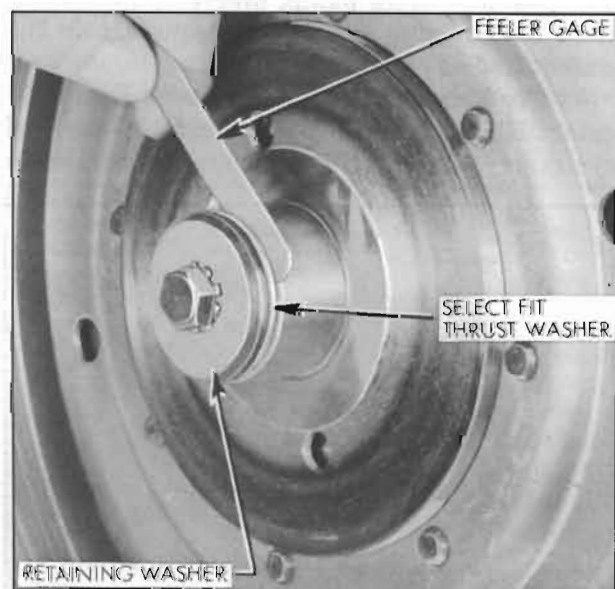


Figure 5-113—Checking Turbine Clearance

turbine assembly, being careful not to *force* sprags onto reaction shaft—rotate assembly clockwise while installing.

14. Install selective thrust washer, retaining washer, and bolt with external tooth lock-washer on front end of input shaft. Shift into "Parking" and pry up on reverse band operating lever with screwdriver to lock input shaft, then tighten bolt to 35-40 ft. lbs. torque.

15. Check clearance between selective thrust washer and first turbine hub, using feeler gauges. Clearance should be between .002" and .009". See Figure 5-113.

16. If specified clearance does not exist, substitute another thrust washer of proper thickness. Two washers of different thicknesses are available under Group 4.127.

17. Refer to Figure 5-114 to determine which three bolt holes to leave empty for later installation of flywheel to pump driving bolts. See Figure 5-106.

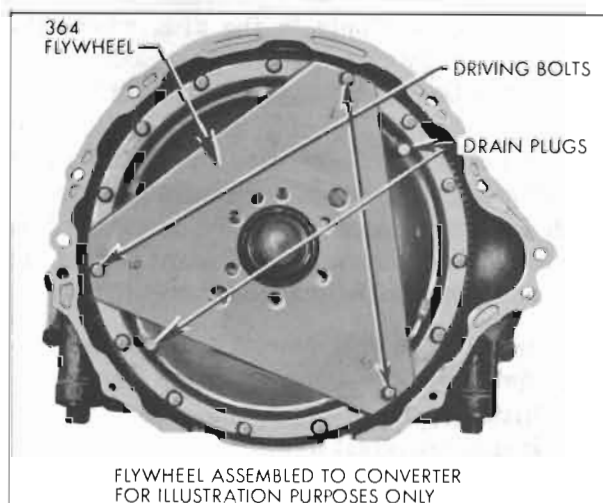


Figure 5-114—Location of Driving Bolt Holes

18. Install a new O-ring seal on pump cover, making sure that surfaces are clean and that seal has even tension all around and is not twisted.

19. Grease the selected thrust washer so it will adhere and place it in recess in cover, then install cover on pump.

20. Install bolts in all but the three driving bolt holes, insert the shank of a  $1\frac{1}{32}$ " drill through one bolt hole to align all holes, then tighten bolts to approximately 5 ft. lbs. torque in numerical sequence shown in Figure 5-115. Finally tighten bolts in same sequence to 25-30 ft. lbs. torque.



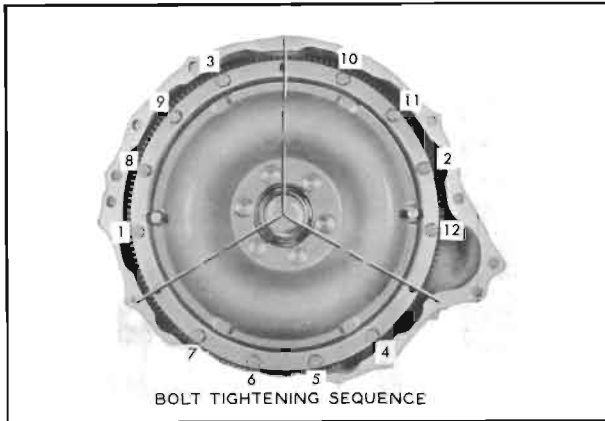


Figure 5-115—Bolt Tightening Sequence

#### j. Low and Reverse Band Adjustment

**NOTE:** *The following adjustment must be very carefully performed since it is not possible to readjust the bands after transmission is installed in car.*

1. Loosen lock nut and turn adjusting screw clockwise until considerable resistance is felt, indicating that band is in full contact with the drum (low) or ring gear (reverse). See Figure 116.

2. Back off screw until just a trace of play can be felt by prying up on lock nut with screwdriver. From that point, back off screw

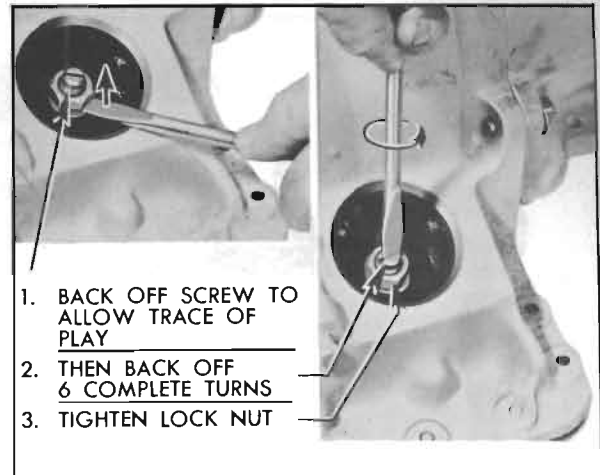



Figure 5-116—Band Adjustment

six (6) complete turns and snug up the lock nut. See Figure 5-116.

3. After noting position of adjusting screw slot, tighten lock nut to 20-25 ft. lbs. torque. Remove torque wrench and check to make sure that adjusting screw did not turn.

4. Install band adjustment covers with *new* gaskets.

5. Install transmission shift lever on cross shaft with lockwasher and nut, hold lever forward while tightening nut, to avoid straining the internal linkage.

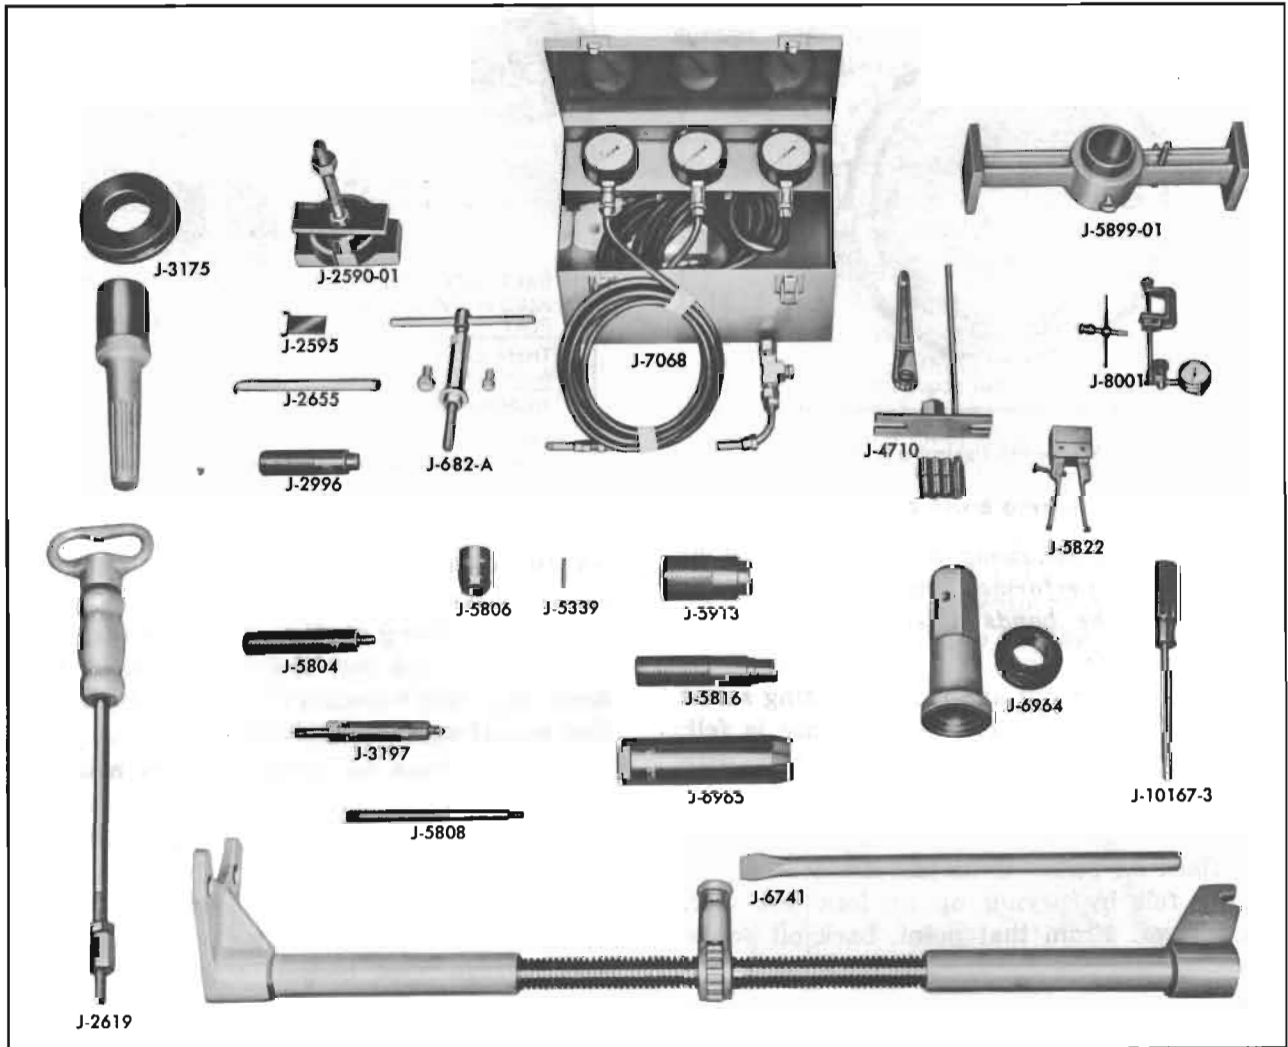

**Twin Turbine Transmission Special Tools**

<b>J-682-A</b>	Universal Joint Remover	<b>J-5816</b>	Reaction Flange Shaft Bushing Installer
<b>J-2590-01</b>	Clutch Spring Compressor	<b>J-5822</b>	Puller
<b>J-2595</b>	Transmission Band Installing Clip	<b>J-5899-01</b>	Converter Cover Clearance Gauge
<b>J-2619</b>	Slide Hammer	<b>J-5913</b>	Front Stator Blade Carrier Bushing Installer
<b>J-2655</b>	Access Cap Remover	<b>J-6964</b>	Front Pump Oil Seal Installer
<b>J-2996</b>	Planet Carrier Bushing Installer	<b>J-6965</b>	Front Pump Oil Seal Remover
<b>J-3175</b>	Case Bushing Remover & Installer	<b>J-6741</b>	Axle Jack
<b>J-3197</b>	Planet Carrier Bushing Remover	<b>J-6741-8</b>	Adapter for J-6741 Axle Jack (not illustrated)
<b>J-4710</b>	Flywheel Housing Alignment Set	<b>J-7068</b>	3-Gauge Pressure Gauge Set
<b>J-5339</b>	Dial Indicator Extension	<b>J-8001</b>	Dial Indicator
<b>J-5804</b>	End Play Gauge	<b>J-10167-3</b>	Palm Grip Clutch Head Screw Driver
<b>J-5806</b>	Stator Installer		
<b>J-5808</b>	Dial Indicator Support Rod		

Figure 5-117—Twin Turbine Transmission Special Tools