

SECTION A

GENERATING SYSTEM

CONTENTS

Division	Paragraph	Subject	Page
I	68-1	SPECIFICATIONS AND ADJUSTMENTS: Generating System Specifications	68-2
II	68-2 68-3 68-4 68-5	DESCRIPTION AND OPERATION: Description of Delcotron Generator Generator Repair - On Bench Description of Regulator Operation of Charging System	68-3 68-4 68-7 68-7
III		SERVICE PROCEDURES:	
IV	68-6 68-7 68-8 68-9 68-10	TROUBLE DIAGNOSIS: Trouble-Shooting Charging System Inspecting Charging System Regulator Replacement Delcotron Generator Tests Tailoring the Voltage Setting	68-9 69-10 68-10 68-10 68-12

DIVISION I SPECIFICATIONS AND ADJUSTMENTS

68-1 GENERATING SYSTEM SPECIFICATIONS

a. Generator

Make and Type Delco-Remy, Delcotron
 Location, Side of Engine Upper Right
 Drive and Rotation (Viewing Drive End) Fan Belt, Clockwise

	Standard	All Other	Air Condition
	225 Eng.	Eng.	All Eng.
Number	1100761	1100691	1100774
Field Current Draw (Amps.) @ 80° F. and 12 Volts	2.2 to 2.6	2.2 to 2.6	2.2 to 2.6
Bench Test @ 14 Volts & 80° F. (Amps. @ Gen. RPM)	37 @ 6500	42 @ 6500	55 @ 6500
Min. Current Output @ 500 Eng. RPM	7 Amps.	9 Amps.	9 Amps.
Min. Current Output @ 1500 Eng. RPM	29 Amps.	32 Amps.	44 Amps.
Belt Tension	80 Lbs.	80 Lbs.	80 Lbs.

b. Generator Regulator

Make and Type Delco-Remy, Double Contact
 Regulator Number
 Riviera 1119507
 All Others 1119515

b. Generator Regulator (Cont'd)

Field Relay Closing Voltage	
Riviera	3.8 to 7.2
All Others	1.5 to 3.2
Field Relay Air Gap015"
Field Relay Point Opening030"
Voltage Regulator Air Gap, Lower Points Just Touching067"
Voltage Regulator Upper Contact Point Opening014"
Voltage Regulator Upper Contact Setting @ 2000 Eng. RPM (After 15 Min. Warm-Up @ 1500 Eng. RPM)	See Figure 68-16
Voltage Regulator Lower Contact Setting (Step Voltage)1 to .3 Below Upper Setting

c. Police Car Generator

Make and Type	Delco-Remy, Delcotron
Number	1117765
Location, Side of Engine	Right
Drive and Rotation (Viewing Drive End)	Fan Belt, Clockwise
Field Current Draw (Amps.) @ 80°F. and 12 Volts	3.7 to 4.4
Bench Test at 14 Volts (Amps. Cold @ Generator RPM)	62 @ 5000
Current Output @ 500 Engine RPM	20 Amps. Min.
Current Output @ 1500 Engine RPM	50 Amps. Min.
Belt Tension	80 lbs.

d. Police Car Generator Regulator

Make and Type	Delco-Remy, Transistor
Number	1116378
Point Gap and Air Gap	None, No Moving Parts
Voltage Setting After 15 Minutes Warm-Up	14 ± .3 Volts

**DIVISION II
DESCRIPTION
AND OPERATION**

**68-2 DESCRIPTION OF DELCOTRON
GENERATOR**

"Delcotron"* generators are continuous-output, diode-rectified alternating current generators. See Figure 68-1. The rotor is mounted on a ball bearing at the drive end, and a roller bearing at the slip ring end, and each bearing has a grease supply which eliminates the need for periodic lubrication. Two brushes are used to carry current through the two slip rings to the field coil which is mounted on the rotor. The brushes are extra long and under normal operating conditions will provide long periods of service.

The stator windings are assembled on the inside of a laminated

core that forms part of the generator frame. See Figure 68-2.

Six rectifier diodes are mounted in the slip ring end frame and are connected to the stator windings. The six diodes act to change the generator AC voltages to DC voltage which appears at the

"BAT" terminal of the generator.

IMPORTANT: Since the generator and regulator are designed for use on only one polarity system (negative ground), the following precautions must be observed when working on the charging circuit. Failure to observe these precautions will result in serious damage to the electrical equipment.

1. When installing a battery, always make absolutely sure the negative post is toward ground.
2. When connecting a booster battery make certain to connect the negative battery terminals together and the positive battery terminals together.
3. When connecting a charger to the battery, connect the charger positive lead to the battery positive terminal and the charger negative lead to the battery negative terminal.

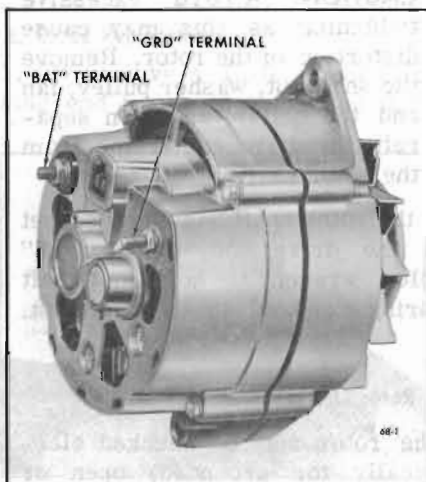


Figure 68-1—Delcotron Generator

*General Motors Trademark

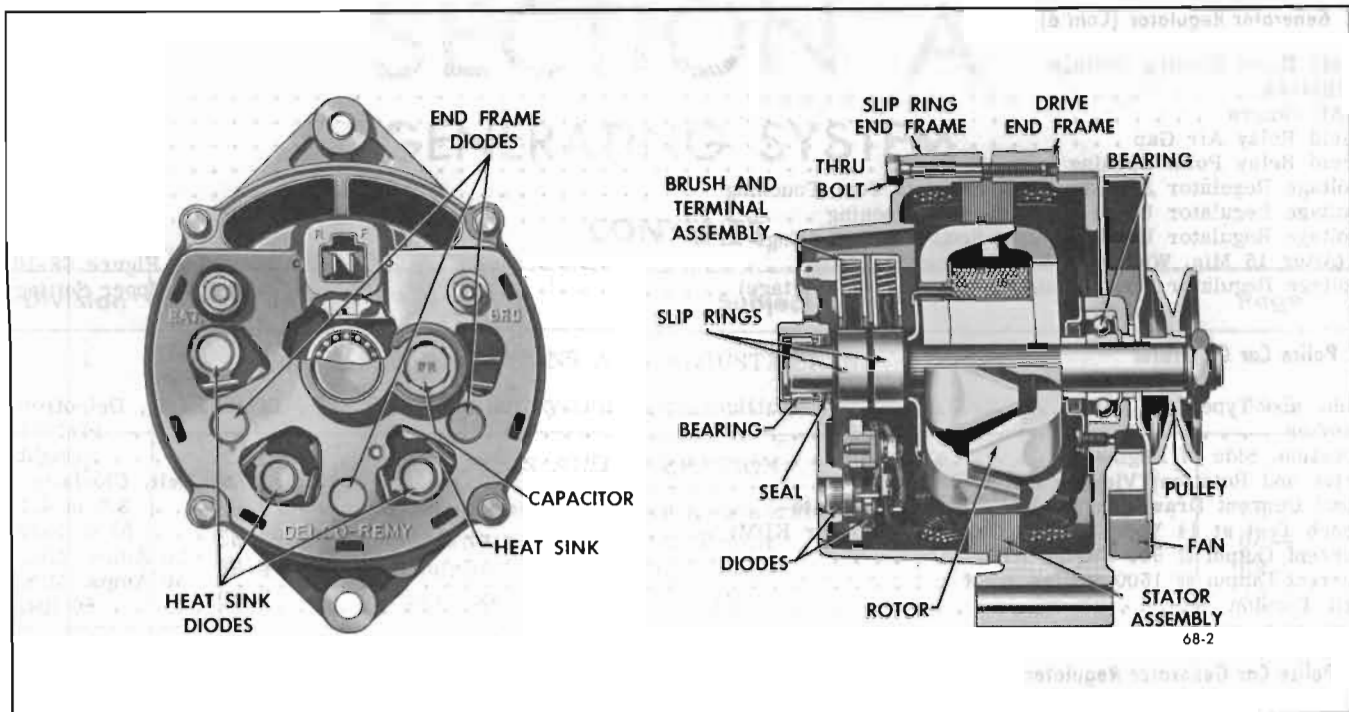


Figure 68-2—Sectional View

4. Never operate the generator on open circuit. Make absolutely certain all connections in the circuit are secure.

5. Do not short across or ground any of the terminals on the generator or regulator.

6. Do not attempt to polarize the Delco-Remy generator.

68-3 GENERATOR REPAIR—ON BENCH

a. Disassembly

To disassemble the generator, take out the four thru-bolts, and separate the drive end frame and rotor assembly from the stator assembly by prying apart with a screwdriver at the stator slot. See Figure 68-2. A scribe mark will help locate the parts in the same position during assembly. The fit between stator and frame is not tight, and the two can be separated easily. Note that the separation is to be made between

the stator frame and drive end frame. After disassembly, place a piece of tape over the slip ring end frame bearing to prevent entry of dirt and other foreign material.

To remove the drive end frame from the rotor, place the rotor in a vise and tighten only enough to permit removal of the shaft nut.

CAUTION: Avoid excessive tightening as this may cause distortion of the rotor. Remove the shaft nut, washer pulley, fan and the collar, and then separate the drive end frame from the rotor shaft.

If the rotor shaft has a hex socket in the drive end, use a 5/16" Allen wrench to hold the shaft during removal of the shaft nut.

b. Rotor Checks

The rotor may be checked electrically for grounded, open or short circuited field coils. To check for grounds, connect a test

lamp from either slip ring to the rotor shaft. See Figure 68-3. If the lamp lights, the field winding is grounded.

To check for opens, connect the test lamp to each slip ring. If the lamp fails to light, the winding is open.

The field winding is checked for short-circuits by connecting a battery and ammeter in series

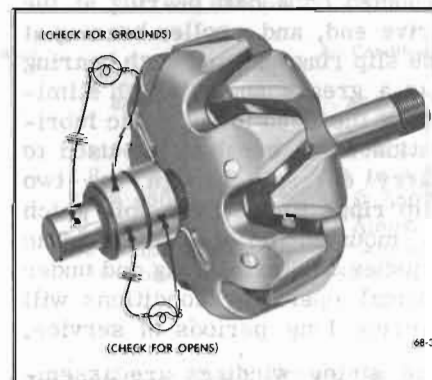


Figure 68-3—Checking Rotor for Opens or Grounds

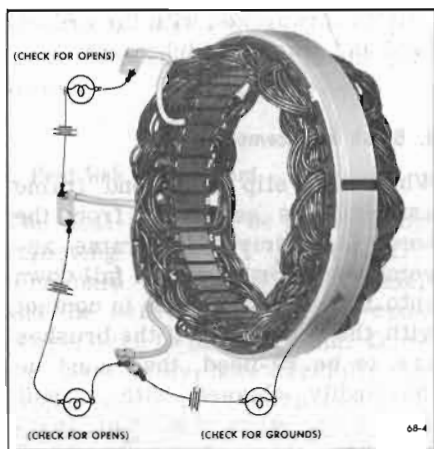


Figure 68-4—Checking Stator for Opens or Grounds

with the two slip rings. The field current at 12 volts and 80°F. should be between 2.2 and 2.6 amperes. An ammeter reading above the specified value indicates shorted windings.

If the rotor is not defective but the generator failed to supply rated output, the trouble is in the stator or rectifying diodes.

c. Stator Checks

To check the stator windings, remove all three stator lead attaching nuts, and then separate the stator assembly from the end frame. The fit between stator frame and end frame is not tight,

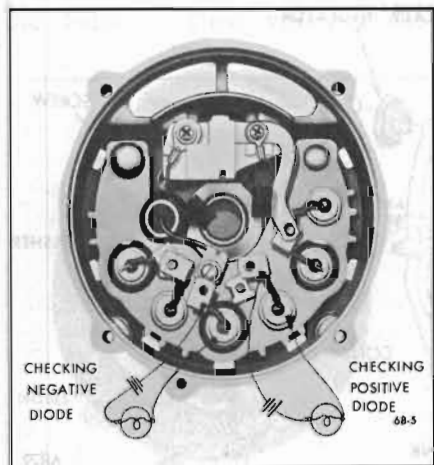


Figure 68-5—Checking Diodes for Opens or Shorts

and the two can be separated easily.

The stator winding may be checked with a test lamp. If the lamp lights when connected from any stator lead to the frame, the windings are grounded. If the lamp fails to light when successively connected between each pair of stator leads, the windings are open. See Figure 68-4.

A short circuit in the stator windings is difficult to locate without laboratory test equipment due to the low resistance of the windings. However, if all other electrical checks are normal and the generator fails to supply rated output, shorted stator windings are indicated.

d. Diode Checks

Each diode should be checked electrically for a shorted or open condition using a test lamp of not more than 12 volts.

CAUTION: Do not use a 110-volt test lamp to check diodes.

With the stator disconnected, connect the test lamp leads across each diode, first in one direction and then in the other. See Figure 68-5. If the lamp lights in both checks, or fails to light in both checks, the diode is defective. When checking a good diode, the lamp will light in only one of the two directions.

e. Diode Replacement

1. To remove a diode, place slip ring end frame in a vise so that

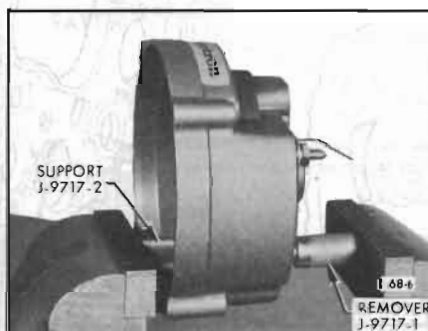


Figure 68-6—Removing a Diode

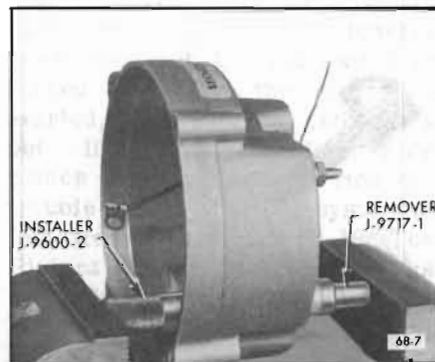


Figure 68-7—Installing a Diode

Remover J-9717-1 bears against defective diode and Support J-9717-2 supports casting. Tighten vise to remove defective diode. See Figure 68-6.

2. To install a diode, place new diode in Installer J-9600-2. Place slip ring end frame in a vise so that new diode is in position and Remover J-9717-1 supports casting. See Figure 68-7. Tighten vise to install new diode.

CAUTION: Never attempt to remove or install a diode by striking it, as the shock may damage the other diodes.

f. Slip Ring Servicing

If the slip rings are dirty, they may be cleaned with No. 400 silicon carbide paper and finish polished with crocus cloth. Spin the rotor in a lathe, or otherwise spin the rotor, and hold the polishing cloth against the slip rings until they are clean.

CAUTION: The rotor must be rotated in order that the slip rings will be cleaned evenly. Cleaning the slip rings by hand without spinning the rotor may result in flat spots on the slip rings, causing brush noise.

Slip rings which are rough or out of round should be trued in a lathe to .002 inch maximum indicator reading. Remove only enough material to make the rings smooth and round. Finish polish with crocus cloth and blow away all dust.

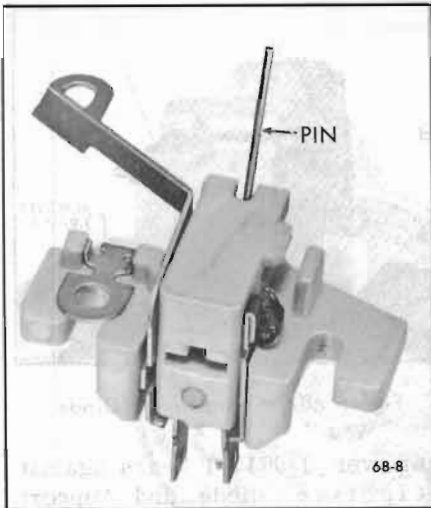


Figure 68-8—Assembling
Brush Holder and Parts

g. Bearing Replacement

The bearing in the drive end frame can be removed by detaching the retainer plate screws, and then pressing the bearing from the end frame with Support J-9717-2.

To install a new bearing, press in with a tube or collar that just fits over the outer race. It is recommended that a new retainer plate be installed if the felt seal in the retainer plate is hardened or excessively worn.

The bearing in the slip ring end frame can be removed by pressing with a tube or collar that just fits inside the end frame housing. Press from the outside of the housing towards the inside using Support J-9717-2.

To install a new bearing, place a flat plate over the bearing and press in from the outside towards the inside of the frame until the bearing is flush with the outside of the end frame. Support the inside of the frame with a hollow cylinder to prevent breakage of the end frame. Use extreme care to avoid misalignment or otherwise placing undue stress on the bearing.

Saturate the felt seal with SAE 20 oil, and then reassemble the felt seal and steel retainer.

The bearings in the generator are permanently lubricated and require no lubrication during the life of the bearings. If a dry bearing is encountered, do not attempt to lubricate the bearing as improper lubricant or an excessive amount of lubricant may be thrown off and contaminate the inside of the Delcotron.

Replace a dry, worn, or rough bearing with a new bearing which

will be prepacked with the proper kind and amount of lubricant.

h. Brush Replacement

When the slip ring end frame assembly is separated from the rotor and drive end frame assembly, the brushes will fall down onto the shaft and come in contact with the lubricant. If the brushes are to be re-used, they must be thoroughly cleaned with a soft dry cloth. Also, the shaft must be thoroughly cleaned before reassembly.

The brush springs should be inspected for any evidence of damage or corrosion. If there is any doubt as to the condition of the brush springs, they should be replaced.

To install new brushes, remove the brush holder assembly from the end frame by detaching the two brush holder assembly screws. Install the springs and brushes into the brush holder, and insert a straight wire or pin into the holes at the bottom of the holder to retain the brushes. Then attach the brush holder assembly onto the end frame, noting carefully the proper stack-up of parts as shown in Figure 68-8.

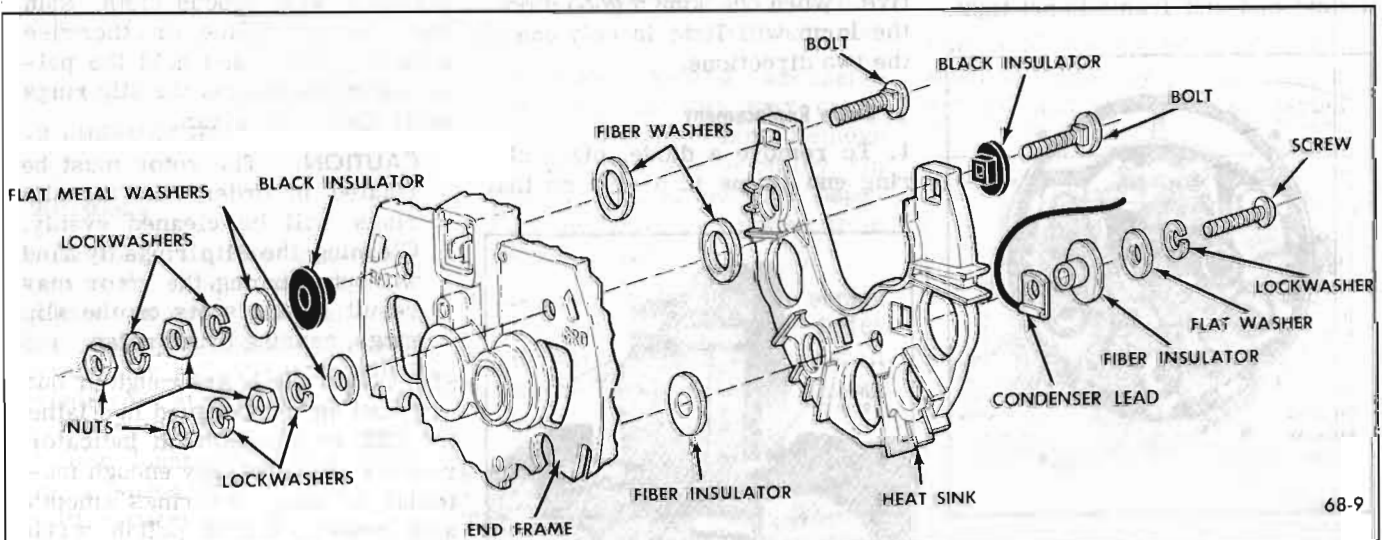


Figure 68-9—Assembling Heat Sink and Parts

Allow the straight wire to protrude through the hole in the end frame.

i. Heat Sink Replacement

The heat sink may be replaced by removing the "BAT" and "GRD" terminals from the end frame, and the screw attaching the condenser lead to the heat sink. During reassembly, note carefully the proper stack-up of parts as shown in Figure 68-9.

j. Reassembly

Reassembly is the reverse of disassembly. See Figure 68-10 for connection of internal leads. Remember when assembling the pulley to secure the rotor in a vise only tight enough to permit tightening the shaft nut to 50-60 lb. ft. If excessive pressure is applied against the rotor, the assembly may become distorted.

To install the slip ring end frame assembly to the rotor and drive end frame assembly, remove the tape over the bearing and shaft, and make sure the shaft is perfectly clean.

Insert a straight wire as previously mentioned through the holes in the brush holder and end frame to retain the brushes in the holder. Then withdraw the

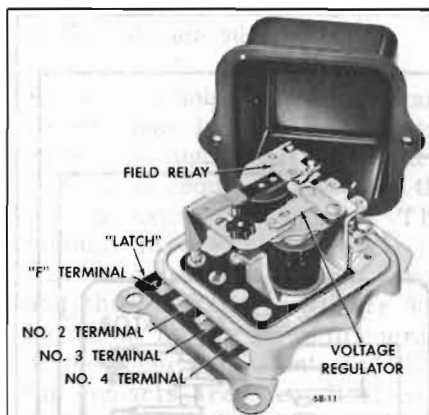


Figure 68-11—Regulator

wire after the generator has been completely assembled. The brushes will then drop onto the slip rings.

68-4 DESCRIPTION OF REGULATOR

The regulator assembly is made up of a double contact voltage regulator unit and a field relay. See Figure 68-11. The voltage regulator unit operates to limit the generator output voltage to a preset maximum. The field relay connects and disconnects the voltage regulator and generator field directly to the battery. In all cars except the Riviera, the indicator

lamp lights at about 1/2 brightness when the ignition switch is turned on; when the engine is started, the indicator light goes out. If the indicator light ever comes on with the engine running, trouble in the charging system is indicated. See Figure 68-19. The Riviera uses an ammeter as shown in Figure 68-20.

68-5 OPERATION OF CHARGING SYSTEM

Before the generator will put out any current, the rotor field must be energized. The rotor poles have practically no residual magnetism, so unless current is supplied to the field from the battery, there can be no output from the generator.

When the ignition switch is turned on, current flows immediately through the field to ground inside the generator. Before the engine is started, the path of the field current is from the junction block, to the "BAT" terminal of the ignition switch, through the switch to both the "IGN" and the "ACC" terminal. From the "IGN" terminal, current flows through the generator indicator light in the instrument cluster

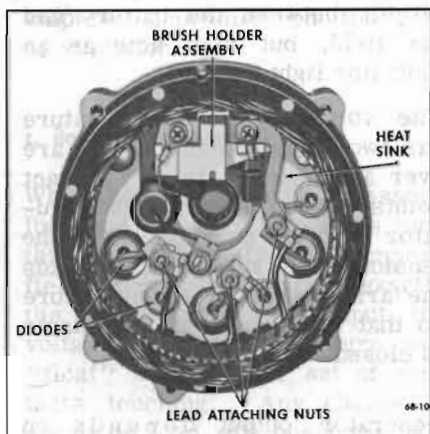


Figure 68-10—Internal Leads

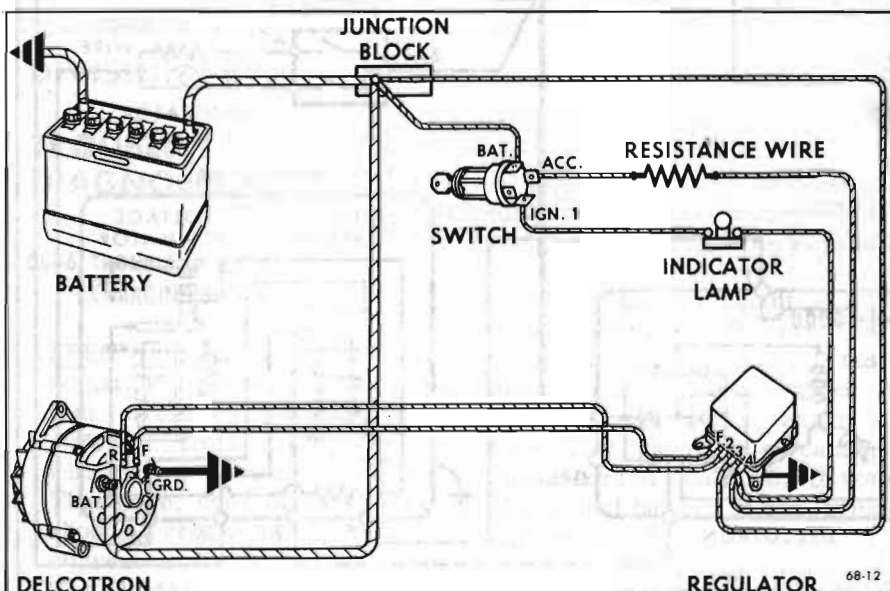


Figure 68-12—Delcotron Generator Wiring - Except Riviera

can be controlled, however. Voltage regulator operation varies according to operating conditions of the car electrical system.

There are several stages of voltage regulator operation as follows:

a. Lower Contacts Closed

When the accessories and/or battery need a great deal of current, but the engine speed is low, the lower contacts will remain tightly closed to allow full field current of approximately 2 amperes. The accessory load not supplied from the generator will be supplied from the battery.

b. Lower Contacts Vibrating

When the accessory load or battery needs are somewhat less, or the engine speed is a little higher, 2 amperes field current would cause too much generator output. Therefore, the lower voltage regulator contact will vibrate to reduce field current. When the contacts are open, the entire field current must flow through the resistor, which limits current to about 3/4 ampere. While the lower contacts are vibrating, then, field current will be somewhat between 2 amperes and 3/4 ampere, depending on the rate of vibration.

c. Both Contacts Open

When the balance of the accessory load and the engine speed is such that approximately 3/4 ampere field current will provide exactly the needed generator output, the voltage regulator armature will "float" with neither set of contacts touching. Any change in speed or load will upset the balance, however, causing the regulator contacts to again vibrate.

d. Upper Contacts Vibrating

When the combined accessory and battery load is low and the engine speed is high, very little field current is required to provide the needed generator output. The voltage in the charging circuit will rise between .1 and .3 volt and the regulator armature will be drawn farther down to operate on the upper set of contacts. When the contacts are open, field current will be about 3/4 ampere; when the contacts are closed, the upper armature grounds the current from the resistor and field current is zero. See Figure 68-14. While the upper contacts are vibrating, then, field current will be somewhere between 3/4 ampere and zero, depending on the rate of vibration.

The regulator does not contain a cutout relay unit. The rectifier diodes act as one-way check valves to prevent the battery from discharging back through the generator, thereby making a cutout relay unnecessary.

The regulator does not contain a current limiting unit because an alternating current generator acts as its own current regulator.

DIVISION IV

TROUBLE DIAGNOSIS

68-6 TROUBLE-SHOOTING CHARGING SYSTEM

SPECIAL PRECAUTIONS: Alternating current charging system circuits are completely different from direct current charging system circuits. Therefore, none of the trouble-shooting checks used for direct current systems can be used. The diodes may be burned out if you do not observe the following precautions:

1. Never arc terminals. Never short between terminals on the generator or regulator; never arc any terminal to ground. The field has no residual magnetism and therefore cannot be polarized; any attempt to do so may cause damage.

2. Always observe polarity. Use extreme caution before installing a battery, connecting a fast charger or connecting a booster battery to insure that the ground polarity is matched to the ground polarity of the generator and regulator. For example, if a battery is accidentally installed in reverse, the diodes in the generator may be burned out and the wiring harness between the generator and battery will be burned. The generator charging system is a negative ground system, just as Buick's charging systems have always been.

3. Always disconnect battery before doing any work on the generator or regulator.

Complaints on operation of the charging system generally fall into one of the following classifications. Go through steps listing possible troubles in order until the trouble is found.

a. Battery Runs Down

1. Check generator belt tension. Belt tension as measured with Gauge J-7315 should be 80 pounds.

2. Check battery condition. Test battery using 421 Battery Tester to see if battery is okay. If tester shows that battery is good, but undercharged, quick charge battery and check for cause of undercharged condition. If tester shows that battery is bad, replace battery.

3. Check for short or ground. To check complete car electrical system for a short or ground,

disconnect ground cable from battery and connect a voltmeter between ground cable and battery post. Make sure all lights and accessories are off and that clock is wound. If voltmeter reads battery voltage, there is a short or ground which must be traced and eliminated; any reading less than battery voltage indicates current leakage so slight that nothing need be done about it.

4. Check generator output. Hook-up test instruments and check current output of generator as described in Delcotron Generator Tests paragraph. If output is low, remove generator for disassembly, test and repair. If generator output tests okay, leave test instruments hooked up and proceed with Step 5.

5. Check voltage regulator setting, as described in Delcotron Generator Tests paragraph. If voltage fluctuates, look for loose or corroded connections in the charging system; if none, clean voltage contacts as described in paragraph on Cleaning Regulator Contacts. If voltage setting is low, adjust to specifications shown in Figure 68-16.

If voltage setting is within the specified limits, but battery checked low in Step 2, raise voltage setting slightly as described in paragraph on Tailoring The Voltage Setting.

b. Battery Uses Too Much Water

1. Check battery condition. Light load test battery to see if there is a shorted cell. A battery having a shorted cell will use water excessively. Replace a defective battery.

2. Check voltage regulator setting, as described in Delcotron Tests paragraph. If voltage setting is high, adjust to specifications shown in Figure 68-16. If voltage setting is within limits,

lower voltage setting slightly as described in paragraph on Tailoring Voltage Setting.

c. Faulty Indicator Light Operation

There are three conditions of indicator light operation which indicate trouble in the charging system.

1. Indicator light on - ignition off. This is caused by a shorted positive diode. There will be a continuous drain on the battery through the generator. Remove generator for disassembly, test and repair.

2. Indicator light off - ignition on. Before the engine is started, the indicator light should glow at about 1/2 the brightness of the oil pressure light. If the light does not come on, check for either a burned out bulb or an open in the indicator light circuit. A shorted diode as described in Step 1 will also cause the indicator light to go off when the ignition is switched on.

3. Indicator light on - engine running. This can be caused by a loose or missing belt, a defective field relay, or a defective generator. Determine source of trouble as follows:

(a) Check generator belt tension.

(b) Check voltage at field relay coil by connecting a voltmeter from regulator "2" terminal to ground. If voltmeter reading is above 5 volts and the indicator light fails to go out, field relay is defective. Check and replace, if necessary. If voltmeter reading is below 5 volts, field relay is probably okay so proceed with Step c.

(c) Check voltage at generator field by connecting a voltmeter from generator "F" terminal to ground. If voltmeter reading is below 5 volts, check for a resistance or open in the circuit

that should supply the initial field current. See Figure 68-18.

If voltmeter reading at "F" terminal is above 5 volts but voltage output from "R" terminal is low, trouble is in the generator. Hook-up test instruments and check current output of generator as described in Delcotron Generator Tests paragraph. If output is low, remove generator for disassembly, test and repair.

68-7 INSPECTING CHARGING SYSTEM

At regular intervals, inspect the terminals for corrosion and loose connections, and the wiring for frayed insulation. Check the mounting bolts for tightness and the belt for alignment, proper tension and wear. Belt tension should be adjusted to 80 pounds as measured with Gauge J-7316. When tightening belt tension, apply pressure against the stator laminations between the end frames, and not against either end frame.

Noise from a Delcotron generator may be caused by worn or dirty bearings, loose mounting bolts, a loose drive pulley, a defective diode, or a defective stator.

68-8 REGULATOR REPLACEMENT

If voltage operation is erratic, and if the regulator cannot be adjusted to a steady value, replace the regulator. Do not attempt to clean the contact points.

68-9 DELCOTRON GENERATOR TESTS

a. Test Current Output

1. Check belt tension. Adjust to 80 lbs. with a single belt as measured with Gauge J-7316.

2. Disconnect ground cable from battery.

3. Connect ammeter between generator "BAT" terminal and disconnect lead as shown in Figure 68-15.

4. Connect a tachometer from distributor terminal of coil to ground.

5. Reconnect battery ground cable. Connect a voltmeter across battery.

6. Turn on all possible accessory load. Apply parking brake firmly. Start engine. Adjust engine idle to exactly 500 RPM in Drive. At this engine speed, generator output should be 9 amperes or over. Shift transmission to Park. Increase engine speed to exactly 1500 RPM; output should be 30 amperes or over. Shut off engine. Turn off all accessories.

7. If output is low in either of the above tests, try supplying field directly to cause full generator output. Unplug connector from generator. Connect a jumper such as Adapter J-21053 from generator "F" terminal to "BAT" terminal. Retest as described in Step 6. If output is still low, generator is faulty and must be removed for bench tests and repairs. To see if fault is in the diodes, test diodes as described in subparagraph b.

8. If output (using field jumper) is now okay, trouble is in the regulator or wiring harness. Clean and test regulator. Check all wiring connections.

9. Remove field jumper and re-install vehicle field connector.

b. Test Generator Diodes (On-The-Car)

1. Disconnect ground cable from battery.

2. Disconnect battery lead and relay - field connector from generator.

3. To test all three positive diodes, connect a test light such as J-21008 from the generator

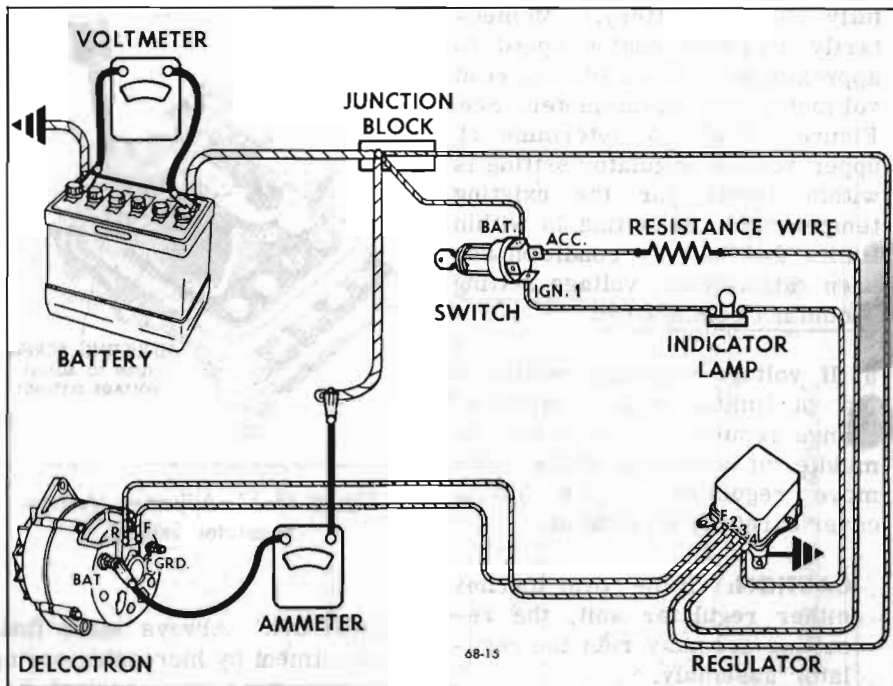


Figure 68-15—Delcotron Generator Tests

"R" terminal to the "BAT" terminal and observe test light; then reverse test light connections and again observe light. The test light should light in only one of the two directions.

4. To test all three negative diodes, connect the test light from the "R" terminal to the "GRD." terminal and observe test light; then reverse test light connections and again observe light. The test light should light in only one of the two directions.

5. If the test light lights in both directions in either Step 3 or Step 4, there is at least one shorted diode. Remove generator and disassemble on bench. Test diodes individually and replace as necessary.

c. Test and Adjust Voltage Regulator Setting

1. Test current output as described above. See Figure 68-15.

Leave all test instruments in place, but make sure field jumper is removed, if used.

2. Install a thermometer such as Gauge J-8529 near regulator.

3. Run engine at approximately 1500 RPM for 15 minutes. Make sure all electrical load except ignition is turned off.

4. Check ammeter reading. For an accurate voltage setting check, ammeter must read between 3 and 10 amperes. (If ammeter reading is still high after 15 minutes, it may be necessary to substitute a

Air Temperature at Regulator	85°	105°	125°	145°	165°
Voltage Setting	13.8-14.6	13.7-14.5	13.5-14.3	13.4-14.2	13.2-14.0

Figure 68-16—Voltage Regulator Settings

fully charged battery.) Momentarily increase engine speed to approximately 2000 RPM and read voltmeter and thermometer. See Figure 68-16 to determine if upper voltage regulator setting is within limits for the existing temperature. If setting is within limits and battery condition has been satisfactory, voltage setting should not be disturbed.

5. If voltage regulator setting is out of limits, make a note of change required to put voltage in middle of specified range. Remove regulator cover, lifting cover carefully straight up.

CAUTION: If the cover touches either regulator unit, the resulting arc may ruin the regulator assembly.

6. Starting with the changed voltage reading, increase or decrease voltage (the amount determined in Step 5) as shown in Figure 68-17.

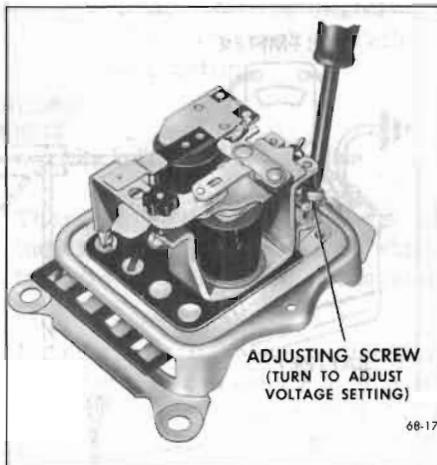


Figure 68-17—Adjusting Voltage Regulator Setting


CAUTION: Always make final adjustment by increasing spring tension to assure contact between screw head and spring support.

7. After making an adjustment, replace cover carefully and recheck voltage setting of regulator.

68-10 TAILORING THE VOLTAGE SETTING

It is important to remember that the voltage setting for one type of operating condition may not be satisfactory for a different type of operating condition. Vehicle underhood temperatures, operating speeds, and nighttime service all are factors which help determine the proper voltage setting. The proper setting is attained when the battery remains fully charged with a minimum use of water.


If no circuit defects are found, yet the battery is continually undercharged, raise the setting by .3 volt, and then check for an improved battery condition over a service period of reasonable length. If the battery is continually overcharged, lower the setting by .3 volt, and then check for an improved battery condition. However, never adjust the voltage setting out of the limits specified in Figure 68-16.

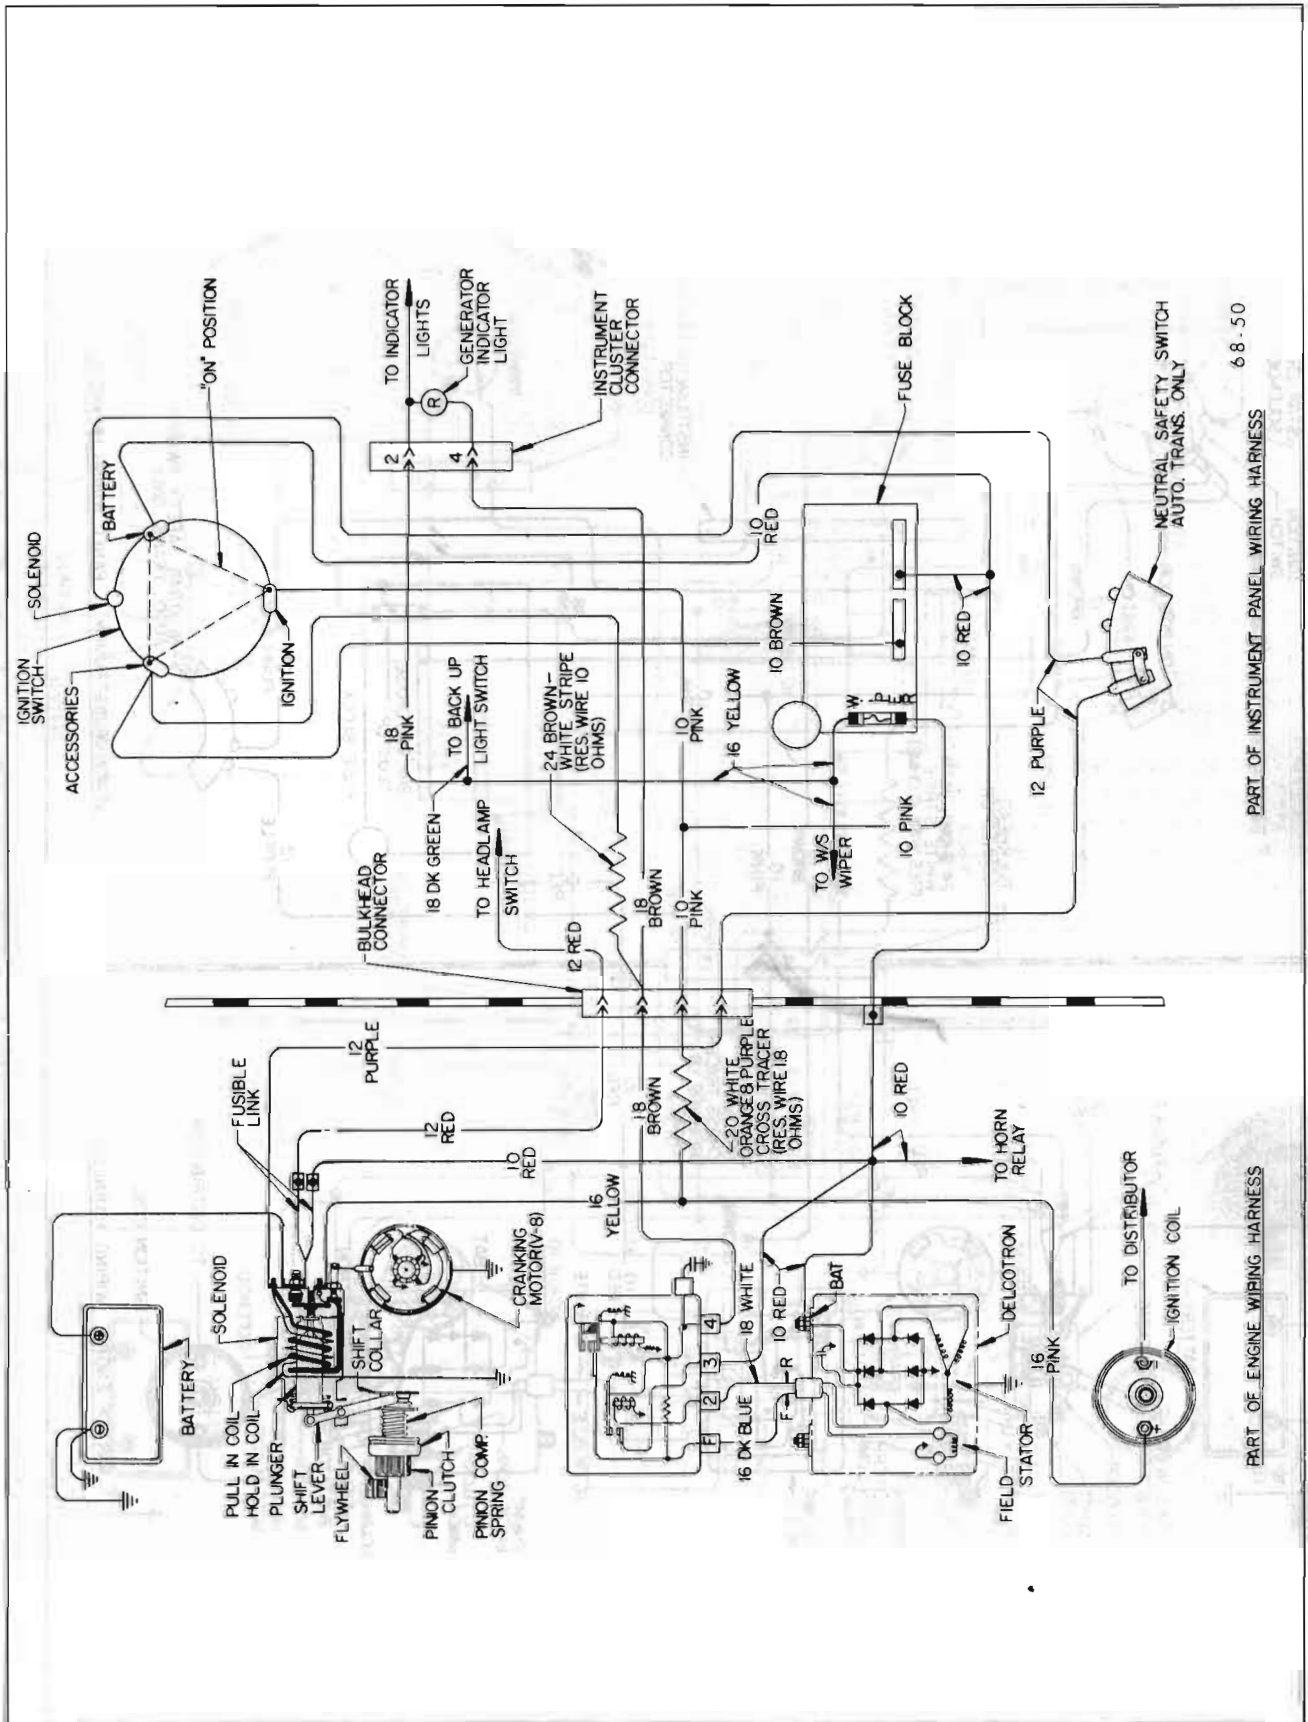

68-50
PART OF INSTRUMENT PANEL WIRING HARNESS

PART OF ENGINE WIRING HARNESS

Figure 68-18—Ignition, Starter & Generator Wiring Diagram - Special & Skylark

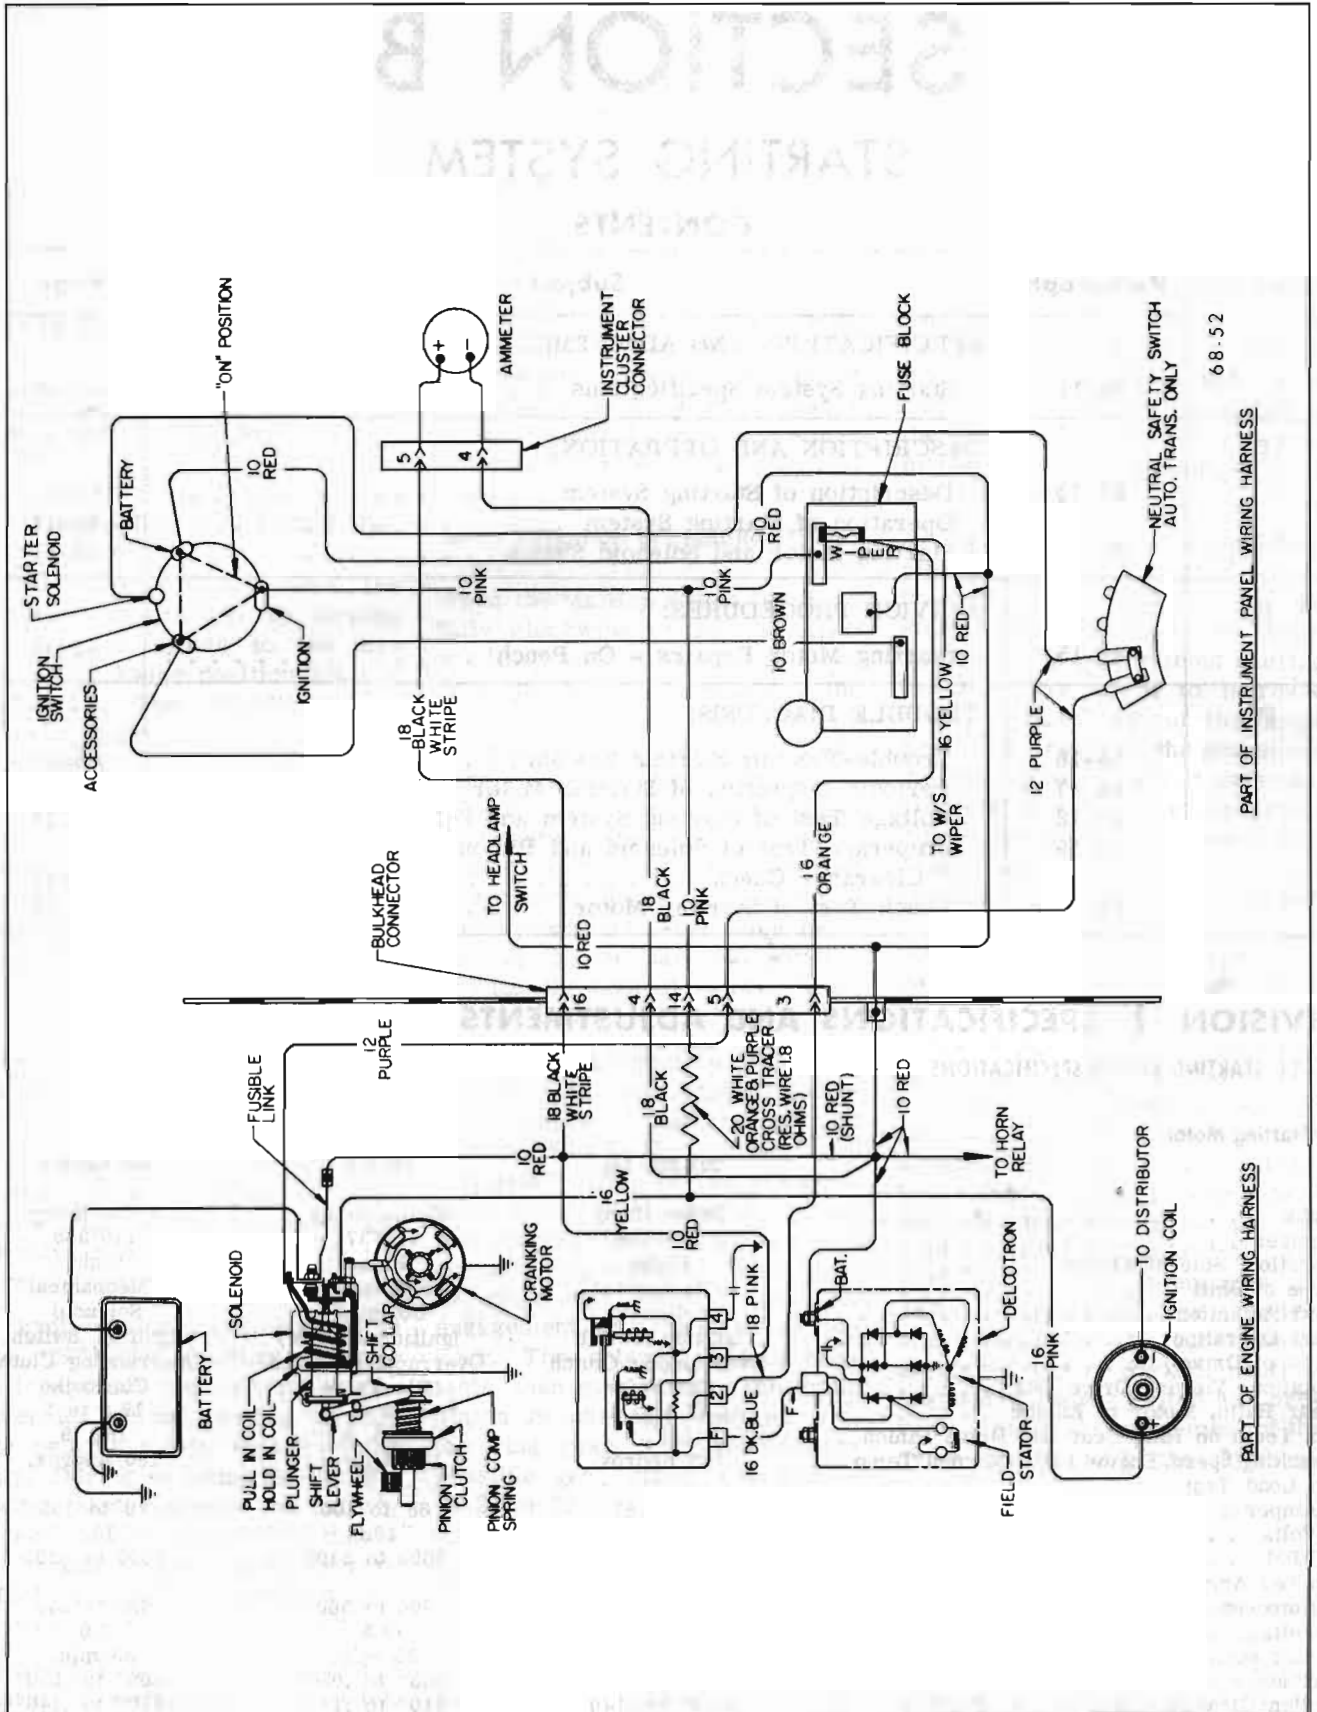

68-52

PART OF INSTRUMENT PANEL WIRING HARNESS

PART OF ENGINE WIRING HARNESS

Figure 68-20—Ignition, Starter & Generator Wiring Diagram - Riviera