

SECTION 10-H

SIGNAL SYSTEMS

Paragraph	Subject	Page	Paragraph	Subject	Page
10-52	Horns and Control Circuit.....	10-73	10-54	Directional Signal Lamps and Switch.....	10-75
10-53	Adjustment of Horn Relay.....	10-74			

NOTES

10-52 HORNS AND CONTROL CIRCUIT

a. Horns and Relay

Two Delco-Remy electrically operated vibrator type horns are mounted in front of the radiator. Both horns are operated simultaneously by a horn relay which is controlled by the horn button on steering wheel. The left hand horn is high pitched (380-400 cycles) and the right hand horn is low pitched (302-323 cycles), so that together they produce a pleasing blended tone.

The horn relay is an electrical switch which closes the circuit between the battery and the horns when the horn button is pressed, and opens the circuit when the button is released. The relay permits control of the horns with a small amount of current passing through the horn button contacts. The high current required by the horns would cause arcing and burning of these contacts.

When the horn button contacts are closed, a small amount of current flows through the relay winding to ground at the horn button. This magnetizes the relay core, which attracts the flat steel relay armature. The armature has a contact point which makes contact with a stationary point to close the horn circuit. When horn button is released, current stops flowing through relay winding so that the core loses its magnetism; the armature spring then causes contact points to be separated.

b. Horn Buttons

The horn button used with the *Series 40* standard steering wheel has a cap with a rubber retainer in its rim which snaps over the rim of a contact cup mounted in the wheel hub. The cap may be pried out with a thin bladed tool and the contact cup and other parts may then be removed by removing the attaching screws and insulating spacer bushings.

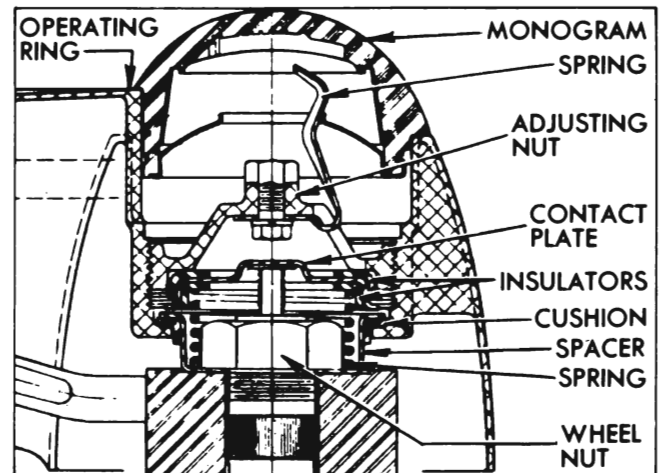


Figure 10-69—Horn Operating Ring Installation

The horn button used with the DeLuxe steering wheel has a large operating ring mounted over the wheel hub and spokes. To remove the operating ring, (1) pry out the monogram which is held by the prongs of a retaining spring, (2) unscrew and remove the adjusting

nut, (3) remove the contact plate and spring, with insulators, (4) remove steering wheel nut, (5) remove operating ring with cushion and contact spacer. See figure 10-69.

Install operating ring by reversing the procedure for removal. The steering wheel nut is self-locking and does not require a lockwasher. When the contact adjusting nut is being installed, turn it down until contact is made and horns blow, then back nut off $\frac{1}{2}$ turn to provide proper clearance between contact plate and spacer.

c. Adjustment of Horns

When horns fail to blow first check wiring circuit (par. 10-12, c) before attempting to adjust horns. If horns are at fault, or tone is poor, adjust each horn for specified current draw as follows:

1. Remove horn from car and remove the back shell, which is crimped over the collar at four points.

2. Inspect air gap between armature and core for steel burrs or other foreign matter; clean out if present. This may correct the trouble. If it does not, proceed as follows:

3. Connect an ammeter in series with the horn and a *fully charged* 12-volt battery to measure the current draw when horn blows. Current draw should be as follows:

Left (high note) horn. 9.5 Amps. min.

Right (low note) horn. 10.5 Amps. min.

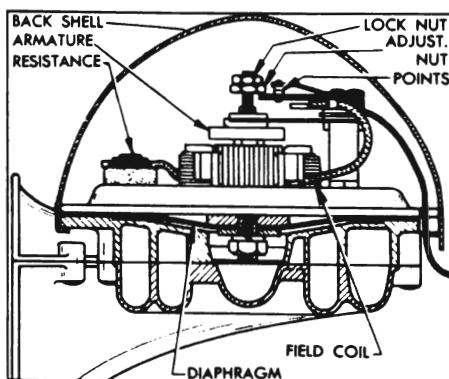


Figure 10-70—Horn Contact Point Adjustment

4. Adjust to specified current draw, if necessary, by loosening lock nut and turning contact point adjusting nut clockwise to decrease or counterclockwise to increase current draw. See figure 10-70. This adjustment is very sensitive, and adjusting nut should not be moved more

than one-tenth turn at a time, then locked with nut each time before trying the horn.

Increasing the current draw increases the horn volume. Too much current will produce a high cut-in voltage, which will cause a sputtering sound and may cause horn to stick in cold weather.

5. After each horn has been adjusted individually, sound both horns together to check for proper blend of tone.

6. After horn adjustment is completed install the back shell. Make sure that back shell is seated against horn collar all around, then crimp tangs of shell over collar at four points.

7. When horns are reinstalled, connect a voltmeter between each horn terminal and ground to check voltage when horns are blown. This should be at least 7 volts.

10-53 ADJUSTMENT OF HORN RELAY

Three checks and adjustments are required on the horn relay: air gap, point opening, and closing voltage. These should be made in the following order:

1. Remove horn relay from car then remove relay cover.

2. Push relay armature down until contact points just touch, then check air gap between armature and end of core using feeler gauges. Air gap should be .014". Adjust gap to .014", if necessary, by bending the lower point support. See figure 10-35.

3. With armature free, check contact point opening, using feeler gauges. Point opening should be .025". Adjust opening to .025", if necessary, by bending the upper armature stop. See figure 10-36.

4. Connect the positive terminal of a 12-volt battery to the battery (middle) terminal of horn relay.

5. Using a variable rheostat of 10 ohms minimum and a capacity of 2 amperes, connect one lead to the negative post of battery. Set rheostat to provide full resistance, then connect the other lead to the "S" terminal of relay.

6. Connect a 12-volt test lamp between negative post of battery and the "H" terminal of relay.

7. Connect positive lead of low reading voltmeter to the battery (middle) terminal of horn

relay and connect negative lead of voltmeter to the "S" terminal of relay.

8. Slowly decrease resistance until the test lamp lights, note the voltmeter reading, then turn rheostat to full resistance. Closing voltage should be 5.5 to 7.5 volts.

9. If closing voltage is not within specified limits, bend the armature spring post as required. Bend down to increase closing voltage or bend up to decrease closing voltage. See figure 10-37.

10. After proper closing voltage is obtained, install relay cover. Install relay on car and connect wires as shown in wiring circuit diagram in Section 10-J.

10-54 DIRECTION SIGNAL LAMPS AND SWITCH

a. Direction Signal Lamps and Indicators

The front direction signal light is produced by the 32 CP filament in the bulb mounted in the front parking lamp. The rear direction signal light is produced by the 32 CP filament of the 32-4 CP lamp bulb in the combination tail, stop, and direction signal lamp on each rear fender.

When the ignition switch is turned on and the direction signal switch is manually operated to indicate a turn, the front and rear signal lights flash on and off on the side of car for which a turn is indicated. The flashing of signal lights is caused by a Tungsol flasher which is connected into the proper signal light circuit by contacts made in the direction signal switch when switch is set for a turn.

When the direction signal lights are flashing, a signal indicator bulb on instrument panel also flashes, producing a small arrow of green light to indicate the direction for which the signal has been set.

b. Direction Signal Switch Operation

The direction signal switch and its operating mechanism are enclosed in a switch housing on the steering column just below steering wheel.

The switch is operated by a lever projecting from the left side of switch housing. Moving the control lever clockwise sets the switch to indicate a right turn and moving lever counterclockwise indicates a left turn.

The control lever is threaded to screw into a stub shaft anchored to a plate in switch housing which operates the switch. The stub

shaft fits into a recess in the housing to provide a bearing or pivot point for the lever and plate. A groove in right side of the lever plate engages the bakelite handle of the switch which is mounted in the lower side of housing below the lever plate. A detent spring mounted in the housing bears against a roller mounted on the lever plate to hold the plate in whatever position it may be set. Bosses in the housing provide stops for the plate when set for either turn. See figure 10-71.

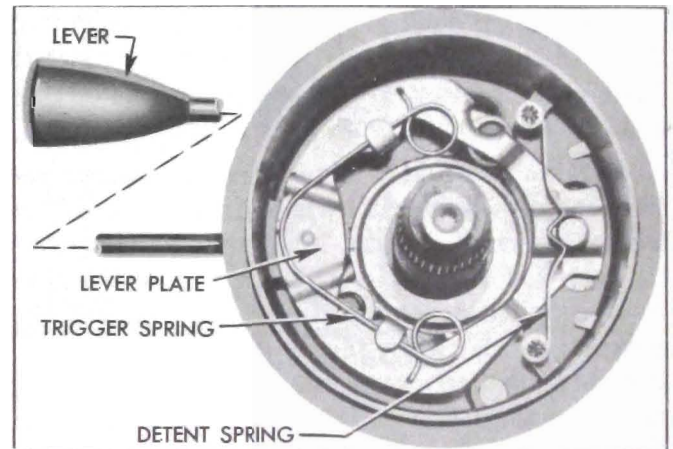


Figure 71—Direction Signal Switch

The trip mechanism for returning the switch to the "off" position after a turn is completed consists of a trigger spring on the lever plate and two switch centering pins on the steering wheel hub. The pins extend down through the lever plate, but when the switch is in the "off" position the lever plate is centered so that the pins cannot contact the trigger spring as the steering wheel is turned.

When the control lever is moved clockwise to set the switch for a right turn the lever plate is moved down, thereby moving the switch handle down and also bringing the upper loop of the trigger spring into the path of the centering pins. As the steering wheel is turned right and a centering pin contacts the trigger spring the spring yields to permit the pin to pass without interference. As the wheel is turned left at completion of the right turn, the centering pin pushes the loop of trigger spring against a stop on the lever plate, and this forces the lever plate and switch back to the "off" position.

A similar action but in the opposite direction takes place when the switch is set for a left turn. If the switch is erroneously set to indicate a turn in one direction and the turn is made in the opposite direction, the opposite centering

pin will contact the trigger spring and return the switch to the "off" position as the wrong turn is started.

c. Replacement of Signal Switch Parts

1. Remove steering wheel (par. 8-5).
2. Set signal switch for a right turn, remove the two switch housing attaching screws, loosen clamp where wiring harness emerges from column jacket, then lift housing assembly up over steering shaft.
3. Remove detent spring, unscrew control lever (has two flats near housing for wrench), then push against lower end of stub shaft to remove lever plate from switch housing.
4. If switch and wiring harness require replacement, disconnect wires from fuse block under the cowl. Plastic insulators will have to be removed from wires before wiring harness can be pulled from steering column jacket. To remove an insulator, pierce it with a sharp instrument directly over connector locking tang to force tang down. Wire and connector can then be pulled out. (Be sure locking tang is lifted up before reinstalling.) Carefully pull

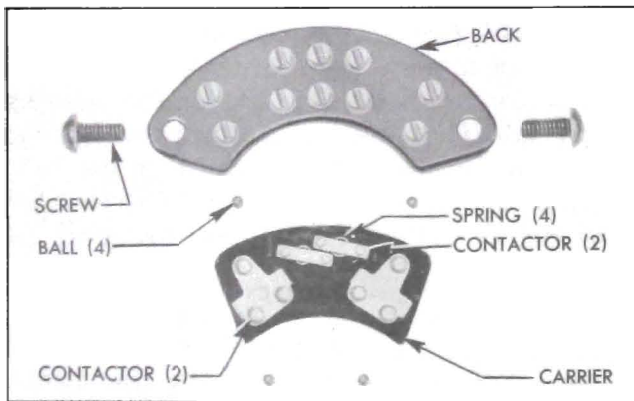


Figure 10-72—Signal Switch Parts

harness out of steering column jacket.

5. Lay switch housing flat on bench, remove switch attaching screws, switch back with wiring harness, carrier with contactors, and the four small steel balls. See figure 10-72.

6. When switch parts are being installed, use a small amount of petroleum jelly to hold a steel ball in each of the four bearing grooves in carrier and place carrier in switch housing. Install springs and contactors in carrier as shown in figure 10-72, then install switch back with two screws.

7. When switch assembly is reinstalled, tighten wiring harness clamp on column jacket, then connect switch wires to fuse block as shown in the chassis wiring circuit diagrams in Section 10-J.

8. Before installing the lever plate, apply a light coat of Lubriplate to the switch handle and to the stub shaft of lever plate.

9. Install steering wheel and adjust horn ring (par. 8-5).

d. Direction Signal Lamp Circuits

Since the direction signal lights are independent of the headlamp lighting switch and thermo circuit breaker, the wiring circuits are protected by a "Direction Signal" fuse on the fuse block under the cowl. The Tungsol flasher is also mounted on the fuse block, which serves as a terminal block between the signal switch and the chassis wiring.

Figures 10-73, 10-74, and 10-75 show the direction signal circuits when signal switch is set for No Turn, Right Turn, and Left Turn. Direction signal switch wiring is also shown in the chassis wiring circuit diagrams in Section 10-J.

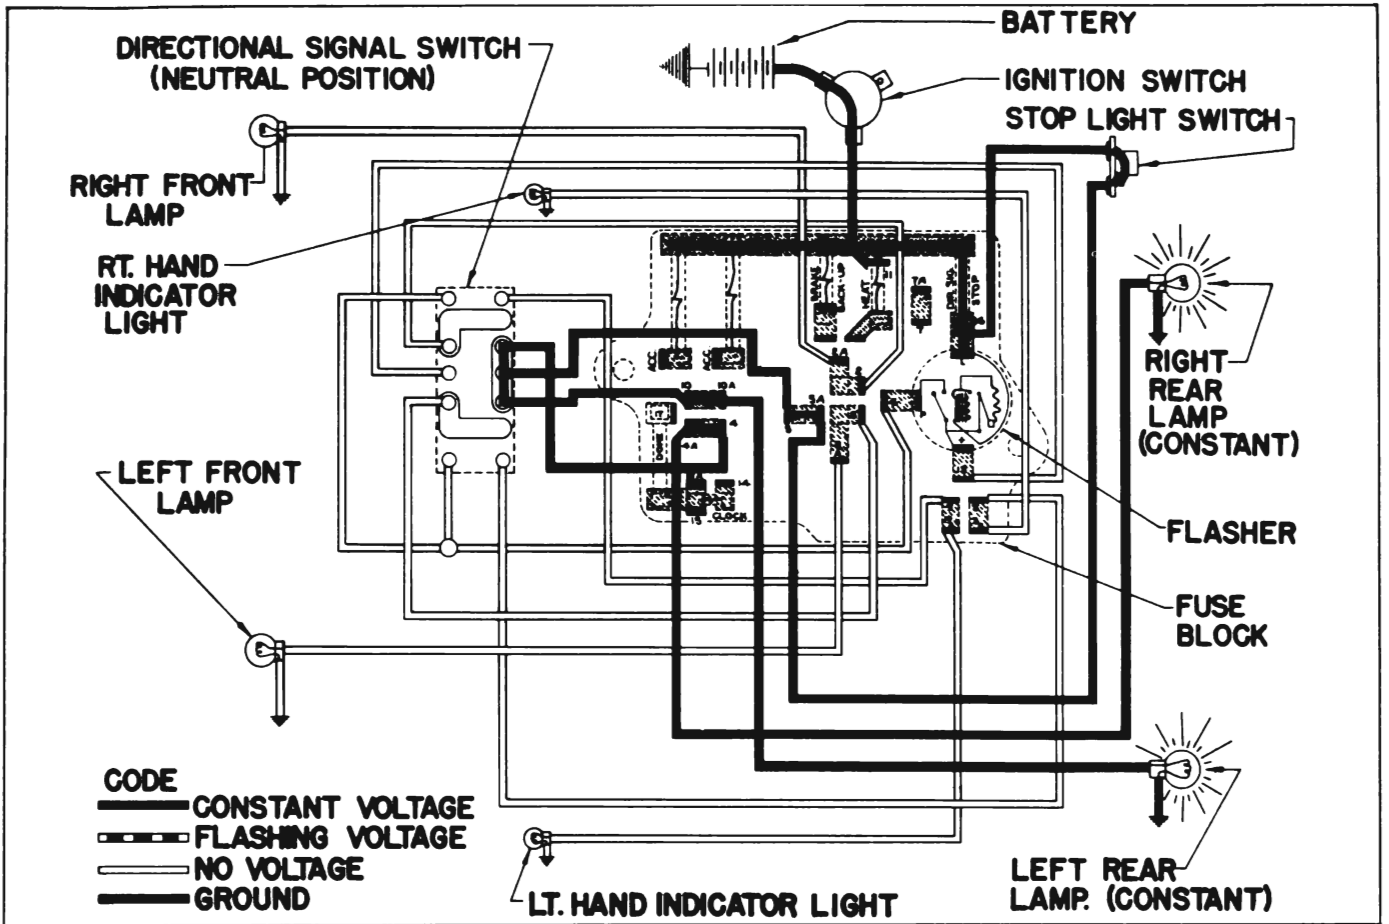


Figure 10-73—Direction Signal Lamp Circuit Diagram—No Turn Indicated (Stop Lights On)

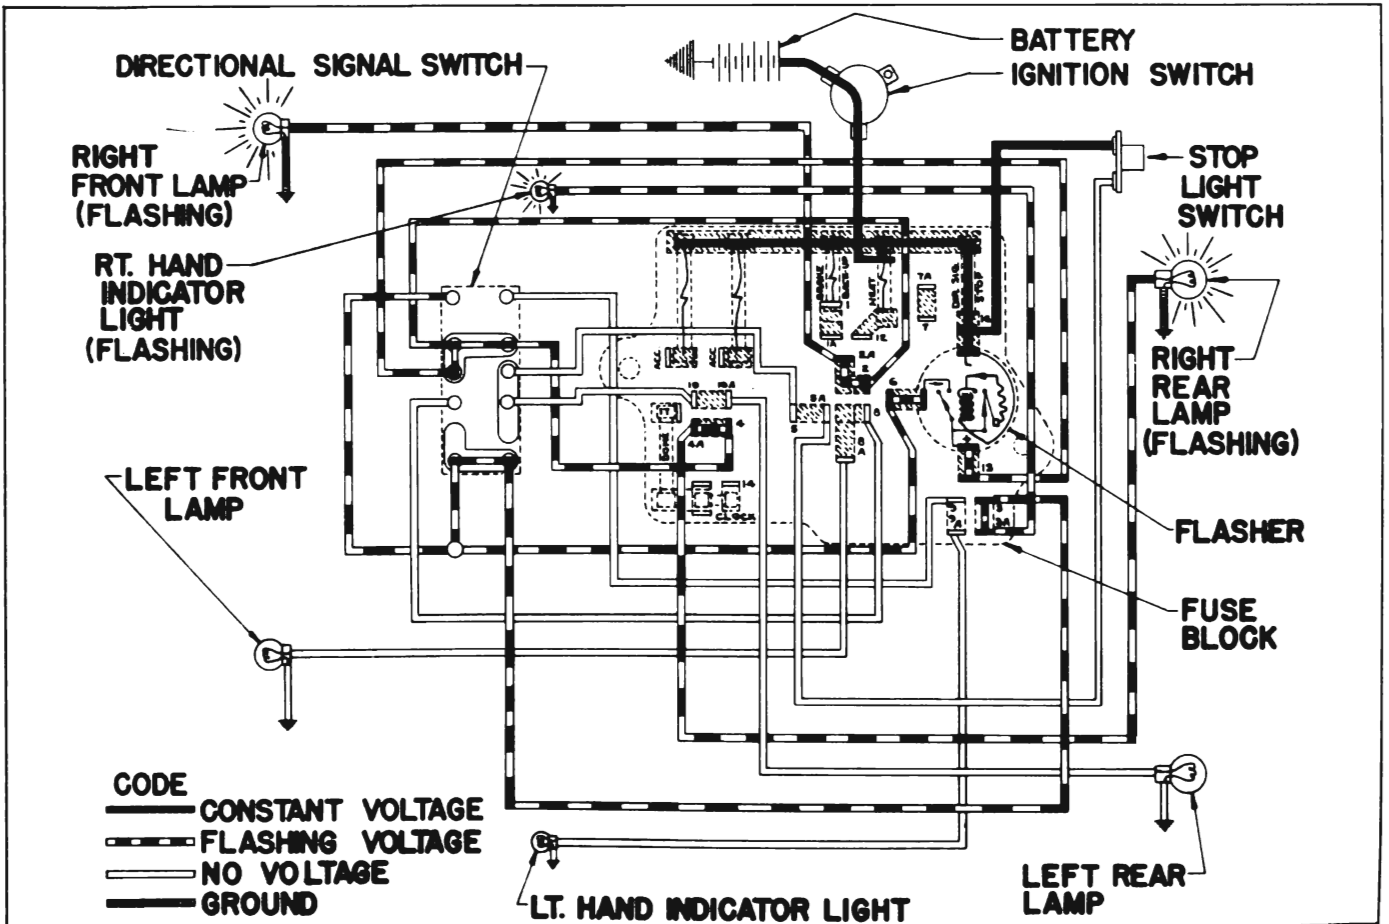


Figure 10-74—Direction Signal Lamp Circuit Diagram—Right Turn Indicated (Stop Lights Off)

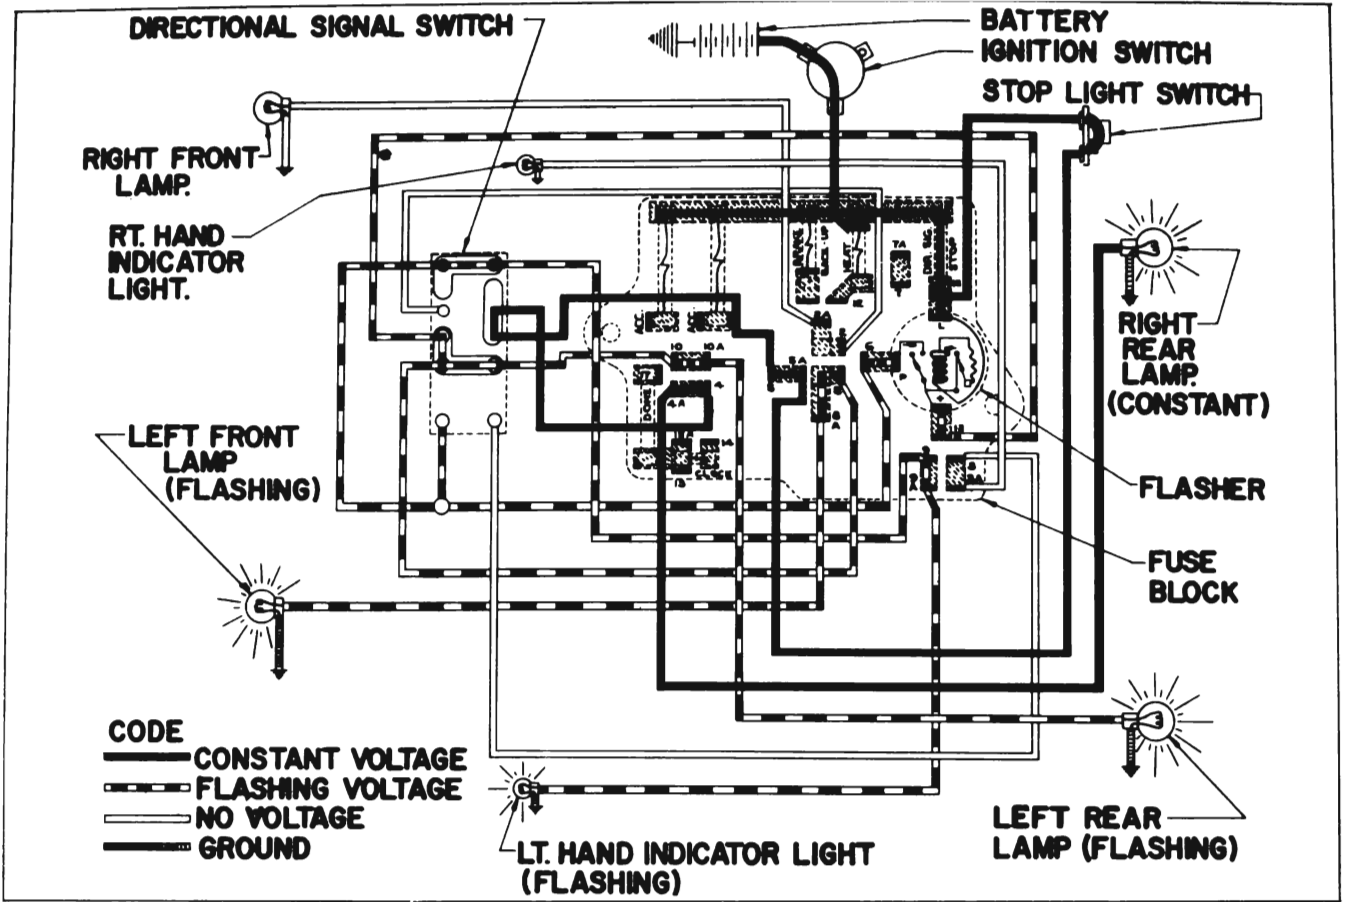


Figure 10-75—Direction Signal Lamp Circuit Diagram—Left Turn Indicated (Right Stop Light On)