

SECTION 16

ELECTRICAL

INDEX

Subject	Page	Subject	Page
Introduction	16-1	Four-Way Tilt Seat	16-26
Power Windows and Ventilators	16-2	Description	16-26
Power Operated Windows - All Series	16-2	Checking Procedure	16-29
Description	16-2	A. Checking for Current at Circuit	
Cross-Over Harness	16-3	Breaker	16-29
Feed Harness for Rear Doors or		B. Checking Ignition Relay	16-30
Quarter Windows	16-3	C. Checking Feed Continuity at Relay	
Quarter Window Harness	16-5	on Motor	16-32
Rear Door Window Harness	16-5	D. Checking for Current at Switch	16-32
Motor Description	16-5	E. Checking Control Switch	16-32
Relay	16-6	F. Checking Wires Between Switch and	
Cut-Out Switch	16-6	Motor Relay	16-34
Power Window Circuit Checking		G. Checking Relay	16-34
Procedures	16-6	H. Checking Motor	16-34
A. Checking Feed Circuit Continuity		I. Checking Wires Between Switch and	
at Circuit Breaker	16-7	Solenoids	16-35
B. Checking Relay Assembly at Shroud -	16-8	J. Checking Solenoid	16-35
C. Checking for Current at Cut-Out		K. Trouble Shooting	16-36
Switch - Cadillac	16-8	Six-Way Tilt Seats	16-37
D. Checking Cut-Out Switch - Cadillac	16-10	Description	16-37
E. Checking Feed Circuit Continuity		Circuit Checking Procedures	16-38
at Window Control Switch	16-10	A. Checking Feed Circuit Continuity at	
F. Checking Window Control Switch	16-10	Circuit Breaker	16-39
G. Checking Wires Between Door		B. Checking Relay Assembly at Shroud	16-40
Switch and Motor	16-11	C. Checking Feed Circuit Continuity at	
H. Checking Wires Between Quarter		Control Switch	16-41
Window Switch and Motor	16-12	D. Checking Control Switch	16-41
I. Checking Window Motor	16-12	E. Checking Feed Circuit Continuity at	
J. Trouble Shooting	16-12	Relay on Seat Motor	16-41
Power Operated Ventilators	16-14	F. Checking Wires Between Switch and	
Description	16-14	Motor Relay	16-42
Power Operated Tail Gate Window	16-14	G. Checking Relay	16-42
Electrical Tail Gate Window Circuit	16-14	H. Checking Motor Assembly	16-42
Checking Procedure	16-16	I. Checking Wire Between Solenoid and	
A. Checking Feed Circuit Continuity		Switch	16-43
at Circuit Breaker	16-18	J. Checking Solenoid	16-43
B. Checking Relay Assembly at Shroud -		Three-Way Jumper Wire for Checking	
Oldsmobile "A" and Chevrolet "B"	16-18	Seat Switch	16-45
C. Checking Feed Circuit Continuity		Trouble Shooting	16-46
at Control Switch on Instrument Panel	16-18	Tail Lamps	16-47
D. Checking Control Switch at		Sealing	16-47
Instrument Panel	16-18	Bulb Usage Chart	16-47
E. Checking Control Switch on Tail Gate	16-23	Tail Lamp Service Operations	
F. Checking the Tail Gate Window Motor	16-23	Chevrolet	16-52
G. Checking Operation of Safety Switch	16-24	Pontiac	16-54
H. Trouble Shooting	16-24	Oldsmobile	16-56
Seats	16-25	Buick	16-58
Horizontal Seats	16-25	Cadillac	16-60
Description	16-25		
Trouble Shooting	16-25		

BODY ELECTRICAL

INTRODUCTION

The body electrical equipment for all body styles

is grouped into sections of power windows and ventilators, power tail gate window (station wagon), power seats (horizontal, four-way and six-way) and tail lamps.

16-2 ELECTRICAL

Each section combines all styles and series together which incorporates the power equipment unless stated otherwise in the procedure.

Typical body wiring circuit diagrams are located at the end of this section (Fig. 16-86 thru 16-92).

Circuit wiring for power equipment is protected by a circuit breaker (40 ampere in most cases) and is located as follows:

<u>DIVISION</u>	<u>STYLE</u>	<u>LOCATION</u>
Chevrolet	All	Engine Compartment Bulkhead
Pontiac	"A & B"	Engine compartment
Oldsmobile	"A"	Engine Compartment - at horn relay
	"B-C"	Engine Compartment - at horn relay
	"E"	Right Fender Filler Plate - at junction block stud
Buick	All Styles	In fuse block - plug-in type
Cadillac	"C"	In fuse block - plug-in type

POWER WINDOWS AND VENTILATORS

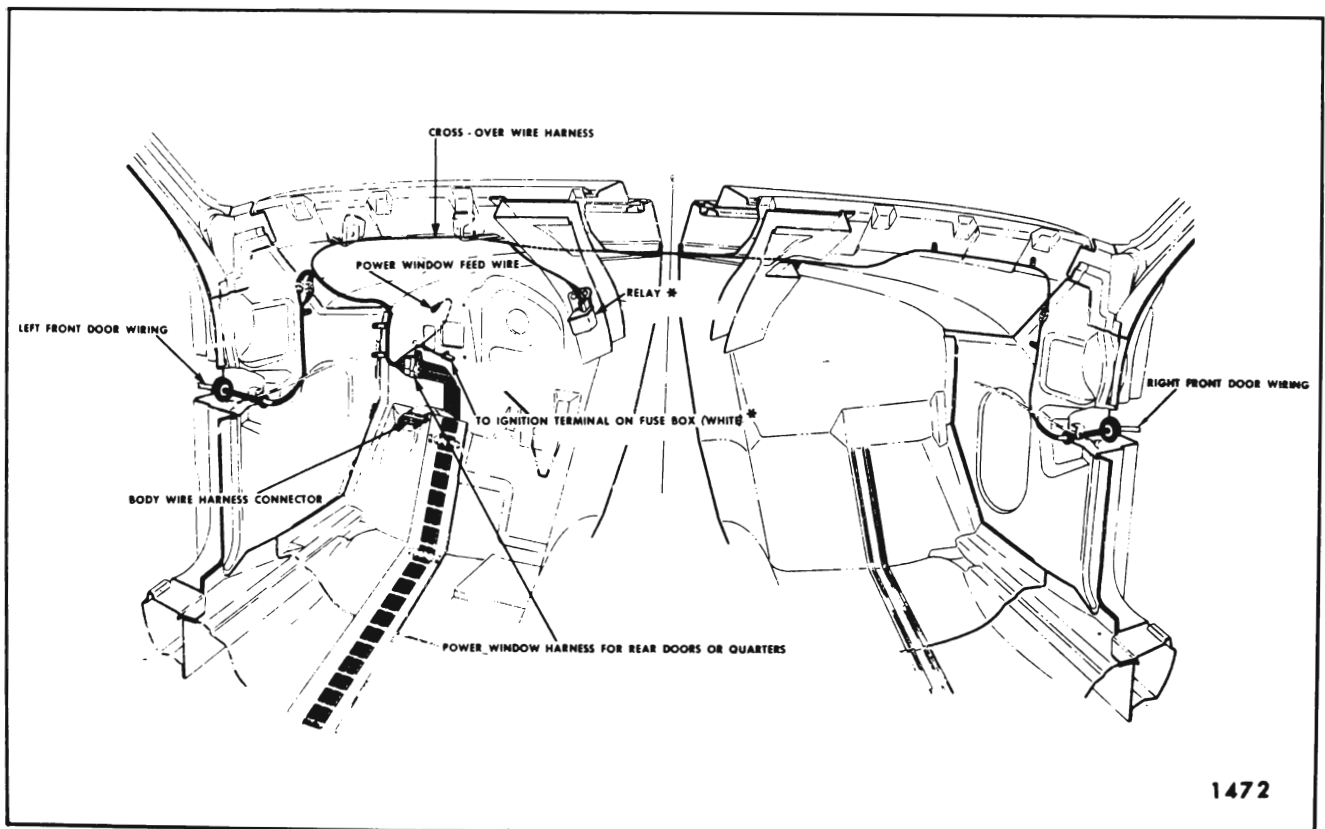


Fig. 16-1 —Front End Power Window Wiring - All "A" Body Styles

POWER OPERATED WINDOWS— All Series

DESCRIPTION

The wiring harness for the electrically operated windows consists of the following major sections:

1. Cross-over harness
2. Feed harness to rear doors or quarter windows
3. Left and right rear door or quarter window harness
4. Left and right front door window harness

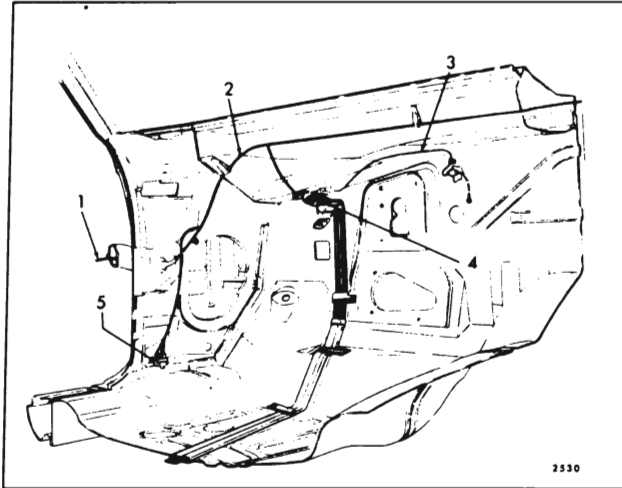


Fig. 16-2 — Front End Power Window Wiring - Chevrolet "B" Styles

- | | |
|-----------------------|----------------------------------|
| 1. Front Door Wiring | 4. Power Window Wiring Connector |
| 2. Cross-Over Harness | 5. Ignition Relay |
| 3. To Circuit Breaker | |

CROSS-OVER HARNESS

This harness is installed beneath the instrument panel and completes the circuit from the right door to the left door windows on all styles except on Cadillac styles (See Figs. 16-1 through 16-6).

On Cadillac "C" styles the cross-over harness is part of the body and rear door or quarter feed harness and is installed under the front seat (See Fig. 16-7).

On Cadillac "E" styles the cross-over harness is installed at the front of the floor pan (See Fig. 16-8).

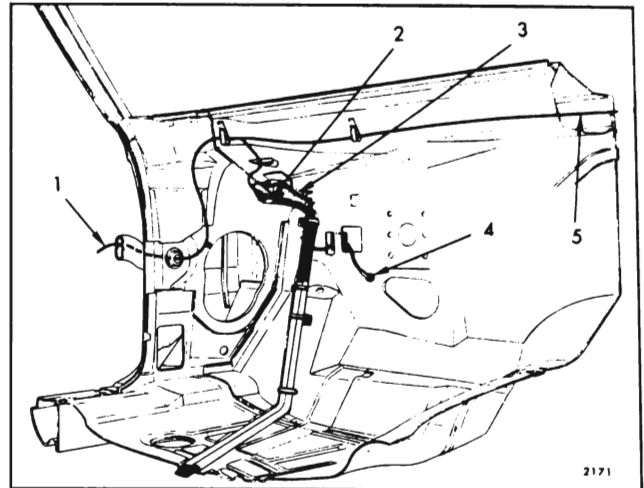


Fig. 16-4 — Front End Power Window Wiring - Oldsmobile "B-C & E" Styles

- | | |
|---|----------------------------------|
| A. Front Door Wiring | D. To Circuit Breaker |
| B. Ignition Relay | E. To Fuse Block |
| C. Power Seat Feed on 38439-67 and 38669 only | F. Power Window Wiring Connector |
| | G. Cross-Over Harness |

FEED HARNESS FOR REAR DOORS OR QUARTER WINDOWS

This harness connects to the front cross-over harness on the left side of the shroud (fire wall) and extends rearward under the body wire harness on all styles except Chevrolet "F" and Cadillac. In two door styles the quarter window harness divides at the rear of the rear seat on all styles except Chevrolet "F" and Cadillac (See Figs. 16-9 through 16-16).

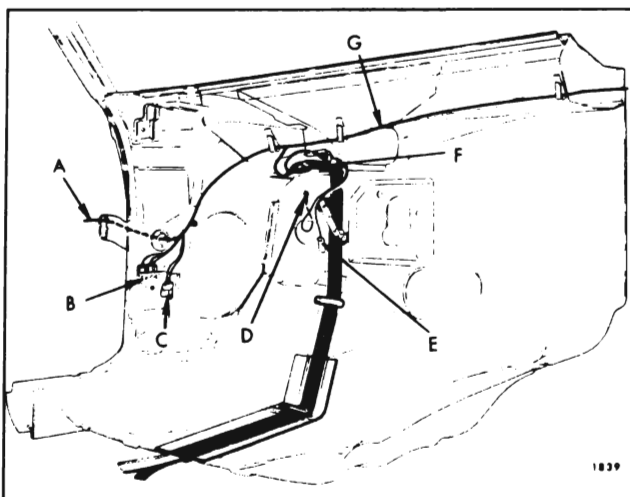


Fig. 16-3 — Front End Power Window Wiring - Pontiac "B" Styles

- | | |
|----------------------------------|--------------------------|
| 1. Front Door Wiring | 3. Body Wiring Connector |
| 2. Power Window Wiring Connector | 4. To Circuit Breaker |
| | 5. Cross-Over Harness |

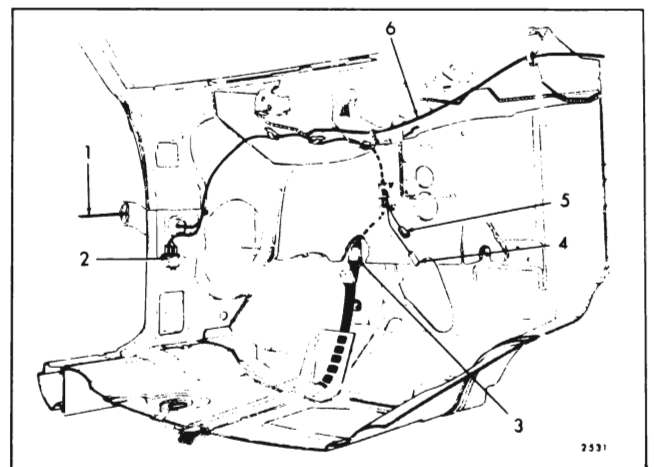


Fig. 16-5 — Front End Power Window Wiring - Buick "B" Bodies

- | | |
|----------------------------------|-----------------------|
| 1. Front Door Wiring | 4. To Fuse Block |
| 2. Ignition Relay | 5. To Circuit Breaker |
| 3. Power Window Wiring Connector | 6. Cross-Over Harness |

16-4 ELECTRICAL

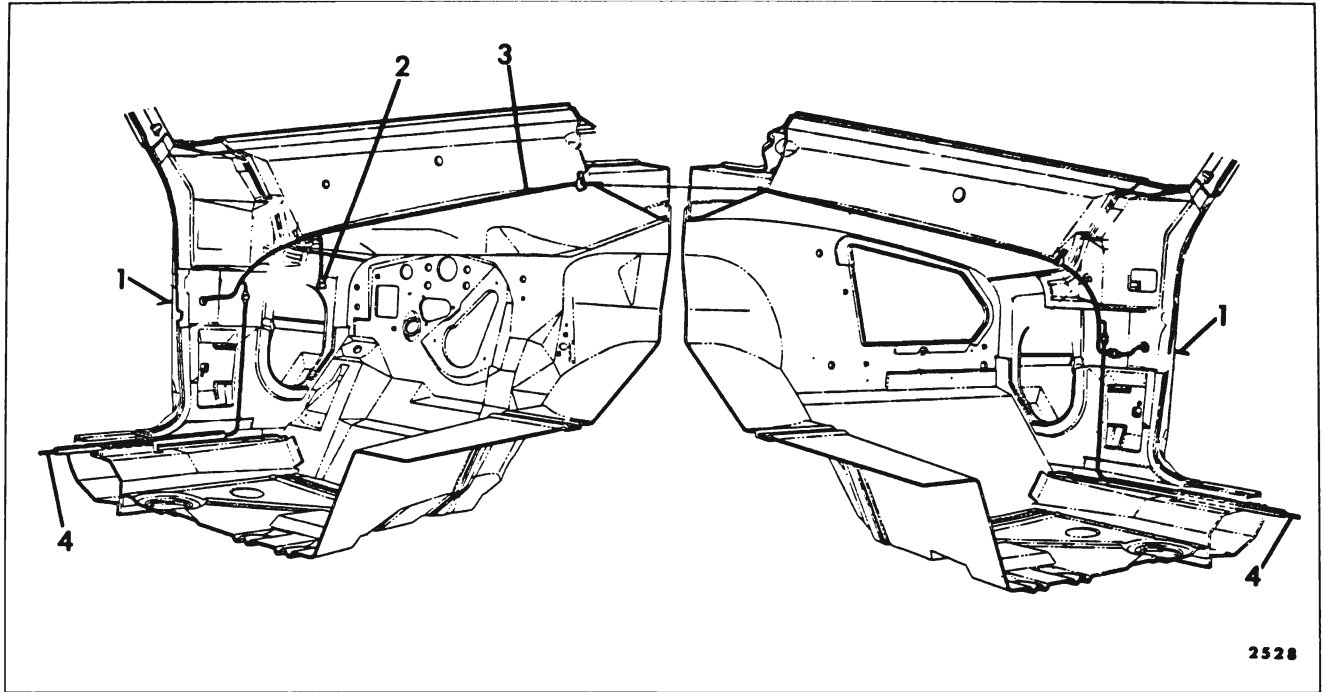


Fig. 16-6—Front Power Window Wiring - Chevrolet "F" Body

- 1. Door Wiring
- 2. Feed Connector

- 3. Cross-Over Harness
- 4. Quarter Window Wiring

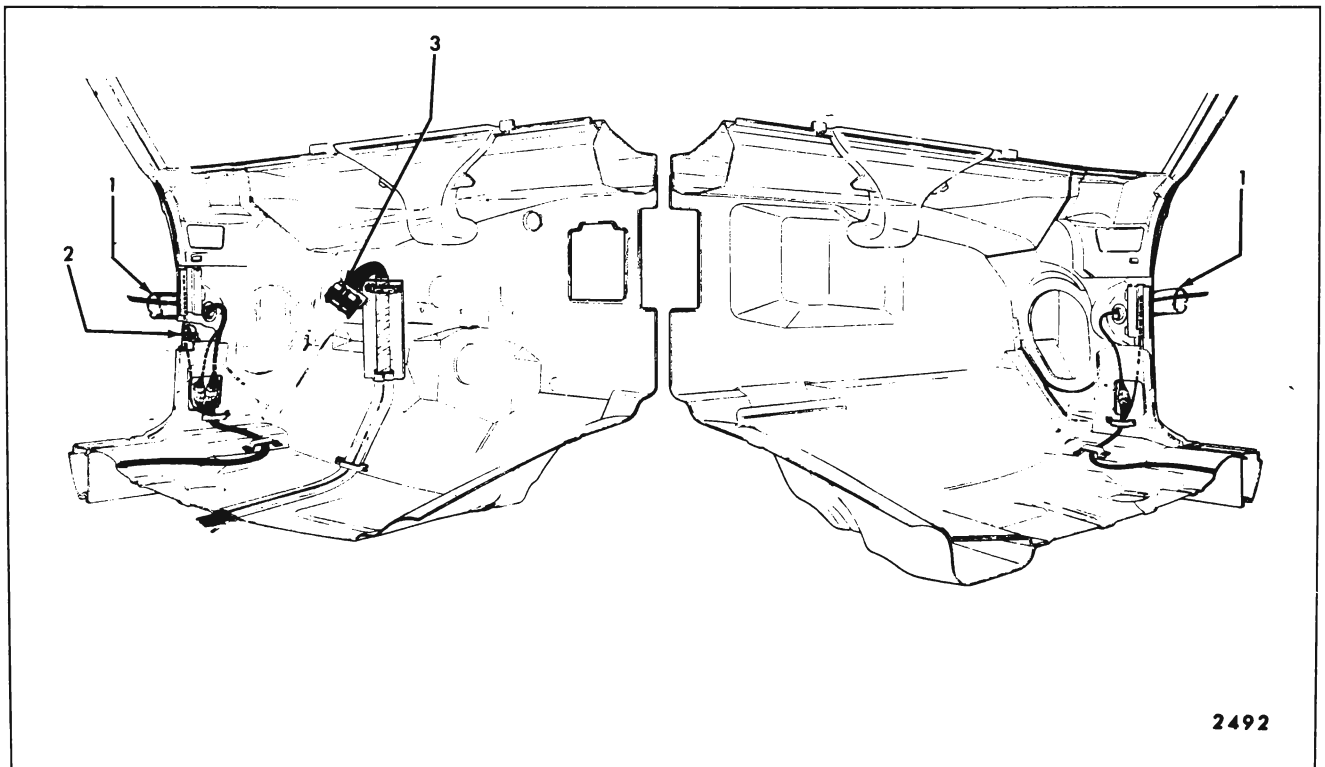


Fig. 16-7—Front End Power Window Wiring - Cadillac "C" Body

- 1. Door Wiring
- 2. Ignition Relay

- 3. Body and Power Window Front Connector

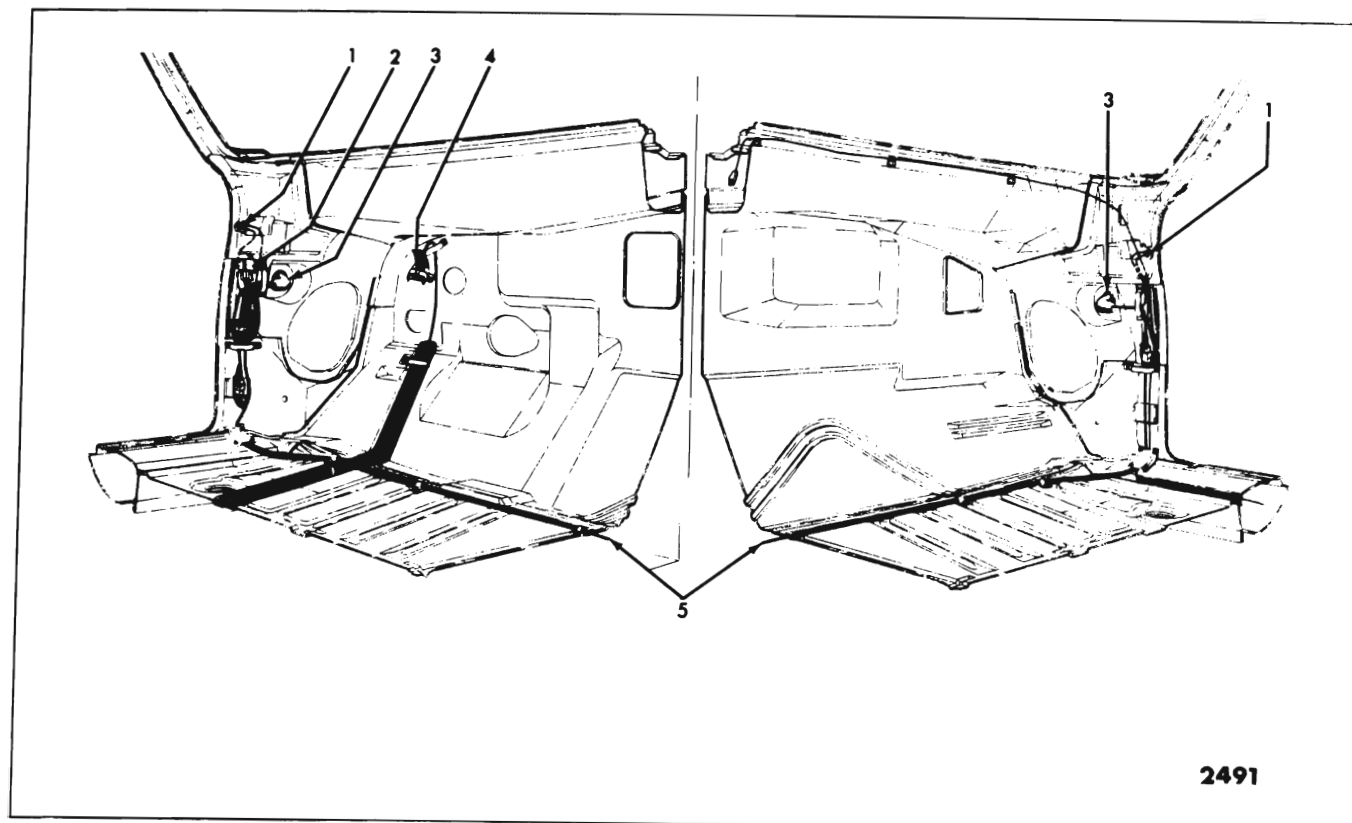


Fig. 16-8—Front End Wiring - Cadillac "E" Body

1. To Door Jamb Switch
2. Ignition Relay
3. Conduit for Door Wiring

4. Front Body Wire Harness Connector
5. Cross-Over Harness

On Chevrolet "F" styles the harness for the rear quarter window is installed on top of the rocker inner panel on each side of the body (See Figs. 16-17 and 16-18). On Cadillac styles the harness divides at the front of the rear seat (See Figs. 16-19, 16-20 and 16-21). The rear door window harness divides at rear of the front seat (See Fig. 16-22).

QUARTER WINDOW HARNESS

The left and right wire harness connects to the main feed harness behind the rear quarter arm rest foundation on convertible styles except on Cadillac styles and Chevrolet "F" styles, and under the rear seat cushion on 07, 17, 37, 47 and 87 styles. On Cadillac styles and Chevrolet "F" styles, the quarter window harness is part of the main feed harness.

REAR DOOR WINDOW HARNESS

The left and right rear door harness connects to the main flat feed harness in the base of the center pillar. To disengage the connector, pull harness

inboard at base of center pillar for accessibility. See Figs. 16-22, 16-23, 16-24 and 16-25.

MOTOR DESCRIPTION

Power windows are operated by a rectangular shaped 12 volt series-wound motor with an internal circuit breaker and a self-locking rubber coupled gear drive. The harness to the door window motor connector is designed with a locking embossment to insure a positive connection. When disengaging the harness connector from the door motor, it is necessary to depress the thumb release. When installing the harness, the thumb release must be held depressed until the embossment on the female connector is locked in the hole of the motor connector.

Some rear quarter window motors and ventilator motors are designed with a locking type connector which should not be disengaged. When testing or removing the motor, the in-line connector located inboard of the inner panel should be disengaged.

Tests are made at this location on those styles. The power window circuit is protected by a circuit

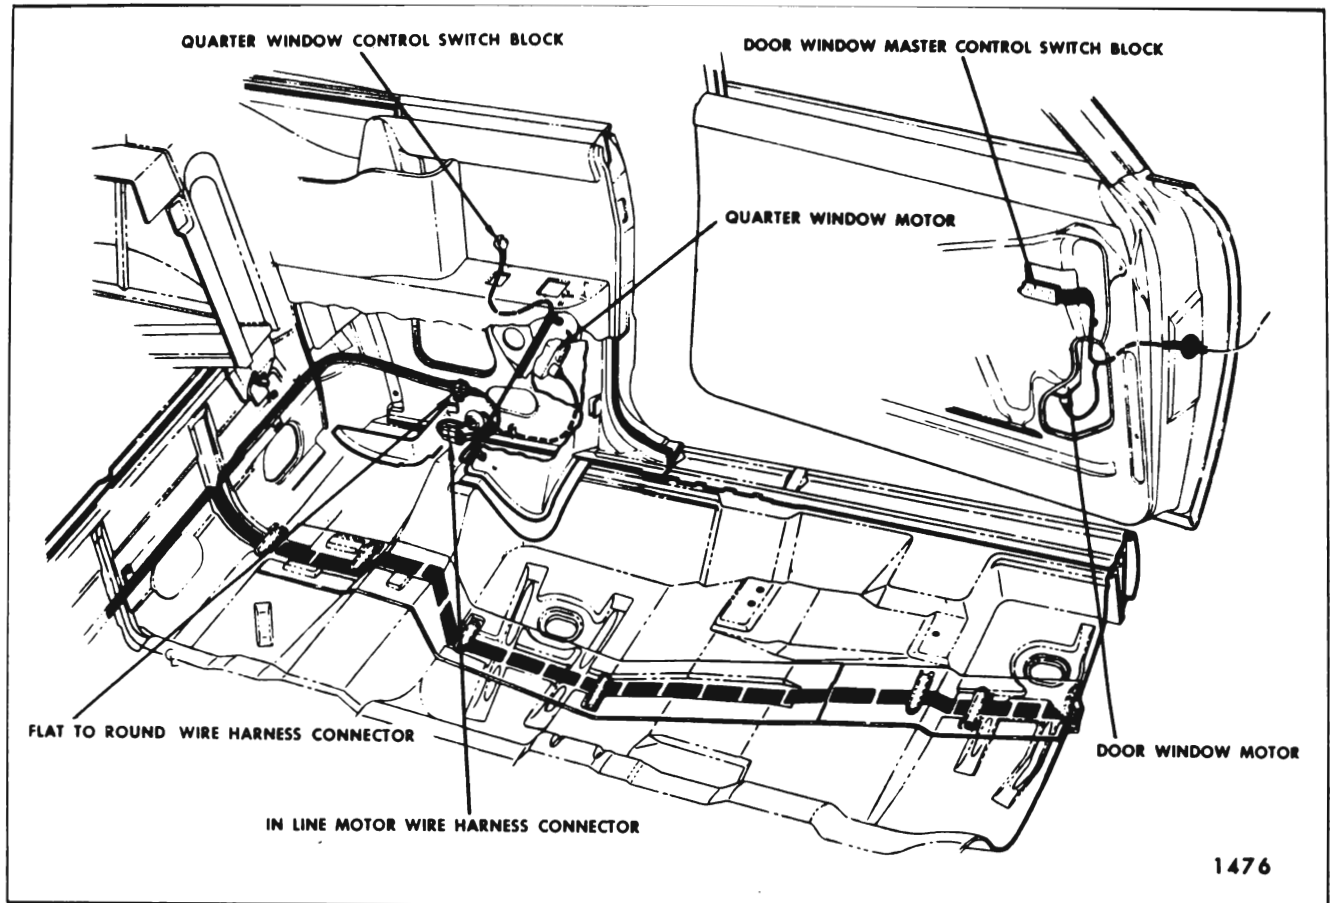


Fig. 16-9 — Left Side Power Window Wiring - "A" 67 Styles

breaker. Refer to electrical introduction for specific locations.

RELAY

All styles - In addition to the circuit breaker, a relay is used in the circuit. The relay prevents the operation of the power windows until the ignition switch is turned "on".

CUT-OUT SWITCH

A cut-out switch (Cadillac styles only) installed on the left front door arm rest, is designed to temporarily by-pass the relay circuit so the windows may be operated only from the master control switch when the ignition is in the off position.

To perform this operation, the cut-out switch control button is held in the "EMERG" position while the master control switch buttons are actuated. When the cut-out button is released, the button will return to the "LOCK" position.

The cut-out switch button should be set in the "NORMAL" position when ignition switch is "ON" to permit normal operation of power windows from all switch locations. If the control button is left in the "LOCK" position with the ignition switch on, the windows will operate only from the master control switch.

POWER WINDOW CIRCUIT CHECKING PROCEDURES

Failures in a circuit are usually caused by short circuits or open circuits. Open circuits are usually caused by breaks in the wiring, faulty connection or mechanical failure in a component such as a switch or circuit breaker. Short circuits are usually caused by wires from different components of the circuit contacting one another or by a wire or component grounding to the metal of the body due to a screw through the wire, insulation cut through by sharp metal edge, etc.

It may be necessary to use only one or all of the procedures outlined to locate an electrical failure

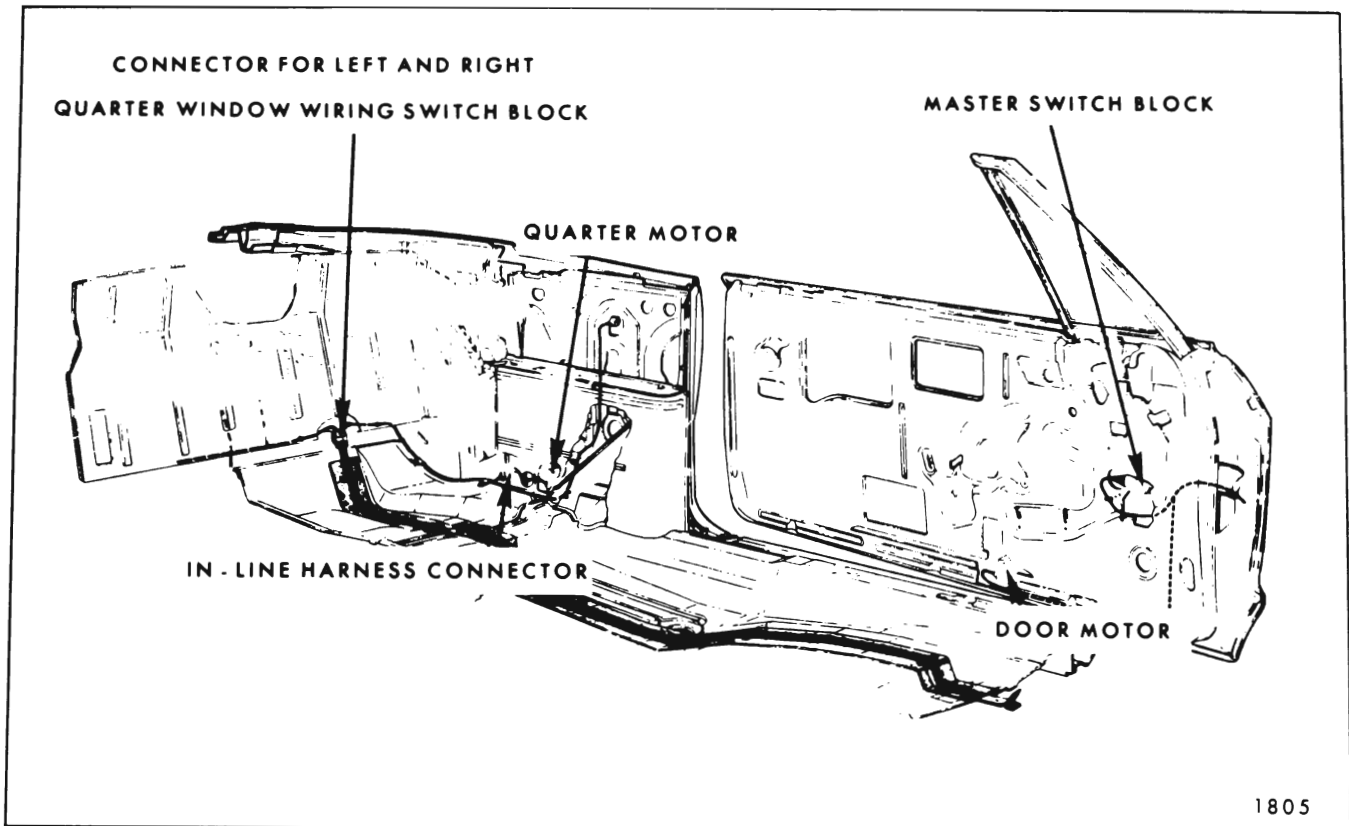


Fig. 16-10—Left Side Power Window Wiring - 67 "B & C" Styles

in the circuit. If the location of the failure is evident follow only the steps required to check the affected wire or component. If the location of the failure is not evident, follow the procedure as outlined. Be sure to check the harness connectors for proper engagement and become familiar with the typical circuit diagrams. (See Figs. 16-26 through 16-34).

a. Checking Feed Circuit Continuity at Circuit Breaker

1. Connect one test light lead to battery side of circuit breaker and ground other lead. If tester does not light, there is an open or short circuit in feed circuit to breaker.

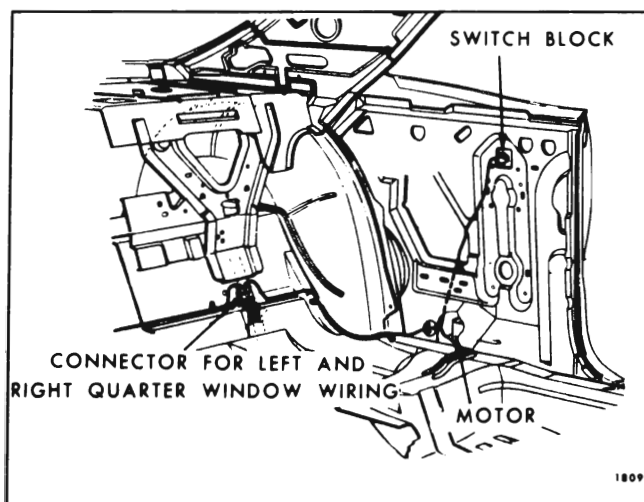


Fig. 16-11—Rear Quarter Power Window Wiring - "B & C" 37, 47, 87 Styles

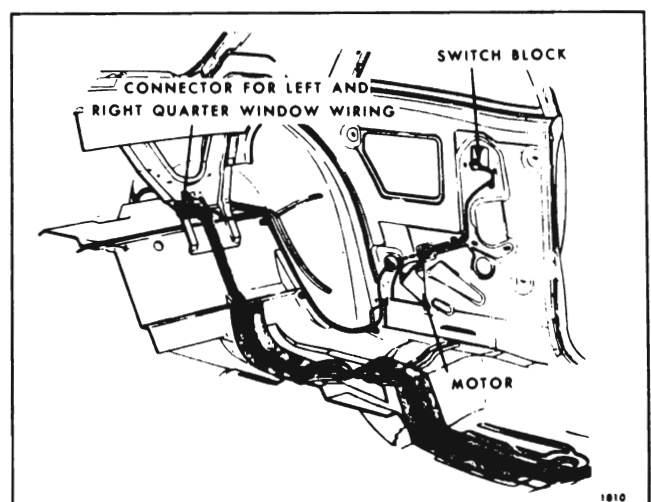


Fig. 16-12—Rear Quarter Power Window Wiring - "B-11" Styles

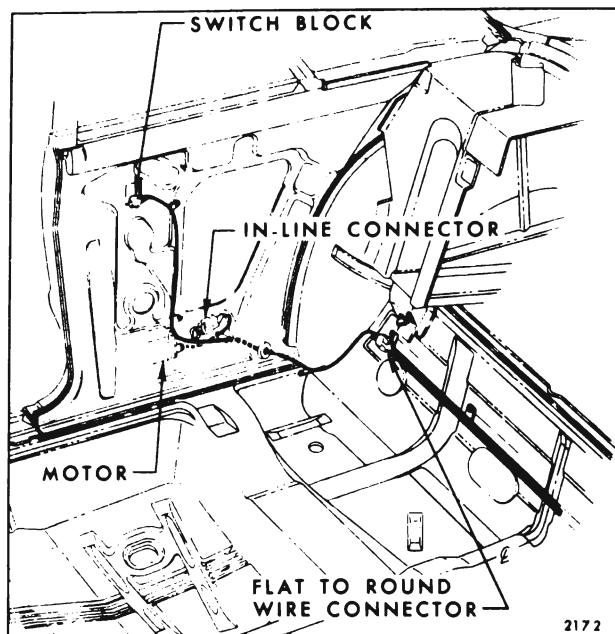


Fig. 16-13—Rear Quarter Window Wiring -
"A" Coupe Less 67 Styles

2. To check circuit breaker, disconnect the output feed wire (the wire opposite the power source feed to the breaker) from the breaker and with test light, check terminal from which wire was disconnected. If tester does not light, circuit breaker is inoperative.

b. Checking Relay Assembly at Shroud

1. With test light, check relay feed. If tester does not light, there is an open or short circuit between relay and circuit breaker.
2. Turn ignition switch on and with test light check output terminal of relay. If tester does not light, the relay is inoperative or there is a short or open circuit between ignition switch and relay assembly. (Check fuse at dash panel).

c. Checking for Current at Cut-Out Switch— Cadillac Only

1. Connect one test light lead to relay by-pass

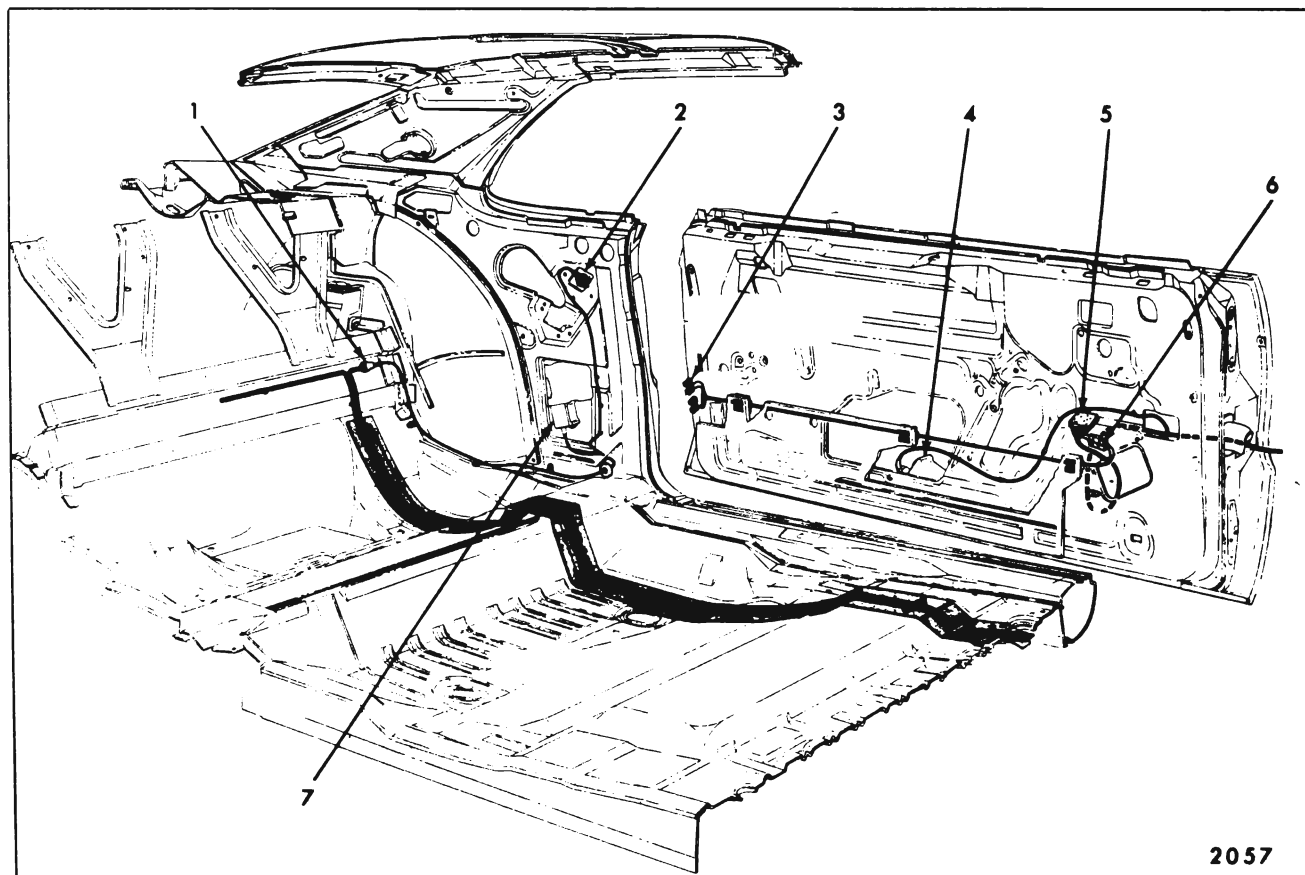


Fig. 16-14—Left Side Power Window Wiring - Oldsmobile "E" Optional

- | | | |
|---------------------------------|--------------------------------|---------------------------------|
| 1. Flat to Round Wire Connector | 3. Optional Door Courtesy Lamp | 6. Door Courtesy Lamp Connector |
| 2. Quarter Window Switch Block | 4. Door Window Motor | 7. Quarter Window Motor |
| | 5. Master Control Switch Block | |

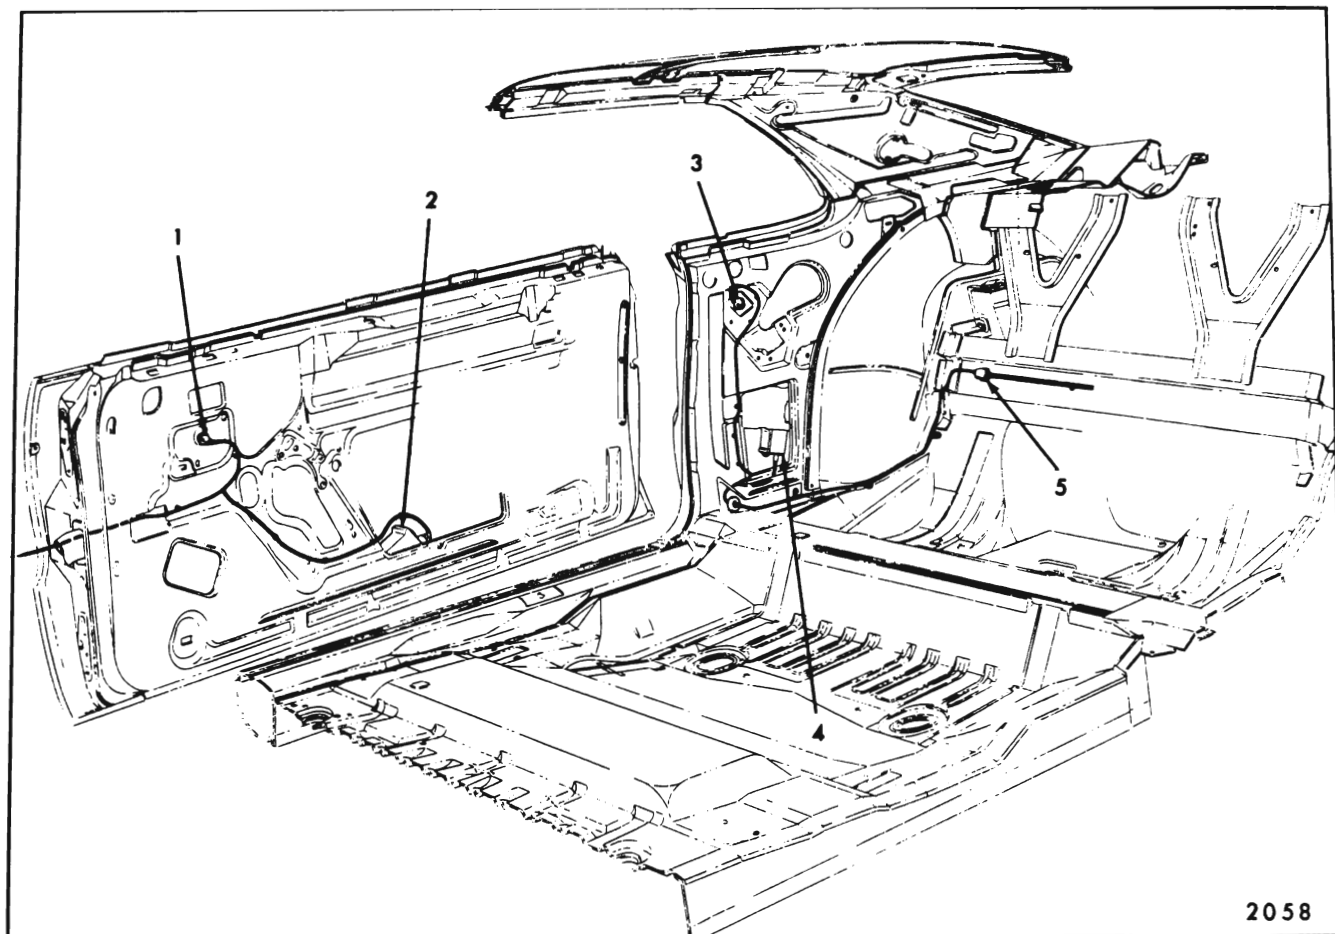


Fig. 16-15—Right Side Power Window Wiring - Oldsmobile "E" - Standard

- | | |
|--------------------------------|---------------------------------|
| 1. Door Window Switch Block | 4. Quarter Window Motor |
| 2. Door Window Motor | 5. Flat to Round Wire Connector |
| 3. Quarter Window Switch Block | |

(over ride) terminal (orange-black stripe) of the switch block and ground other test lead.

2. If tester does not light, there is an open or short circuit between by-pass feed source and cut-out switch.

NOTE: Current should be present whether ignition is "on" or "off".

3. With ignition switch on, connect one test light lead to the master window control switch feed terminal (red-white stripe) of the switch block and ground other test lead.

4. If tester does not light, there is an open or short circuit between the relay and cut-out switch.

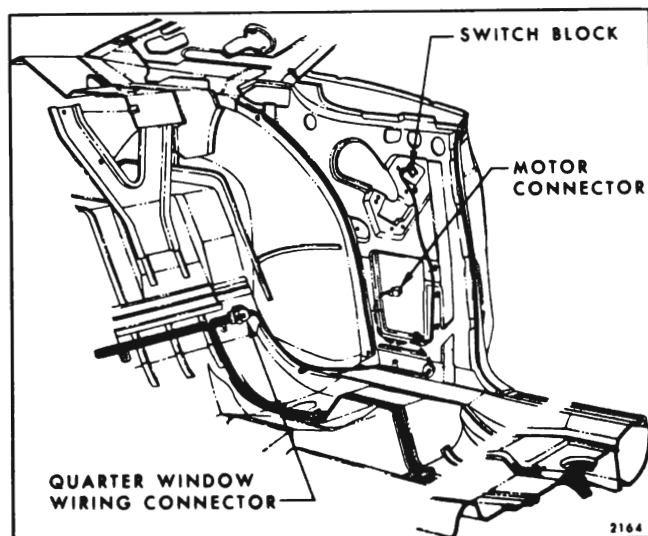


Fig. 16-16—Rear Quarter Power Wiring - Buick "E" Styles

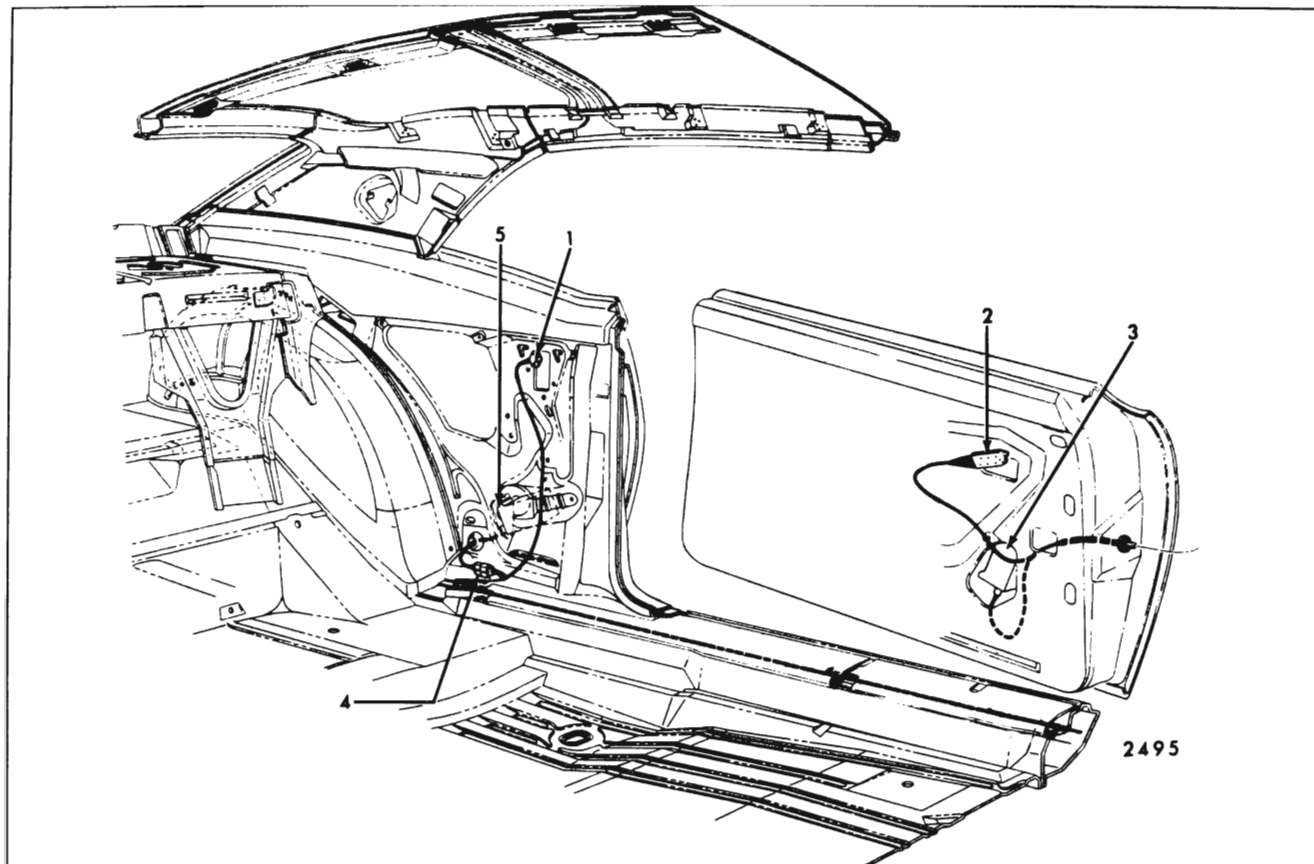


Fig. 16-17 —Left Side Power Window Wiring - Chevrolet "F" Styles

- | | |
|--------------------------------|----------------------|
| 1. Quarter Window Switch Block | 3. Door Motor |
| 2. Master Control Switch Block | 4. In-Line Connector |
| | 5. Quarter Motor |

d. Checking Cut-Out Switch—Cadillac Only

1. With ignition switch off, connect one end of a #12 gauge jumper wire to by-pass feed terminal (over-ride) (orange-black stripe) and the other end to the center terminal (master control switch feed - red-white stripe).
2. Operate master control switch. If windows operate with jumper wire but not with the cut-out switch, the by-pass side of the switch is defective.
3. With the ignition switch on, connect one end of a #12 gauge jumper wire to center terminal (master control switch feed - red-white stripe) and the other end in the right and left rear quarter or door and right front door feed terminal (pink-black stripe).
4. Operate control switches. If any of the windows operate with the jumper but not with the cut-out switch, the switch is defective.

e. Checking Feed Circuit Continuity at Window Control Switch

1. Connect one test light lead to feed terminal of switch block and ground other tester lead to body metal (see Fig. 16-35).
2. If tester does not light, there is an open or short circuit between switch and power source.

f. Checking Window Control Switch

1. Insert one end of a #12 gauge jumper wire to the switch feed terminal and the other end to one of the motor lead terminals in the switch block. Repeat this check on the remaining motor lead terminal (see Fig. 16-36).
2. If the window operates with the jumper wire, but does not operate with the switch, the switch is defective.

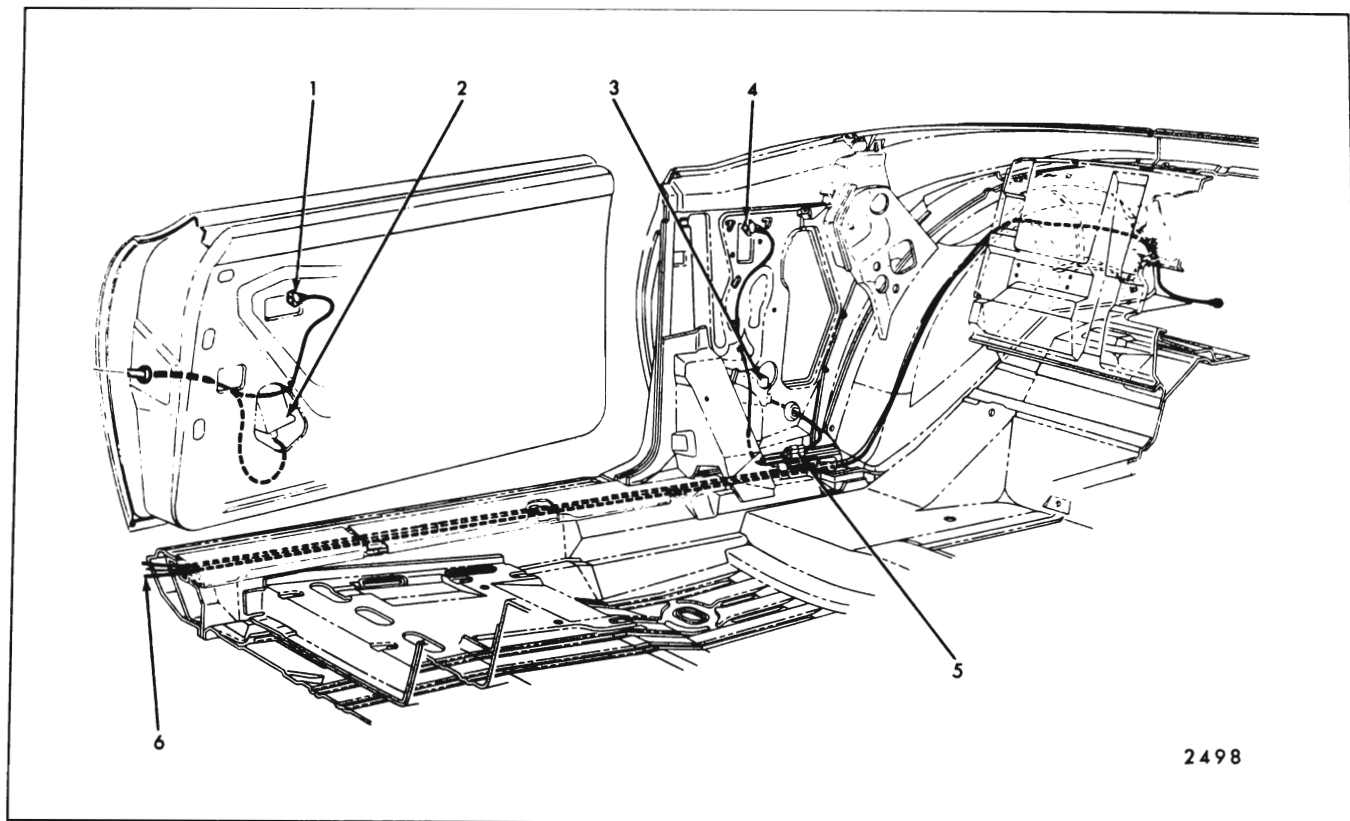


Fig. 16-18—Right Side Power Window Wiring - Chevrolet "F"

1. Door Window Switch Block
2. Door Motor
3. Quarter Motor

4. Quarter Window Switch Block
5. In-Line Connector
6. Quarter Window and Accessory Wiring

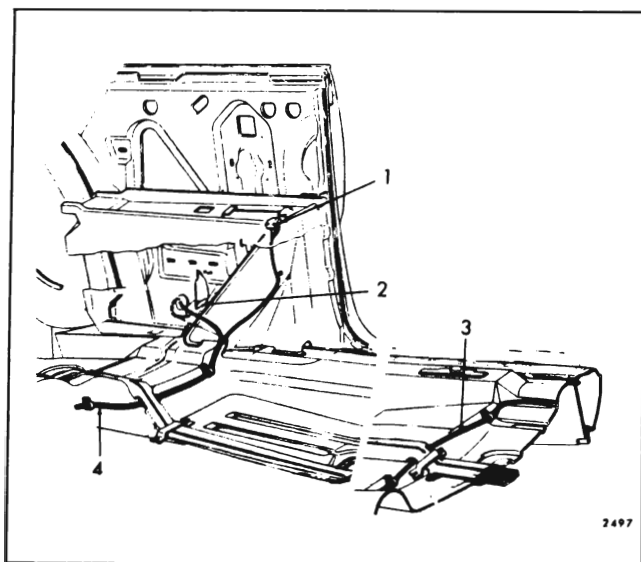


Fig. 16-19—Left Quarter Power Window Wiring - 2-Door Cadillac "C" Styles

1. Quarter Window Switch Block
2. Quarter Motor
3. Front Cross-Over Harness
4. To Right Quarter

g. Checking Wires Between Door Window Switch and Door Window Motor

1. Disengage harness connector from window motor connector. The thumb release on the harness connector must be depressed before it can be disengaged from the motor.
2. Insert one end of a #12 gauge jumper wire to the switch feed terminal and the other end to one of the motor lead terminals in the switch block (see Fig. 16-36).
3. With test light check for current at terminal being tested. If tester does not light, there is an open or short circuit in the harness between the control switch and motor connector (see Fig. 16-37).
4. Check other terminal.

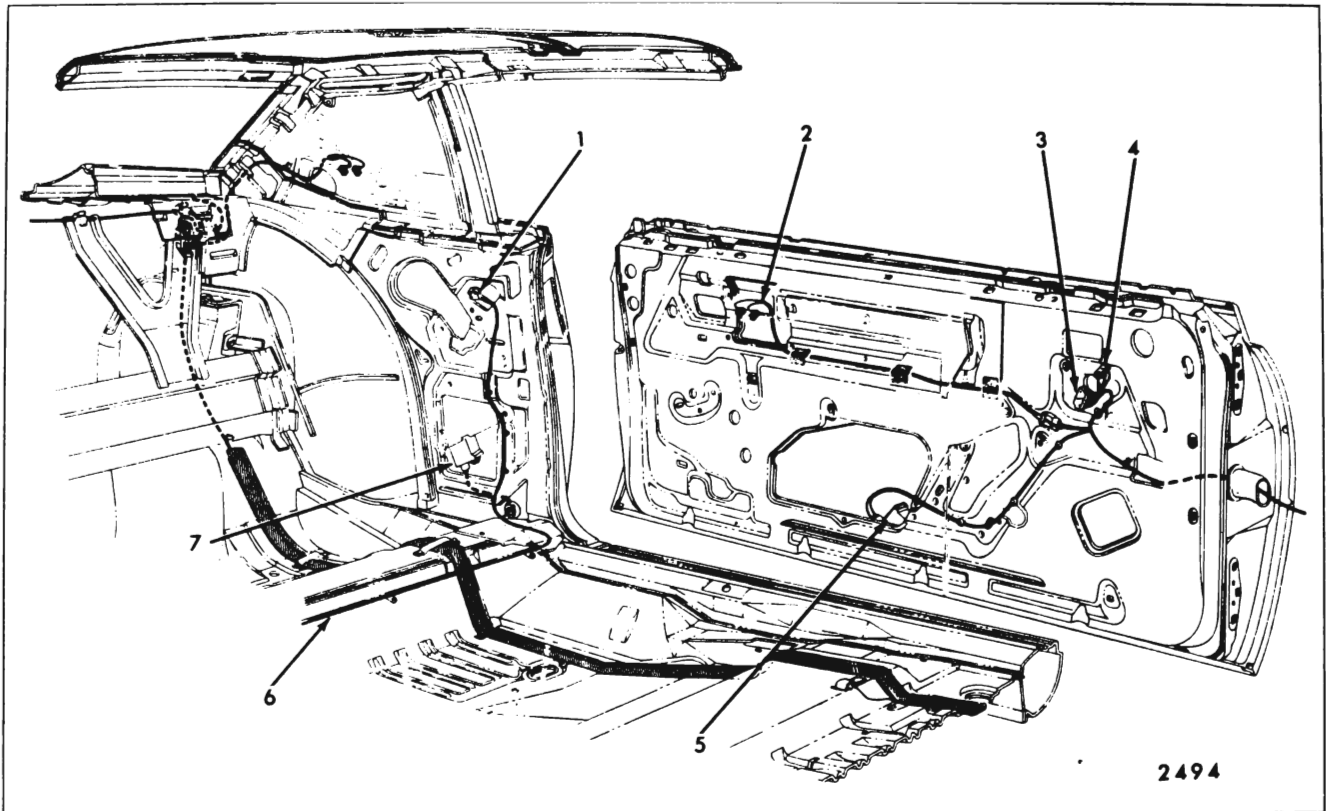


Fig. 16-20 — Left Side Power Window Wiring - Cadillac "E" Styles

- | | | |
|--------------------------------|--------------------------------|----------------------------|
| 1. Quarter Window Switch Block | 3. Master Control Switch Block | 6. To Right Quarter Window |
| 2. Door Courtesy Lamp Wiring | 4. Cut-Out Switch Block | 7. Quarter Motor |
| | 5. Door Motor | |

h. Checking Wires Between Quarter Window Switch and Quarter Window Motor

1. Disengage the in-line connector located in-board of the quarter inner panel as required.
2. Insert one end of a #12 gauge jumper wire in the switch feed terminal and the other end in one of the motor lead terminals of the switch block (see Fig. 16-37).
3. With a test light, check for current at the corresponding terminal at the in-line motor connector. If tester does not light, there is an open or short circuit between control switch and motor connector.
4. Check other terminal.

i. Checking Window Motor

1. Check window regulator and channels for possible mechanical bind of window.


2. Check attachment of window motor to insure an effective ground.

3. Connect one end of a #12 gauge jumper wire to the power source and the other end to one of the terminals on the door window motor or the in-line connector for the quarter window motor.
4. If the motor fails to operate with a jumper wire, the motor is defective and should be repaired or replaced as required. Check the other motor lead in the same manner.

j. Trouble Shooting of Power Windows

The following typical failures and corrections have been listed as an aid for eliminating electrical failures in the power window electrical circuit. It should be noted that multiple failures in the circuit may lead to a combination of conditions, each of which must be checked separately.

CONDITION	CAUSE	CORRECTION
1. None of the windows will operate with ignition switch on.	Short or open circuit in power feed circuit.	A. Check circuit breaker operation. B. Check relay operation at left cowl. C. Check feed connection to power harness beneath instrument panel. D. Check the feed circuit wires for possible short or open circuit. E. Check cut-out switch.
2. Right rear door window does not operate from master control switch on left door or from control switches on right rear door. Left door window operates.	A. Short or open circuit between right rear door harness and power window front harness. B. Short or open circuit in affected window control switch or window motor circuit. C. Possible mechanical failure or bind in window channels. D. Defective window motor.	A. Check harness connectors beneath outer ends of instrument panel for proper installation. B. Check wires in power window front harness for possible short or open circuit. C. Check operation of rear door window control switch. D. Check circuit from window control switch to window motor for short or open circuit. E. Check window regulator and channels for possible mechanical failure or bind. F. Check operation of motor.
3. Right door windows will operate from left door master control switch but will not operate from right door control switches. Left door windows operate.	Open or short circuit in front harness feed wire circuit.	Follow up feed wire in front harness for possible short or open circuit.

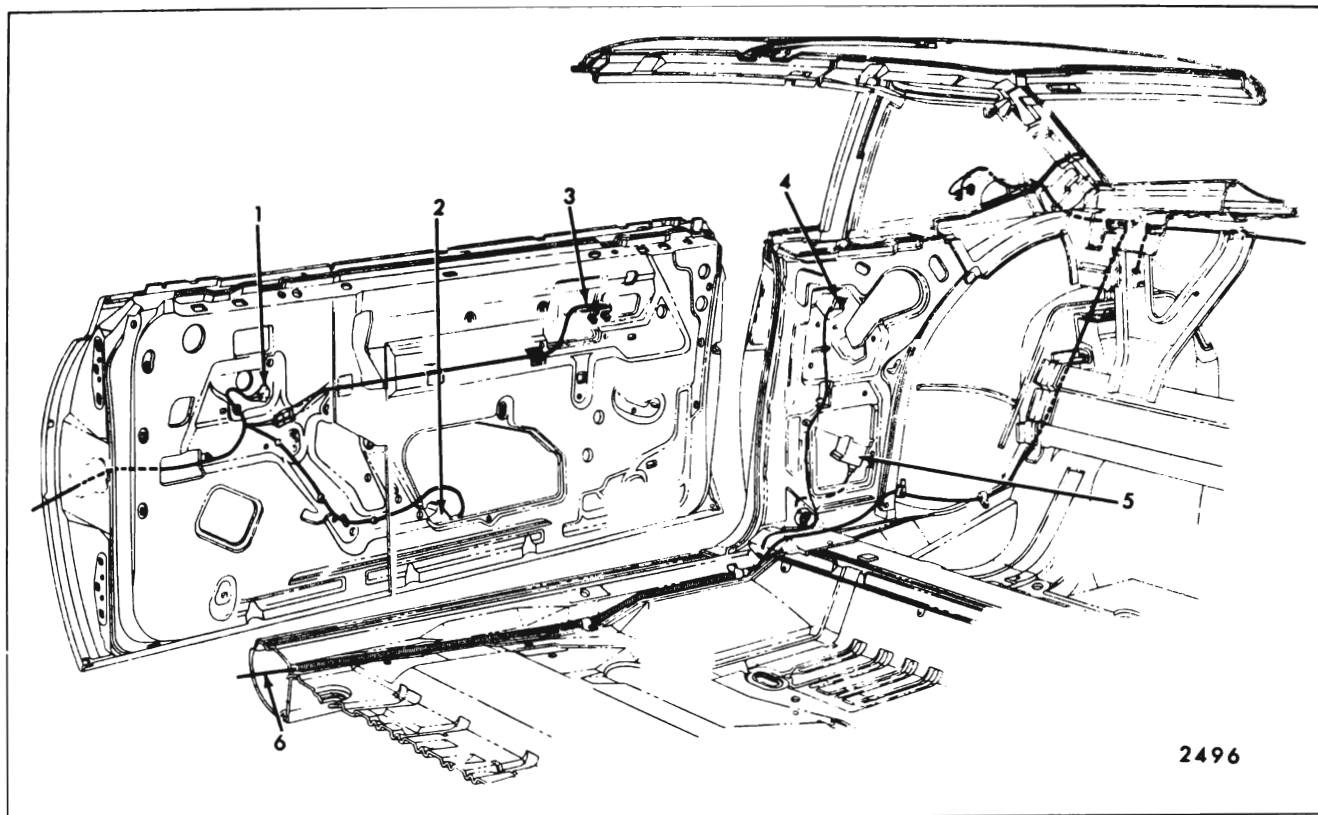

2496

Fig. 16-21 — Right Side Power Window Wiring - Cadillac "E" Body

1. Door Window Switch Block
2. Door Motor
3. Door Courtesy Lamp Wire

4. Quarter Window Switch Block
5. Quarter Motor
6. Accessory Wire - Rear Seat Speaker

POWER OPERATED VENTILATORS

DESCRIPTION

The power ventilators are operated by a rectangular shaped 12 volt series-wound motor with an internal circuit breaker.

The power ventilator circuit is very similar to the power window circuit. The diagnosis outlined for the power windows may also be used in locating and correcting failures in the power ventilator circuit.

A typical illustration showing the ventilator installation is shown in Figure 16-38.

The harness for the ventilator circuit is separate in Pontiac styles. All other series the harness is an integral part of the power window harness.

Circuits for power ventilators are shown in Figure 16-39.

POWER OPERATED STATION WAGON TAIL GATE WINDOW

ELECTRICAL TAIL GATE WINDOW CIRCUIT

The station wagon style power operated tail gate window is controlled by a window regulator as-

sembly, equipped with a rectangular shaped, 12 volt D.C., reversible direction motor with an internal circuit breaker and a self-locking gear drive.

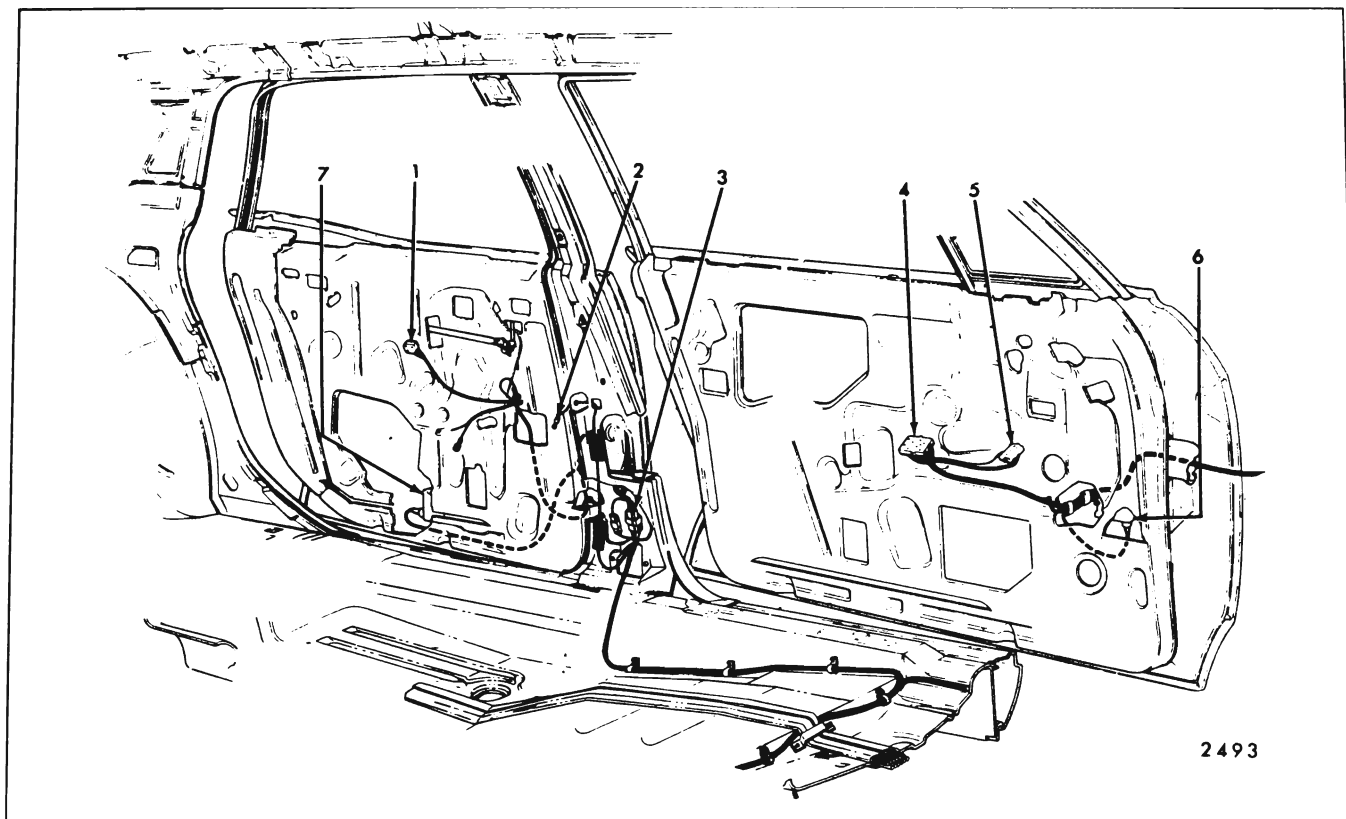


Fig. 16-22 — Left Side Power Window Wiring - 4-Door Cadillac "C" Body

1. Rear Door Window Switch Block
2. Rear Door Jamb Switch Wire

3. Rear Door Wiring Connector
4. Master Control Switch Block

5. Cut-Out Switch Block
6. Front Door Motor
7. Rear Door Motor

In addition to the internal circuit breaker the wiring circuit is protected by a 40 amp circuit breaker (see Electrical Introduction for locations).

Oldsmobile "A" and Chevrolet "B" Styles - In addition to the circuit breaker, a relay is used in the circuit and installed at the shroud. The relay prevents the operation of the tail gate window from the instrument panel switch, until the ignition switch is turned "on".

The window may be operated from the instrument panel control switch, or from the tail gate window lock cylinder which rotates to raise or lower the window.

Chevrolet Styles - On the nine passenger station wagon styles, a tail gate window control switch is located at the rear of the left rear quarter inner trim panel (see Fig. 16-40).

NOTE: The "up" cycle wire is not engaged in the switch block but may be connected upon owner request.

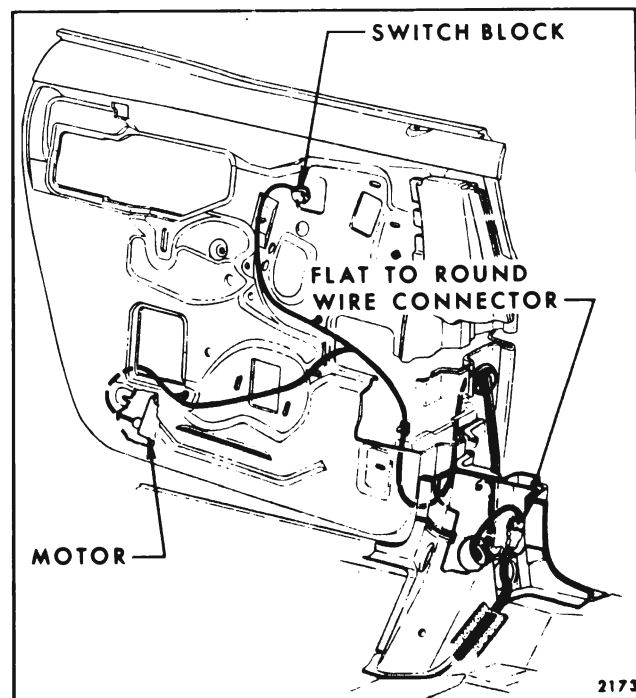


Fig. 16-23 — Left Rear Door Power Window Wiring - "A-39" Styles

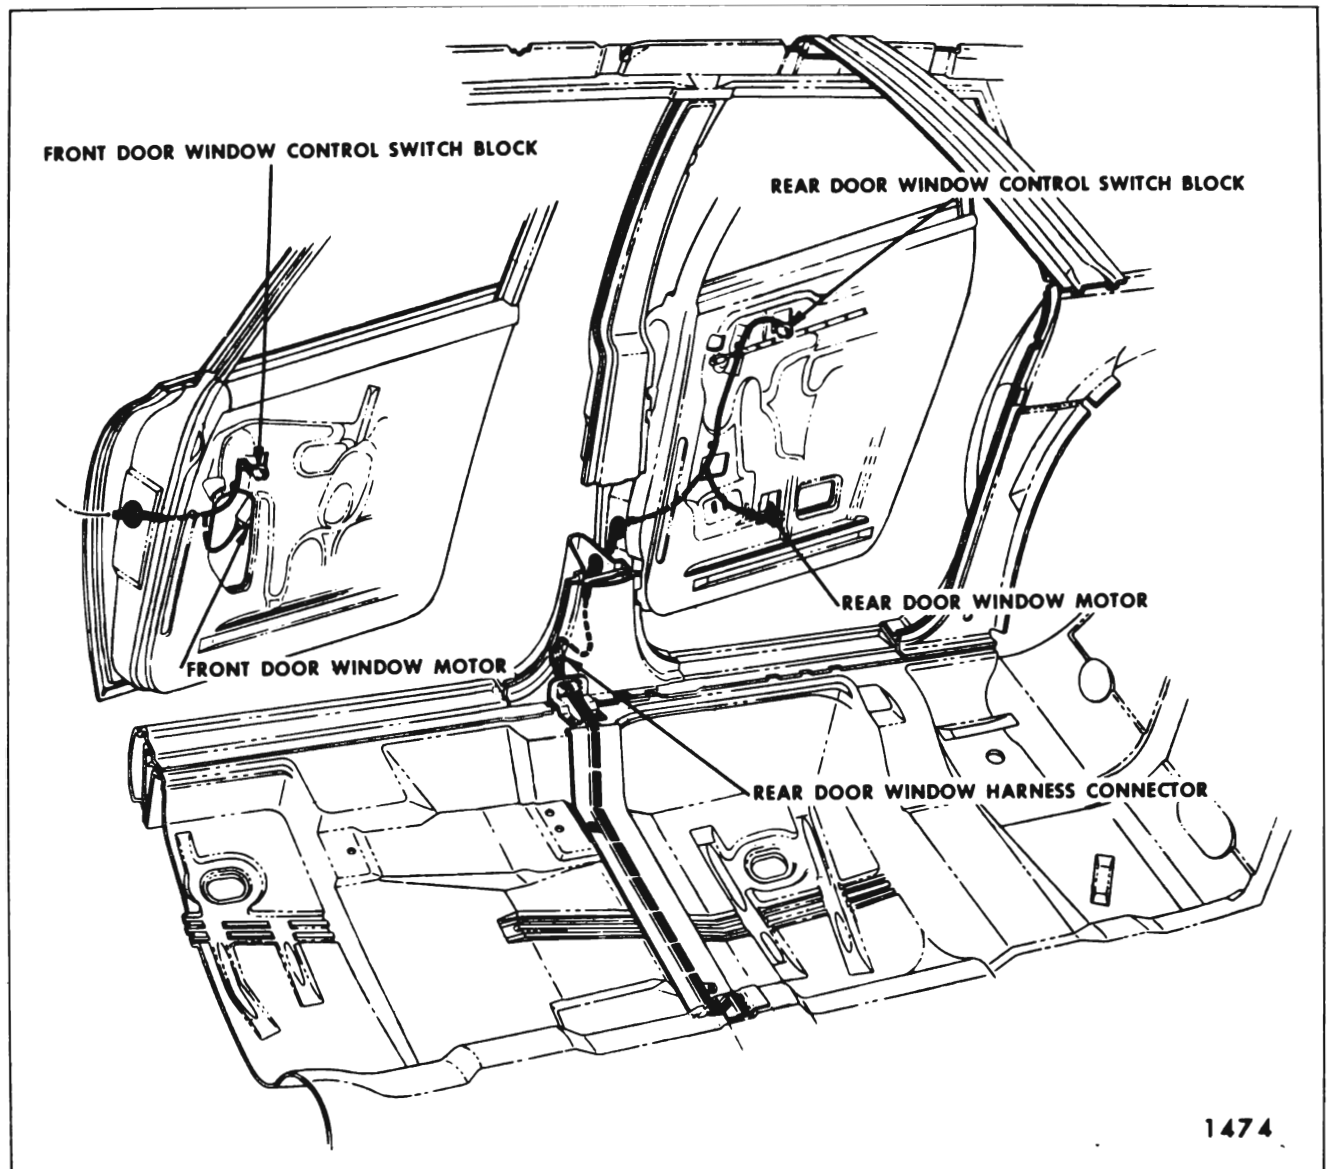


Fig. 16-24 — Right Side Power Window Wiring - "A 35-55-65" and "69" Styles

To prevent the window from being operated to the up position when the tail gate has been lowered, a safety switch is located on the tail gate lock pillar. The safety switch opens the ground circuit of the tail gate window motor, making it inoperative. See tail gate views.

On "A & B" Bodies - the tail gate window harness runs adjacent to the body wire and consists of two major sections. The front section of flat wire extends from the left center of the toe pan (Figs. 16-41, 16-42, and 16-43), rearward and connects to the rear harness at the right rear quarter area (see Figs. 16-44, 16-45, 16-46, 16-47 and 16-48).

The rear cross bar wiring is shown in Figures 16-49 and 16-50 and the tail gate wiring is shown in Figures 16-51, 16-52 and 16-53.

On Chevrolet "X" Bodies - The tail gate window harness is a component part of the body wiring harness which consists of two sections (front and rear) see Figures 16-54, 16-55, 16-56 and 16-57.

CHECKING PROCEDURE

Before performing an intensive checking procedure to determine any failure of the circuit, check all

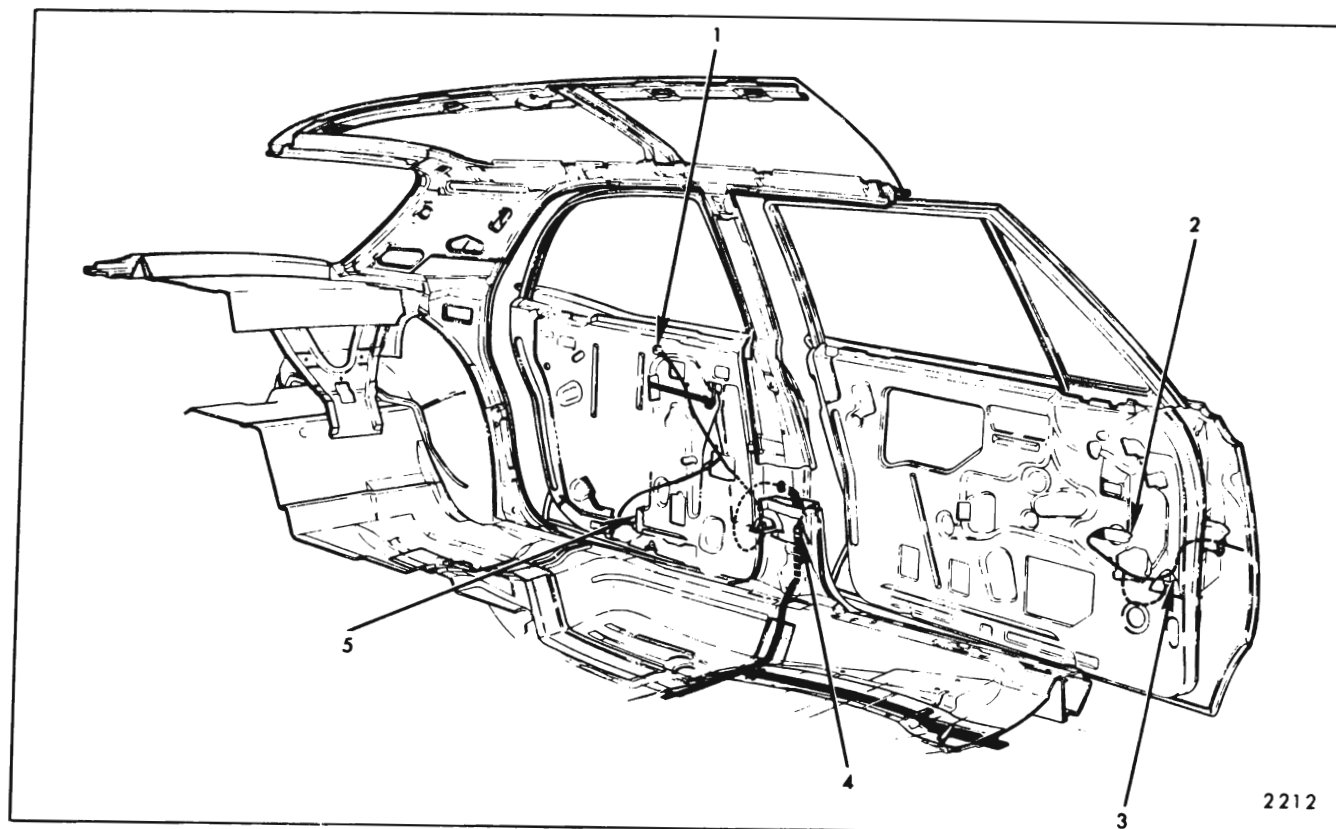


Fig. 16-25 — Left Side Power Window Wiring - "B & C" Four-Door Styles

1. Switch Block
2. Master Switch Block

3. Front Door Motor
4. Rear Door Window Wire Harness Connector

5. Rear Door Motor

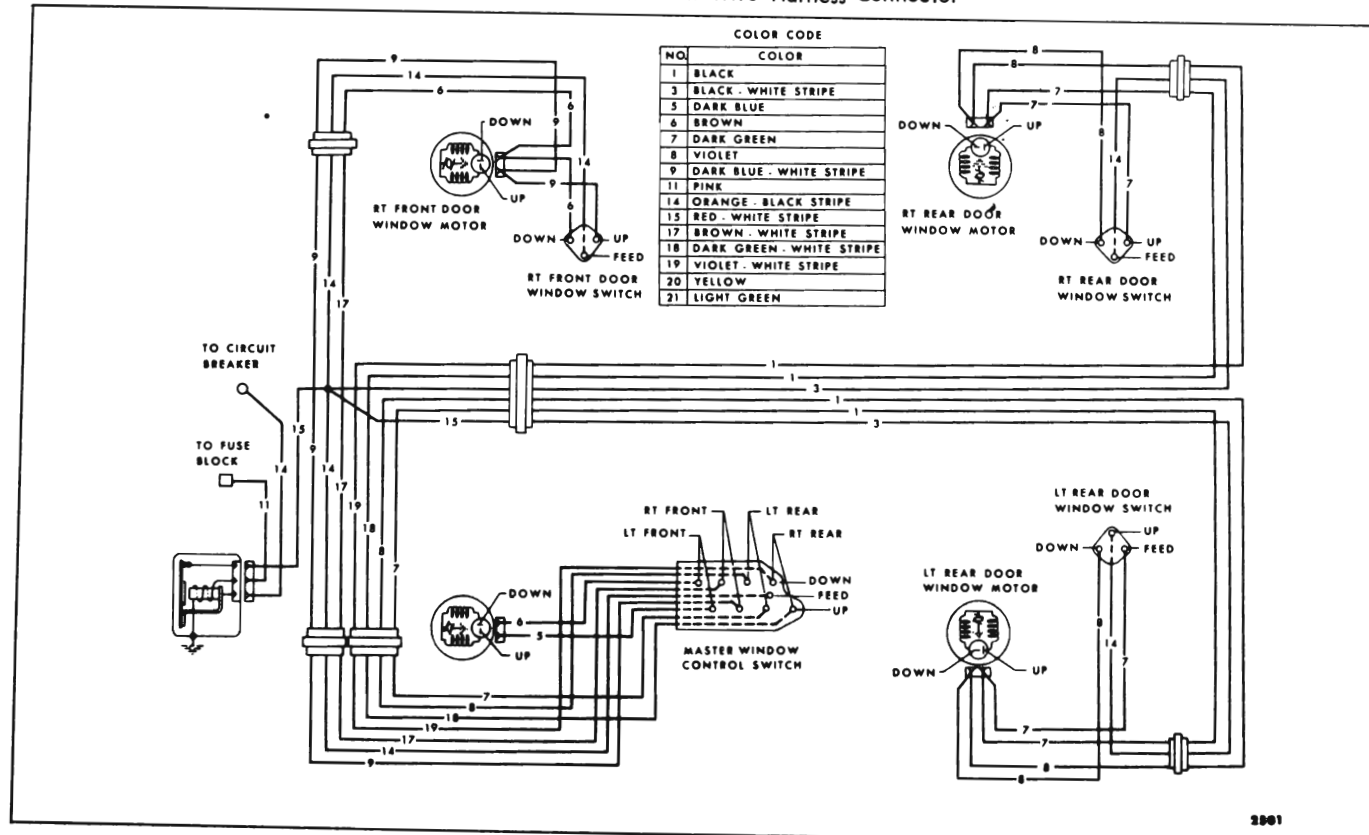


Fig. 16-26 — Power Window Circuit Diagram - All "A" Body

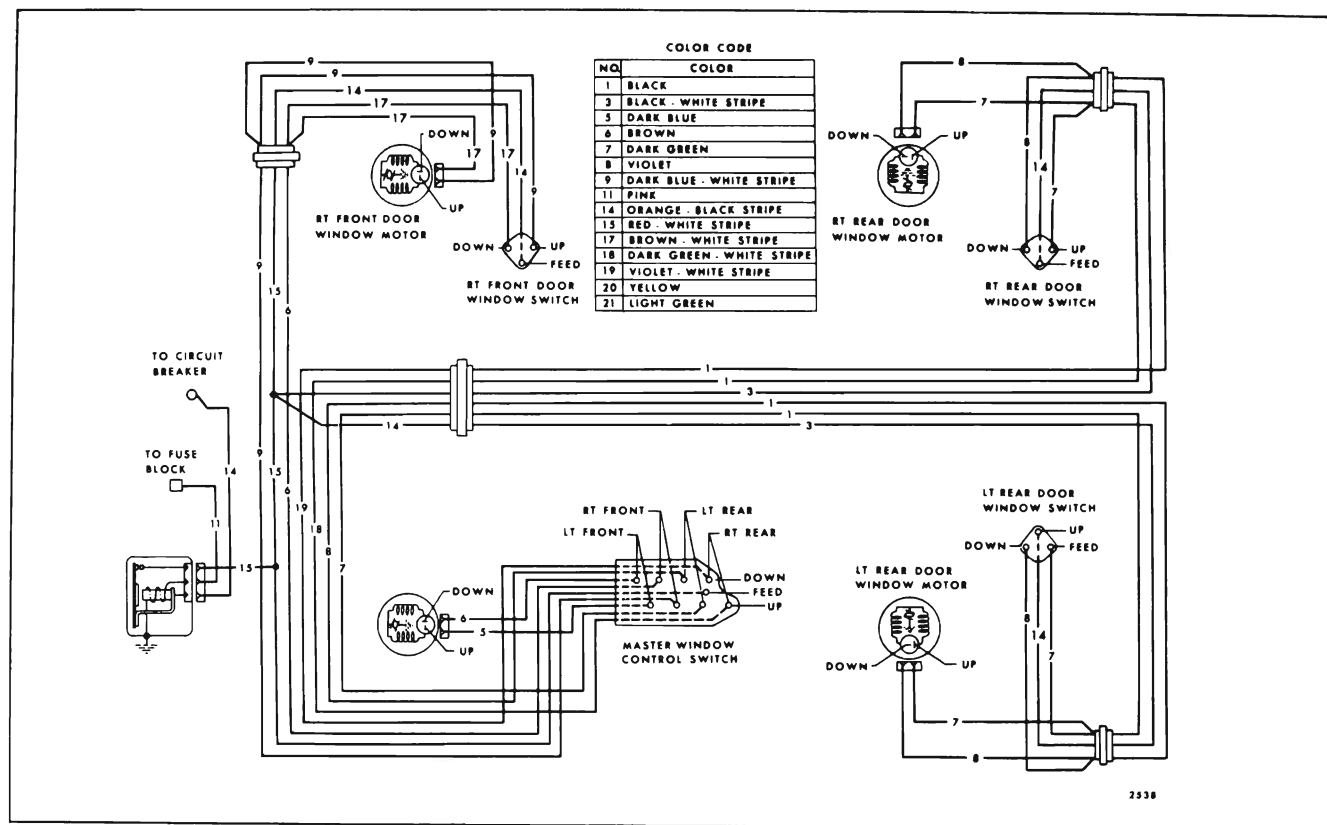


Fig. 16-27 — Power Window Circuit Diagram - All "B" Bodies

the connectors for proper installation. The checking procedures below may be used to check the operation of a switch or motor after the cause of the electrical failure has been isolated to a particular part of the circuit. Refer to the circuit diagrams. See Figures 16-58, 16-59 and 16-60.

a. Checking Feed Circuit Continuity at Circuit Breaker

1. Connect one test light lead to battery side of circuit breaker and ground other lead. If tester does not light, there is an open or short circuit in feed circuit to breaker.
2. To check circuit breaker disconnect the output feed wire (the wire opposite the power source feed to the breaker) from the breaker. Connect one test light lead to the output terminal and ground other lead. If tester does not light, circuit breaker is inoperative.

b. Checking Relay Assembly at Shroud—Oldsmobile "A" & Chevrolet "B" Styles

1. With test light check relay feed. If tester does not light, there is an open or short circuit between relay and circuit breaker.

2. Turn ignition switch on and with test light check output terminal of relay. If tester does not light, the relay is inoperative or there is a short or open circuit between ignition switch and relay assembly. (Check fuse at dash panel.)

c. Checking Feed Circuit Continuity at Control Switch on Instrument Panel

1. Disengage harness connector from switch. Connect one test light lead to feed terminal of switch connector and ground other test lead to body metal. If tester does not light, there is an open or short circuit between switch and power source.

d. Checking Control Switch at Instrument Panel

1. Disengage harness connector from switch.
2. Use a #12 gauge jumper wire and insert one end into the feed terminal and the other end into one of the other terminals. Tail gate window motor should operate.

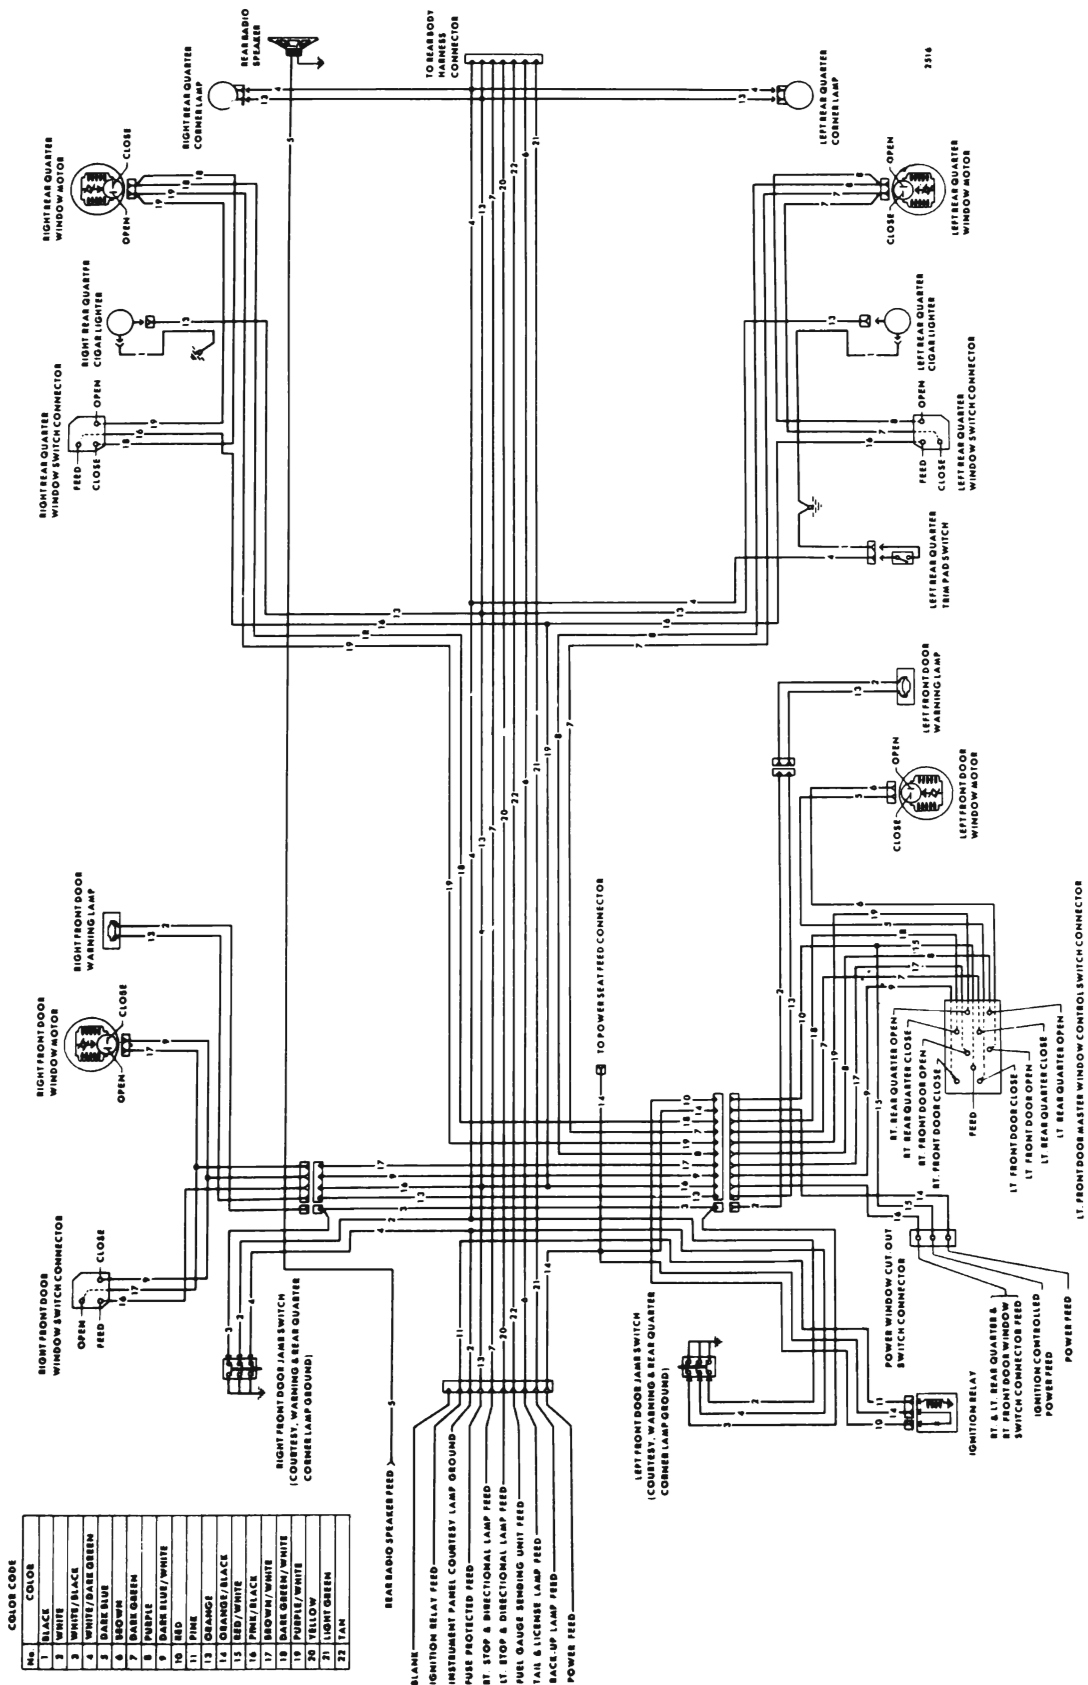
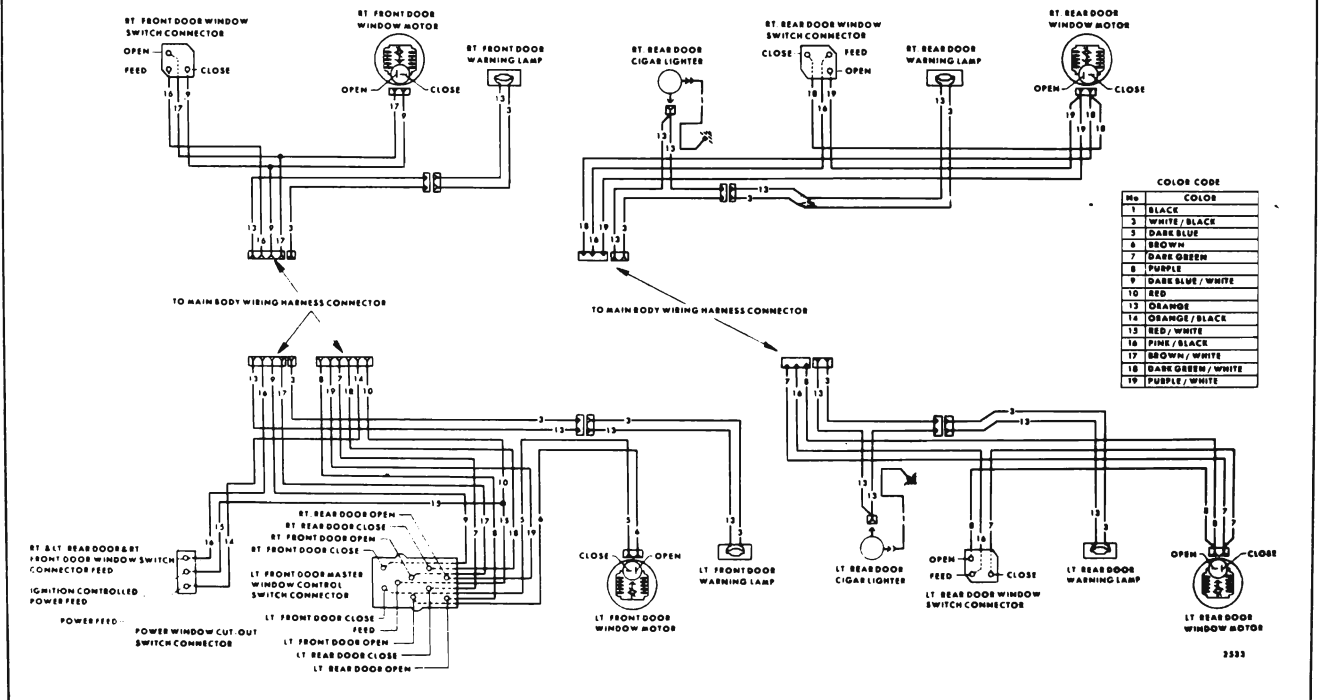
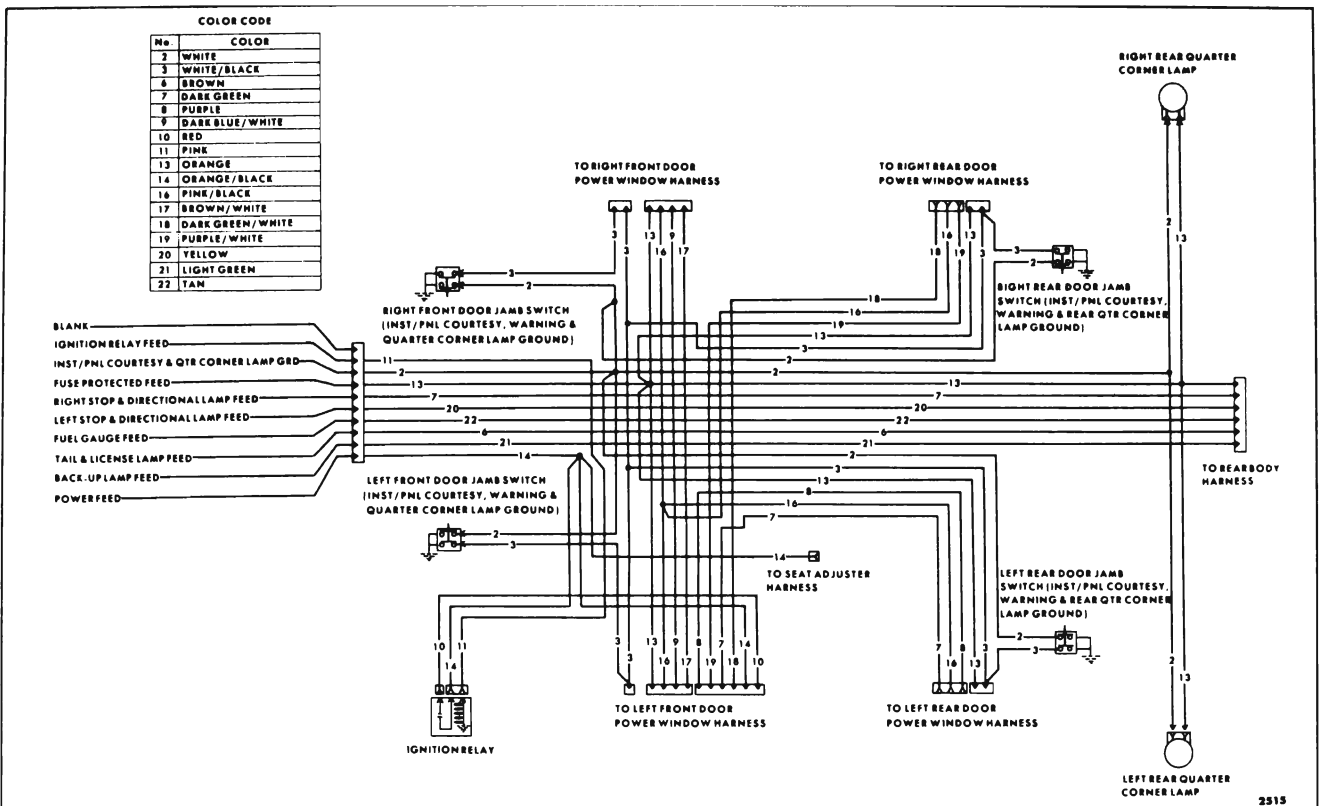


Fig. 16-28 — Power Window and Body Circuit Diagram - Cadillac "C" 2-Door Styles

16-20 ELECTRICAL



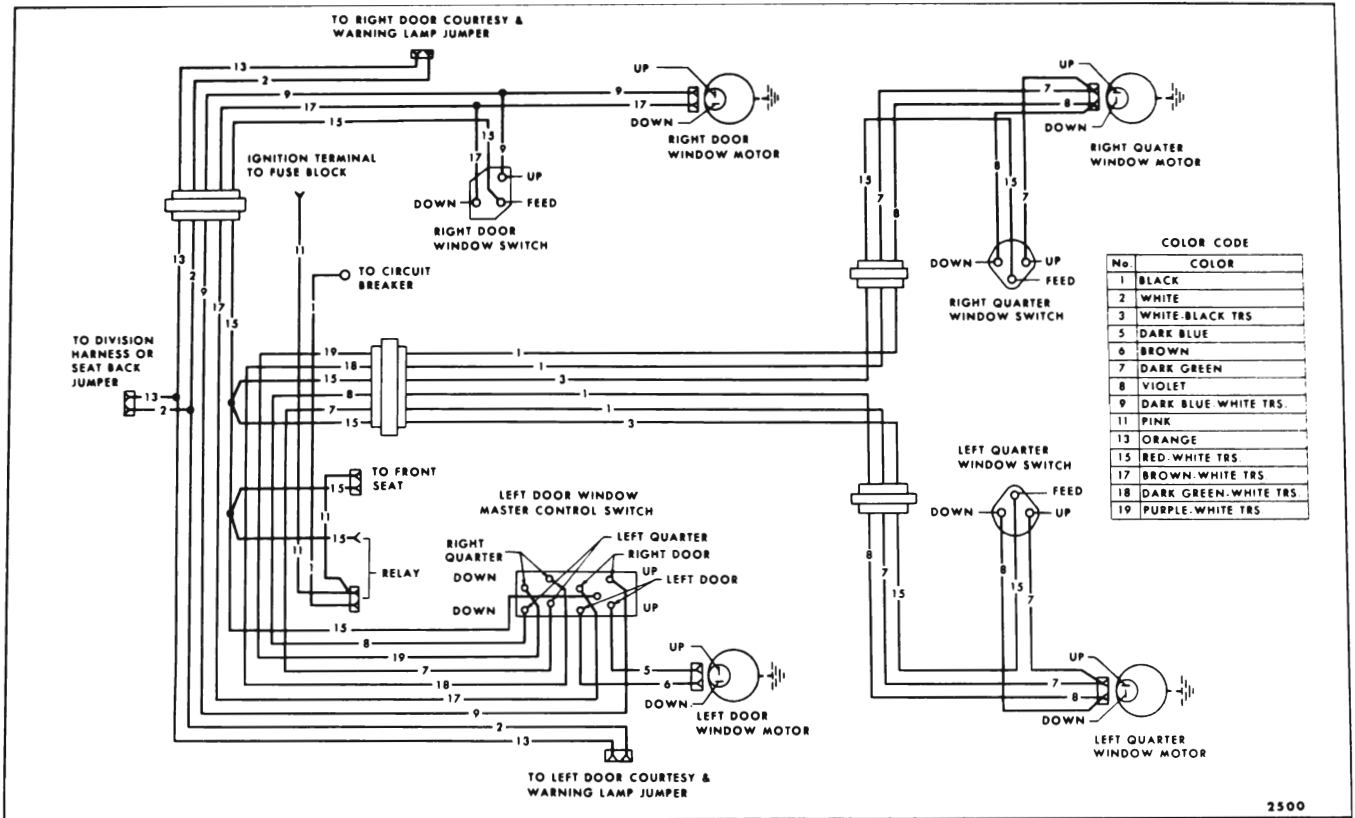


Fig. 16-31 —Power Window Circuit Diagram - Oldsmobile "E" Styles


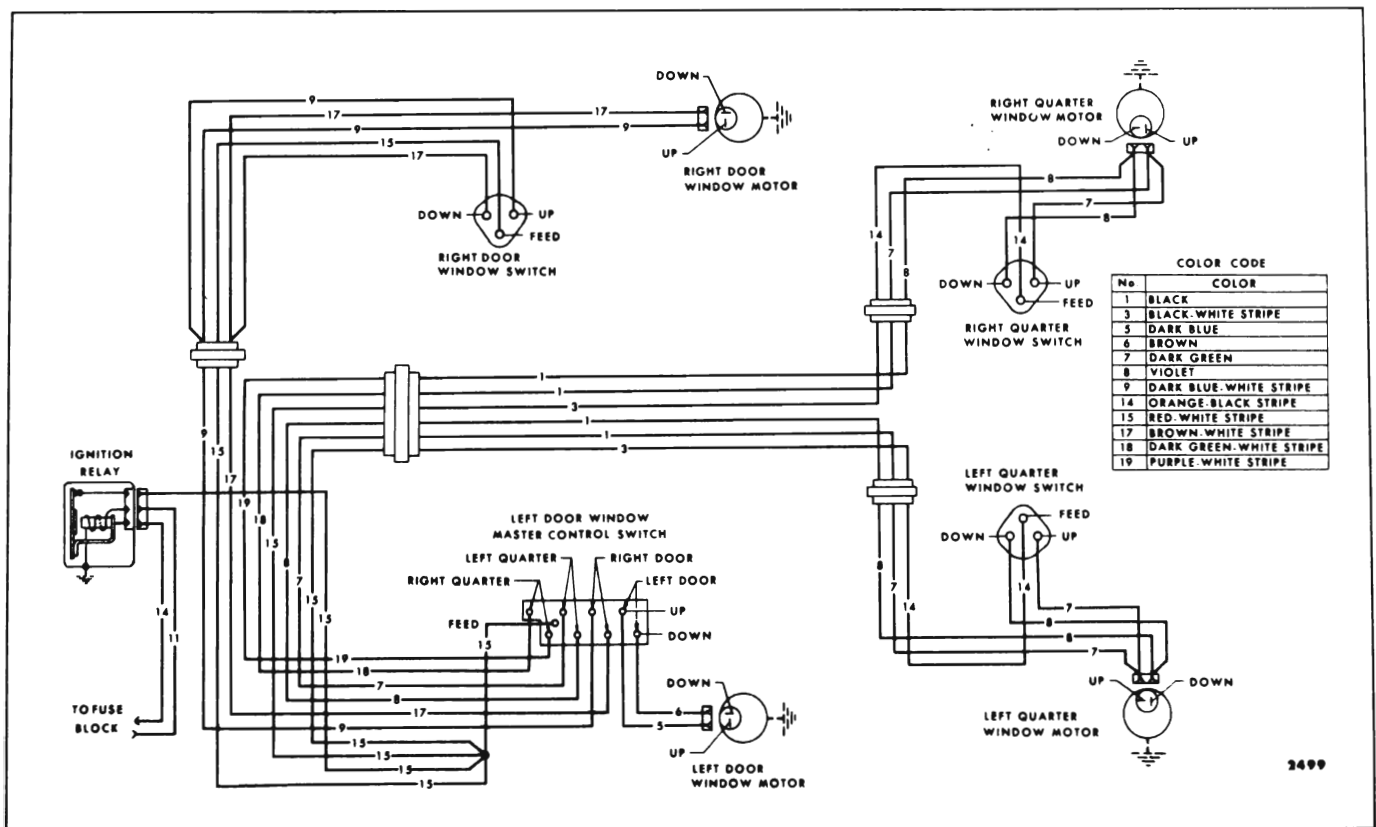


Fig. 16-32 —Power Window Circuit Diagram - Buick "E" Styles



Fig. 16-33 — Power Window and Body Wiring Circuit Diagram - Cadillac "E" - Standard



- from switch and determine that there is current at terminal block; then, use a 12 gauge jumper and perform the same checking procedure as outlined for the control switch at the instrument panel.

f. Checking the Tail Gate Window Motor

1. Disconnect harness connector from motor.

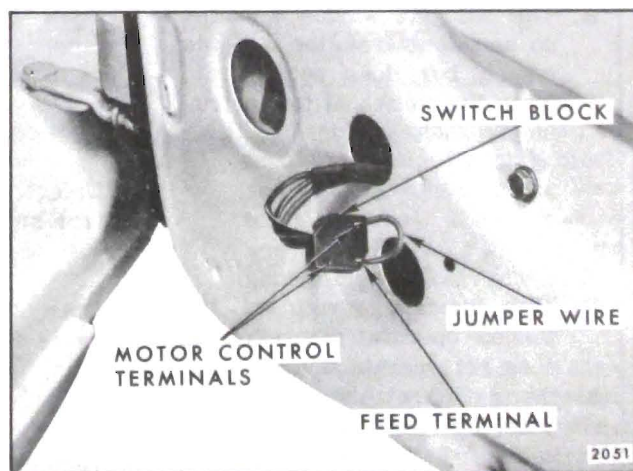


Fig. 16-36—Checking Window Control Switch

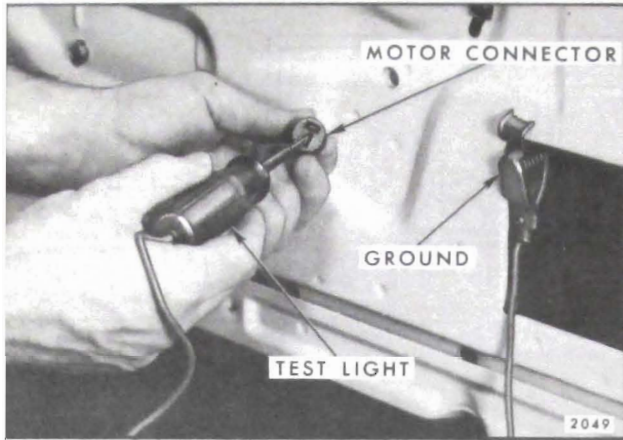


Fig. 16-37—Checking Circuit Between Switch and Motor

2. Connect the positive side of power source to the light blue wire terminal (close cycle) on the motor connector and the negative lead to the white - dark green (ground) wire terminal. Motor should operate. To check the reverse operation of the motor connect the power source to the tan - white wire terminal (open cycle). If motor does not operate in both directions, repair or replace motor.

g. Checking Operation of Safety Switch

1. With tail gate open, depress switch arm to simulate the tail gate being closed on all "A

h. Trouble Shooting

CONDITION	CAUSE	CORRECTION
A. The tail gate window operates up and down from the tail gate switch but does not operate from the switch at the instrument panel.	1. Open or short circuit from power source to control switch at instrument panel. 2. Defective or inoperative control switch.	1. Check affected wiring for open or short circuit and check connector at switch for proper installation. 2. Check operation of switch.
B. With the tail gate closed, the window operates downward but does not operate upward when the switch at the instrument panel or tail gate is actuated.	1. Open or short circuit in up cycle feed wire. 2. Defective motor.	1. Check affected wiring for open or short circuit. 2. Check operation of motor.

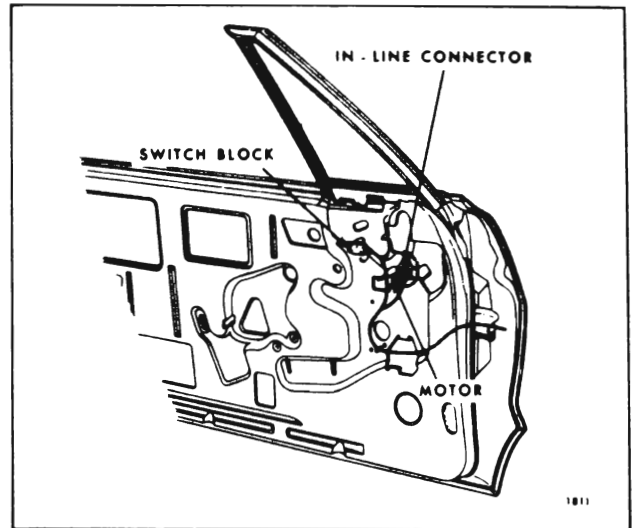


Fig. 16-38—Typical Power Ventilator Wiring

& B" Styles. For Chevrolet "X" use jumper wire from open contact to body ground. Operate control switch. If motor does not operate, either switch is defective or the circuit is open from the motor to the switch.

2. To check for defective switch, connect one end of test light to a source of power and the other lead to the safety switch terminal. If the tester lights when the switch lever is actuated, the switch is operative.

NOTE: Safety switch completes the ground circuit from the motor.

h. Trouble Shooting

CONDITION	CAUSE	CORRECTION
C. The window will not operate up or down from any of the control switches.	1. Open or short circuit in circuit from power source to switches or motor. 2. Safety switch not connected or poor ground. 3. Mechanical bind or failure in tail gate window regulator mechanism. 4. Defective tail gate window regulator motor.	1. Check operation of circuit breaker. 2. Check affected circuit for open or short circuit. 3. Check connectors to safety switch and motor for proper engagement. 4. Check tail gate mechanical parts for bind or failure. 5. Check operation of motor.

POWER SEATS**HORIZONTAL SEATS****Description**

The seat adjusters for the bench-type and bucket-type seat are actuated by a 12 volt series-wound motor located near the front left side of the seat bottom frame, and are energized through a control switch installed in the seat side panel or in the door arm rest. For typical wiring installations see Figure 16-61 for bucket-type seats and Figures 16-62 and 16-63 for bench-type seats.

For circuit diagrams see Figures 16-64 and 16-65.

The horizontal seat circuit is protected by a circuit breaker (refer to Electrical Introduction for specific location).

Oldsmobile styles only - In addition to the circuit breaker a relay is used in the circuit which prevents the operation of the seat until the ignition switch is turned "on".

The trouble diagnosis chart will help locate typical problems which may occur.

Trouble Shooting of Horizontal Seat Circuit

CONDITION	CAUSE	CORRECTION
The seat motor does not operate in either the forward or rearward direction.	a. Open or short circuit in feed harness. b. Inoperative motor.	a. Connect one test light lead to feed terminal of switch block and ground other tester lead to body metal. If tester does not light, there is an open or short circuit between switch and power source. b. Check operation of seat control switch with jumper wire. See "Checking Door Window Control" for similar operation.

CONDITION	CAUSE	CORRECTION
The seat motor does not operate in either the forward or rearward direction. (Cont'd.)	b. Inoperative Motor. (Cont'd.)	c. Check circuit from control switch to motor for short or open circuit and check ground wire attachment at adjuster. d. Check operation of motor with #12 gauge jumper wire. Connect one end of jumper wire to power source and the other end to one of the seat motor terminals. Motor should operate. Perform same check at the other motor terminal. If motor does not operate, repair or replace motor as required.
The seat motor operates in only one direction.	a. Defective switch. b. Open or short circuit in motor feed wires. c. Defective seat motor.	a. Check operation of seat control switch with jumper wire. b. Check circuit from control switch to motor for short or open circuit. c. Check operation of motor with #12 gauge jumper wire. Connect one end of jumper wire to power source and the other end to one of the seat motor terminals. Motor should operate. Perform same check at the other motor terminal. If motor does not operate, repair or replace motor as required.

FOUR-WAY TILT SEAT

Description


The seat adjusters for the bench type and bucket type seats are actuated by a 12 volt, reversible, shunt-wound motor with a built-in circuit breaker. See Figures 16-66 and 16-67 for the bench seat installation and Figure 16-68 for the bucket seat installation.

The seat motor is energized by a toggle-type control switch installed in the left seat side panel. On 48467 style, the control switch is installed in the left front door arm rest.

The four way seat circuit is protected by a circuit breaker (refer to Electrical Introduction for specific location).

Oldsmobile styles only - In addition to the circuit

Fig. 16-39 — Power Ventilator Circuit Diagram — Pontiac Style Shown

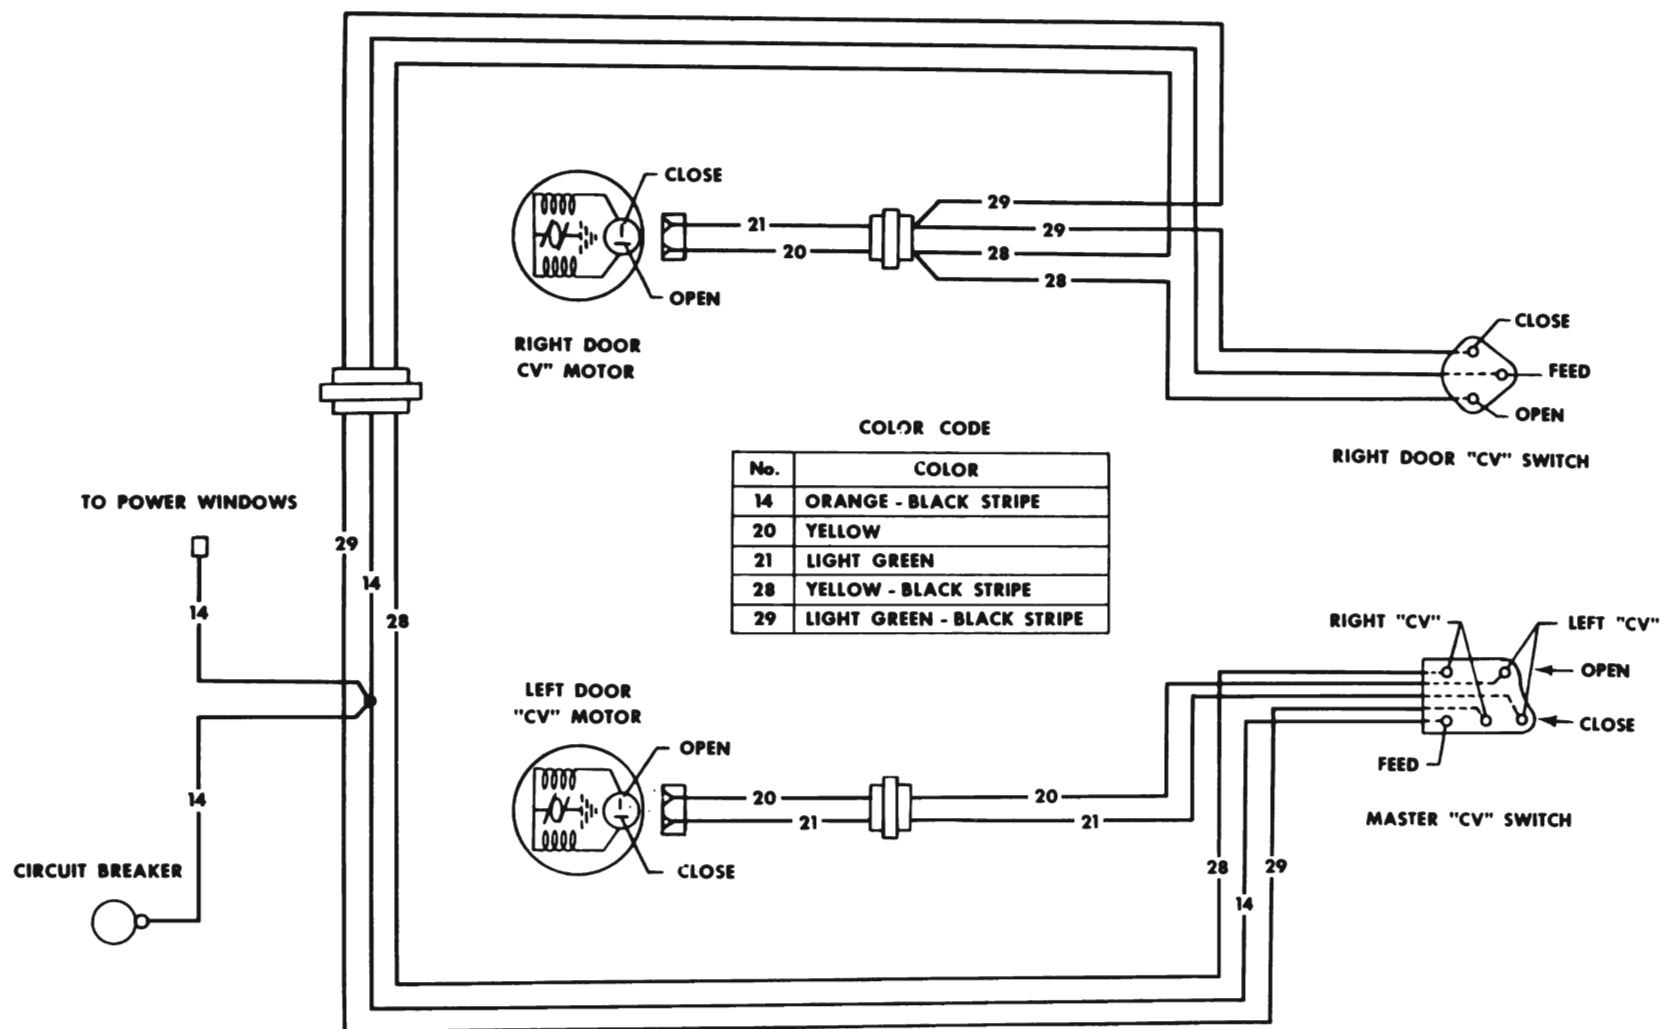

1698

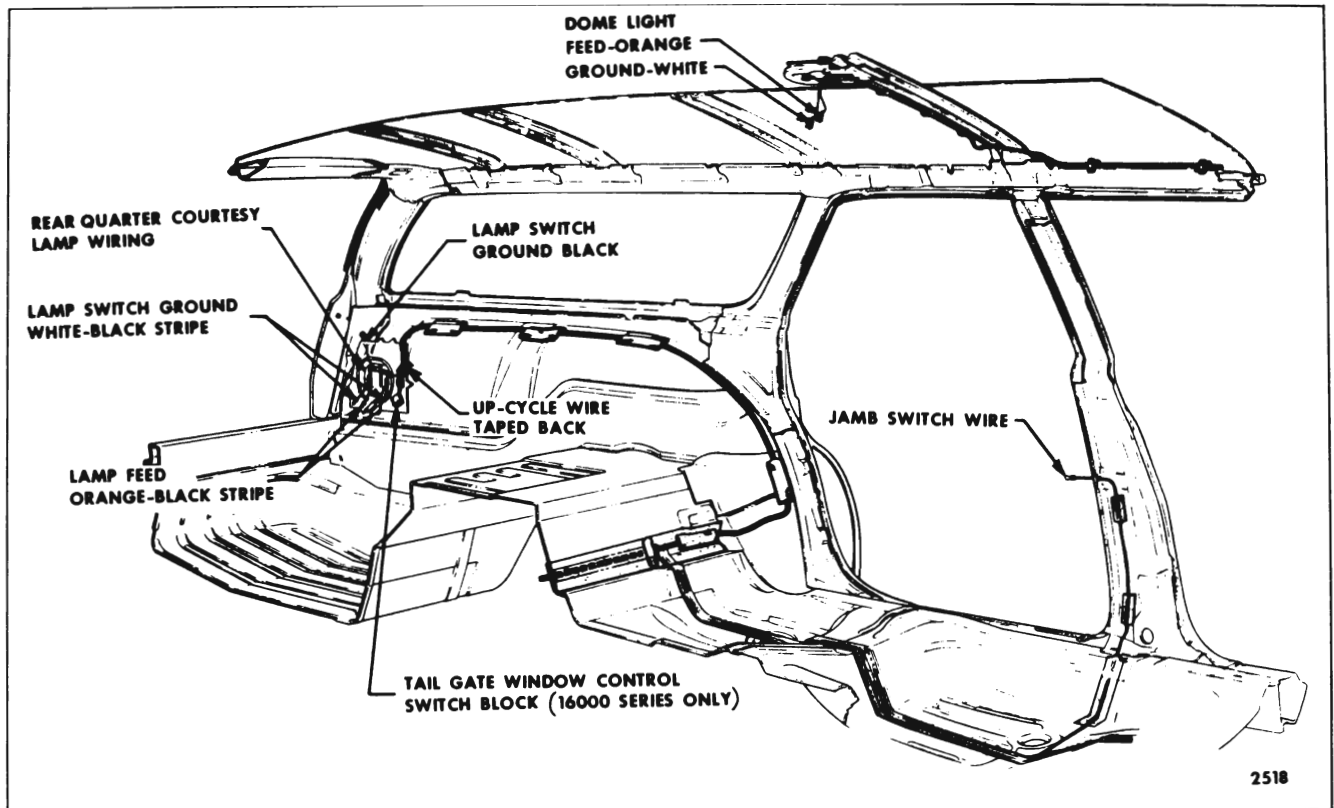


Fig. 16-40 — Left Side Wiring - Chevrolet and Pontiac "B" Bodies

breaker a relay is used in the circuit which prevents the operation of the seat until the ignition switch is turned "on".

The seat adjuster operating mechanism incorporates a transmission assembly which includes two solenoids and four drive cables on bench type seats and two drive cables on bucket seats, leading to

the seat adjusters. One solenoid controls the rear vertical movement of the seat while the other solenoid controls the horizontal movement of the seat. When the control switch is actuated, the motor and one of the solenoids are energized simultaneously. Then the solenoid plunger causes the shaft dog to engage with the large gear dog.

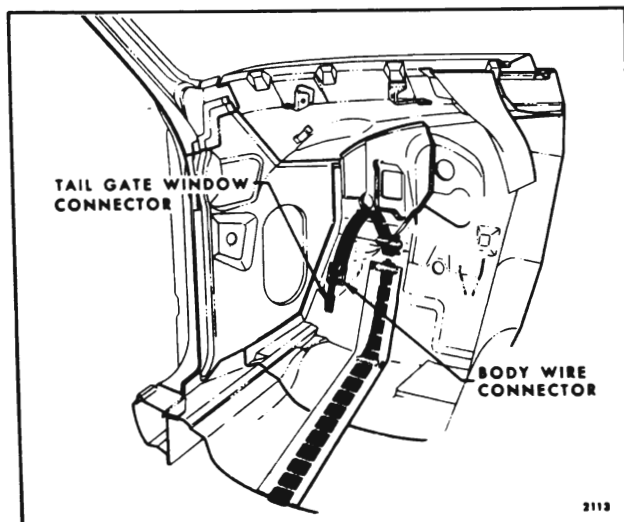


Fig. 16-41 — Front End Wiring - All "A" Bodies

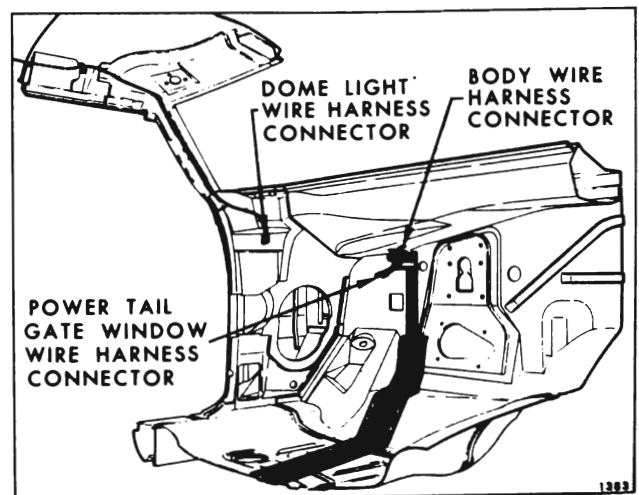


Fig. 16-42 — Front End Wiring - Chevrolet, "B" Body

Power is then transmitted through the transmission shaft on bench seats and through the pulleys on bucket seats, which in turn drives the actuator cables. When the adjusters reach their limit of travel, the drive cables stop their rotating action and torque is absorbed by the rubber coupler connecting the motor and transmission on bench seats. On bucket seats torque is absorbed through the belt on the pulley. When the control switch lever is released the switch contacts open, a spring returns the shaft dog and solenoid plunger to their original position disengaging the shaft dog from the large gear dog. See "Seat Section" for exploded view of transmission.

Checking Procedure

It may be necessary to use only one or all of the procedures outlined to locate an electrical failure in the circuit. If the location of the failure is evident follow only the steps required to check the affected wire or component. If the location of the failure is not evident, follow the procedures as outlined. Before performing any extensive check procedures, check the seat adjuster drive cables for proper attachment. In addition, study the seat circuit diagrams to become familiar with the seat circuit. (See Figs. 16-69 and 16-70).

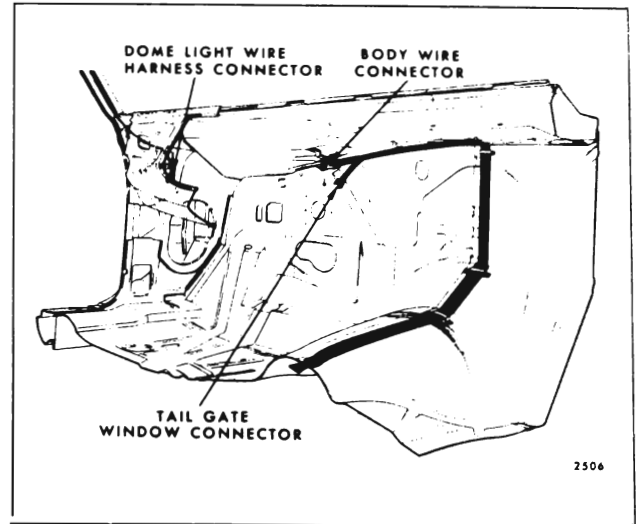


Fig. 16-43—Front End Wiring - Pontiac "B" Styles

a. Checking for Current at Circuit Breaker

1. Connect one test light lead to battery side of circuit breaker. If tester does not light, there is no current at battery side of circuit breaker.
2. To check circuit breaker, disconnect switch feed wire from breaker, and with a test light

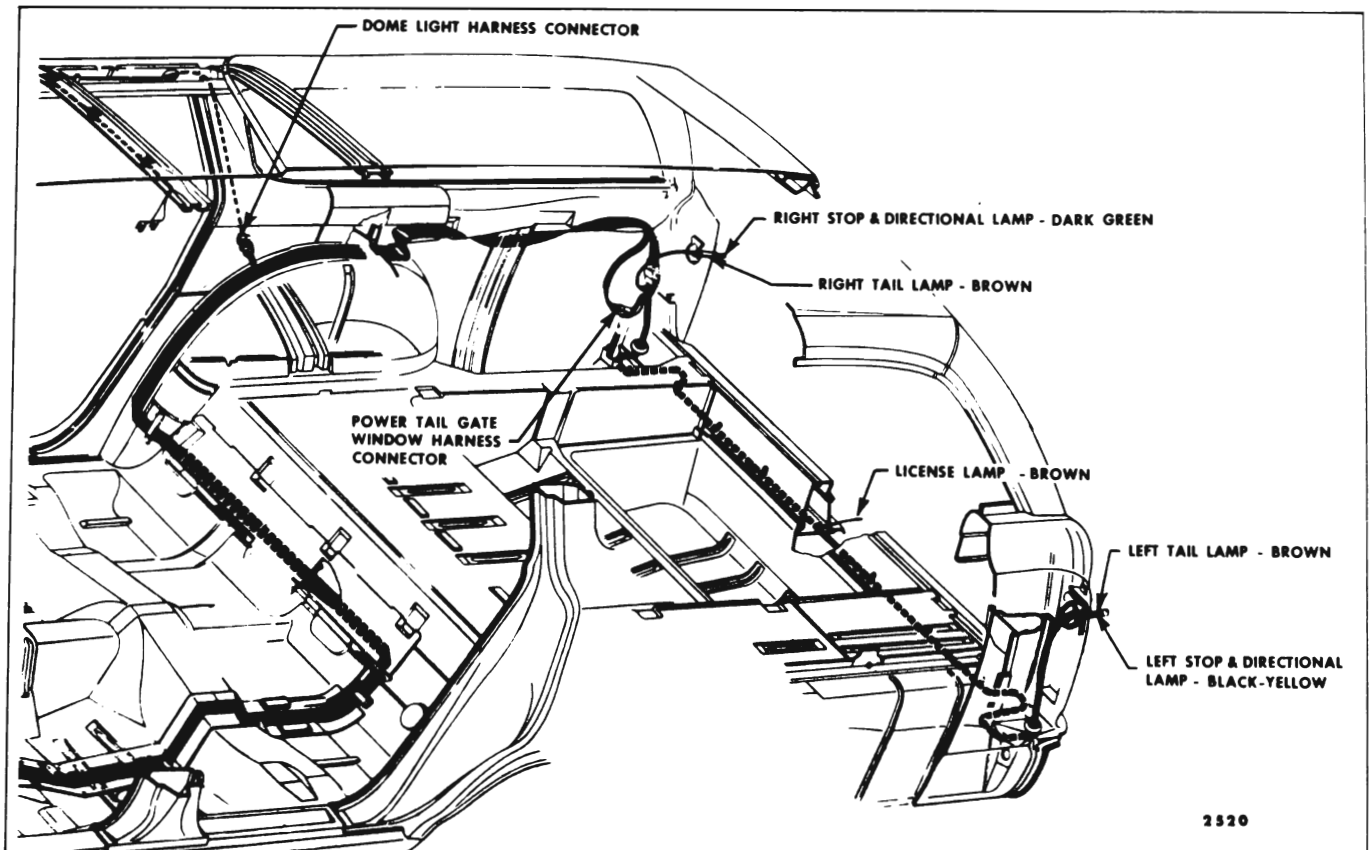


Fig. 16-44—Right Side and Rear End Wiring - Chevrolet "A" Styles

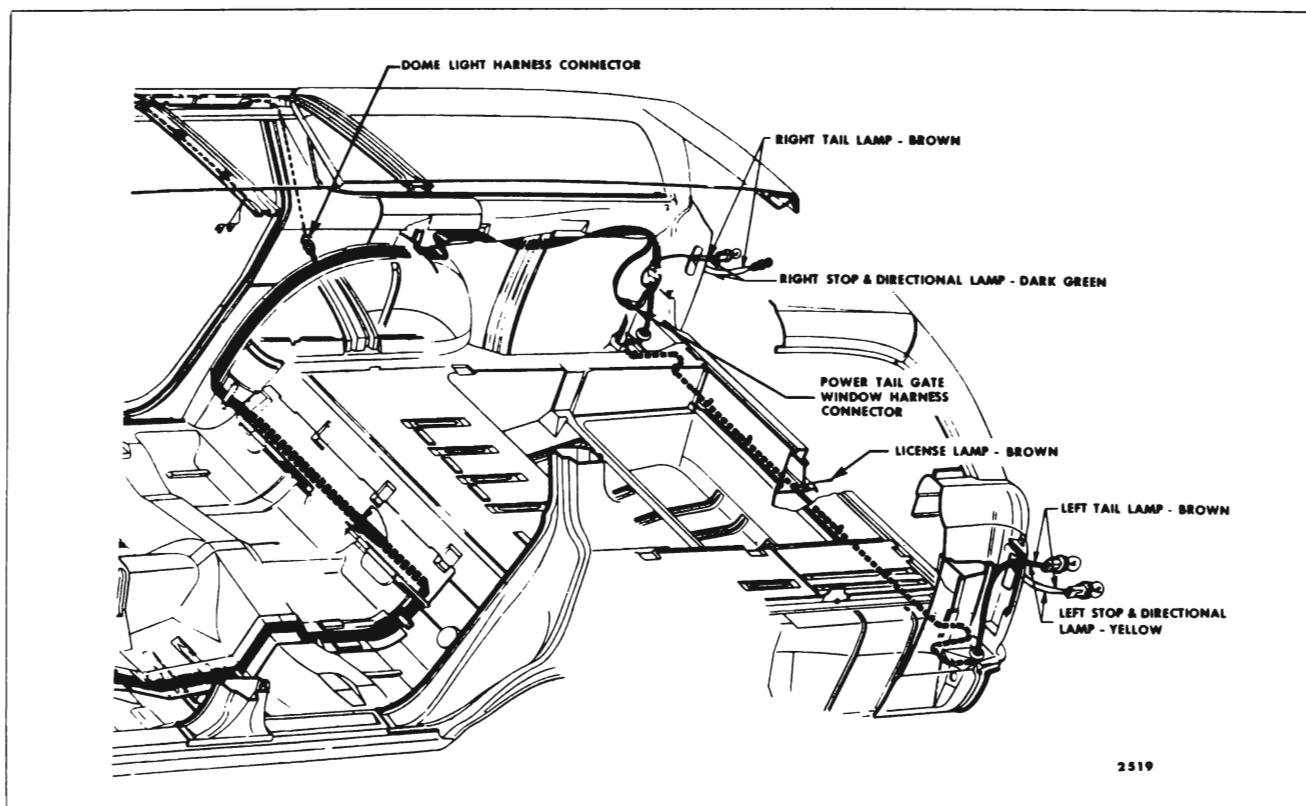


Fig. 16-45—Right Side and Rear End Wiring - Pontiac and Oldsmobile "A" Body

check for current at switch side of circuit breaker. If tester does not light, there is no current flowing through circuit breaker.

**b. Checking the Ignition Relay Assembly—
Oldsmobile "B & E" Styles Only**

1. With test light check for current at circuit

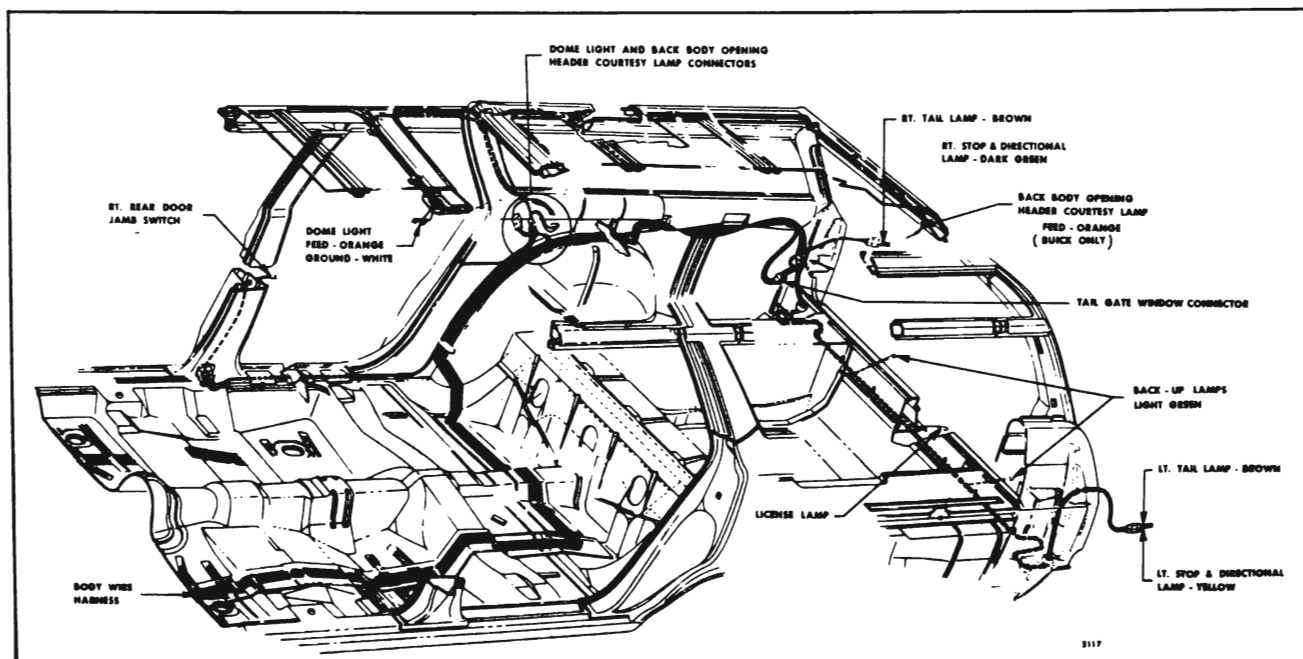


Fig. 16-46—Right Side and Rear Wiring - Buick "A" Body 55-65 Styles

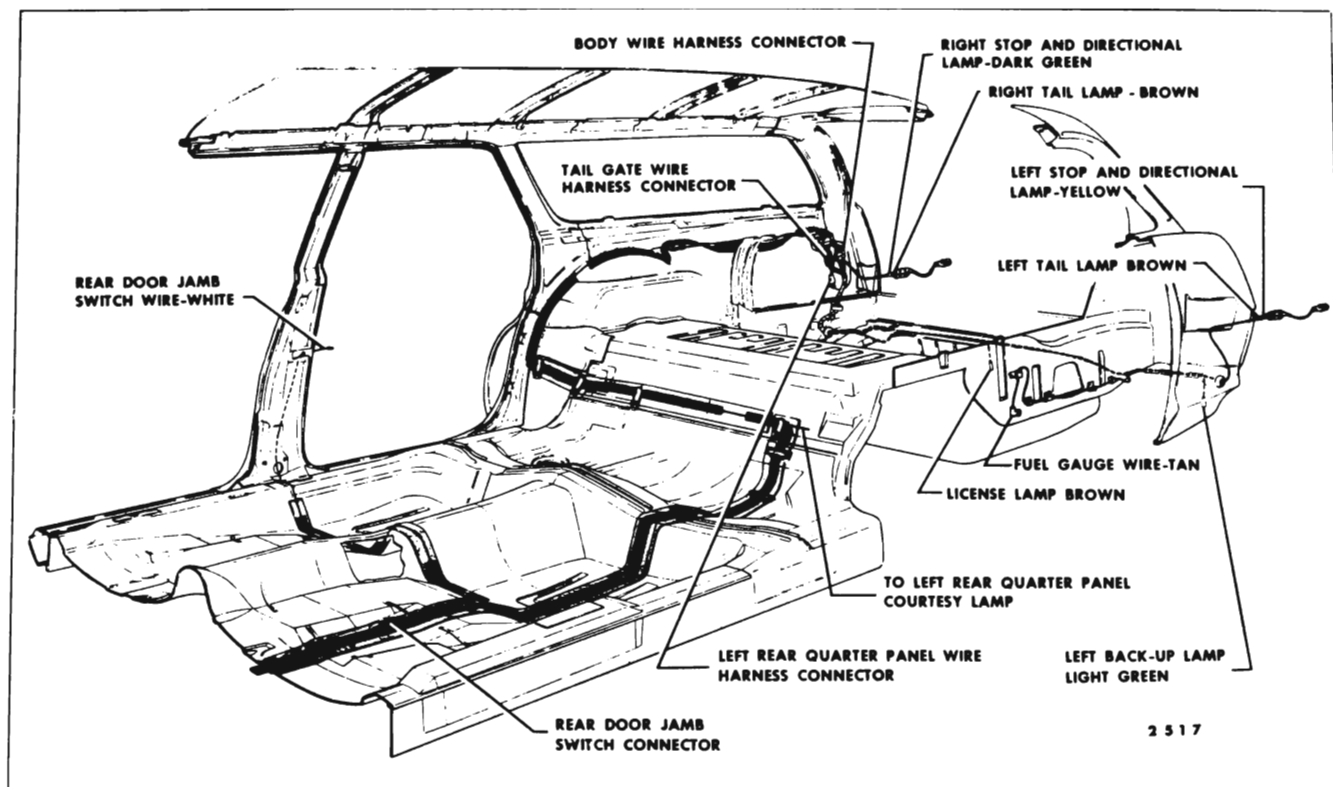


Fig. 16-47 —Right Side and Rear End Wiring - Chevrolet "B" Body

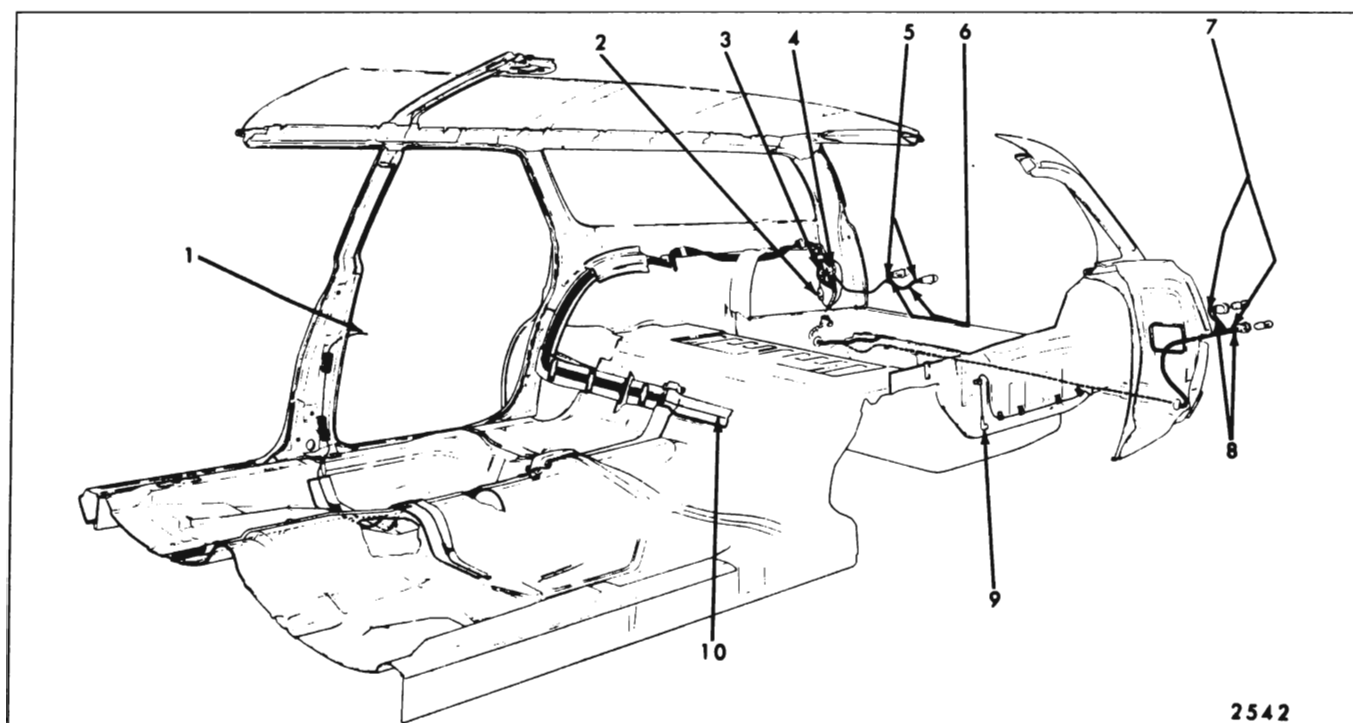


Fig. 16-48 —Right Side and Rear End Wiring - Pontiac "B" Bodies

- | | | |
|--|---|--|
| 1. Rear Door Jamb Switch Wire | 4. Body Wire Harness Connector | 7. Left Tail Lamp (Brown) |
| 2. Quarter Panel Courtesy Lamp Connector | 5. Right Tail Lamp (Brown) | 8. Left Stop and Directional Lamp (Yellow) |
| 3. Tailgate Window Harness Connector | 6. Right Stop and Directional Lamp (Dark Green) | 9. Gas Gauge Wire |
| | | 10. Wire to Quarter Courtesy Lamp |

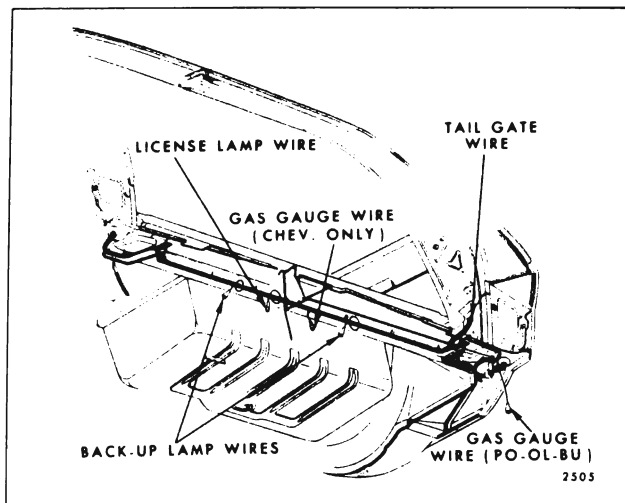


Fig. 16-49—Rear Cross Bar Wiring - All "A" Body

breaker side of relay. If tester does not light, there is a short or open circuit between circuit breaker and relay assembly.

2. Turn ignition switch on and with a test light check for current at output side of relay. If tester does not light, the relay is defective or there is a short or open circuit between ignition switch and relay assembly. Check wires before replacing relay.

NOTE: Oldsmobile "B & E" Styles Only - Ignition switch must be on for performing the remainder of checking procedure.

c. Checking Feed Circuit Continuity at Relay on Seat Motor—All Styles

1. Disengage three-way connector body from the seat motor relay.

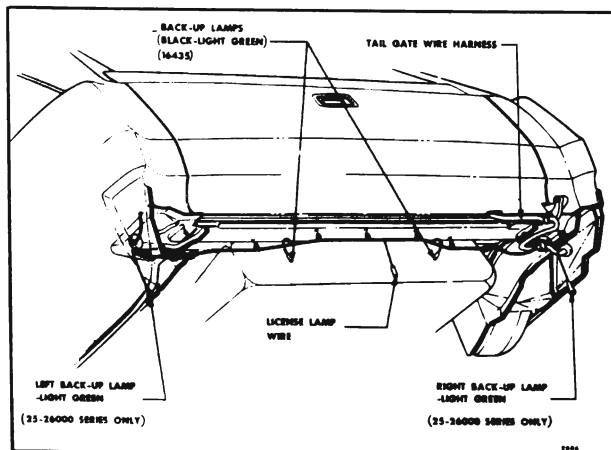


Fig. 16-50—Rear Cross Bar Wiring - Chevrolet, Pontiac "B" Bodies

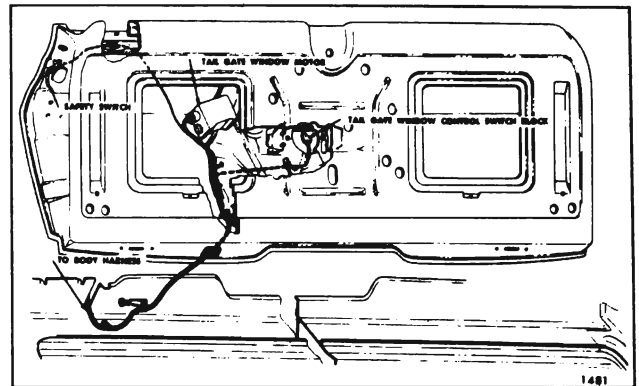


Fig. 16-51—Tail Gate Wiring - All "A" Bodies

2. Insert one test light lead into the relay power feed connector slot on the harness, and ground other tester lead.
3. If tester does not light, there is no current at end of feed wire. Failure is caused by an open or short circuit in feed circuit.

d. Checking for Current at Seat Control Switch

1. Connect one test light lead to feed terminal of switch block and ground other test light lead to body metal.
2. If tester does not light, there is no current at switch block. Failure is caused by an open or short circuit between switch block and power source.

e. Checking the Seat Control Switch

In the following operations which specify the seat control switch to be actuated, a switch that has

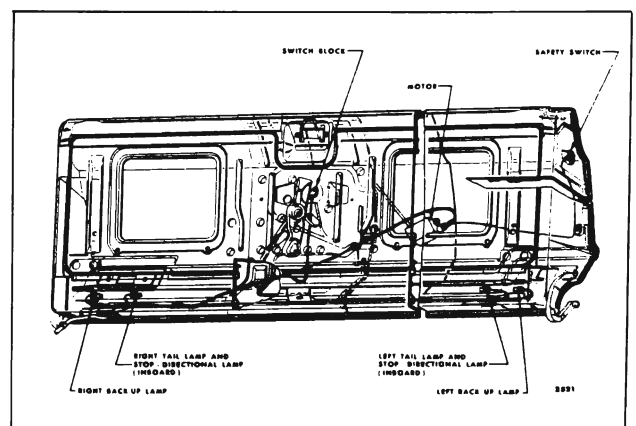


Fig. 16-52—Tail Gate Wiring - Chevrolet "B" Body

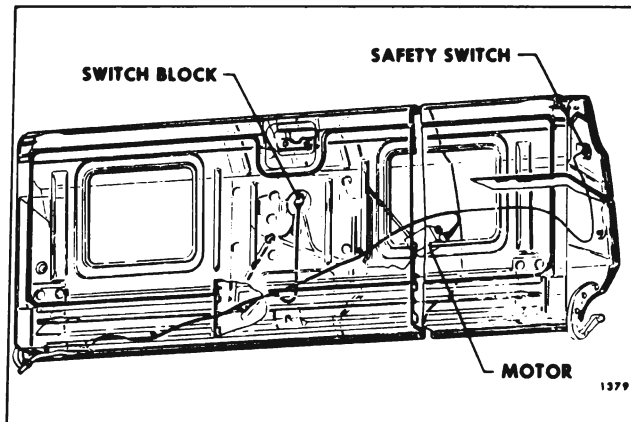


Fig. 16-53—Tail Gate Wiring - Pontiac "B" Body

been checked for proper operation may be connected to the switch block. If a switch is not available, a three-way jumper wire can be made to perform the switch function. The method of making the jumper wire and the switch locations to be connected to obtain a specific movement of the seat are shown in Figures 16-71 and 16-72. If a jumper wire is used, number the locations on the switch block as indicated in the illustration.

NOTE: To make jumper wire, obtain two pieces of #12 gauge wire, each 4 1/2" long. Join one

end of each wire as shown in diagram. The joined end can be inserted in the feed location in the switch block; one of the remaining ends can be inserted into one of the solenoid locations.

1. Obtain switch or jumper wire and connect to switch block.
2. Operate switch if used. If adjusters operate with switch or jumper wire, but did not operate with original switch, the original switch is defective or connector block was not sufficiently engaged.

IMPORTANT: To obtain a seat movement using a three-way jumper wire at the switch block, the switch feed location, one of the motor field wire locations and one of the solenoid locations have to be connected simultaneously.

The switch locations to be connected to obtain a specific seat movement are outlined as follows:

- (a) To raise seat, place jumper wire in locations A, B and E.
- (b) To lower seat, place jumper wire in locations A, D and E.

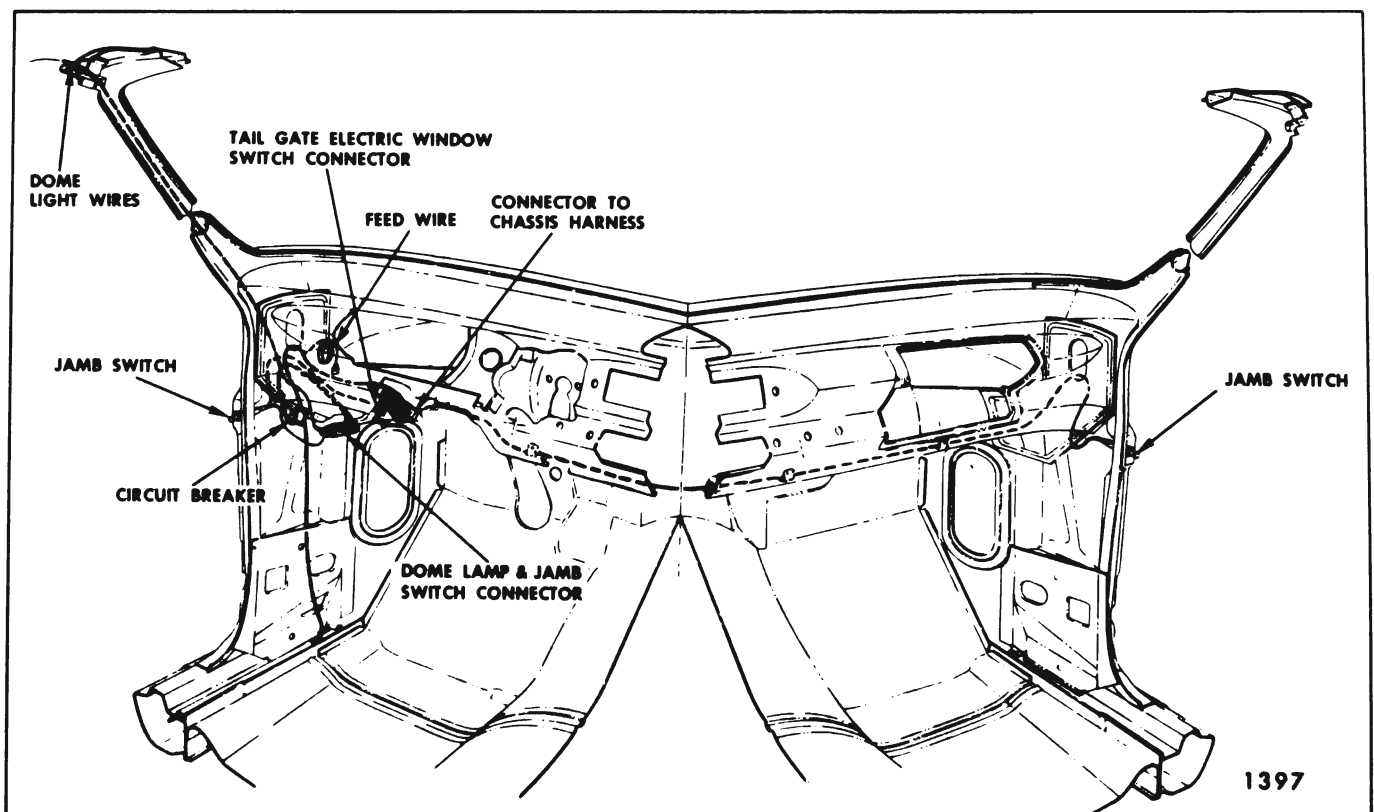


Fig. 16-54—Front End Wiring - Chevrolet "X" Bodies

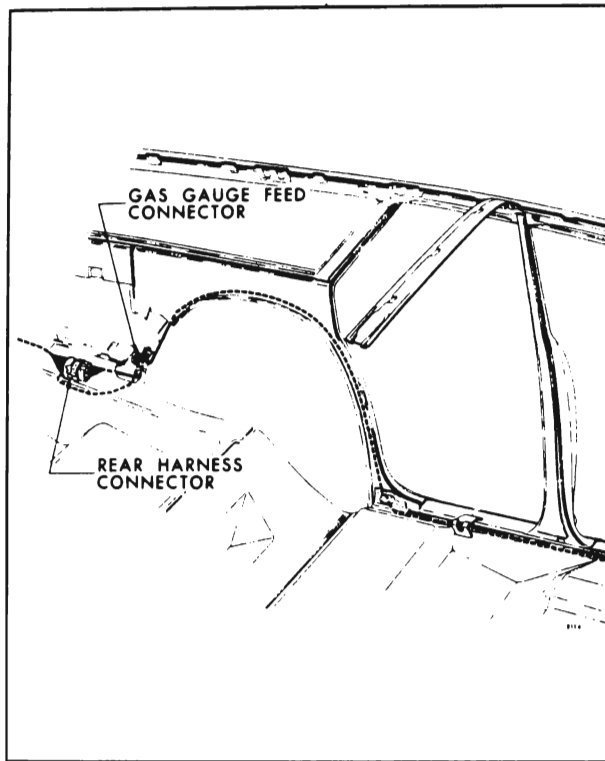


Fig. 16-55—Left Side Wiring - Chevrolet "X" Bodies

(c) To operate seat forward, place jumper wire in locations A, C and D.

(d) To operate seat rearward, place jumper wire in locations A, B and C.

f. Checking Wires Between Control Switch and Motor Relay

1. Disengage three-wire harness connector from relay at motor.
2. Insert one test light lead into the motor field

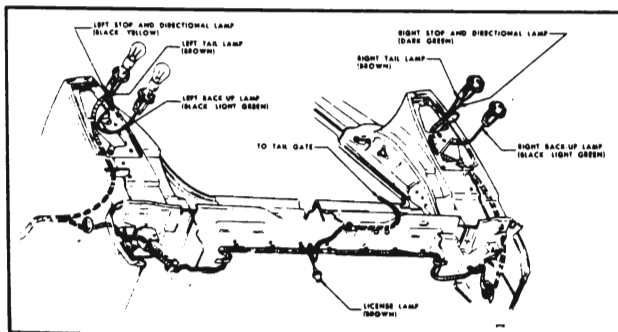


Fig. 16-56—Rear Cross Bar Wiring - Chevrolet "X" Bodies

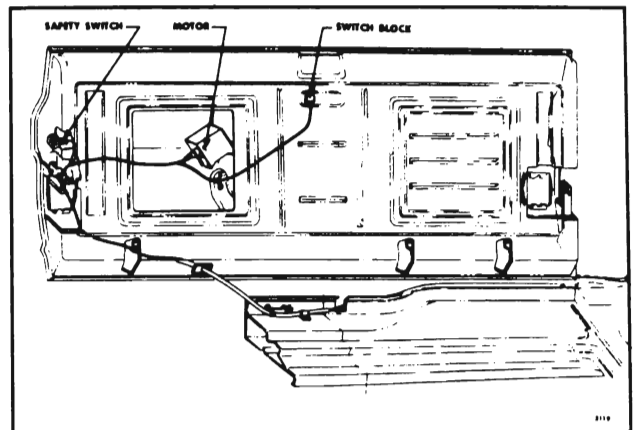


Fig. 16-57—Tail Gate Wiring - Chevrolet "X" Bodies

connector slot on harness and ground other lead.

3. Actuate seat switch to energize field wire being tested.
4. If tester does not light, there is no current at end of wire. Failure is caused by an open or short circuit between end of wire and switch. Check other motor field wire in the same manner.

g. Checking the Relay Assembly

1. Disconnect three leads from relay assembly. These are the wires leading from the motor to the relay.
2. Connect one end of a jumper wire to one of the motor field feed studs on the relay and ground the other end of the jumper wire.
3. Connect one test light lead to motor armature feed stud on relay and ground other tester lead.
4. With jumper wire, energize the field stud which is not grounded.

CAUTION: Do not energize grounded side. If tester does not light, the relay is defective.

h. Checking the Motor Assembly

1. Disconnect motor field feed wires from motor.

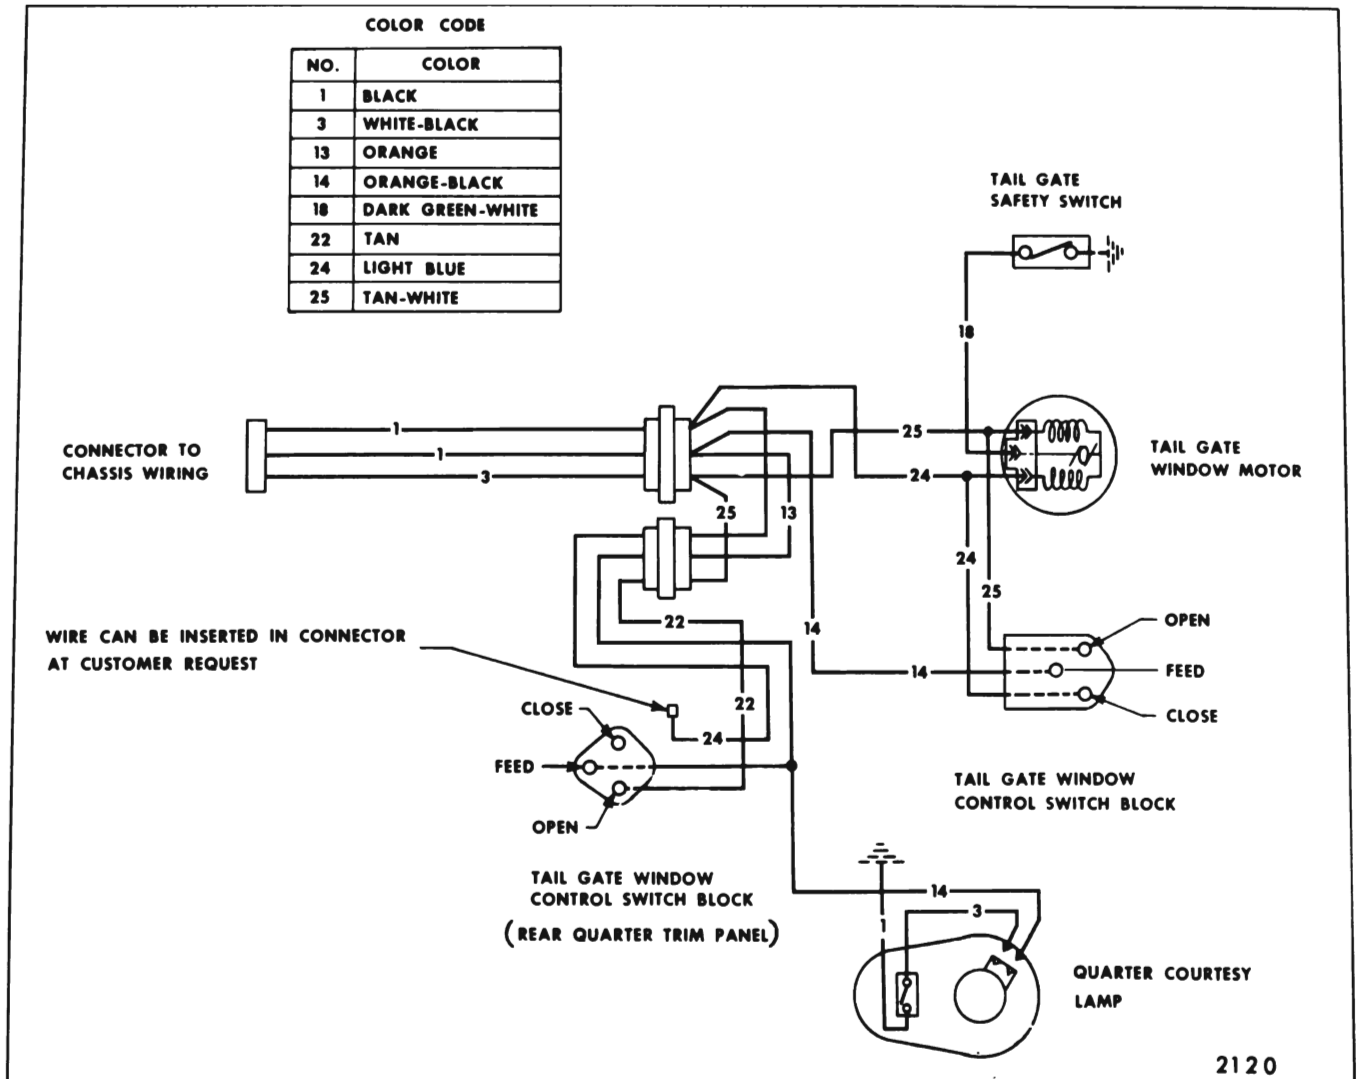


Fig. 16-58—Power Tail Gate Circuit - Chevrolet "B" 45 Styles

2. Connect one end of a #12 gauge jumper wire to battery positive pole and other end to one of the motor field and the armature wires.
3. If motor does not operate, motor is defective. Check the remaining motor field wire in the same manner.

3. Operate switch to wire being tested. If tester does not light, there is no current at the end of harness wire. Failure is caused by an open or short circuit between end of wire and switch or defective switch.
4. Check other wire in same manner.

i. Checking Wires Between Switch and Solenoids

NOTE: One wire in connector is a blank. Check wiring diagram for colors of wires actually used.

1. Disconnect harness connector from transmission assembly.
2. Connect one test light lead to one terminal of power feed and ground other test light lead to body metal.

j. Checking the Solenoid

1. Check solenoid ground strap attachment for proper ground.

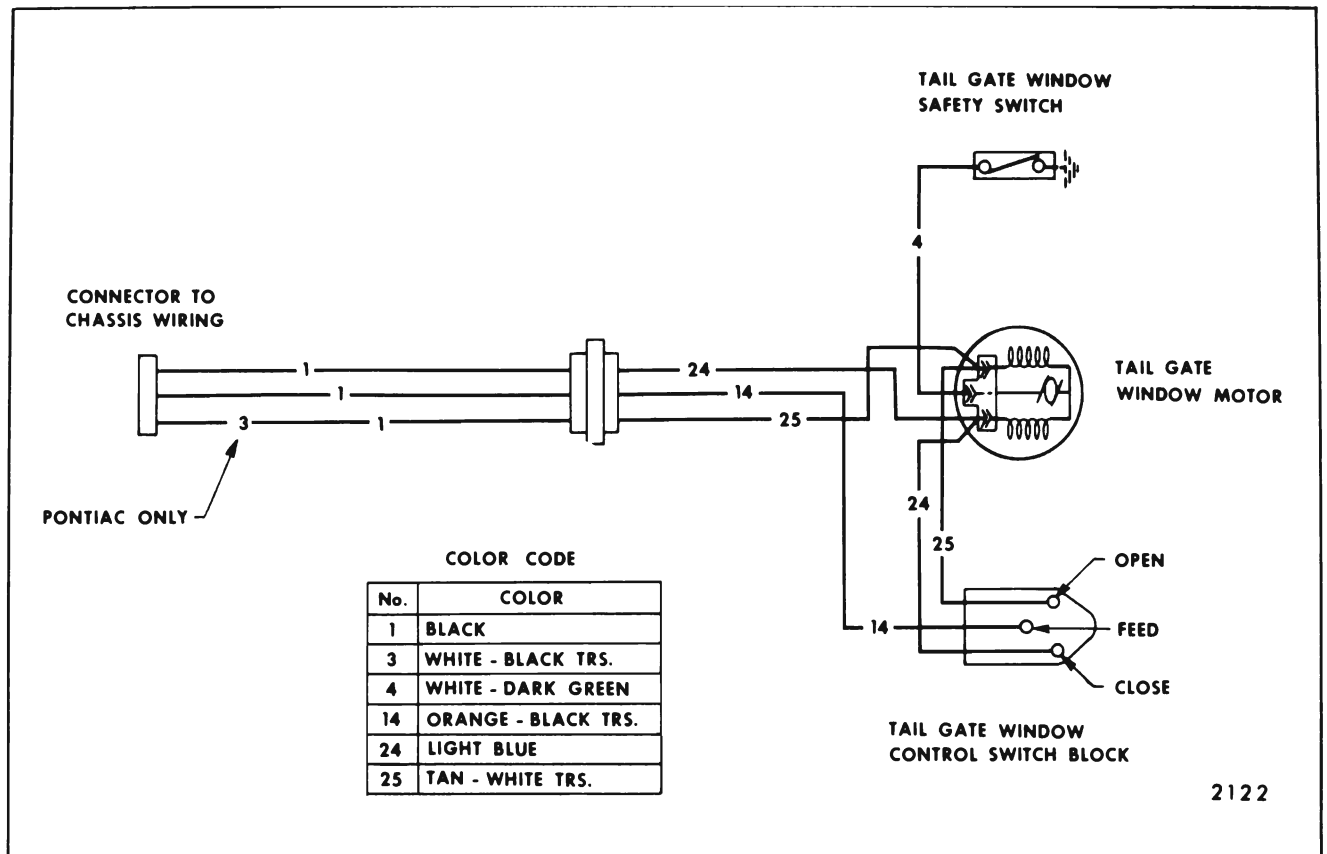


Fig. 16-59—Power Tail Gate Window Circuit - All "A & B" 35-55 and 65 Styles

2. Connect one end of a #12 gauge jumper wire to the battery positive pole and the other end to the lead of the solenoid being checked.

CAUTION: To prevent damaging the solenoid, do not energize solenoid for more than one minute.

3. Operate switch, actuate adjuster motor and

solenoid being checked.

4. If adjusters do not operate and there is no mechanical failure of the adjusters, the solenoid is defective.

NOTE: If solenoid is functioning properly, a "click" may be heard when solenoid plunger operates.

k. Trouble Shooting

CONDITION	CAUSE	CORRECTION
1. Seat adjuster motor does not operate.	a. Short or open circuit between power source or switch and motor.	a. Check circuit from power source and switch to motor to locate failure.
	b. Defective motor relay.	b. Replace relay.

CONDITION	CAUSE	CORRECTION
1. Seat adjuster motor does not operate. (Cont'd.)	c. Defective motor.	c. Check Motor. If defective repair or replace as required.
	d. Defective switch.	d. Replace switch.
	e. Defective circuit breaker.	e. Replace circuit breaker.
2. Seat adjuster motor operates in both directions but seat adjusters are not actuated.	a. Short or open circuit between switch and affected solenoid.	a. Check circuit from switch to solenoid to locate failure.
	b. Defective solenoid.	b. Check solenoid. If defective, repair or replace as required.
	c. Defective switch.	c. Replace switch.
3. Seat Adjuster motor operates in one direction only, seat moves down and forward, but does not move up and rearward.	a. Short or open circuit between one of the motor relay wires and seat control switch.	a. Check circuit between affected motor relay wire and seat switch.
	b. Defective field coil in motor.	b. Check motor. If defective repair or replace as required.
	c. Defective switch.	c. Replace switch.

SIX-WAY TILT SEATS

Description

The seat adjuster for the standard and "STRATO" type 6-way seats are actuated by a 12-volt motor installed at the left side of the seat assembly (see Figs. 16-73 and 16-74). The motor is energized by a three button-type control switch located in the left seat side panel.

On some "C-69" Styles, the control switch is installed in the left front door arm rest.

The power seat circuit is protected by a circuit breaker (refer to Electrical Introduction for location).

Oldsmobile Styles Only - In addition to the circuit breaker a relay is used in the circuit which prevents the operation of the seat until the ignition switch is turned "on".

The electrical portion of the six way seat operates as follows:

When the control switch is actuated, current flows

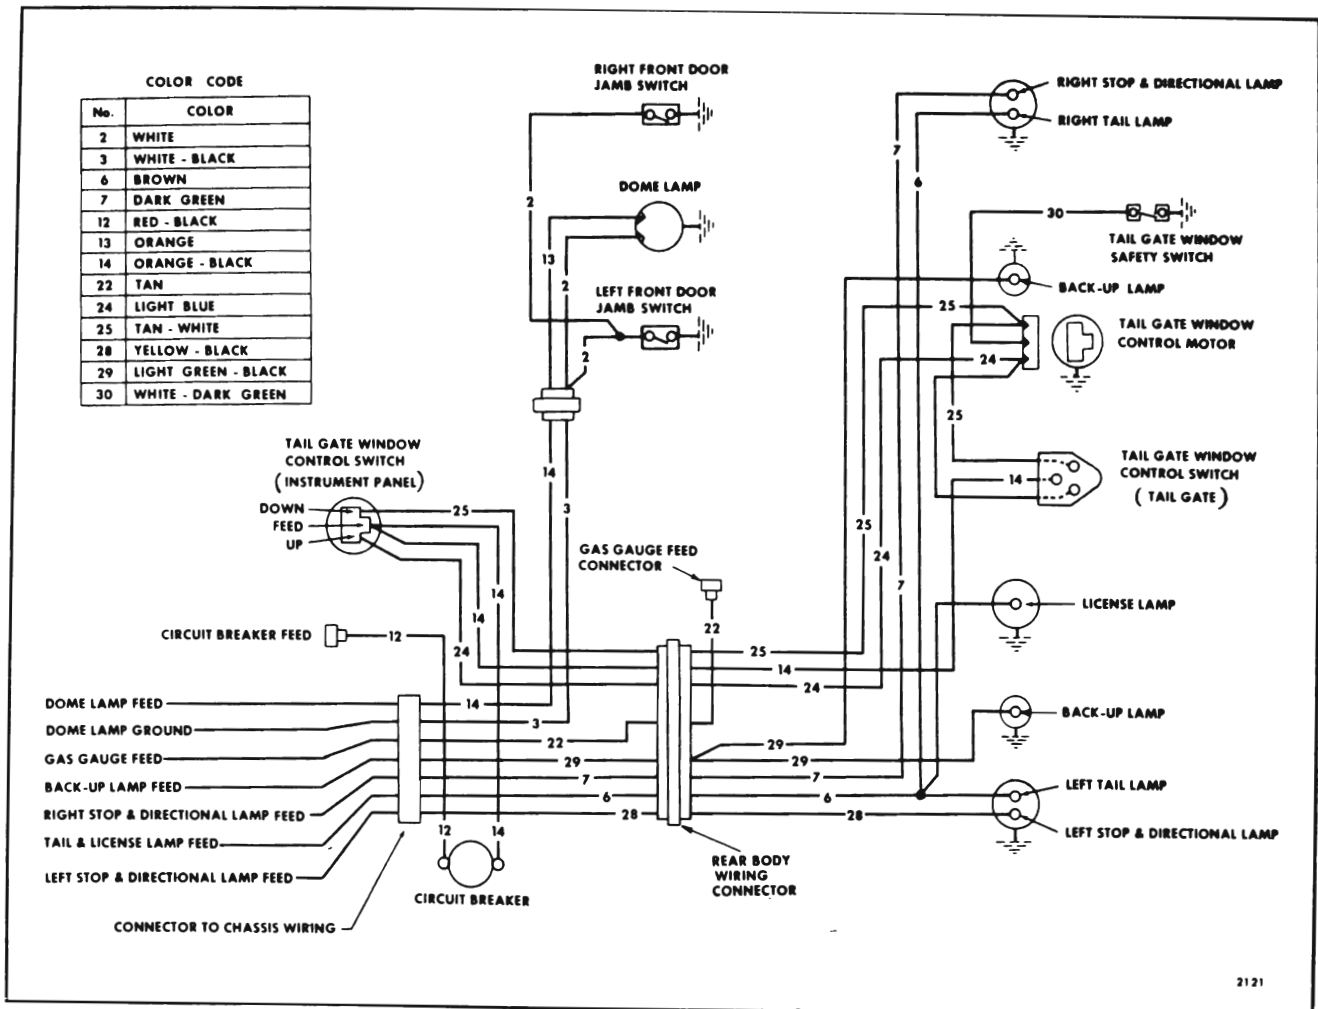


Fig. 16-60—Power Tail Gate Window Circuit - Chevrolet "X" Bodies

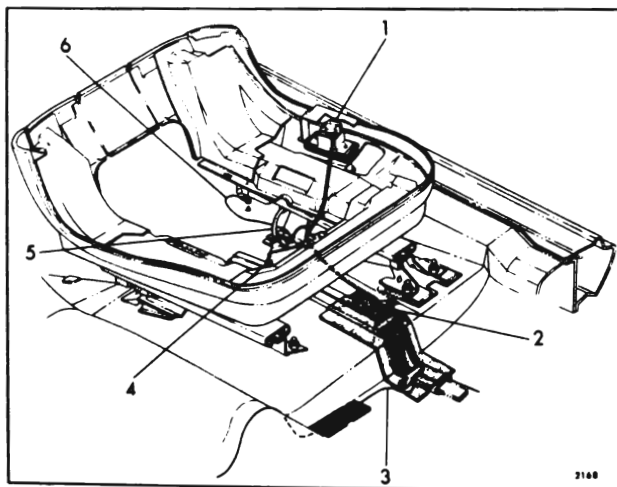


Fig. 16-61—Horizontal Bucket Seat Wiring

1. Control Switch
2. Feed Harness Connector
3. Feed Wire to Passenger Seat
4. Motor
5. Control Cable
6. Ground Wire

to the transmission solenoid which controls the desired seat movement. The energizing of the solenoid coil results in the solenoid plunger dog engaging the gear mechanism to rotate the control cable. The same switch action which energized the solenoid produces a current flow through the motor control relay to one of the motor field coils. The current flows through the relay, closes the contacts between the relay power source and the armature motor lead wire, and results in the operation of the seat motor. When the control switch lever is released, the switch contacts open, a spring returns the shaft dog and solenoid plunger to their original position disengaging them from the gear dog.

Circuit Checking Procedures

It may be necessary to use only one or all of the procedures outlined to locate an electrical failure

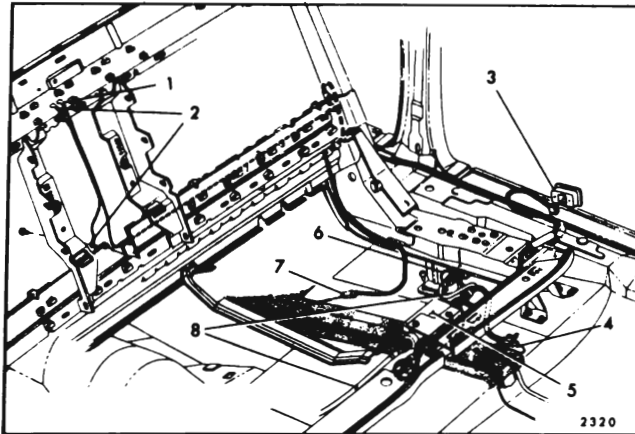
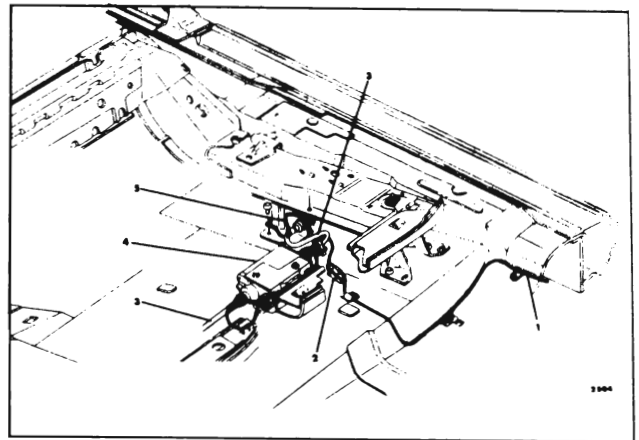


Fig. 16-62 — Horizontal Bench Seat Wiring

- | | |
|---|--|
| 1. Front Seat Back Switch
Feed - White | 5. Motor |
| 2. Front Seat Back Switch
Ground - Black | 6. Ground Wire |
| 3. Control Switch | 7. Front Seat Back
Courtesy Lamp
Feed Connector
(Cadillac Only) |
| 4. Harness Feed
Connector | 8. Horizontal Control Cable |

in the circuit. If the location of the failure is evident, follow only the steps required to check the affected wire or component. If the location of the failure is not evident, follow the procedure as outlined. Before performing any extensive check procedures, check the seat adjuster drive cables for

Fig. 16-63 — Horizontal Bench Seat Wiring -
Buick and Oldsmobile "C" Body

- | | |
|--------------------------------------|------------------|
| 1. Wiring to Door
Arm Rest Switch | 3. Control Cable |
| 2. Feed Harness
Connector | 4. Seat Motor |
| | 5. Ground Wire |

proper attachment. In addition, study the seat circuit diagrams to become familiar with the seat circuit. See Figures 16-75, 16-76 and 16-77.

a. Checking Feed Circuit Continuity at Circuit Breaker

1. Connect one test light lead to battery side of

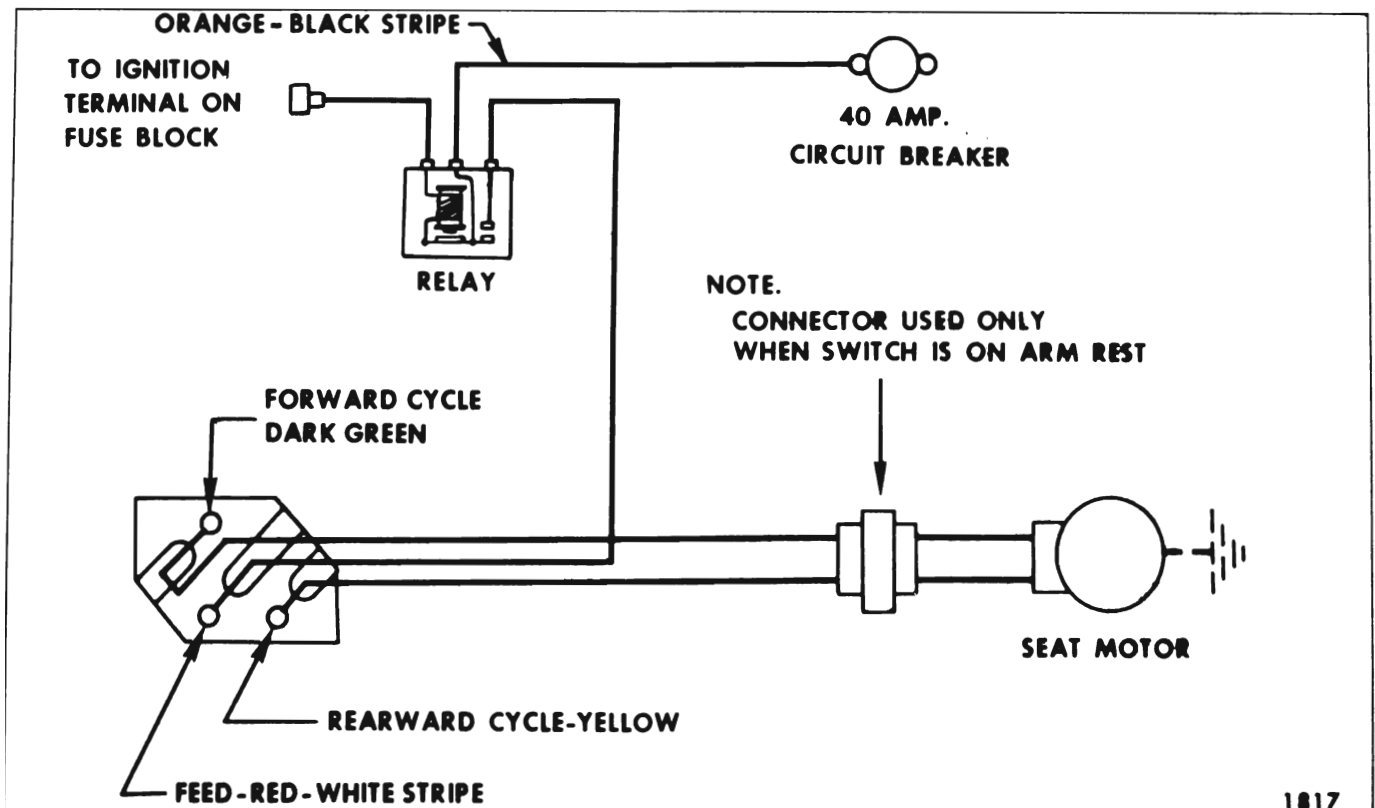


Fig. 16-64 — Horizontal Seat Circuit - Oldsmobile Styles

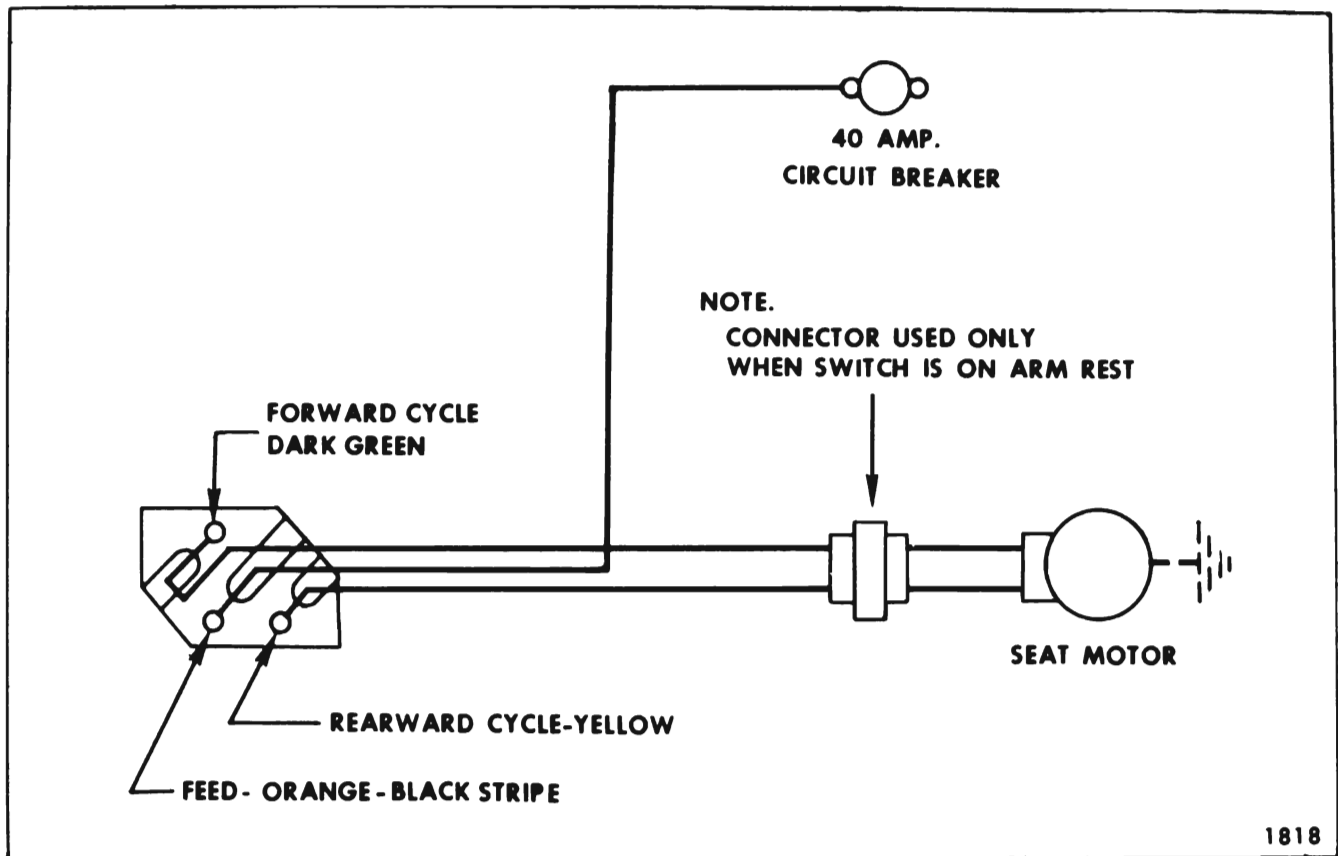
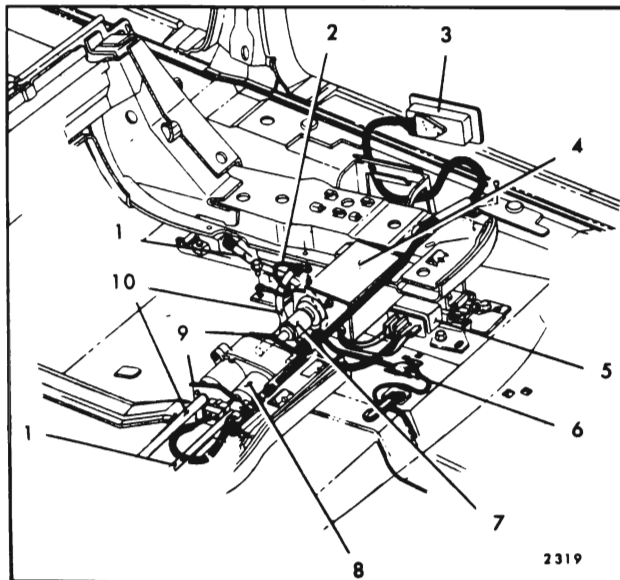


Fig. 16-65—Horizontal Seat Circuit - Buick, Cadillac Styles

Fig. 16-66—Four-Way Bench Seat Wiring -
"B & C" Body Styles

- | | |
|------------------------------------|--------------------------------------|
| 1. Vertical Control Cable (Yellow) | 6. Harness Feed Connector |
| 2. Ground Wire | 7. Rubber Coupler |
| 3. Control Switch | 8. Transmission Assembly |
| 4. Motor | 9. Transmission End Plates |
| 5. Motor Control Relay | 10. Horizontal Control Cable (Black) |

circuit breaker and ground other lead. If tester does not light, there is an open or short circuit in feed circuit to breaker.

2. To check circuit breaker, disconnect the output feed wire (the wire opposite the power source feed to the breaker) from the breaker and with test light check terminal from which the wire was disconnected. If tester does not light, circuit breaker is inoperative. Buick and Cadillac Styles - Check feed circuit continuity at fuse block.

b. Checking Relay Assembly at Shroud—Oldsmobile Styles

1. With test light check relay feed (orange-black stripe). If tester does not light, there is an open or short circuit between relay and circuit breaker.
2. Turn ignition switch on and with test light check output terminal of relay (red-white stripe). If tester does not light, the relay is

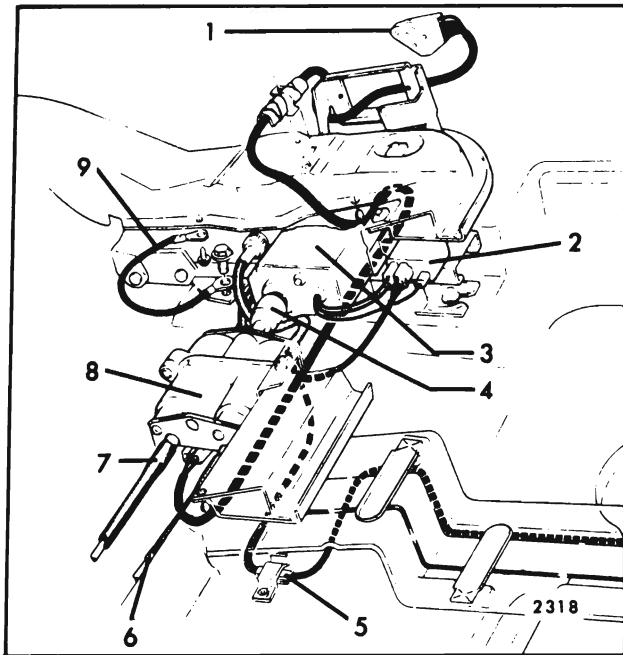


Fig. 16-67 — Four-Way Bench Seat Wiring - "A" Body Styles

- | | |
|---------------------------|-----------------------------------|
| 1. Control Switch Block | 6. Vertical Drive Cable (Yellow) |
| 2. Motor Control Relay | 7. Horizontal Drive Cable (Black) |
| 3. Motor | 8. Transmission Assembly |
| 4. Rubber Coupler | 9. Seat Ground Wire |
| 5. Harness Feed Connector | |

inoperative or there is a short or open circuit between ignition switch (pink) and relay assembly. (Check fuse at dash panel).

c. Check Feed Circuit Continuity at Seat Control Switch

1. Connect one test light lead to feed terminal of switch block and ground other test lead to body metal.
2. If tester does not light, there is an open or short circuit between switch and power source.

d. Checking the Seat Control Switch

NOTE: In the following operations which specify the seat control switch to be actuated, a switch that has been checked for proper operation may be connected to the switch block. If a switch is not available, a three-way jumper wire can be made to perform the switch function. The jumper

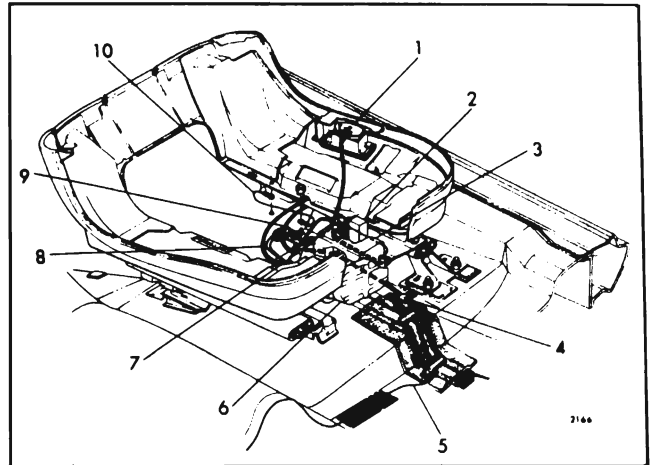


Fig. 16-68 — Four-Way "Strato" Bucket Seat Wiring - All Styles

- | | |
|---------------------------|---------------------------------------|
| 1. Control Switch | 7. Transmission and Solenoid Assembly |
| 2. Motor Control Relay | 8. Vertical Control Cable (Orange) |
| 3. Motor | 9. Horizontal Control Cable (Black) |
| 4. Harness Feed Connector | 10. Ground Wire |
| 5. Feed to Passenger Seat | |
| 6. Pulley Cover Plate | |

wire and the switch locations to be connected to obtain a specific movement of the seat are shown in Figures 16-78 - Oldsmobile styles with switch in seat side panel; 16-79 - Oldsmobile styles with switch in arm rest; 16-80 - Chevrolet, Pontiac, Buick and Cadillac styles. If a jumper wire is used, letter the locations on the switch block as indicated in the illustration. Details outlining the making and use of the jumper wire follow the checking procedure.

1. Obtain switch or jumper wire and connect to switch block.
2. Operate switch. If adjusters operate with new switch or jumper wire, but did not operate with original switch, the original switch is defective.
3. Check all six movements of seat adjuster.

e. Checking Feed Circuit Continuity at Relay on Seat Motor

1. Disengage 3-wire connector body from the seat motor relay terminal.
2. Insert one test light lead into the relay power

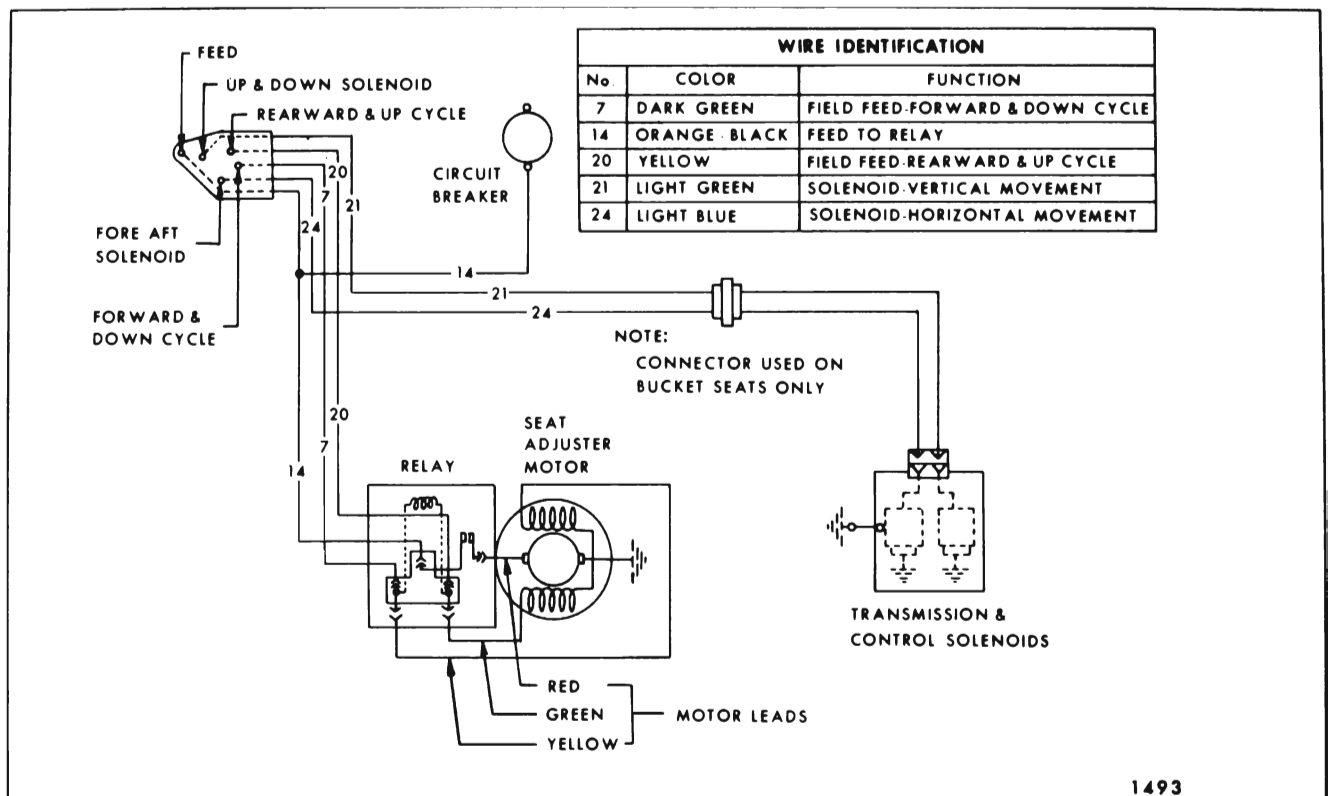


Fig. 16-69—Four-Way Seat Circuit - All Styles except Oldsmobile "B & E" Styles

feed connector slot on the harness, and ground the other test light lead.

3. If tester does not light, there is no current at end of feed wire. Failure is caused by an open or short in feed circuit.

f. Checking Wires Between Control Switch and Motor Relay

1. Disengage 3-wire harness connector from relay at motor.
2. Insert one test light lead into the motor field connector slot on harness and ground the other lead.
3. Actuate seat switch to energize field wire being tested.
4. If tester does not light, there is no current at end of wire. Failure is caused by an open or short circuit between end of wire and switch. Check other motor field wire in the same manner.

g. Checking the Relay Assembly

1. Disconnect three motor leads from relay assembly. These are the wires leading from the motor to the relay.
2. Connect one end of a jumper wire to one of the motor field feed studs on the relay and ground the other end of the jumper wire.
3. Connect one end of test light to motor armature feed stud on relay and ground other tester lead.
4. With a jumper wire, energize the field stud which is not grounded. If tester does not light the relay is defective.

h. Checking the Motor Assembly

1. Disconnect the motor armature feed lead and one of the motor field feeds from the relay assembly.
2. With a jumper wire, energize the armature

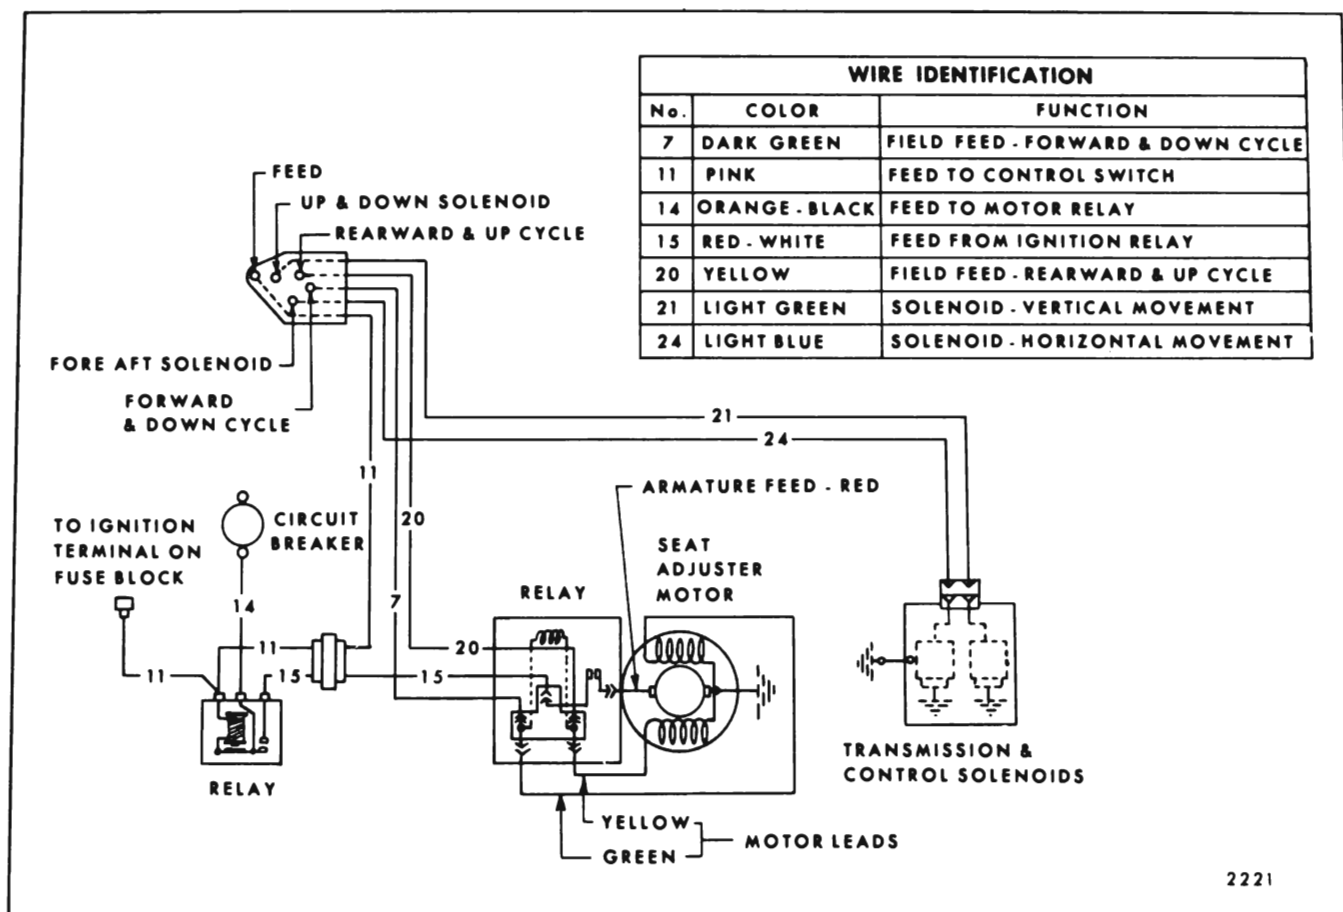


Fig. 16-70—Four-Way Seat Circuit - Oldsmobile "B & E" Styles

feed and one of the field feeds.

3. If motor does not operate, it is defective. Check the other motor field feed in the same manner.

i. Checking the Wire Between the Solenoid and Switch

1. Disengage harness connector from transmission.
2. Connect one test light lead to end of harness wire being tested and ground other lead.
3. Operate switch to energize wire being tested. If tester does not light, there is no current at end of wire. Failure is caused by an open or short circuit between end of wire and switch.

j. Checking the Solenoid

1. Check solenoid ground strap attachment for proper ground.
2. Energize solenoid being checked with jumper wire.

NOTE: If solenoid is functioning, a "click" should be heard when solenoid plunger operates "in" and "out".

CAUTION: To prevent damaging the solenoid, do not energize solenoid for more than one minute.

3. With solenoid energized, actuate seat control switch to energize adjuster motor.
4. If adjusters do not operate, and there is no

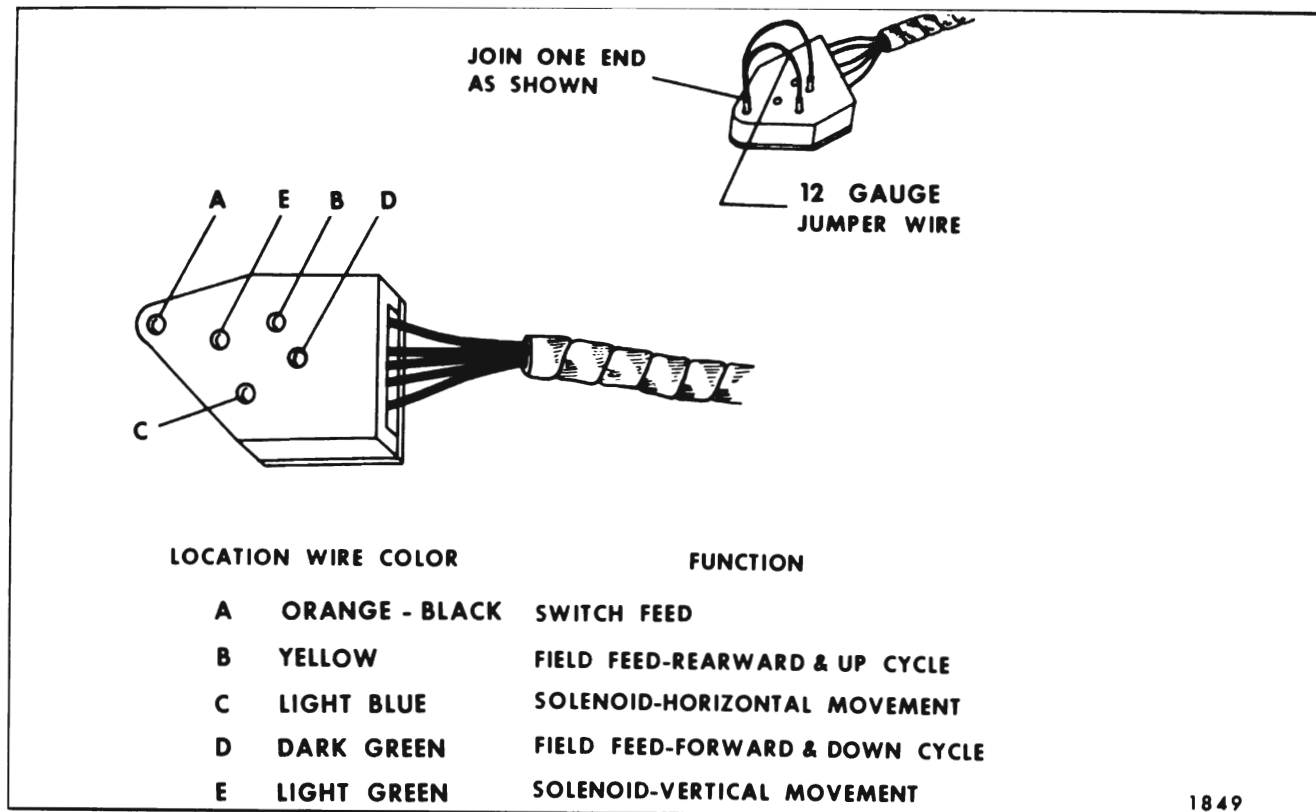


Fig. 16-71 — Four-Way Seat Switch Block - All Styles Except Oldsmobile "B & E"

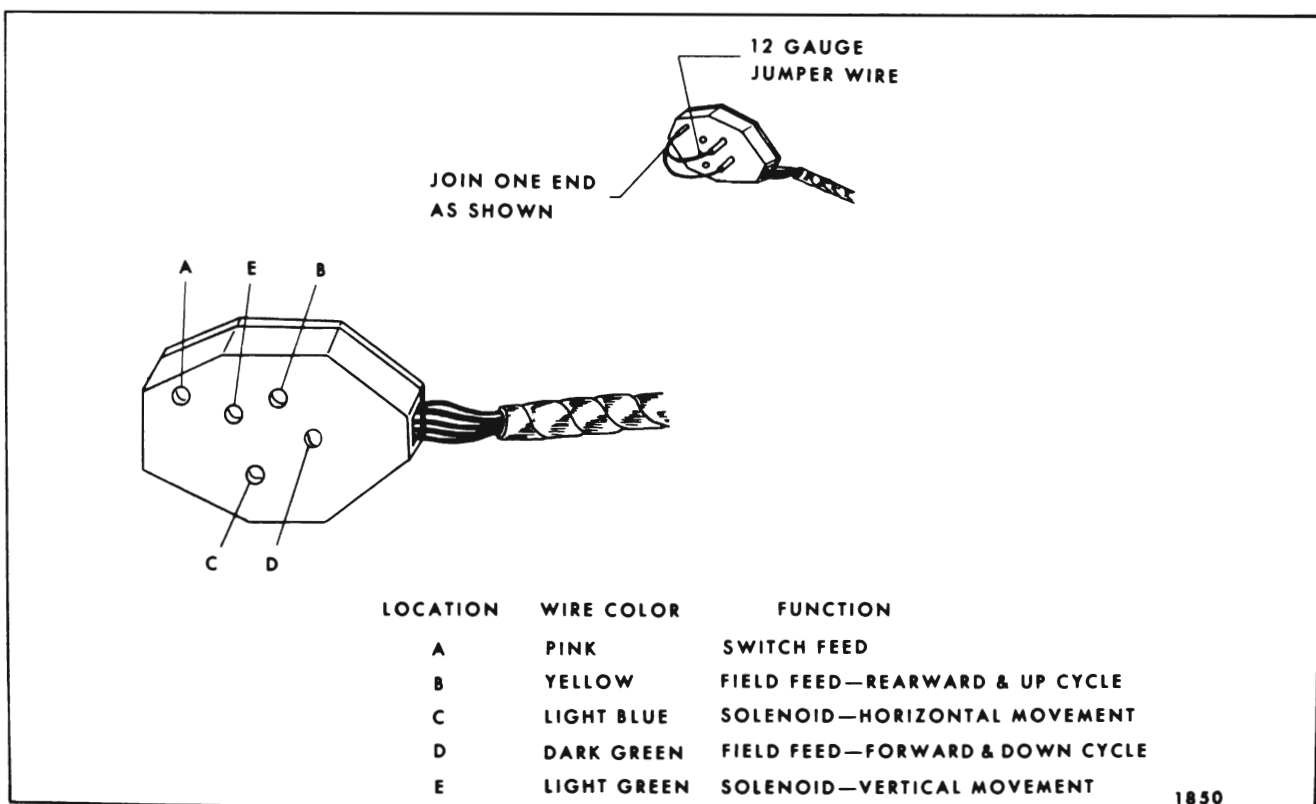


Fig. 16-72 — Four-Way Seat Switch Block - Oldsmobile "B & E" Styles

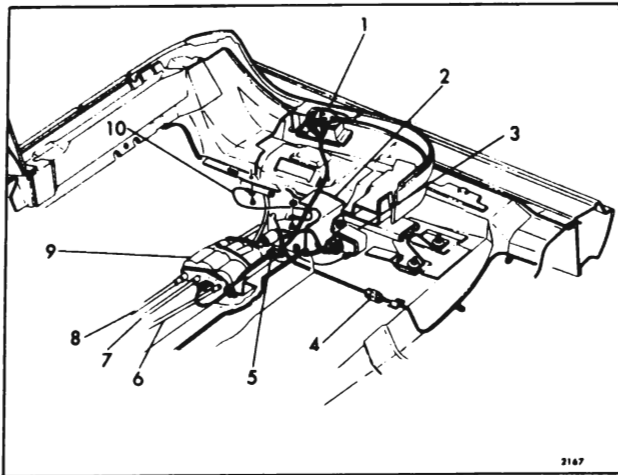


Fig. 16-73 — Six-Way "Strato" Seat

- | | |
|--|---------------------------------------|
| 1. Control Switch | 7. Rear Vertical Control Cable (Blue) |
| 2. Motor | 8. Horizontal Control Cable (Black) |
| 3. Motor Control Relay | 9. Transmission and Solenoid Assembly |
| 4. Harness Feed Connector | 10. Ground Wire |
| 5. Rubber Coupler | |
| 6. Front Vertical Control Cable (Yellow) | |

mechanical failure in the seat unit, the solenoid is defective.

Three-Way Jumper Wire for Checking Seat Switch

To make jumper wire, obtain two pieces of #12 gauge wire, each 4 1/2" long, join one end of each wire as shown in Figure 16-80. The joined end can be inserted in the feed location in the switch block; one of the remaining ends can be inserted into one of the field locations in the switch block; the other end can be inserted into one of the solenoid locations.

IMPORTANT: To obtain a seat movement using a 3-way jumper wire at the switch block, the switch feed location, one of the motor field wire locations and one of the solenoid locations must be connected simultaneously.

On Bodies with Switch in Seat Side Panel:

1. To raise front edge of seat, place jumper in locations, A, F and E.
2. To lower front edge of seat, place jumper in locations A, C and E.
3. To raise rear edge of seat, place jumper in locations A, F and D.

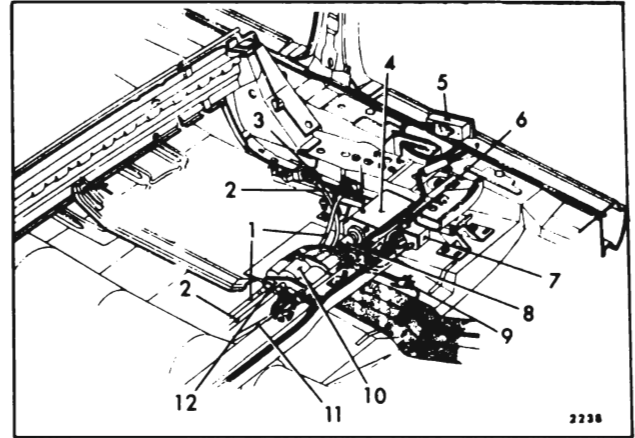


Fig. 16-74 — Six-Way Standard Bench Seat

- | | |
|--|---|
| 1. Horizontal Control Cable (Black) | 7. Motor Control Relay |
| 2. Rear Vertical Control Cable (Blue) | 8. Rubber Coupler |
| 3. Ground Wire | 9. Harness Feed Connector |
| 4. Motor | 10. Transmission and Solenoid Assembly |
| 5. Control Switch | 11. Front Vertical Control Cable (Yellow) |
| 6. Front Vertical Control Cable (Yellow) | 12. Transmission End Plate |

4. To lower rear edge of seat, place jumper in locations A, C and D.
5. To move seat forward, place jumper in locations A-B and F.
6. To move seat rearward, place jumper in locations A-C and B.

On Bodies with Switch in Arm Rest:

1. To raise front edge of seat, place jumper in locations A-C and E.
2. To lower front edge of seat, place jumper in locations A-F and E.
3. To raise rear edge of seat, place jumper in locations A-C and D.
4. To lower rear edge of seat, place jumper in locations A-F and D.
5. To move seat forward place jumper in locations A-C and B.
6. To move seat rearward, place jumper in locations A-F and B.

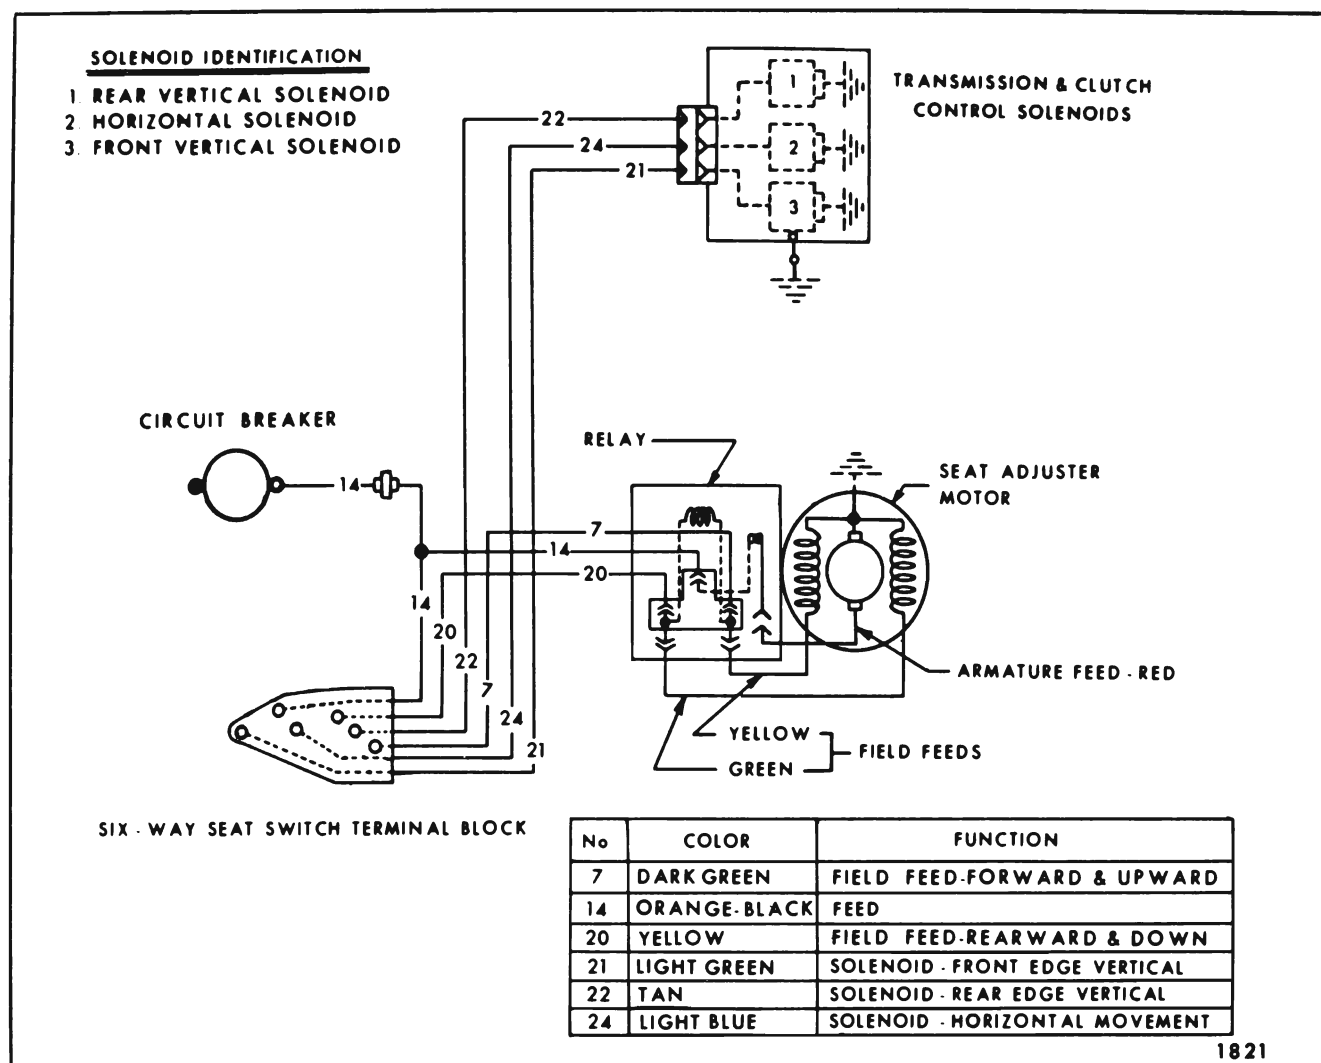


Fig. 16-75 — Six-Way Seat Circuit - All Except Oldsmobile Styles

Trouble Shooting

CONDITION	CAUSE	CORRECTION
Seat adjuster motor does not operate.	a. Short or open circuit between power source or switch and motor. b. Defective motor.	a. Check circuit from power source and switch to motor to locate failure. b. Check ignition switch circuit through relay at left shroud - Oldsmobile styles only. c. Check motor. If defective, repair or replace as required.

Trouble Shooting

CONDITION	CAUSE	CORRECTION
Seat adjuster motor operates, but seat adjusters are not actuated. or Seat adjuster motor operates, front edge of seat moves up and down and seat moves forward and rearward. The rear edge of seat cannot be operated.	a. Short or open circuit between switch and affected solenoid. b. Defective solenoid.	a. Check circuit from switch to solenoid to locate failure. b. Check solenoid. If defective, repair or replace as required.
Seat adjuster motor operates and seat adjusters move front and rear edge of seat up and forward but will not move the seat down and rearward. or Seat adjuster motor operates and seat adjusters move front and rear of seat down and rearward, but will not move the seat up and forward.	a. Short or open circuit between one of the motor field wires and seat control switch. b. Defective field coil in motor.	a. Check circuit between affected motor field wire and seat switch. b. Check motor. If defective, repair or replace as required.

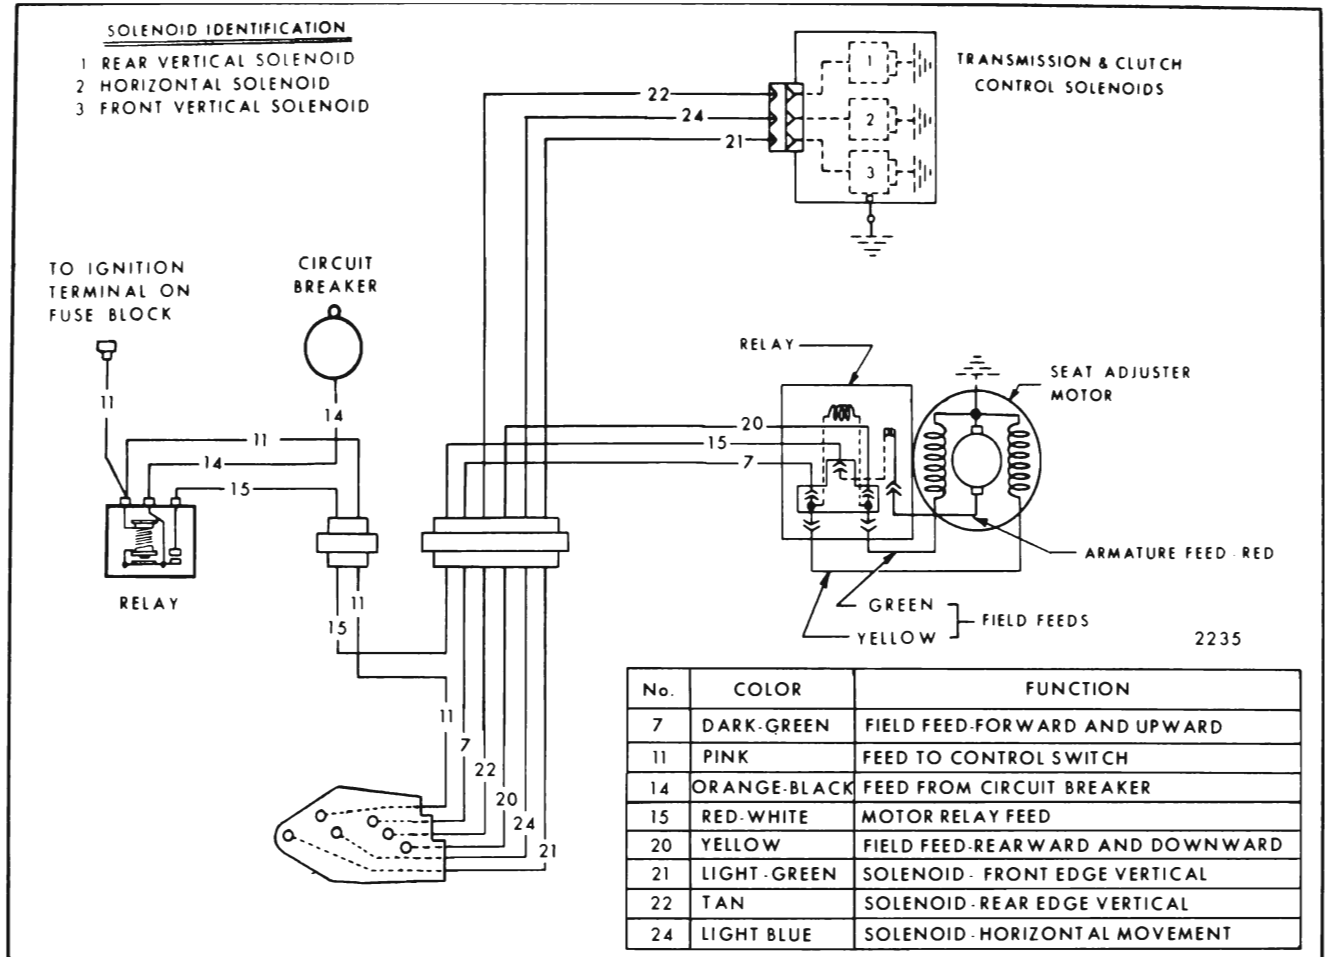


Fig. 16-76—Six-Way Seat Circuit - Switch in Arm Rest - Oldsmobile Styles

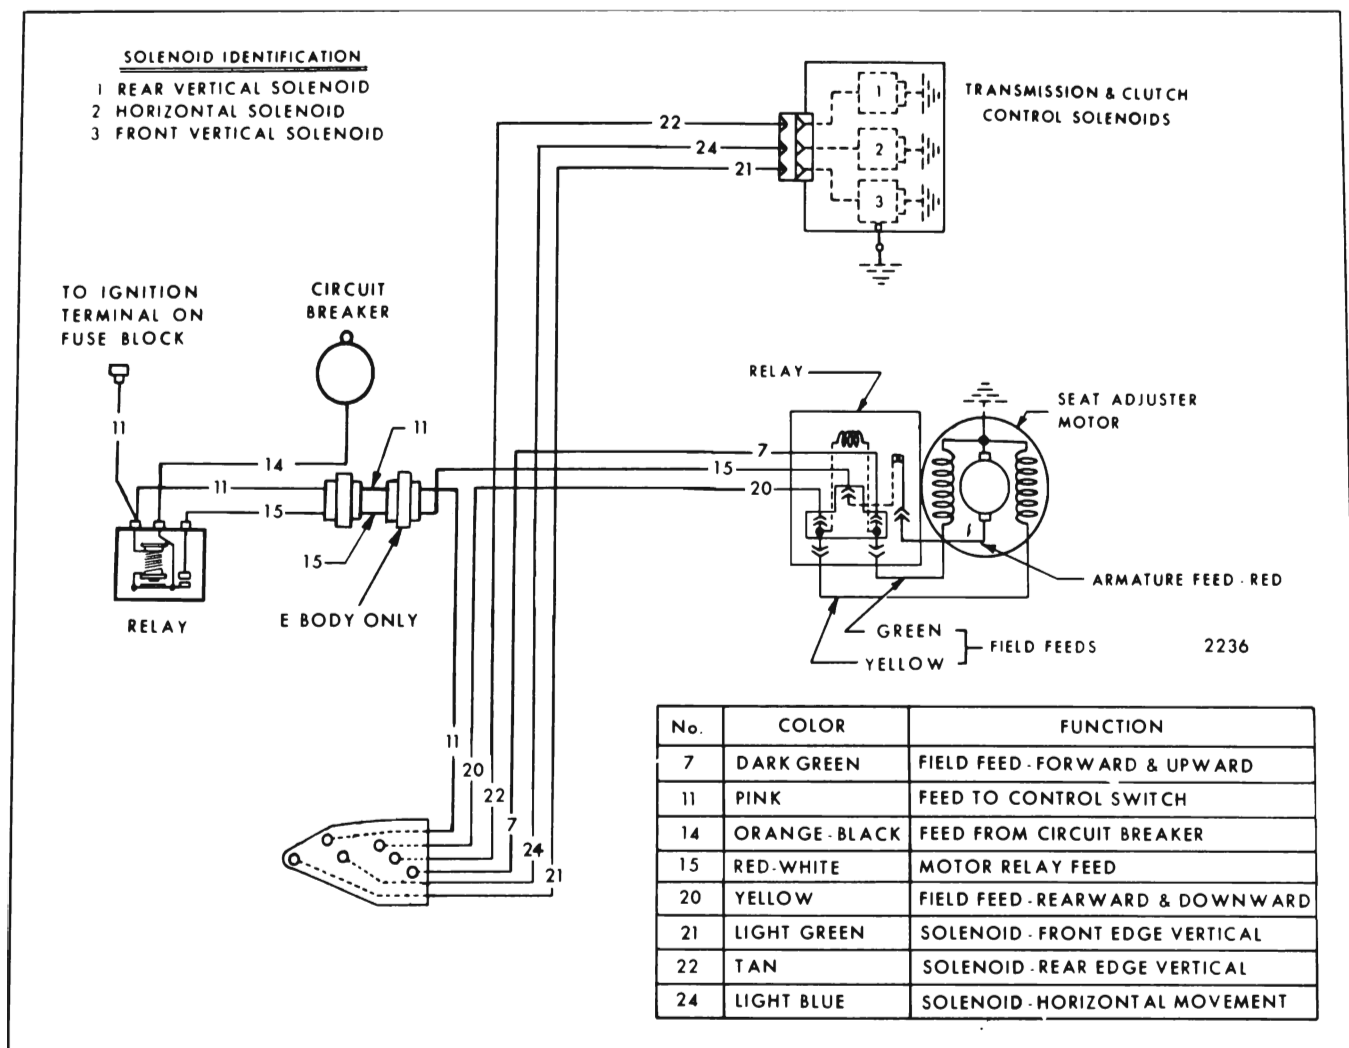
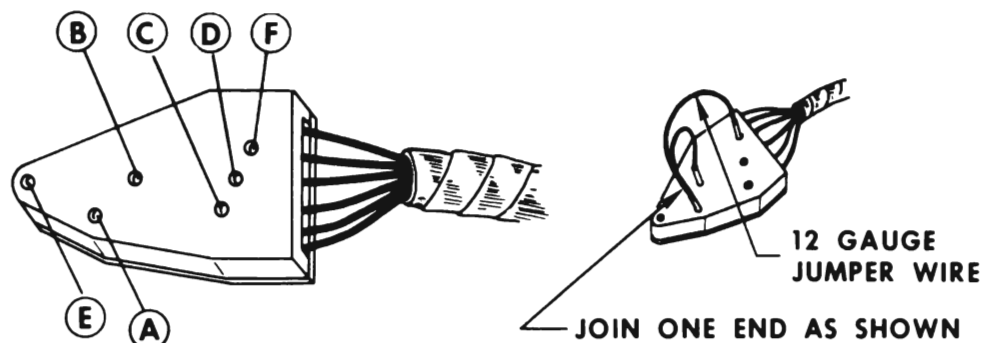



Fig. 16-77 — Six-Way Seat Circuit - Switch in Seat Side Panel - Oldsmobile Styles

SIX-WAY SEAT CONTROL SWITCH BLOCK

LOCATION	WIRE COLOR	FUNCTION
A	PINK	SWITCH FEED
B	LIGHT BLUE	SOLENOID-HORIZONTAL MOVEMENT
C	YELLOW	FIELD FEED-REARWARD & DOWN CYCLE
E	TAN	SOLENOID-REAR EDGE VERTICAL CYCLE
F	LIGHT GREEN	SOLENOID-FRONT EDGE VERTICAL CYCLE
D	DARK GREEN	FIELD FEED-FORWARD & UP CYCLE

1826


Fig. 16-78—Six-Way Seat Switch Block - Switch in Seat Side Panel - Oldsmobile

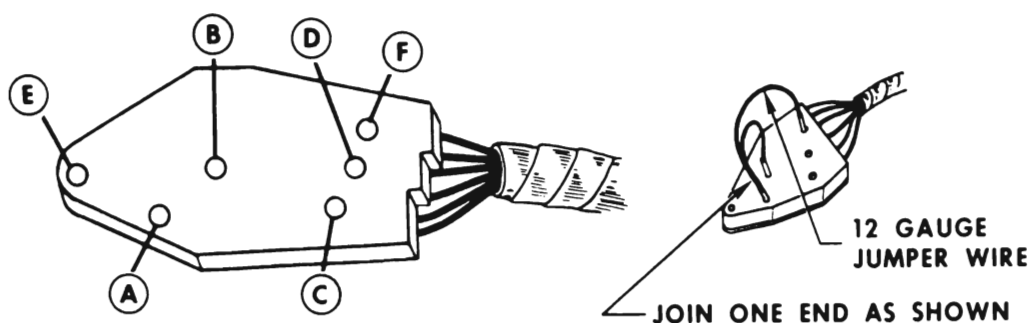SIX-WAY SEAT CONTROL SWITCH BLOCK

LOCATION	WIRE COLOR	FUNCTION
A	PINK	SWITCH FEED
B	LIGHT BLUE	SOLENOID-HORIZONTAL MOVEMENT
C	DARK GREEN	FIELD FEED-FORWARD & UP CYCLE
D	TAN	SOLENOID-REAR EDGE VERTICAL CYCLE
E	LIGHT GREEN	SOLENOID-FRONT EDGE VERTICAL CYCLE
F	YELLOW	FIELD FEED-REARWARD & DOWN CYCLE

1827

Fig. 16-79—Six-Way Seat Switch Block - Switch in Arm Rest - Oldsmobile

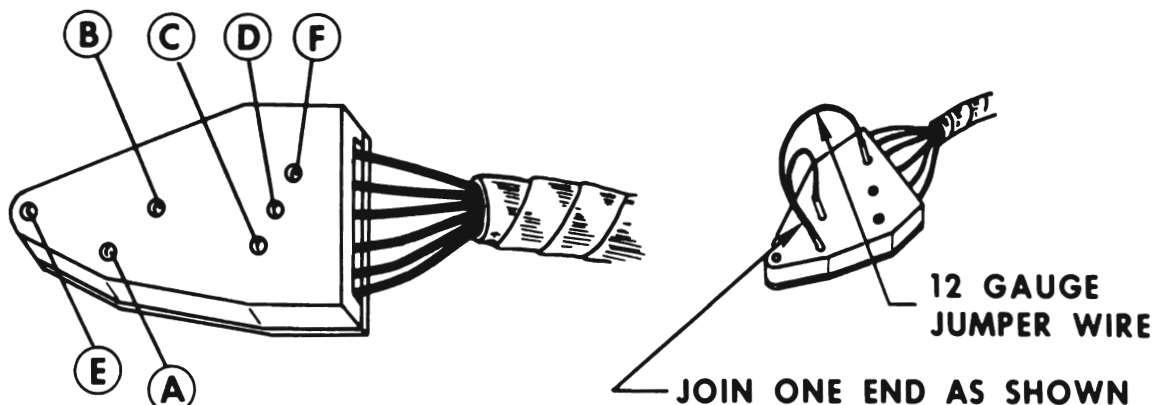SIX-WAY SEAT CONTROL SWITCH BLOCK

LOCATION	WIRE COLOR	FUNCTION
A	ORANGE-BLACK	SWITCH FEED
B	LIGHT BLUE	SOLENOID-HORIZONTAL MOVEMENT
C	YELLOW *	FIELD FEED-REARWARD & DOWN CYCLE
D	TAN	SOLENOID-REAR EDGE VERTICAL CYCLE
E	LIGHT GREEN	SOLENOID-FRONT EDGE VERTICAL CYCLE
F	DARK GREEN *	FIELD FEED-FORWARD & UP CYCLE

* ON STYLES WITH SWITCH IN ARM REST-
 DARK GREEN CONTROLS FORWARD & UP CYCLE
 YELLOW FIELD CONTROLS REARWARD & DOWN CYCLE

1825

Fig. 16-80—Six-Way Seat Switch Block - All Styles Except Oldsmobile

TAIL LAMPS

DESCRIPTION

Various methods are employed to remove and install the components of tail lamp assemblies. The following charts (Figs. 16-81, 16-82, 16-83, 16-84 and 16-85) will provide a quick reference for performing the three basic service operations for each Car Division (Bulb Replacement, Lens Replacement and Housing Replacement).

SEALING

Caution should be exercised to prevent waterleaks at the tail lamp area when sealing surfaces are disturbed. Damaged gaskets should be replaced. If new gaskets are not installed, the use of sealer (body caulking compound or equivalent) is recommended at critical areas and where the old gaskets have taken a set.

The recommended torque for attaching nuts to zinc die cast studs on tail lamp housings and rear fender extensions is 46 to 72 inch pounds. If additional tightening of casting to panel is required, a maximum of 90 inch pounds of torque may be used without stripping the nut.

TAIL LAMP BULB USAGE CHART

Trade No.	Candle Power	Use
1155	4	Tail Lamp
1156	32	Back-Up Lamp
1157	32 and 4	Combination Tail, Stop and Directional

TAIL LAMP OPERATION—CHEVROLET

OPERATION	METHOD	BODY TYPE					
		A	A-35	B	B 35-45	F	X
Bulb Replacement	Remove Lens (Outside)		X		X		X
	Remove Socket (Inside Rear Compartment)	X		X		X	
Lens Replacement	Remove Retaining Screws (Outside)		X		X		X
	Remove Housing and Disassemble	X		X		X	
Housing Replacement	Remove From Outside (Retaining Nuts in Rear Compartment)	X View C		X View D		X	
	Remove From Inside						
	Remove From Outside (Retaining Bolts Under Lens)		X View A		X View B		X
	Lower Rear Bumper						

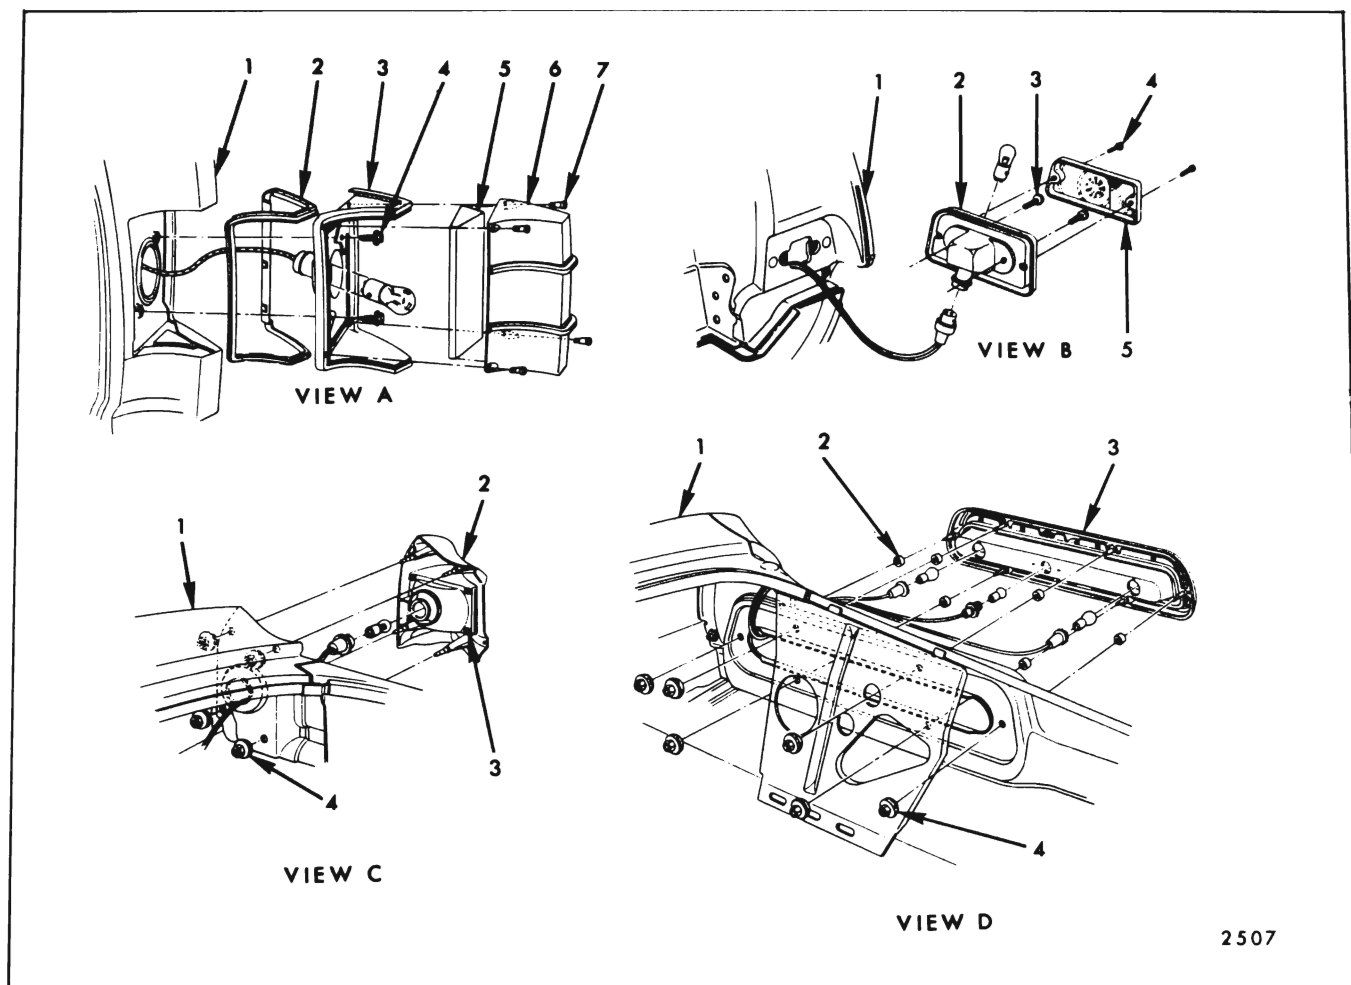


Fig. 16-81 —Chevrolet Tail Lamp Installations

View "A"

1. Quarter Panel
2. Lamp Opening Gasket
3. Lamp Housing
4. Lamp Housing Screw
5. Inner Lens
6. Outer Lens
7. Lens Screw

View "B"

1. Quarter Panel
2. Lamp Housing
3. Lamp Housing Screw
4. Lens Screw
5. Lens

View "C"

1. Quarter Panel
2. Quarter Extension and Lamp Assembly
3. Panel Bezel Nut
4. Quarter Extension Nut

View "D"

1. Quarter Panel
2. Lamp Housing Washer
3. Lamp Housing
4. Lamp Housing Nut

TAIL LAMP OPERATION—PONTIAC

OPERATION	METHOD	BODY TYPE						
		A 2300	A 2400	A 35	B 2500	B 26200	B 26600	B 35-45
Bulb Replacement	Remove Lens (Outside)			X				X
	Remove Socket (Inside Rear Compartment)	X	X		X	X	X	
	Remove Retaining Screws (Outside)			X				X
Lens Replacement	Remove Housing and Disassemble	X	X		X Remove Housing Studs	X	X	
	Remove From Outside (Retaining Nuts in Rear Compartment)	X	X	X View B	X	X View C		
Housing	Remove From Inside						X View D	
	Remove From Outside (Retaining Bolts Under Lens)							X View A
	Lower Rear Bumper							

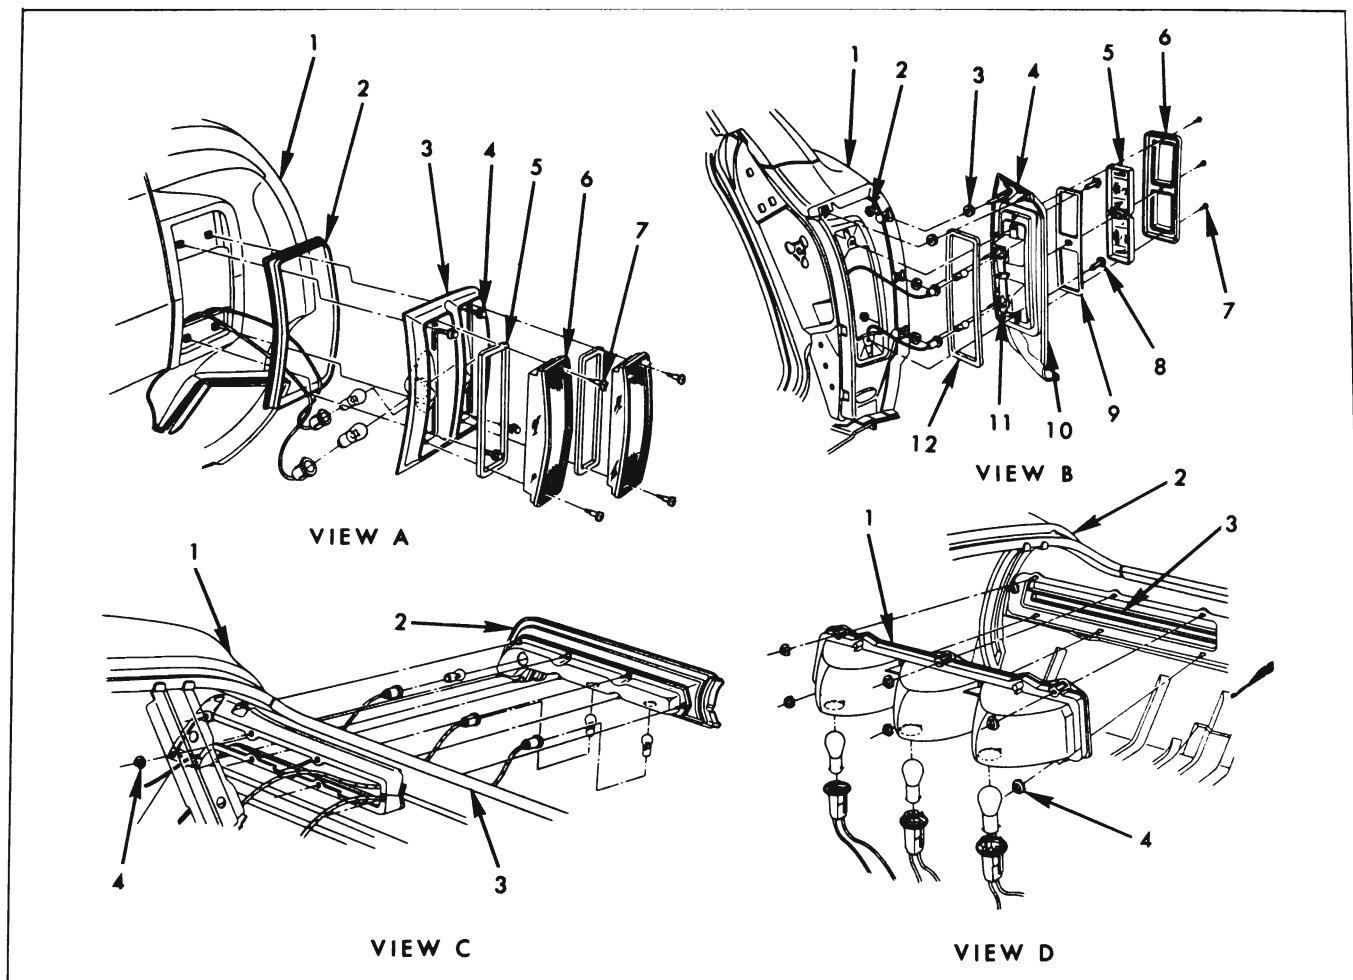


Fig. 16-82 — Pontiac Tail Lamp Installations

View "A"

1. Quarter Panel
2. Lamp Opening Gasket
3. Lamp Housing
4. Lamp Housing Screw
5. Lens Gasket
6. Lens
7. Lens Screw

View "B"

1. Quarter Panel
2. Quarter Extension Nut
3. Quarter Extension Washer
4. Quarter Extension
5. Lens
6. Bezel
7. Bezel and Lens Screw
8. Quarter Extension Screw
9. Lens Gasket
10. Quarter Extension Inner Gasket
11. Quarter Extension Outer Gasket
12. Tail Lamp Opening Gasket

View "C"


1. Quarter Panel
2. Lamp Housing
3. Rear End Panel
4. Lamp Housing Nut

View "D"


1. Lamp Housing
2. Quarter Panel
3. Rear End Panel Molding
4. Lamp Housing Nut

TAIL LAMP OPERATIONS—OLDSMOBILE


OPERATION	METHOD	BODY TYPE				
		A	A 35-55	B	C	E
Bulb Replacement	Remove Lens Outside		X			
	Remove Socket (Inside Rear Compartment)	X		X	X	X
Lens Replacement	Remove Retaining Screws (Outside)		X			
	Remove Housing and Disassemble	X		X	X	X
Housing Replacement	Remove From Outside (Retaining Nuts in Rear Compartment)	X		X	X View C	
	Remove From Inside					X View B
	Remove From Outside (Retaining Bolts Under Lens)		X View A			
	Lower Rear Bumper			X	X	

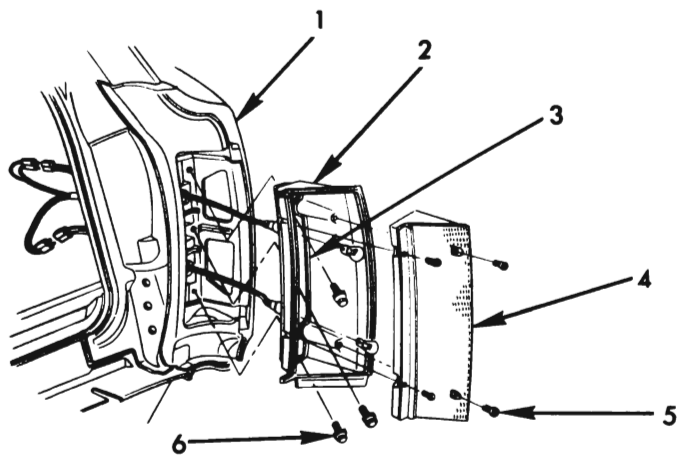

VIEW A

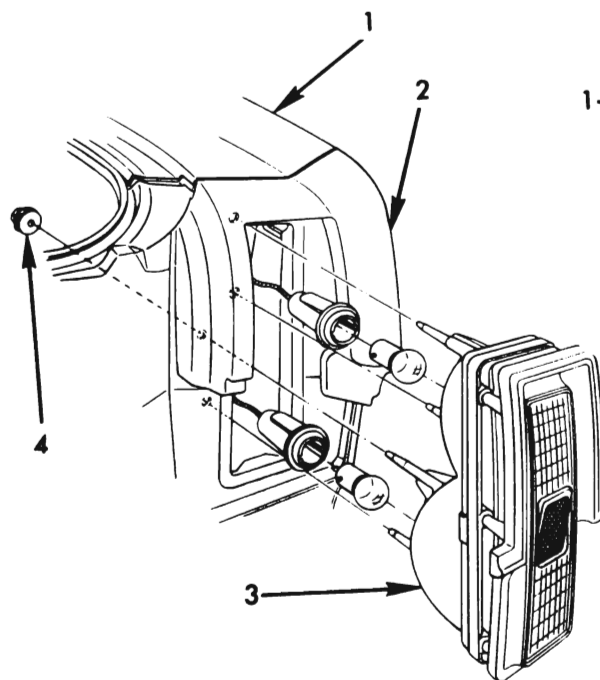

VIEW C

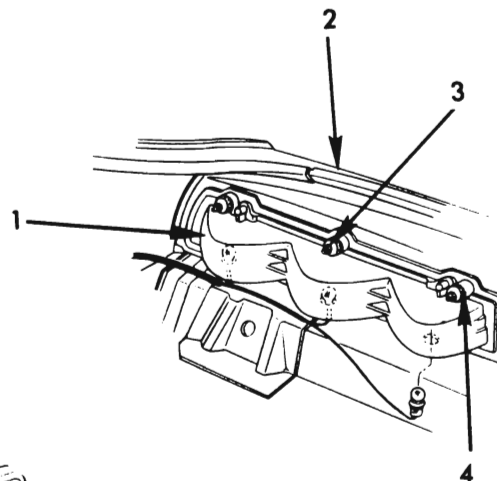

VIEW B

2509

Fig. 16-83—Oldsmobile Tail Lamp Installation

View "A"

1. Quarter Panel
2. Lamp Housing
3. Lens Gasket
4. Lens
5. Lens Screw
6. Housing Screw

View "B"


1. Lamp Housing
2. Rear End Panel
3. Housing Nut
4. Rear End Panel Molding Stud

View "C"

1. Quarter Panel
2. Quarter Extension
3. Lamp Housing
4. Housing Nut

TAIL LAMP OPERATIONS—BUICK

OPERATION	METHOD	BODY TYPE				
		A	A 35-55	B	C	E
Bulb Replacement	Remove Lens (Outside)		X			
	Remove Socket (Inside Rear Compartment)	X		X	X	X
Lens Replacement	Remove Retaining Screws (Outside)		X			
	Remove Housing and Disassemble	X		X	X	X
Housing Replacement	Remove From Outside (Retaining Nuts In Rear Compartment)	X		X	X View C	X View B
	Remove From Inside					
	Remove From Outside (Retaining Bolts Under Lens)		X View A			
	Lower Rear Bumper			X	X	

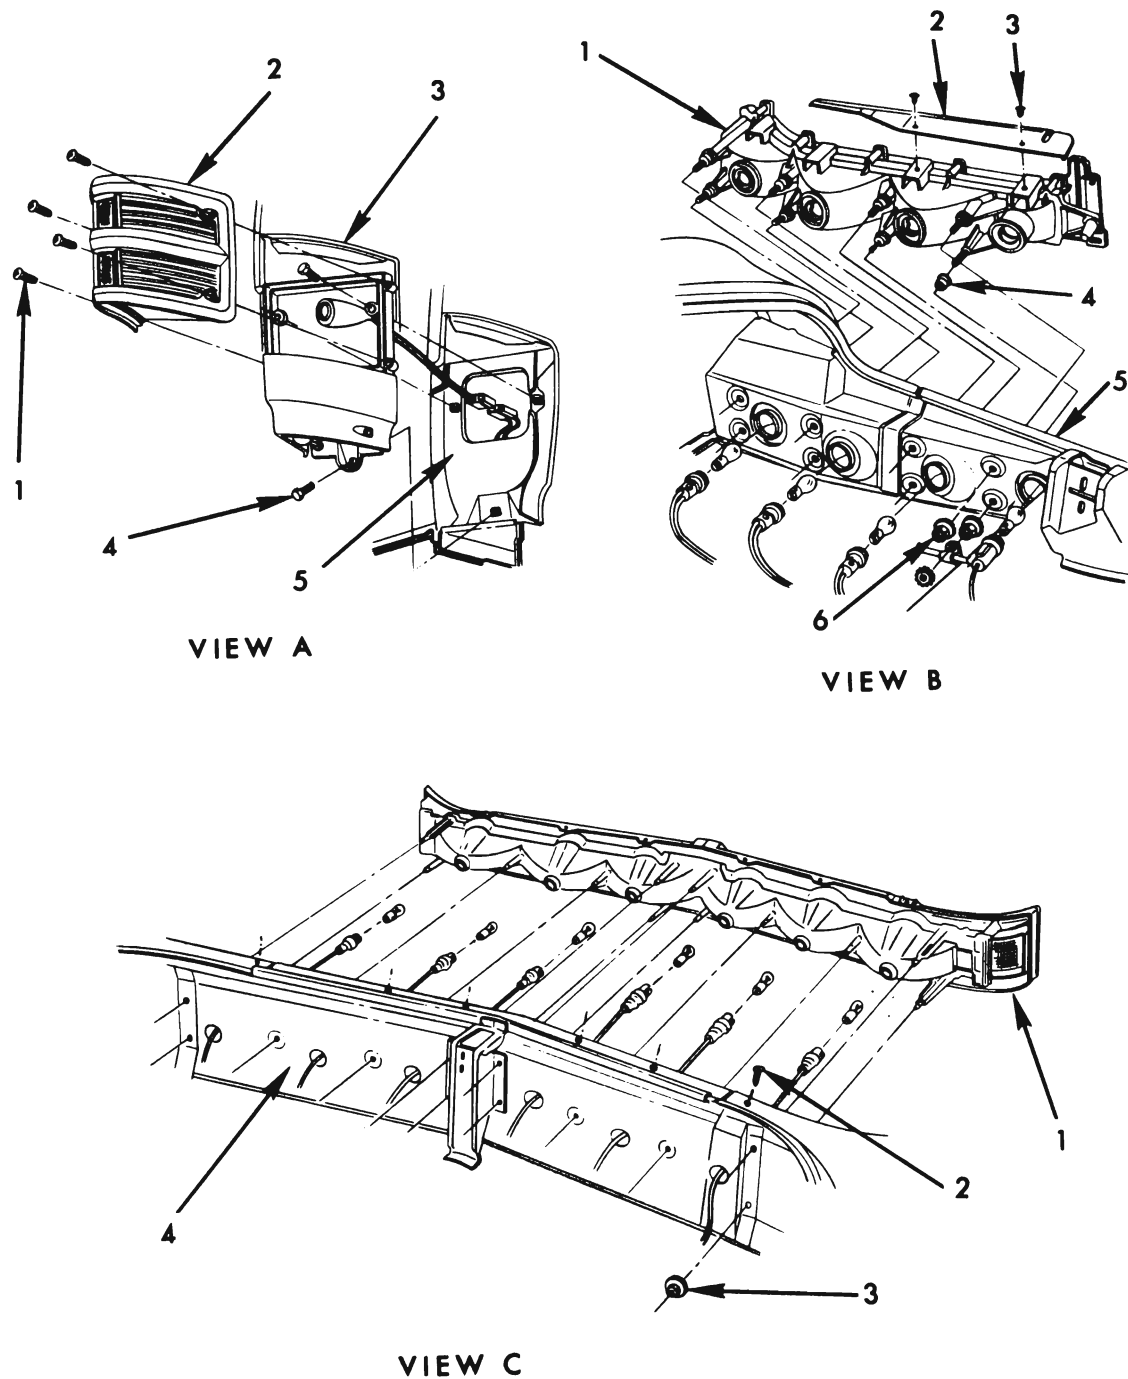

2510

Fig. 16-84 — Buick Tail Lamp Installation

View "A"

1. Lens Screw
2. Lens and Bezel Assembly
3. Lamp Housing
4. Lamp Housing Screw
5. Quarter Panel

View "B"

1. Lamp Housing
2. Lamp Cover
3. Lamp Cover Screw
4. Spacer
5. Rear End Panel
6. Lamp Housing Nut

View "C"

1. Rear End Molding and Lamp Housing Assembly
2. Molding Screw
3. Lamp Housing Nut
4. Rear End Inner Panel

TAIL LAMP OPERATIONS—CADILLAC “E”

OPERATIONS	METHOD	BODY TYPE
Bulb Replacement	Remove Lens (Outside)	
	Remove Socket (Inside Rear Compartment)	X
Lens Replacement	Remove Retaining Screws (Outside)	
	Remove Housing and Disassemble	X
Housing Replacement	Remove From Outside (Retaining Nuts in Rear Compartment)	X
	Remove From Inside	
	Remove From Outside (Retaining Bolts Under Lens)	
	Lower Rear Bumper	

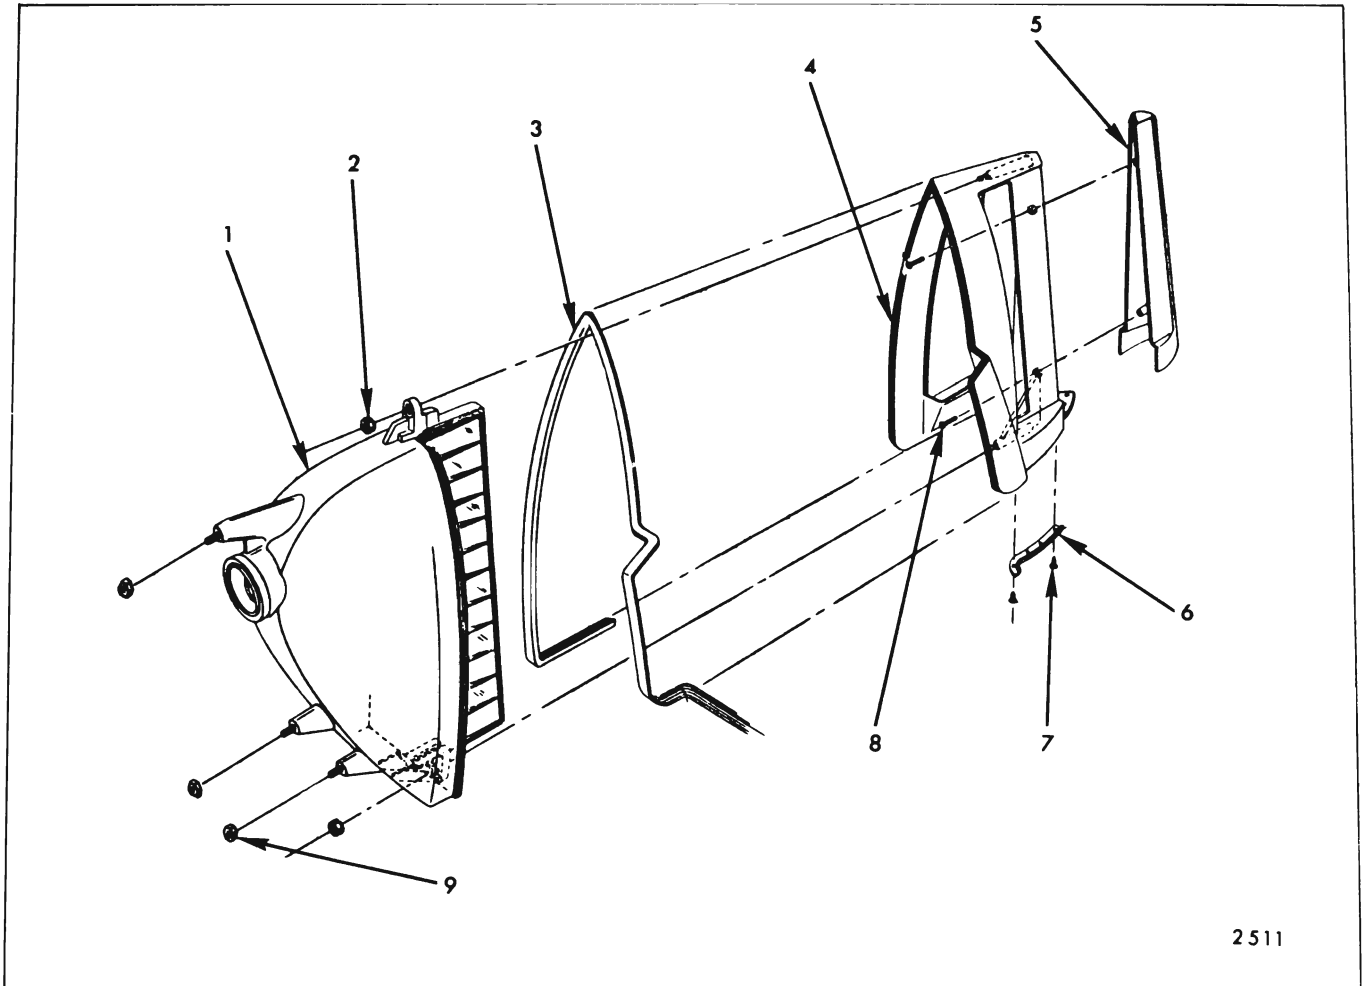


Fig. 16-85 — Cadillac "E" Tail Lamp Installation

- 1. Lamp Housing
- 2. Lamp Extension Nut
- 3. Lamp Extension Gasket

- 4. Lamp Extension
- 5. Lamp End Cap
- 6. Rear of Rear Fender Molding at Tail Lamp

- 7. Molding Screw
- 8. Lamp End Cap Screw
- 9. Lamp Housing Nut

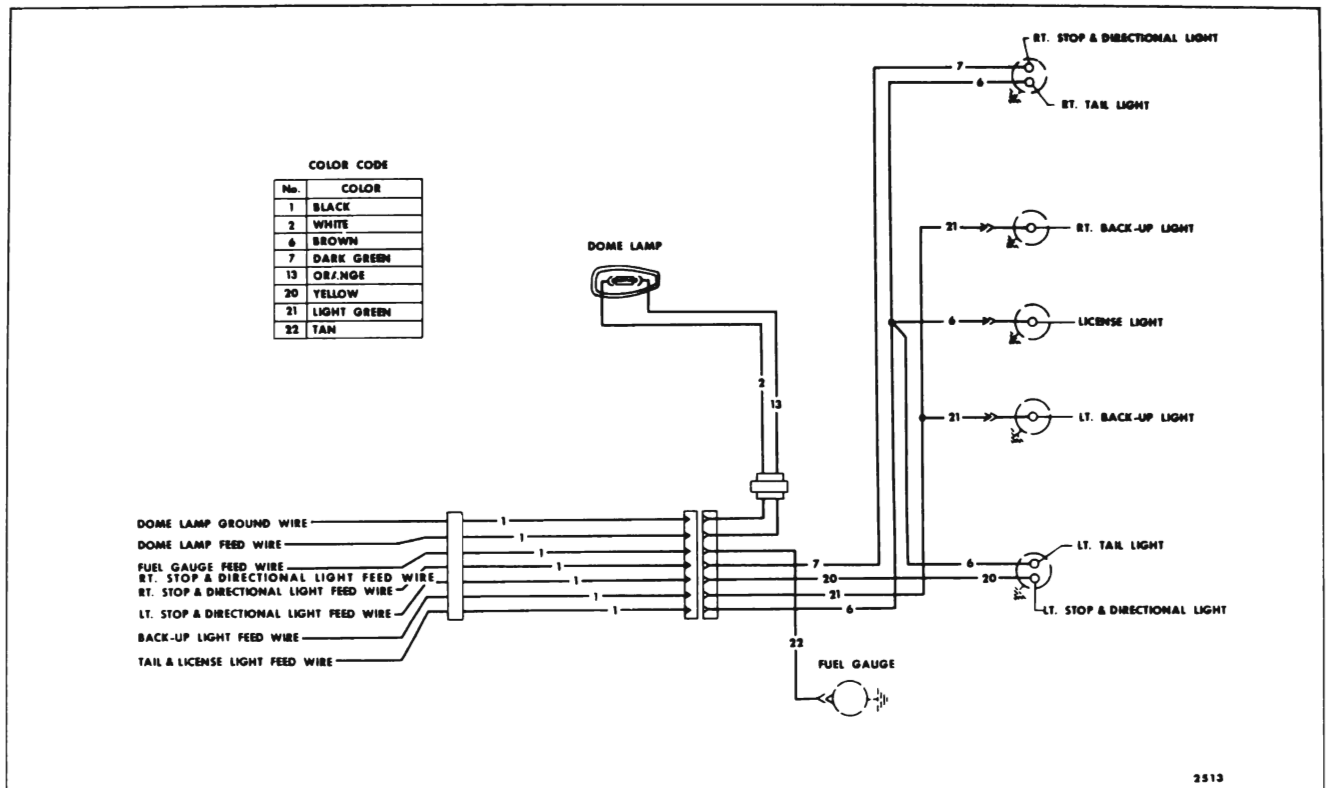


Fig. 16-86 - Body Wiring Circuit Diagram - Chevrolet "A" Body

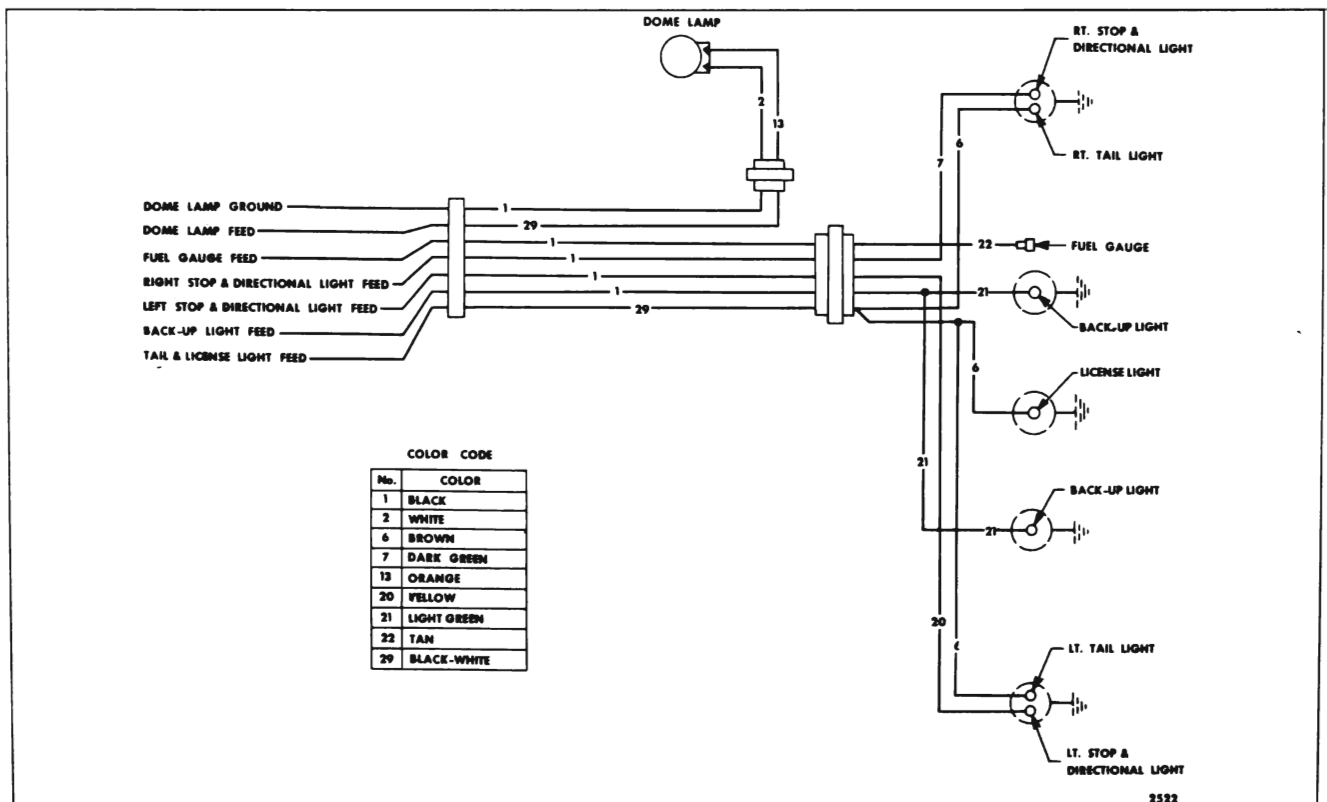


Fig. 16-87 - Body Wiring Circuit Diagram - Chevrolet "A-35" Style

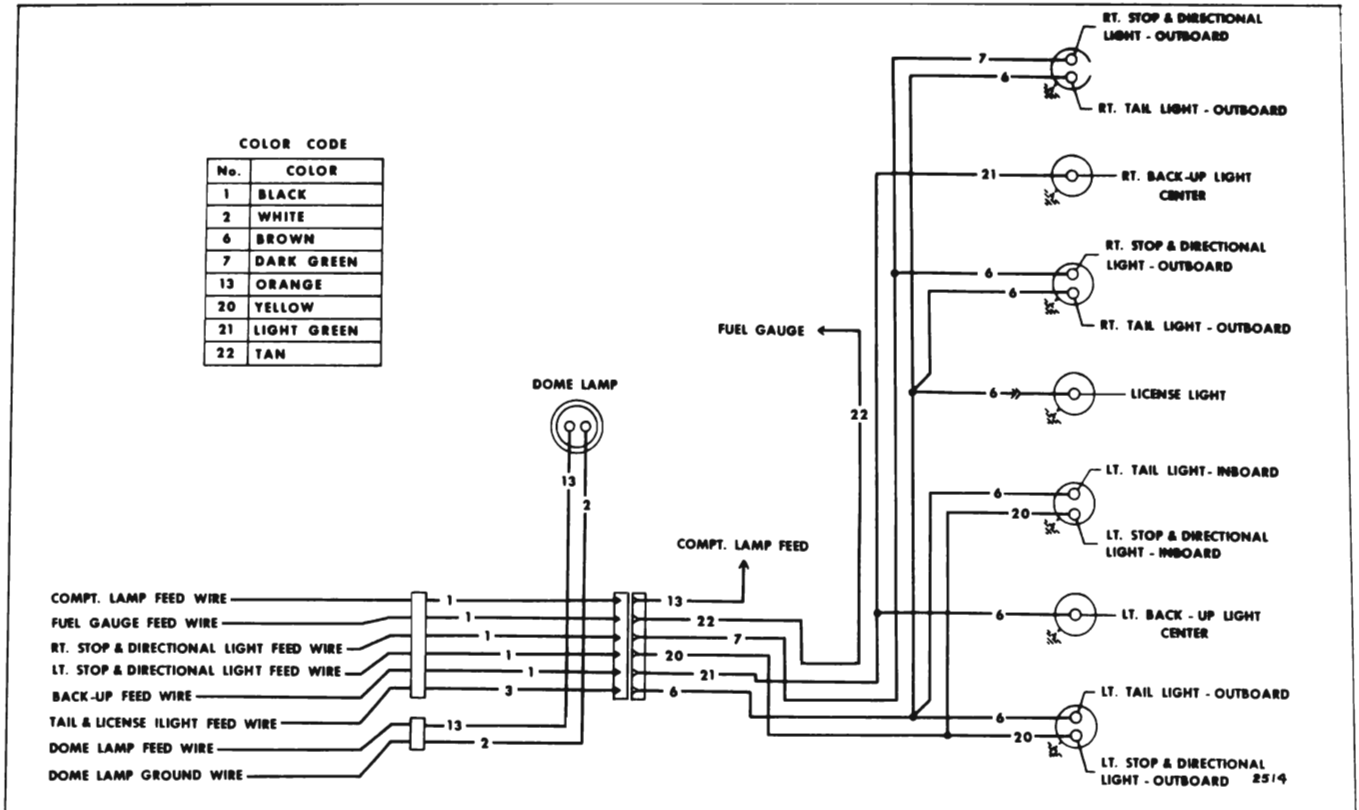


Fig. 16-88—Body Wiring Circuit Diagram - Chevrolet "B" Styles

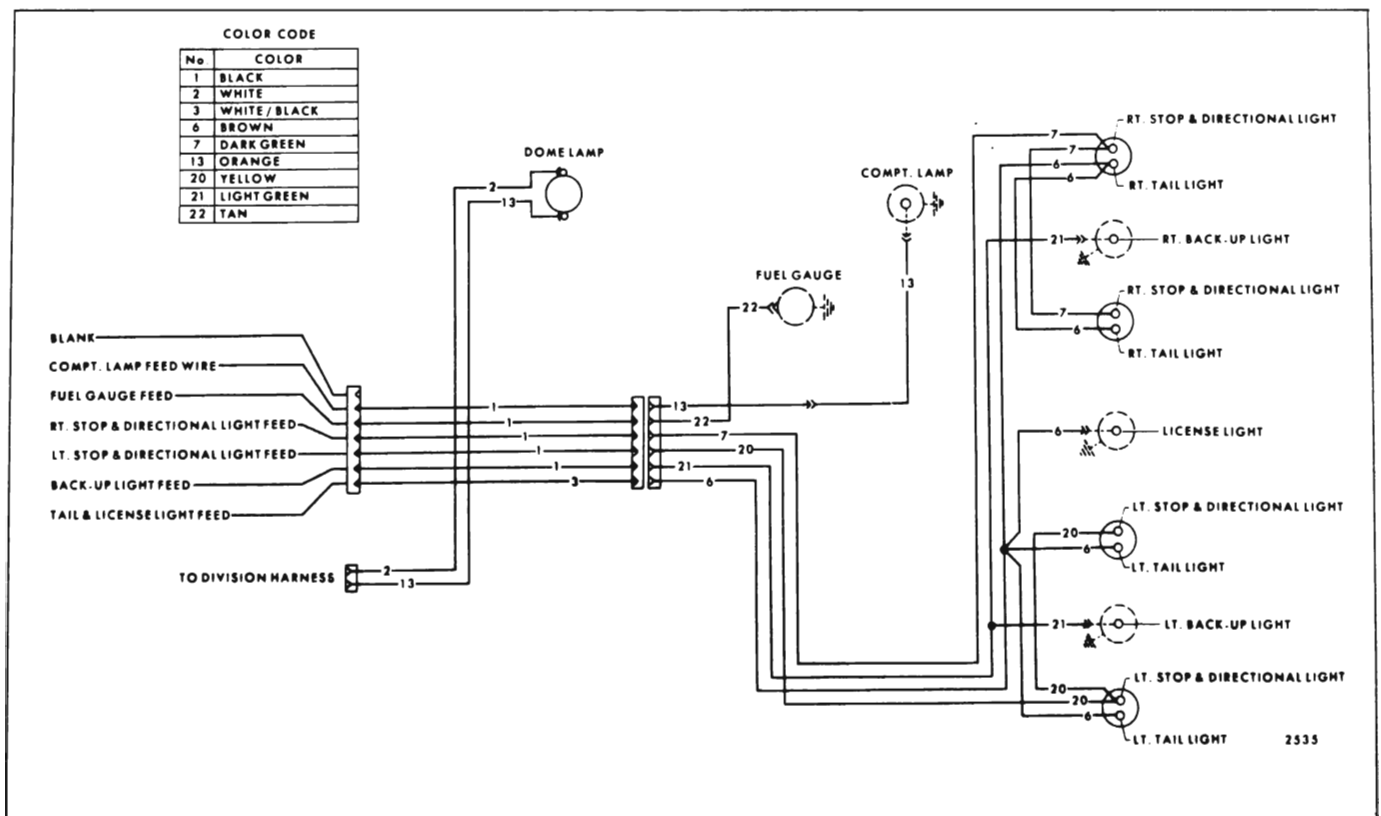


Fig. 16-89—Body Wiring Circuit Diagram - Pontiac "B" Styles

16-64 ELECTRICAL

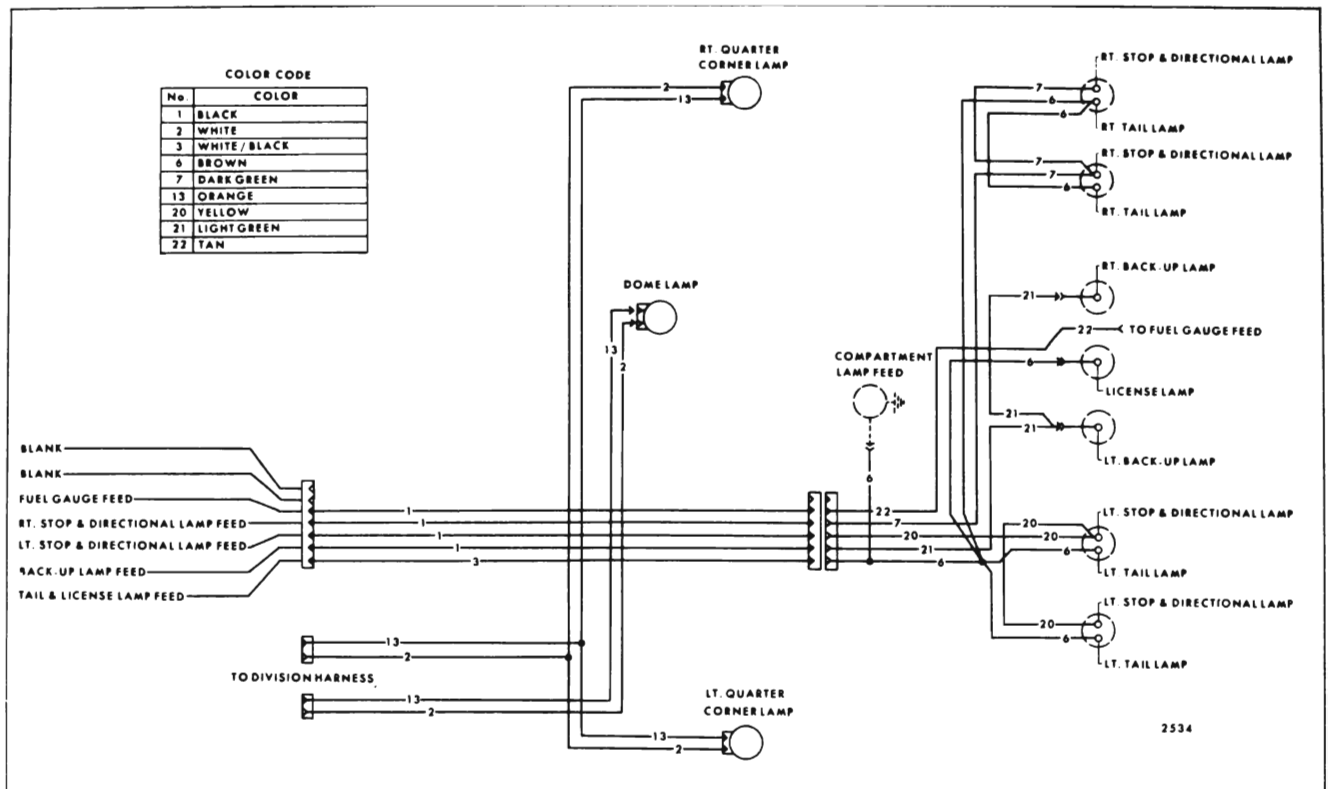


Fig. 16-90 - Body Wiring Circuit Diagram - Oldsmobile "B" Styles

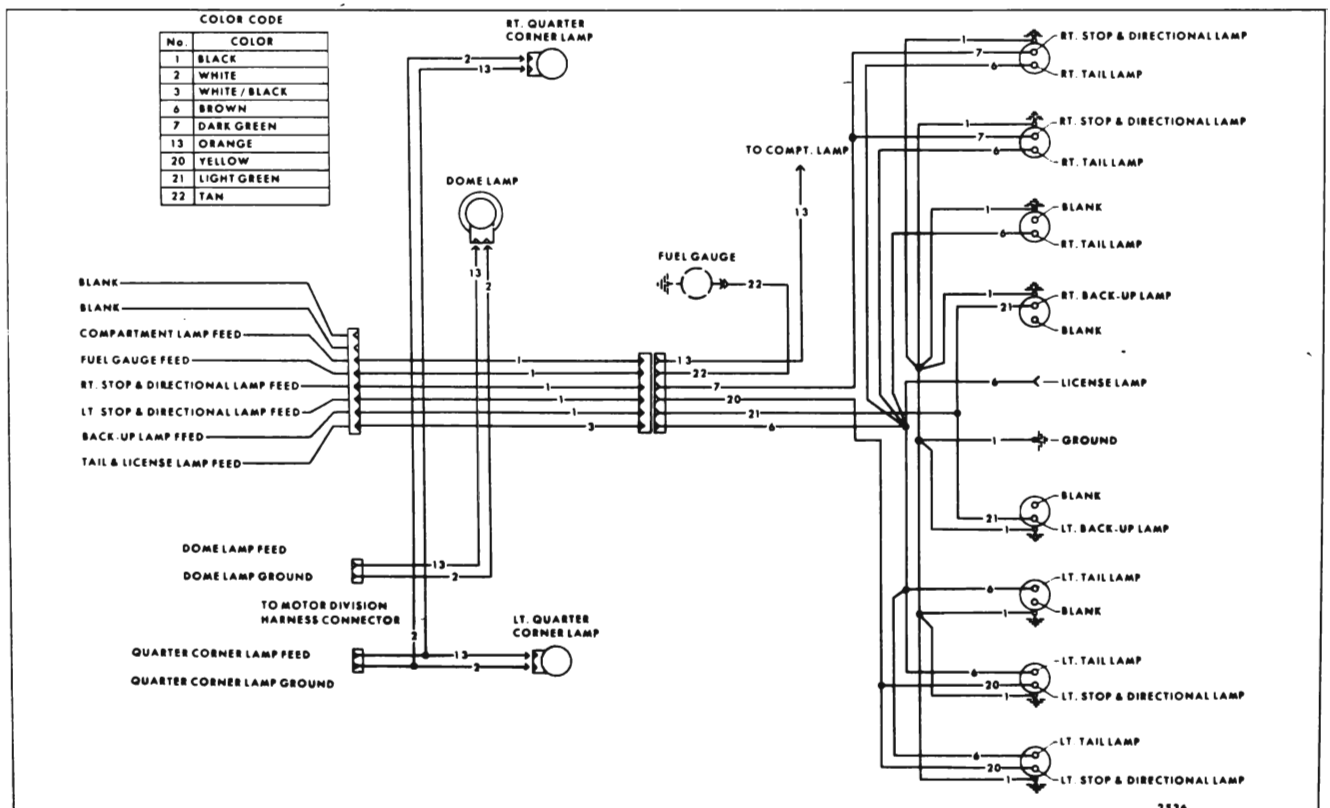


Fig. 16-91 - Body Wiring Circuit Diagram - Buick "B" Styles

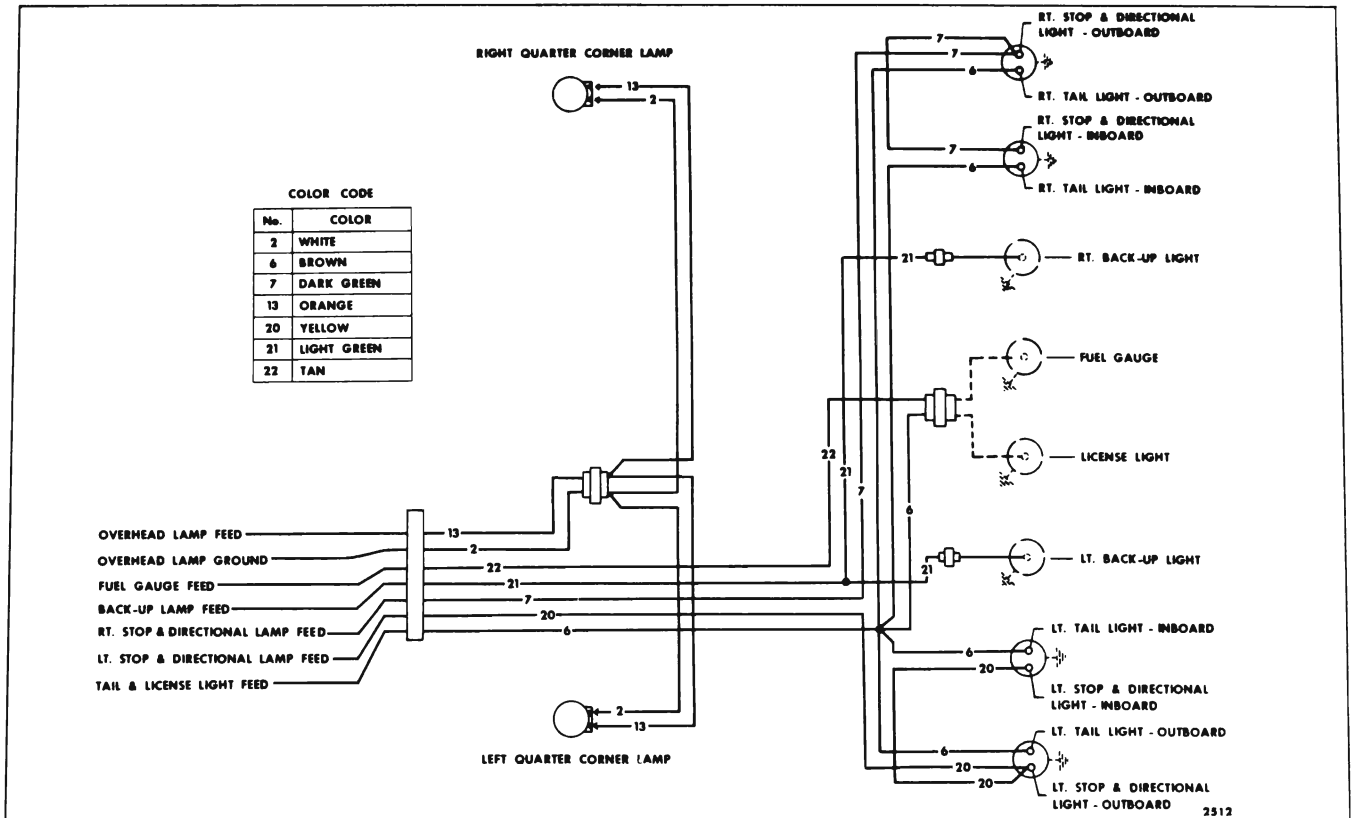


Fig. 16-92 — Body Wiring Circuit Diagram - Chevrolet "F" Styles